people only.

dimension.

In order to avoid electromagnetic interference EMC cable glands include a special EMC component that enlarges the contact with the cable shield. Assembly must be done by trained people only.

Under clamping pressure the outer sheath of a cable can shrink. We recommend to choose cable glands whose lower clamping range Is sufficiently smaller than the cable's outer dimension.




1. Install cable aland to the enclosure with the indicated "torque body". In order to increase contact quality EMC locknut utilization is recommended.

4. Do not pull or rotate cable after

insertion. In doing so cable gland

and shielding will be damaged.




the coble carefully and don't cut into the shielding (braiding).

b. Use adhesive tape (preferred: shielding. adhesive copper band with conductive adhesive) or part of the outer sheath to protect the end part of the wires. See diagram above.

c.For required exposed length of shielding "b" please see diagram and table below.

d.Mark dimension "a" on outer sheath accordingly. See table.

5. Tighten cap and torque cap.



6. Do not pull or rotate cable after


cap has been tightened. It will

damage cable aland and

shielding.

1. Install cable gland to the enclosure with the indicated "torque body". In order to increase contact quality EMC locknut utilization is recommended.

The shield diameter must fit.



Under clamping pressure the outer sheath of a cable can shrink. We recommend to choose

cable glands whose lower clamping range is sufficiently smaller than the cable's outer

2. a.Remove the outer sheath of 3. Insert cable into cable gland the coble carefully and don't cut into the shielding (braiding).

b.Use adhesive tape (preferred: adhesive copper band with conductive adhesive) or part of the outer sheath to protect the end part of the wires. See diagram above.

c. For required exposed length of shieldina "b" please see diagram and table below.


d.Mark dimension "a" on outer sheath accordinaly. See table.



until markina "a" alians with cap.

6. Do not pull or rotate cable after

cap has been tightened. It will damage cable aland and



4. Do not pull or rotate cable after 5. Tighten cap and torque cap. insertion if no adhesive copper tape EMC component will contact is used (2b). Otherwise cable gland shielding. and shielding could be damaged.

Clamping Range	Shield Diameter	Marking	Exposed Shield
Ø min-max	Ø min-max		b
mm	mm	mm	mm
3,0 - 6,5	2,5 - 4,5	15,0	12,5
5,0 - 10,0	4,0 - 8,0	18,5	17,0
6,0 - 12,0	5,0 - 10,0	18,5	17,0
11,0 - 17,0	9,5 - 15,0	21,0	19,0
15,0 - 21,0	13,5 - 19,0	27,0	19,0
19,0 - 28,0	17,0 - 25,0	32,0	22,0
27,0 - 38,0	25,0 - 35,0	32,5	30,0
34,0 - 44,0	31,0- 41,0	34,0	36,0

BIMED TEKNIK ALETLER SANAYI VE TICARET A.S. Bakır ve Pirinc Sanayi Sitesi Orkide Caddesi No 15 34520 Beylikdüzü Istanbul

+90 212 875-7052 E-mail: info@bimedteknik.com



component that enlarges the contact with the cable shield. Assembly must be done by trained people only. Under clamping pressure the outer sheath of a cable can shrink. We recommend to choose


cable glands whose lower clamping range is sufficiently smaller than the cable's outer dimension.

The shield diameter must fit.



enclosure with the indicated the coble carefully and don't cut until marking "a" aligns with cap. "torque body". In order to increase into the shielding (braiding). contact quality EMC locknut b.Use adhesive tape (preferred: utilization is recommended.






c.For required exposed length of shieldina "b" please see diagram and table below.

d.Mark dimension "a" on outer sheath accordinaly. See table.



push or rotate the cable.








4. As long as the cap is not 5. Tighten cap and torque cap. tightened, you can easily pull EMC component will contact shieldina.



damage cable aland and

Clamping Range Ø min-max mm	Shield Diameter Ø min-max mm	Marking a mm	Exposed Shield b mm
3,0 - 6,5	2,0 - 5,0	10,5	14,0
5,0 - 10,0	3,5 - 8,0	15,0	14,0
6,0 - 12,0	4,5 - 10,0	14,0	19,0
7,5 - 14,0	5,5 - 11,5	15,0	19,0
10,0 - 18,0	7,0 - 14,0	19,0	20,0
16,0 - 25,0	12,0 - 20,0	21,0	26,0
22,0 - 32,0	18,0 - 27,0	26,0	28,0
30,0 - 38,0	26,0 - 34,0	26,0	40,0
34,0 - 44,0	30,0 - 40,0	27,5	35,0
37,0 - 53,0	33,0 - 49,0	31,0	35,0

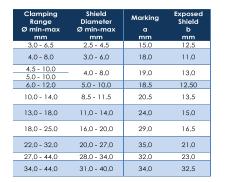



Phone: +90 212 875-7376



File Code: FMC-AI1118-03