ReeR MOSAIC-MI8O2 Input/Output Expansion Unit



The ReeR MOSAIC (MOdular SAfety Integrated Controller) MI8O2 input/ output expansion unit provides a variety of inputs and outputs.

Features

- Eight digital safety inputs programmable with the MOSAIC Safety Designer Software
- Two inputs for start/restart interlock and device monitoring
- Two OSSD pairs
- · Four test outputs
- Two programmable digital signal outputs
- · Removable terminal block plus screw contacts
- · Connection to M1 or M1S via MSC 5-way ReeR proprietary bus. Bus connector included.



| Safety Data per EN 13849-1 | | | | |
|----------------------------|----------------------------|--|--|--|
| Category | 4 | | | |
| Performance level | е | | | |
| MTTF _d (years) | 30-100 | | | |
| DC _{avg} | High | | | |
| Safety Data per | IEC/EN 62061, IEC/EN 61508 | | | |
| SIL CL | 3 | | | |
| SIL | 3 | | | |
| HFT | 1 | | | |
| DC _{avg} | High | | | |
| SFF | 99.8% | | | |
| PFH _d (t-20a) | 5.67e ⁻⁹ | | | |

Safety data is dependent on circuit architecture. See manual for further

| MOSAIC-MI802 Expansion Unit | | | | | | |
|-----------------------------|-----------|---------|---|--|--|--|
| Part Number | Price | Voltage | Description | Connection | | |
| MOSAIC-MI8O2 | \$;02eyf: | 24VDC | Input/output expansion unit providing 8 digital safety inputs and 2 pair OSSD outputs | Removable terminal block, screw contacts | | |







| MOSAIC-MI802 Specifications | | | | | |
|------------------------------------|--|--|--|--|--|
| General Specifications | | | | | |
| Operating Temperature | -10°C to +55°C [14°F to 131°F] | | | | |
| Storage Temperature | -20°C to +85°C [-4°F to 185°F] | | | | |
| Altitude | 2000m (max) | | | | |
| Vibration Resistance | Tested to IEC 60068-2-6 | | | | |
| Degree of Protection | IP 20 | | | | |
| Housing | Polyamide | | | | |
| Weight | 240g [8.47 oz] | | | | |
| Agency Approvals and Standard | cULus, CE, TÜV | | | | |
| Terminal Designation per EN 50 005 | AWG 12-30 solid/stranded. Use 60/75°C copper (Cu) conductor only. | | | | |
| Wire Fixing | Screw pluggable terminal blocks. Terminal tightening torque 5-7 lb•in (0.6-0.7 N•m). | | | | |
| | Specifications | | | | |
| Nominal Voltage | 24VDC | | | | |
| Voltage Range | ± 20% | | | | |
| Maximum Consumption | 3W | | | | |
| Digital Inputs | 8 PNP active high | | | | |
| Input FBK / Reset | 2 for EDM control/possible automatic or manual operation with RESTART button | | | | |
| Test Outputs | 4 test outputs to monitor short circuits | | | | |
| OSSD Outputs | 2 pairs solid state safety outputs PNP active high 400mA@24VDC max | | | | |
| Signaling Outputs | 2 programmable PNP high | | | | |

Note: See product manual for complete details.

Note: To obtain the most current agency approval information, see the Agency Approval Checklist section on the specific part number's web page.


Electrical Connections to MOSAIC-MI8O2




- Wire size range: AWG 12-30 (solid/stranded) (UL).
- Use 60/75°C copper (Cu) conductor only.
- Turn off power before making connections.
- The supply voltage must be 24VDC \pm 20% (PELV, in compliance with the standard EN 60204-1 (Chapter 6.4).
- Do not use the MOSAIC to supply external devices.
- The same ground connection (0VDC) must be used for all system components.
- Separate power supplies are recommended for the safety modules and for other electrical power equipment (electric motors, inverters, frequency converters) or other sources of disturbance.
- Cables used for connections of longer than 50m [164ft] must have a cross-section of at least 1mm² (AWG16).

Dimensions

mm [inches]

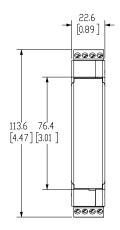

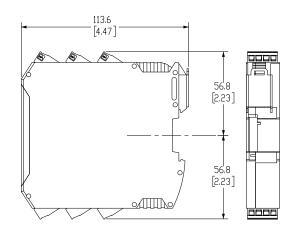

| MI802 Module Connections | | | | | | |
|--------------------------|--------------|--------|-------------------------------|--|--|--|
| Terminal | Signal | Туре | Description | | | |
| 1 | 24VDC | _ | 24VDC power supply | | | |
| 2 | NODE_SEL0 | Input | Node selection | | | |
| 3 | NODE_SEL1 | Input | Node Selection | | | |
| 4 | 0VDC | _ | 0VDC power supply | | | |
| 5 | OSSD1_A | Output | Chatin possible authorit 1 | | | |
| 6 | OSSD1_B | Output | Static safety output 1 | | | |
| 7 | RESTART_FBK1 | Input | Feedback/Restart 1 | | | |
| 8 | OUT_STATUS1 | Output | Programmable signal output | | | |
| 9 | OSSD2_A | Output | Chatia a afatu a stant 0 | | | |
| 10 | OSSD2_B | Output | Static safety output 2 | | | |
| 11 | RESTART_FBK2 | Input | Feedback/Restart 2 | | | |
| 12 | OUT_STATUS2 | Output | Programmable signal output | | | |
| 13 | OUT_TEST1 | Output | Short circuit detected output | | | |
| 14 | OUT_TEST2 | Output | Short circuit detected output | | | |
| 15 | OUT_TEST3 | Output | Short circuit detected output | | | |
| 16 | OUT_TEST4 | Output | Short circuit detected output | | | |
| 17 | INPUT1 | Input | Digital input 1 | | | |
| 18 | INPUT2 | Input | Digital input 2 | | | |
| 19 | INPUT3 | Input | Digital input 3 | | | |
| 20 | INPUT4 | Input | Digital input 4 | | | |
| 21 | INPUT5 | Input | Digital input 5 | | | |
| 22 | INPUT6 | Input | Digital input 6 | | | |
| 23 | INPUT7 | Input | Digital input 7 | | | |
| 24 | INPUT8 | Input | Digital input 8 | | | |

Please see the ReeR MOSAIC Supplemental Manual for basic wiring examples.





MODULAR **SA**FETY INTEGRATED CONTROLLER

The MOSAIC system is a unique safety controller that's modular, expandable and configurable for managing all safety functions of a single machine or an entire plant. It offers cost reductions with minimal wiring.

COMMS



MOSAIC-MBEI

Industrial Fieldbus: EtherNet/IP.

MOSAIC-MBEM

Industrial Fieldbus: ModBus TCP/IP.

DIGITAL INPUTS



MOSAIC-MI8

8 digital inputs and four test outputs.

MOSAIC-MI16

16 digital inputs and 4 test outputs.

MOSAIC-MI12T8

12 digital inputs, 8 test outputs.

I/O EXPANSION UNIT



MOSAIC-MI8O2

8 digital inputs, 2 EDM/ RST inputs, 4 test outputs, 2 OSSD pairs, and 2 status outputs.

MOSAIC-MI8O4

- 8 digital inputs, 4 test outputs,
- 4 individual or 2 pair OSSD outputs, and
- 4 configurable I/O.

SPEED MONITORING

MOSAIC-MV0

2 prox switch inputs.

MOSAIC-MV1T

1 TTL encoder and 2 prox switch inputs.



MOSAIC-MV1H

1 HTL encoder and 2 prox switch inputs.

MOSAIC-MV1S

1 SIN/COS encoder and 2 prox switch inputs.

MOSAIC-MV2T

2 TTL encoder and 2 prox switch inputs.

MOSAIC-MV2H

2 HTL encoder and 2 prox switch inputs.

MOSAIC-MV2S

2 SIN/COS encoder and 2 prox switch inputs.

MOSAIC SYSTEM



MOSAIC M1, M1S, or M1S-USBC controller units are able to interface with up to 14 individual expansion modules (up to a maximum of 4 of any one module type).

Controller units can also be used in a stand-alone configuration.

Blue-highlighted modules work only with the MOSAIC-M1S or MOSAIC-M1S-USBC controller.

SAFETY RELAYS

MOSAIC-MR2

2 relays – 2 NO + 1 NC connectable to 1 OSSD pair + 1 NC contact for external device monitoring. 2 safety relays with guided contacts. Screw contacts.



MOSAIC-MR4

4 relays – 4 NO + 2 NC connectable to 2 OSSD pair + 2 NC contacts for external device monitoring. 4 safety relays with guided contacts. Screw contacts.

These extension relays can connect to the outputs on the MOSAIC M1, M1S, or to any of the output cards

DIGITAL OUTPUTS

MOSAIC-MO2

2 EDM/RST inputs, 2 OSSD pairs and 2 status outputs.



MOSAIC-MO4

4 EDM/RST inputs, 4 OSSD pairs and 4 status outputs.

MOSAIC-MOR4

4 single-channel outputs or 2 dual-channel outputs.

MOSAIC-MOR4S8

4 single-channel outputs or 2 dual-channel outputs with 8 status outputs.

MOSAIC-MO4L

4 individual or 2 pair OSSD outputs, and 4 configurable I/O.

ANALOG INPUTS



MOSAIC-MA4 4 analog inputs.

STATUS OUTPUTS

MOSAIC-MOS8

8 status outputs.



16 status outputs.



ACCESSORIES

MOSAIC-MSC-C

Safety communication bus connector and terminal end caps. Required to connect additional module to MOSAIC-M1, MOSAIC-M1S, or MOSAIC-M1S-USBC.

MOSAIC-MCM, MOSAIC-MCMB

A proprietary removable memory card that can be used to save MOSAIC configuration data for subsequent transfer to a new device without using a PC.



Safety Products



Warning: Safety products sold by AutomationDirect are Safety components only. The purchaser/installer is solely responsible for the application of these components and ensuring all necessary steps have been taken to assure each application and use meets all performance and applicable safety requirements and/or local, national and/or international safety codes as required by the application. AutomationDirect cannot certify that our products, used solely or in conjunction with other AutomationDirect or other vendors' products, will assure safety for any application. Any person using or applying any products sold by AutomationDirect is responsible for learning the safety requirements for their individual application and applying them, and therefore assumes all risks, and accepts full and complete responsibility, for the selection and suitability of the product for their respective application.

AutomationDirect does not provide design or consulting services, and cannot advise whether any specific application or use of our products would ensure compliance with the safety requirements for any application.