



# BX-xADxDA-1 Analog Combo Current I/O

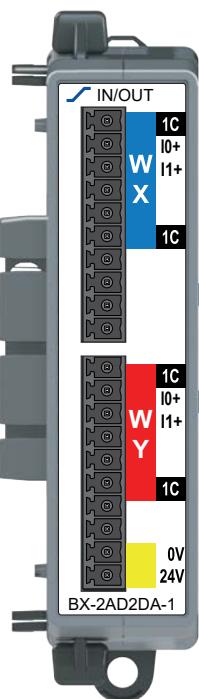

**BX-2AD2DA-1**  
\$309.00

Combination Analog Module  
Input: 2-pt, 0–20mA/4–20mA  
Current Sinking  
Output: 2-pt, 0–20mA/  
4–20mA Current Sourcing

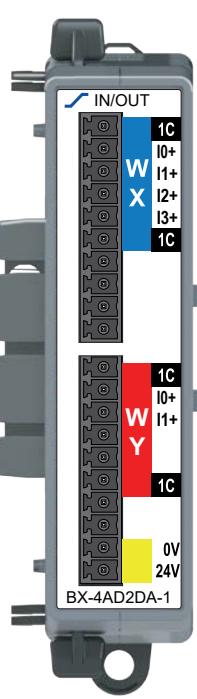

**BX-4AD2DA-1**  
\$378.00

Combination Analog Module  
Input: 4-pt, 0–20mA/4–20mA  
Current Sinking  
Output: 2-pt, 0–20mA/  
4–20mA Current Sourcing

Terminal Blocks or ZIPLink Cables Sold Separately

We recommend using prewired ZIPLink cables and connection modules.

If you wish to hand-wire your module, a removable terminal block is available. See *Wiring Solutions* section for all options.



## IMPORTANT!



### Hot-Swapping Information

Note: This device cannot be Hot Swapped.

Analog Current Sinking Input Specifications		
Specification	BX-2AD2DA-1	BX-4AD2DA-1
<b>Inputs per Module</b>	2	4
<b>Commons</b>		1
<b>Module Signal Input Range</b>	0–20mA, 4–20mA (Default)	
<b>Signal Resolution</b>	16-bit, 15-bit (Default)	
<b>Resolution Value of LSB</b>	See Data Range Specifications table	
<b>Input Impedance</b>	256Ω±0.1%, 1/10th watt	
<b>All Channel Update Rate</b>	30ms	45ms
<b>Maximum Continuous Overload</b>	±28mA	
<b>Sample Duration Time</b>	100µs per channel	
<b>Hardware Filter Characteristics</b>	Low Pass 2nd order, -3dB @ 15kHz	
<b>Conversion Method</b>	Successive Approximation	
<b>Linearity Error (end to end)</b>	±0.09% of range	
<b>Input Stability and Repeatability</b>	±0.05% of range (after 10 min. warmup)	
<b>Full Scale Calibration Error</b>	±0.1% of range	
<b>Offset Calibration Error</b>	±0.1% of range	
<b>Accuracy vs. Temperature</b>	±25PPM / °C maximum	
<b>Maximum Inaccuracy</b>	0.1% of range (incl. Temperature Drift)	
<b>Maximum Crosstalk</b>	-90dB, 1 LSB	
<b>Channel to Backplane Isolation</b>	1800VAC applied for one second	
<b>Channel to Channel Isolation</b>	None	

Analog Current Sourcing Output Specifications		
Specification	BX-2AD2DA-1	BX-4AD2DA-1
<b>Outputs per Module</b>	2	2
<b>Commons</b>		1
<b>Module Signal Output Range</b>	0–20mA, 4–20mA (Default)	
<b>Signal Resolution</b>	16-bit, 15-bit (Default)	
<b>Resolution Value of LSB</b>	See Data Range Specifications table	
<b>Output Type</b>	Current Sourcing up to 20mA	
<b>Output Value in Fault Mode</b>	0mA in 0–20mA mode, 4mA in 4–20mA mode	
<b>Maximum Load Impedance</b>	700Ω	
<b>Maximum Capacitive Load</b>	1000pF	
<b>Allowed Load Type</b>	Grounded	
<b>Maximum Continuous Overload</b>	30mA	
<b>All Channel Update Rate</b>	2.5 ms per enabled channel	
<b>Maximum Inaccuracy</b>	±0.1% of range	
<b>Max. Full Scale Calibration Error</b>	±0.08% of range	
<b>Maximum Offset Calibration Error</b>	±0.08% of range	
<b>Conversion Method</b>	Successive Approximation	
<b>Accuracy vs. Temperature</b>	±25PPM / °C maximum	
<b>Maximum Crosstalk</b>	+10µV	
<b>Linearity Error (end to end)</b>	±0.08% of range	
<b>Output Stability and Repeatability</b>	±0.03% of full range after 10 min. warmup (typical)	
<b>Output Ripple</b>	±0.03% of range/mA	
<b>Output Settling Time</b>	350µs	
<b>Channel to Backplane Isolation</b>	1800VAC applied for one second	
<b>Channel to Channel Isolation</b>	None	

Module General Specifications		
Specification	BX-2AD2DA-1	BX-4AD2DA-1
<b>Weight</b>	110g [3.9 oz]	
<b>Heat Dissipation</b>	3.75 W Max	
<b>Backplane Power Consumption</b>	0.3 W	
<b>External DC Power Required</b>	Class 2 or LPS power supply 24VDC (±20%) 100mA	
<b>Loop Fusing (External)</b>	Fast-acting 0.032A recommended	
<b>Software Version Required</b>	Do-more! Designer version 2.6 or later	


# BX-xADxDA-1 Analog Combo Current I/O

## Data Range Specifications

Selection	Description	Enable 16 bit Unchecked (15 bit Resolution, Default)			Enable 16 bit Checked (16 bit Resolution)		
		Raw Counts	Casting*	µA Per Count	Raw Counts	Casting*	µA Per Count
0-20 mA	Unipolar 0-20 mA	0-32767	-	0.61	0-65535	WYn:U	0.31
4-20 mA	Unipolar 4-20 mA	0-32767	-	0.49	0-65535	WYn:U	0.24




\* For more information on Casting, refer to Help topic DMD0309 in the Do-more! Designer Software.

## Analog Current Input/Output Wiring

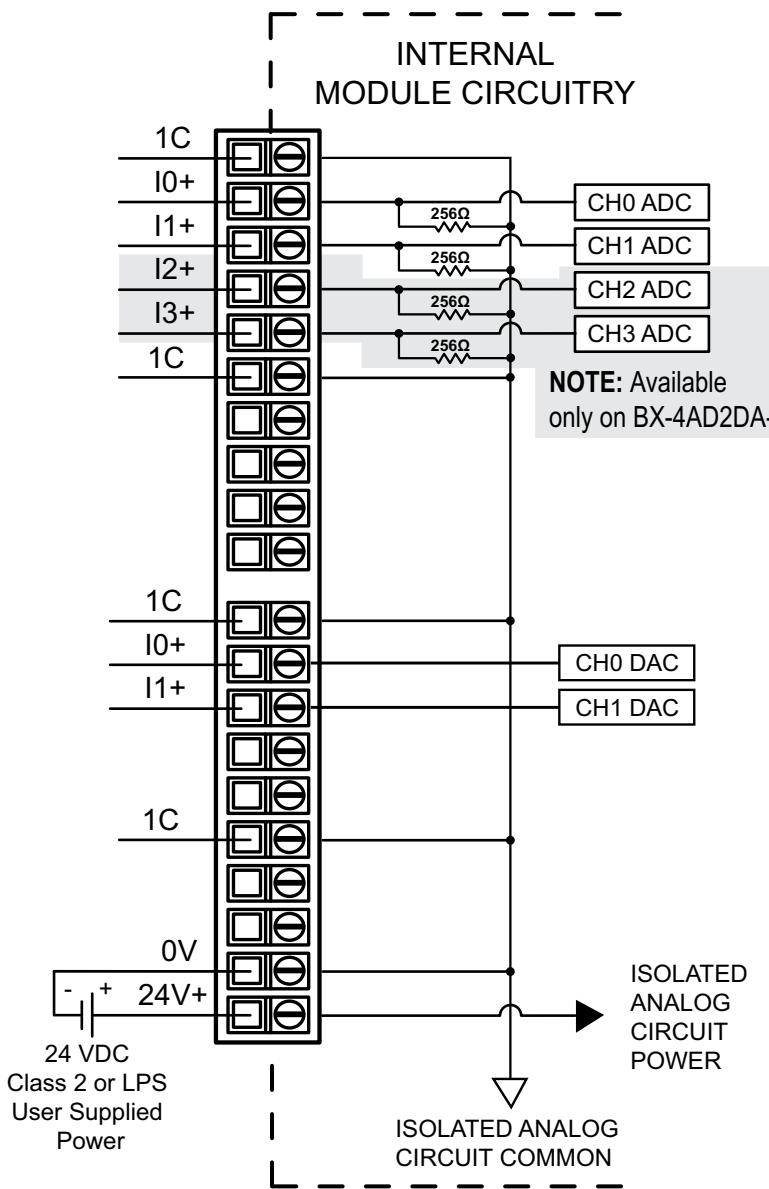


## Analog Current Sinking Input Circuits

\*An Edison S500-32-R 0.032A fast-acting fuse is recommended for all analog voltage inputs, analog outputs, and current loops.

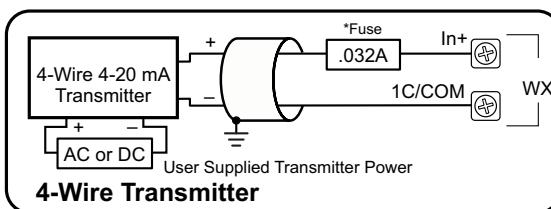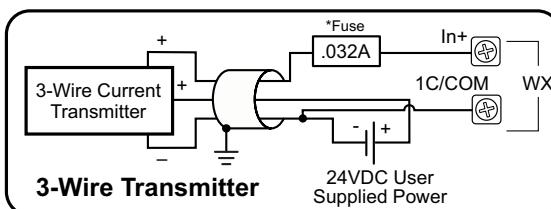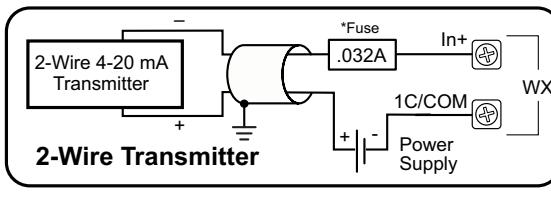

NOTE: Shield should be connected only at one end, to ground at the source device.

## Analog Current Source Output Circuit

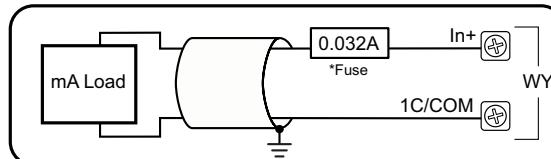

\*An Edison S500-32-R 0.032A fast-acting fuse is recommended for all analog voltage inputs, analog outputs, and current loops.

NOTE: Shield should be connected only at one end, to ground at the source device.

# BRX Analog Expansion Modules

## Overview


One of the unique features of the BRX platform is its ability to expand its capability to fit your application solution. One of the ways the BRX platform can do this is by using expansion modules that conveniently "snap-on" to the side of any BRX MPU. Once the expansion module has been snapped in place and is added to the project, it instantly adds I/O to the MPU with little to no additional setup required.

The analog expansion modules give you the ability to add analog I/O as needed and are identified as an analog input module, temperature input module, or analog output module. On the front panel of the analog I/O expansion modules, a color scheme and a

symbol are used to denote the module type.

Analog modules are available with current inputs or outputs, unipolar/bipolar voltage inputs or outputs, thermocouple inputs, RTD inputs and thermistor inputs. Input/output combination modules are also available.

With the exception of temperature input modules, the modules ship without wiring terminals. This allows you to select the termination style that best fits your application. Several wiring options are available, including screw terminal connectors, spring clamp terminal connectors and pre-wired ZIPLink cable solutions.

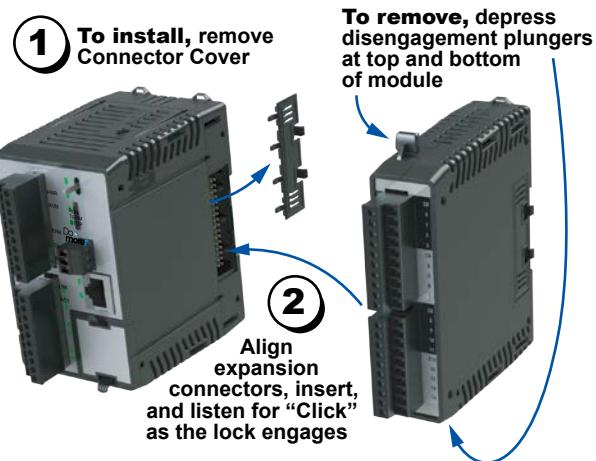

## Hot-Swapping Information

Note: This device cannot be Hot Swapped.

## General Specifications


All BRX analog input and output modules and temperature input modules have the same general specifications listed in the table below.

General Specifications	
<b>Storage Temperature</b>	-20° to 70°C [-4° to 158°F]
<b>Humidity</b>	5% to 95% (non-condensing)
<b>Environmental Air</b>	No corrosive gases permitted
<b>Vibration</b>	IEC60068-2-6 (Test Fc)
<b>Shock</b>	IEC60068-2-27 (Test Ea)
<b>Enclosure Type</b>	Open Equipment
<b>Noise Immunity</b>	NEMA ICS3-304
<b>EU Directive</b>	See the "EU Directive" topic in the BRX Help File
<b>Agency Approvals (unless otherwise noted on individual module specifications)</b>	UL 61010-1 and UL 61010-2-201 File E139594, Canada and USA CE (EN 61131-2 EMC, EN 61010-1 and EN 61010-2-201 Safety)

Operating Temperature Range		
Operating Temperature	0° to 45°C [32° to 113°F]	0° to 60°C [32° to 140°F]
Module	Module Revision*	
<u><a href="#">BX-08AD-1</a></u>	Rev A (Prior to May 2018)	Rev B (After May 2018)
<u><a href="#">BX-08AD-2B</a></u>		
<u><a href="#">BX-04THM</a></u>		
<u><a href="#">BX-08DA-1</a></u>		
<u><a href="#">BX-08DA-2B</a></u>	Rev B (Prior to May 2018)	Rev C (After May 2018)
<b>All other Analog and Temperature Expansion Module part numbers</b>	N/A	Rev A (After May 2018)

\* Module Revision can be found in the last letter (last or second-to-last character) of the module serial number.

## Dimensions

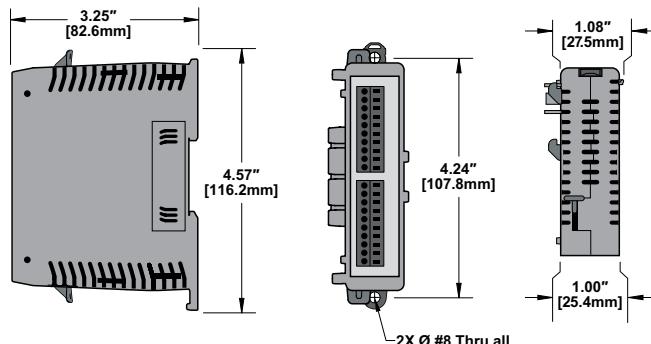


**NOTE:** When removing an expansion module, make sure there is room for the module to slide away from the system. Failure to do so will result in difficulty removing the module.

# BRX Analog Expansion Modules

## Analog Input Modules


Nine (9) analog input modules are available, with current or voltage inputs. Analog input module faceplates have a blue terminal bar to distinguish them as inputs, with symbols  or  to signify current or voltage, respectively.

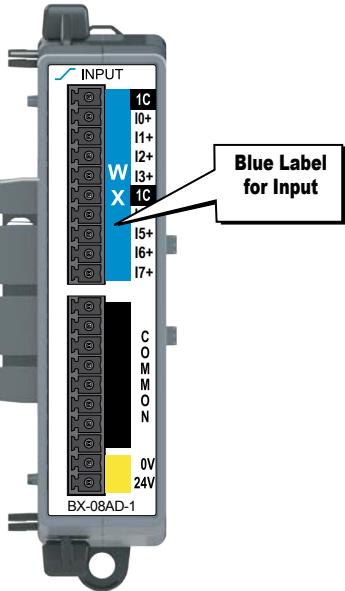

Analog Input Modules				
Part Number	Points	Input Type	Resolution	Price
<a href="#">BX-04ADM-1</a>	4	Current Sink 0–20 mA, 4–20 mA	14-bit	\$182.00
<a href="#">BX-04AD-1</a>	4	Current Sink 0–20 mA, 4–20 mA	16-bit	\$230.00
<a href="#">BX-08AD-1</a>	8			\$255.00
<a href="#">BX-16AD-1</a>	16			\$363.00
<a href="#">BX-04AD-2B</a>	4	Voltage ±10VDC, ±5VDC, 0–5 VDC, 0–10 VDC	16-bit	\$230.00
<a href="#">BX-08AD-2B</a>	8			\$255.00
<a href="#">BX-16AD-2B</a>	16			\$363.00
<a href="#">BX-04AD-3</a>	4	Current Sink 0–20mA, 4–20mA Voltage ±10VDC, ±5VDC, 0–5VDC, 0–10VDC	16-bit	\$193.00
<a href="#">BX-08AD-3</a>	8			\$225.00

## Temperature Input Module

Six (6) temperature input modules are available, with thermocouple, RTD, and/or thermistor inputs. The thermocouple input modules can also be configured for millivolt-level voltage inputs, and the RTD input module can also be configured for resistance input. Temperature module faceplates have a blue terminal bar to distinguish them as inputs, and  symbol to signify temperature.

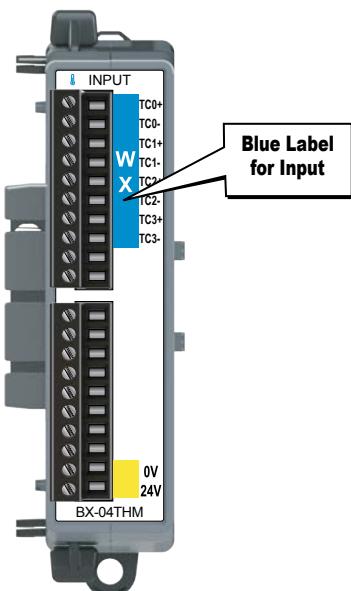


Temperature Input Modules			
Part Number	Points	Input Type	Price
<a href="#">BX-04THM</a>	4	Thermocouple	\$241.00
<a href="#">BX-08THM</a>	8	Thermocouple	\$269.00
<a href="#">BX-06RTD</a>	6	RTD	\$255.00
<a href="#">BX-08NTC</a>	8	Thermistor	\$269.00
<a href="#">BX-04UT</a>	4	Universal Temperature (Thermocouple, RTD, Thermistor supported)	\$223.00
<a href="#">BX-08UT</a>	6	Universal Temperature (Thermocouple, RTD, Thermistor supported)	\$248.00

# BRX Analog Expansion Modules

## Temperature/Analog Combo Module


Three (3) combination modules are available, with thermocouple, RTD or universal temperature inputs and current sourcing outputs. The thermocouple input modules can also be configured for millivolt-level voltage inputs, and the RTD input module can also be configured for resistance input. The Input/Output faceplate terminal bar is in blue and red, making it easy to distinguish between inputs and outputs, and the  and  symbols signify temperature and current, respectively.

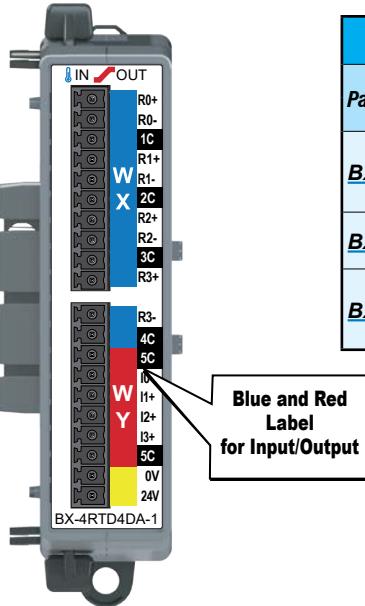

Temperature Input / Analog Output Combo Modules					
Part Number	Points		Input Type	Output Type	Price
	Input	Output			
<a href="#">BX-4RTD4DA-1</a>	4	4	Resistance Temperature Detector (RTD)	Current Source 0–20mA, 4–20mA	\$472.00
<a href="#">BX-4THM4DA-1</a>	4	4	Thermocouple	Current Source 0–20mA, 4–20mA	\$472.00
<a href="#">BX-4UT4DA-3</a>	4	4	Universal Temperature	Current Source: 0–20mA, 4–20mA Voltage: ±10VDC, ±5VDC, 0–5VDC, 0–10VDC	\$436.00


## Temperature/Discrete Combo Module

Three (3) combination modules are available with universal temperature inputs and DC sinking, sourcing or relay outputs. The thermocouple inputs can also be configured for millivolt-level voltage inputs, and the RTD inputs can also be configured for resistance input. The Input/Output faceplate terminal bar is in blue and red, making it easy to distinguish between inputs and outputs, and the  and  symbols signify temperature and discrete signals, respectively.

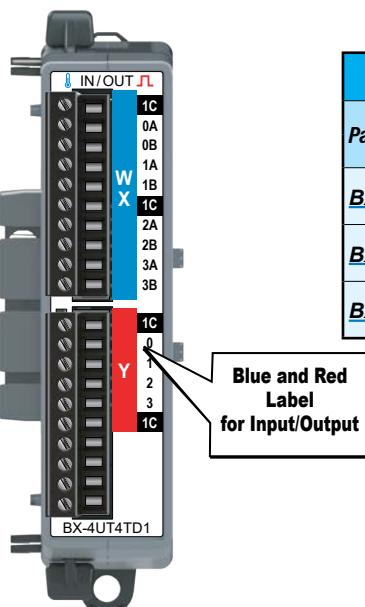

Temperature Input / Discrete Output Combo Modules					
Part Number	Points		Input Type	Output Type	Price
	Input	Output			
<a href="#">BX-4UT4TD1</a>	4	4	Universal Temperature	12–24 VDC Sinking	\$248.00
<a href="#">BX-4UT4TD2</a>	4	4		12–24 VDC Sourcing	\$248.00
<a href="#">BX-4UT4TR</a>	4	4		Relay Form A (SPST)	\$248.00


# BRX Analog Expansion Modules

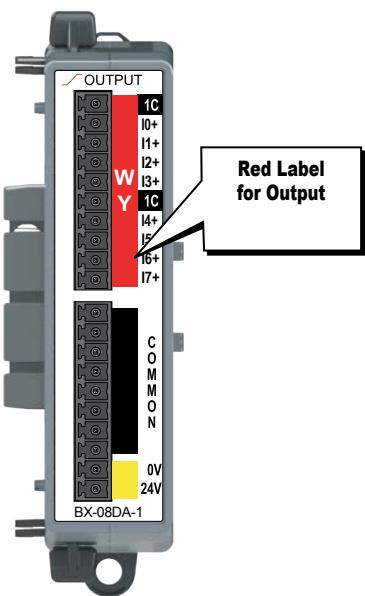

## Analog Output Modules

Six (6) analog output modules are available, in current and voltage outputs. Analog output module faceplates have a red terminal bar to distinguish them as outputs, with symbols or to signify current or voltage, respectively.

Analog Output Modules			
Part Number	Points	Output Type	Price
<a href="#">BX-04DA-1</a>	4	Current Source 0-20 mA, 4-20 mA	\$269.00
<a href="#">BX-08DA-1</a>	8		\$350.00
<a href="#">BX-04DA-2B</a>	4	Voltage $\pm 10\text{VDC}$ , $\pm 5\text{VDC}$ , 0-5 VDC, 0-10 VDC	\$269.00
<a href="#">BX-08DA-2B</a>	8		\$350.00
<a href="#">BX-04DA-3</a>	4	Current Source 0-20mA, 4-20mA Voltage $\pm 10\text{VDC}$ , $\pm 5\text{VDC}$ , 0-5VDC, 0-10VDC	\$244.00
<a href="#">BX-08DA-3</a>	8		\$311.00

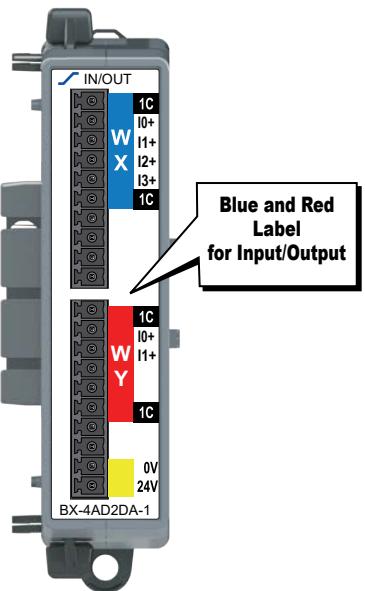

## Analog Combo Input / Output Modules

Six (6) analog input/output combo modules are available with current or voltage inputs and outputs. The Input/Output faceplate terminal bar is in blue and red, making it easy to distinguish between inputs and outputs. Symbols and signify current and voltage, respectively.

Analog Combo Input / Output Modules					
Part Number	Points		Input Type	Output Type	Price
	Input	Output			
<a href="#">BX-2AD2DA-1</a>	2	2	Current Sink 0-20mA, 4-20mA	Current Source 0-20mA, 4-20mA	\$309.00
<a href="#">BX-4AD2DA-1</a>	4	2			\$378.00
<a href="#">BX-2AD2DA-2B</a>	2	2	Voltage $\pm 10\text{VDC}$ , $\pm 5\text{VDC}$ , 0-5VDC, 0-10VDC	Voltage $\pm 10\text{VDC}$ , $\pm 5\text{VDC}$ , 0-5VDC, 0-10VDC	\$309.00
<a href="#">BX-4AD2DA-2B</a>	4	2			\$378.00
<a href="#">BX-2AD2DA-3</a>	2	2	Current Source 0-20mA, 4-20mA Voltage $\pm 10\text{VDC}$ , $\pm 5\text{VDC}$ , 0-5VDC, 0-10VDC	Current Source 0-20mA, 4-20mA Voltage $\pm 10\text{VDC}$ , $\pm 5\text{VDC}$ , 0-5VDC, 0-10VDC	\$284.00
<a href="#">BX-4AD4DA-3</a>	4	4			\$349.00

Expansion Module Support by Controller	
Controller Type	# Expansion Modules
<a href="#">BX-DM1E-M</a>	8
<a href="#">BX-DM1-10</a>	8
<a href="#">BX-DM1E-10</a>	8
<a href="#">BX-DM1-18</a>	8
<a href="#">BX-DM1E-18</a>	8
<a href="#">BX-DM1-36</a>	8
<a href="#">BX-DM1E-36</a>	8
<a href="#">BX-DMIO*</a>	8
<a href="#">BX-EBC100*</a>	8
<a href="#">BX-MBIO*</a>	8

\* Remote I/O controllers do not support Motion Control and Communications Modules.

# BRX Wiring Termination Options

## Terminal Block Connectors

The terminal block connectors are provided in kits of multiple connectors that are ordered as a single part number. There are 2 different types of kits to choose from; one kit for the five (5), eight (8) and 12-point discrete, and one

kit for the analog modules and 16-point discrete modules. The five (5), eight (8) and 12-point discrete module kits each have (3) 5-pin 5mm connectors. The 8-point modules will use only 2 of the 5-pin connectors.

The five (5) and 12-point modules will use all three connectors. The analog and 16-point digital module kits include (2) 10-pin 3.81 mm connectors.

## Terminal Block Connectors, 5, 8 and 12-Point Discrete Modules

**Terminal Block Kits for 5-point, 8-point and 12-point Expansion Modules**



**BX-RTB08 (Kit - 3 pieces)**



**BX-RTB08-1 (Kit - 3 pieces)**



**BX-RTB08-2 (Kit - 3 pieces)**

<b>Terminal Block Specifications 5-, 8- &amp; 12-Point Type</b>			
<b>Part Number</b>	<b>BX-RTB05</b> <b>BX-RTB08</b>	<b>BX-RTB05-1</b> <b>BX-RTB08-1</b>	<b>BX-RTB05-2</b> <b>BX-RTB08-2</b>
<b>Price (Single Block)</b>	\$9.00	\$7.50	\$8.50
<b>Price (Kit)</b>	\$16.00	\$15.00	\$16.00
<b>Connector Type</b>	Screw Type - 90-degree	Spring Clamp Type - 180-degree	Screw Type - 180-degree
<b>Wire Exit</b>	180-degree	180-degree	180-degree
<b>Pitch</b>	5.0 mm	5.0 mm	5.0 mm
<b>Screw Size</b>	M2.5	N/A	M2.5
<b>Screw Torque Recommended</b>	< 3.98 lb·in [0.45 N·m]	N/A	< 3.98 lb·in [0.45 N·m]
<b>Screwdriver Blade Width</b>	3.5 mm	3.5 mm	3.5 mm
<b>Wire Gauge (Single Wire)</b>	28–12 AWG	28–14 AWG	28–12 AWG
<b>Wire Gauge (Dual Wire)</b>	28–16 AWG (Dual Wire Ferrule Required)	28–16 AWG (Dual Wire Ferrule Required)	28–16 AWG
<b>Wire Strip Length</b>	0.3 in [7.5 mm]	0.37 in [9.5 mm]	0.3 in [7.5 mm]
<b>Equiv. Dinkle P/N</b>	5ESDV-05P-BK	5ESDSR-05P-BK	5ESDF-05P-BK

## Terminal Block Connectors, Analog Modules and 16-Point Discrete Modules

**Terminal Block Kits for Analog and 16-point Discrete Expansion Modules**



**BX-RTB10 (Kit - 2 pieces)**



**BX-RTB10-1 (Kit - 2 pieces)**



**BX-RTB10-2 (Kit - 2 pieces)**

<b>Terminal Block Specifications 16-Point Type</b>			
<b>Part Number</b>	<b>BX-RTB10</b>	<b>BX-RTB10-1</b>	<b>BX-RTB10-2</b>
<b>Price (Kit)</b>	\$22.50	\$25.00	\$23.50
<b>Connector Type</b>	Screw Type 90-degree	Spring Clamp Type 180-degree	Screw Type 180-degree
<b>Wire Exit</b>	180-degree	180-degree	180-degree
<b>Pitch</b>	3.81 mm	3.81 mm	3.81 mm
<b>Screw Size</b>	M2	N/A	M2
<b>Screw Torque Recommended</b>	< 1.77 lb·in [0.2 N·m]	N/A	< 1.77 lb·in [0.2 N·m]
<b>Screwdriver Blade Width</b>	2.5 mm	2.5 mm	2.5 mm
<b>Wire Gauge (Single Wire)</b>	28–16 AWG	26–18 AWG	30–16 AWG
<b>Wire Gauge (Dual Wire)</b>	28–18 AWG (Dual Wire Ferrule Required)	30–20 AWG (Dual Wire Ferrule Required)	30–18 AWG
<b>Wire Strip Length</b>	0.24 in [6mm]	0.35 in [9mm]	0.26 in [6.5 mm]
<b>Equiv. Dinkle P/N</b>	EC381V-10P-BK	ESC381V-10-BK	EC381F-10P-BK



**NOTE:** BX-RTB10 terminal blocks are included with Temperature Input modules.

# BRX Wiring Termination Options

## ZIPLink Wiring System

BRX expansion modules can be quickly connected to convenient ZIPLink remote terminal blocks for ease of wiring I/O devices. Your ZIPLink selection is dependent on the number of expansion module terminal points. The following tables list the connector options.



### 8-Point BRX Discrete Expansion Module ZIPLink Selector

Expansion Module Part No.	ZIPLink Module	ZIPLink Module Part No.	Qty Needed	ZIPLink Cable Part No.*	Qty Needed
<a href="#">BX-08ND3</a>	Feedthrough	<a href="#">ZL-RTB20</a> (Standard) OR <a href="#">ZL-RTB20-1</a> (Compact)	1	<a href="#">ZL-BXEM-CBL10</a> <a href="#">ZL-BXEM-CBL10-1</a> <a href="#">ZL-BXEM-CBL10-2</a>	1
<a href="#">BX-08NF3</a>					
<a href="#">BX-08NA</a>					
<a href="#">BX-08NB</a>					
<a href="#">BX-08TD1</a>					
<a href="#">BX-08TD2</a>					
<a href="#">BX-08TR**</a>					
<a href="#">BX-08TRZ**</a>					
<a href="#">BX-08TA</a>					
<a href="#">BX-08CD3R**</a>					

\* Select cable length: Blank = 0.5 m, -1 = 1.0m, -2 = 2.0m.

Available pigtail cables: [ZL-BXEM-CBL10-1P](#) = 1.0 m, [ZL-BXEM-CBL10-2P](#) = 2.0 m.

\*\* The relay outputs are derated not to exceed 2A per common when used with the ZIPLink wiring system.

### 12 & 5-Point BRX Discrete Expansion Module ZIPLink Selector

Expansion Module Part No.	ZIPLink Module	ZIPLink Module Part No.	Qty Needed	ZIPLink Cable Part No.*	Qty Needed
<a href="#">BX-12ND3</a>	Feedthrough	<a href="#">ZL-RTB20</a> (Standard) OR <a href="#">ZL-RTB20-1</a> (Compact)	1	<a href="#">ZL-BXEM-CBL15</a> <a href="#">ZL-BXEM-CBL15-1</a> <a href="#">ZL-BXEM-CBL15-2</a>	1
<a href="#">BX-12NA</a>					
<a href="#">BX-12NB</a>					
<a href="#">BX-12TD1</a>					
<a href="#">BX-12TD2</a>					
<a href="#">BX-12TR**</a>					
<a href="#">BX-05TRS</a>					
<a href="#">BX-12TA</a>					
<a href="#">BX-12CD3D1</a>					
<a href="#">BX-12CD3D2</a>					

\* Select cable length: Blank = 0.5 m, -1 = 1.0m, -2 = 2.0m.

Available pigtail cables: [ZL-BXEM-CBL15-1P](#) = 1.0 m, [ZL-BXEM-CBL15-2P](#) = 2.0 m.

\*\* The relay outputs are derated not to exceed 2A per common when used with the ZIPLink wiring system.

# BRX Wiring Termination Options

16-Point BRX Discrete Expansion Module ZIPLink Selector						
Expansion Module Part No.	ZIPLink Module	ZIPLink Module Part No.	Qty Needed	ZIPLink Cable Part No.*	Qty Needed	
<u>BX-16ND3</u>	Sensor	<u>ZL-LTB16-24-1</u>	1	<u>ZL-BXEM-CBL20</u> <u>ZL-BXEM-CBL20-1</u> <u>ZL-BXEM-CBL20-2</u>	1	
	Feedthrough	<u>ZL-RTB20</u> (Standard) OR <u>ZL-RTB20-1</u> (Compact)	1			
<u>BX-16NF3</u>	Feedthrough			<u>ZL-BXEM-CBL20</u> <u>ZL-BXEM-CBL20-1</u> <u>ZL-BXEM-CBL20-2</u>	1	
<u>BX-16NA</u>	Feedthrough	<u>ZL-RRL16-24-1</u> , <u>ZL-RRL16W-24-1</u> , <u>ZL-RRL16F-24-1</u> ,	1	<u>ZL-BXEM-CBL20</u> <u>ZL-BXEM-CBL20-1</u> <u>ZL-BXEM-CBL20-2</u>	1	
<u>BX-16NB</u>	Feedthrough	<u>ZL-RRL16-24-2</u> , <u>ZL-RRL16W-24-2</u> , <u>ZL-RRL16F-24-2</u> ,	1	<u>ZL-BXEM-CBL20</u> <u>ZL-BXEM-CBL20-1</u> <u>ZL-BXEM-CBL20-2</u>	1	
<u>BX-16TD1</u>	Relay (Sourcing)	<u>ZL-RRL16-24-1</u> , <u>ZL-RRL16W-24-1</u> , <u>ZL-RRL16F-24-1</u> ,	1	<u>ZL-BXEM-CBL20</u> <u>ZL-BXEM-CBL20-1</u> <u>ZL-BXEM-CBL20-2</u>	1	
<u>BX-16TD2</u>	Relay (Sinking)	<u>ZL-RRL16-24-2</u> , <u>ZL-RRL16W-24-2</u> , <u>ZL-RRL16F-24-2</u> ,	1	<u>ZL-BXEM-CBL20</u> <u>ZL-BXEM-CBL20-1</u> <u>ZL-BXEM-CBL20-2</u>	1	
<u>BX-16TF2</u>	Feedthrough	<u>ZL-RTB20</u> (Standard) OR <u>ZL-RTB20-1</u> (Compact)	1	<u>ZL-BXEM-CBL20</u> <u>ZL-BXEM-CBL20-1</u> <u>ZL-BXEM-CBL20-2</u>	1	
<u>BX-16TR**</u>						
<u>BX-16TRZ**</u>	Feedthrough	<u>ZL-RTB20</u> (Standard) OR <u>ZL-RTB20-1</u> (Compact)	1	<u>ZL-BXEM-CBL20</u> <u>ZL-BXEM-CBL20-1</u> <u>ZL-BXEM-CBL20-2</u>	1	
<u>BX-16CD3D1</u>						
<u>BX-16CD3D2</u>	Feedthrough	<u>ZL-RTB20</u> (Standard) OR <u>ZL-RTB20-1</u> (Compact)	1	<u>ZL-BXEM-CBL20</u> <u>ZL-BXEM-CBL20-1</u> <u>ZL-BXEM-CBL20-2</u>	1	
<u>BX-16CF3F2</u>						

\* Select cable length: Blank = 0.5 m, -1 = 1.0m, -2 = 2.0m.

Available pigtail cables: ZL-BXEM-CBL20-1P = 1.0 m, ZL-BXEM-CBL20-2P = 2.0 m.

\*\* The relay outputs are derated not to exceed 2A per common when used with the ZIPLink wiring system.

32-Point BRX Discrete Expansion Module ZIPLink Selector											
Expansion Module Part No.	ZIPLink Module	ZIPLink Module Part No.	Qty Needed	ZIPLink Cable Part No.*	Qty Needed						
<u>BX-32ND3</u>	Sensor	<u>ZL-LTB32-24-1</u>	1	<u>ZL-D24-CBL40</u> <u>ZL-D24-CBL40-1</u> <u>ZL-D24-CBL40-2</u>	1						
	Feedthrough	<u>ZL-RTB40</u> (Standard) OR <u>ZL-RTB40-1</u> (Compact)	1								
<u>BX-32TD1</u>	Feedthrough										
<u>BX-32TD2</u>	Feedthrough	<u>ZL-RTB40</u> (Standard) OR <u>ZL-RTB40-1</u> (Compact)	1	<u>ZL-D24-CBL40</u> <u>ZL-D24-CBL40-1</u> <u>ZL-D24-CBL40-2</u>	1						

\* Select cable length: Blank = 0.5 m, -1 = 1.0m, -2 = 2.0m.

Available pigtail cables: ZL-D24-CBL40-1P = 1.0 m, ZL-D24-CBL40-2P = 2.0 m.

Suffix -X indicates 45° cable connector angle. Non -X indicates 180° cable connector angle.

16-Point BRX High Speed Expansion Module ZIPLink Selector					
Expansion Module Part No.	ZIPLink Module	ZIPLink Module Part No.	Qty Needed	ZIPLink Cable Part No.*	Qty Needed
<u>BX-HS104</u>	Feedthrough	<u>ZL-RTB40</u> (Standard) OR <u>ZL-RTB40-1</u> (Compact)	1	<u>ZL-BX-CBL40-S</u> <u>ZL-BX-CBL40-1S</u>	1

# BRX Wiring Termination Options

BRX Analog and Temperature Expansion Module ZIPLink Selector					
Expansion Module Part No.	ZIPLink Module	ZIPLink Module Part No.	Qty Needed	ZIPLink Cable Part No. <sup>1</sup>	Qty Needed
<a href="#">BX-04ADM-1</a>	Feedthrough	<a href="#">ZL-RTB20</a> (Standard) OR <a href="#">ZL-RTB20-1</a> (Compact)	1	<a href="#">ZL-BXEM-CBL20</a> <a href="#">ZL-BXEM-CBL20-1</a> <a href="#">ZL-BXEM-CBL20-2</a>	1
<a href="#">BX-04AD-1</a>					
<a href="#">BX-08AD-1</a>					
<a href="#">BX-16AD-1</a>					
<a href="#">BX-04AD-2B</a>					
<a href="#">BX-08AD-2B</a>					
<a href="#">BX-16AD-2B</a>					
<a href="#">BX-04DA-1</a>					
<a href="#">BX-08DA-1</a>					
<a href="#">BX-04DA-2B</a>					
<a href="#">BX-08DA-2B</a>					
<a href="#">BX-2AD2DA-1</a>					
<a href="#">BX-4AD2DA-1</a>					
<a href="#">BX-2AD2DA-2B</a>					
<a href="#">BX-4AD2DA-2B</a>					
<a href="#">BX-08AD-3</a>					
<a href="#">BX-08DA-3</a>					
<a href="#">BX-2AD2DA-3</a>					
<a href="#">BX-4AD4DA-3</a>					
<a href="#">BX-04THM</a>	Temperature Input modules are not supported by the ZIPLink wiring system.				
<a href="#">BX-08THM</a>					
<a href="#">BX-06RTD</a>					
<a href="#">BX-08NTC</a>					
<a href="#">BX-04UT</a>					
<a href="#">BX-08UT</a>					
<a href="#">BX-4THM4DA-1</a>					
<a href="#">BX-4RTD4DA-1</a>					
<a href="#">BX-4UT4DA-3</a>					
<a href="#">BX-4UT4TD1</a>					
<a href="#">BX-4UT4TD2</a>					
<a href="#">BX-4UT4TR</a>					

1. Select cable length: Blank = 0.5 m, -1 = 1.0m, -2 = 2.0m.

Available pigtail cables: [ZL-BXEM-CBL20-1P](#) = 1.0 m, [ZL-BXEM-CBL20-2P](#) = 2.0 m.