


# Specialty Modules

## P3-HSO

\$587.00

### High-Speed Output

The P3-HSO is a high-speed pulse (1MHz) output module that supports Pulse/Direction, Up/Down and Quadrature pulse output on each of the two independent output channels. It has both line driver and open drain outputs. Additionally, it has six general purpose high-speed inputs and four general purpose outputs. Simple move, velocity move, and additional high level instructions make it easy to implement the application's motion profile.

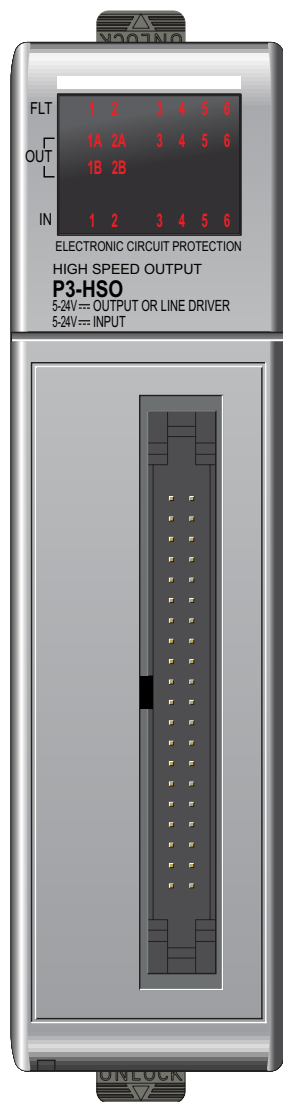

No terminal block sold for this module; ZIPLink required.

General Specifications	
<b>Module Type</b>	Intelligent
<b>Modules per Base</b>	11 Max
<b>I/O Points Used</b>	None, mapped directly to tags in CPU
<b>Surrounding Air Temperature</b>	0°C–60°C (32°F–140°F)
<b>Storage Temperature</b>	-20°C–70°C (-4°F–158°F)
<b>Humidity</b>	5 to 95% (non-condensing)
<b>Environmental Air</b>	No corrosive gases permitted
<b>Vibration</b>	IEC60068-2-6 (Test Fc)
<b>Shock</b>	IEC60068-2-27 (Test Ea)
<b>Field to Logic Side Isolation</b>	1800VAC applied for 1s
<b>Insulation Resistance</b>	>10MΩ @ 500VDC
<b>Heat Dissipation</b>	6.26 W
<b>Enclosure Type</b>	Open equipment
<b>Emissions</b>	EN61000-6-4 (Conducted and radiated RF emissions)
<b>Module Keying to Backplane</b>	Electronic
<b>Module Location</b>	Any I/O slot in any local, expansion, or remote base in a Productivity3000 system.
<b>Field Wiring</b>	Use ZIPLink wiring system. See Wiring Solutions.
<b>Weight</b>	114g (4oz.)
<b>Agency Approvals</b>	UL508 file E157382, Canada & USA CE (EN61131-2*)

\*Meets EMC and Safety requirements. See the Declaration of Conformity for details.

Power Specifications	
<b>External Power</b>	24VDC +10%/-15%, Class 2
<b>Maximum Voltage</b>	26.4 VDC
<b>Minimum Voltage</b>	20.4 VDC
<b>Current Consumption Excluding Outputs</b>	130mA
<b>Maximum Current Consumption Total of the 4 Status Outputs</b>	2A

Connector Specifications	
<b>Connector Type</b>	IDC style header with latch, Omron XG4A-4034
<b>Number of Pins</b>	40 point
<b>Pitch</b>	0.1 in. (2.54 mm)

See Wiring Solutions for part numbers of ZIPLink cables and connection modules required with this I/O module.



**NOTE:** The most recent Productivity Suite software and firmware versions may be required to support new modules and new features.

# Specialty Modules

## P3-HSO (cont'd)


Status Input Specifications	
Status Input	6 inputs
Isolation	Each status input is individually isolated from all other circuits
Input Volts Range	5-24 VDC
Input Volts Maximum	± 34VDC, limited by protection
Input Impedance	1kΩ min., 5kΩ max.
Inputs Rated Current	5-24 VDC, 16mA 5.2 mA typ. @ 5VDC 22mA max. @ 34VDC
Input Minimum ON Voltage	4.5 VDC
Input Maximum OFF Voltage	2.0 VDC
Input Minimum ON Current	5.0 mA
Input Maximum OFF Current	1.4 mA
OFF to ON Response Time	4ms
ON to OFF Response Time	4ms

Status Output Specifications		
Status Outputs	4 Outputs	
Output Signal Type, per Output	Current Sinking	Current Sourcing
Operating Voltage <sup>1</sup>	5-24 VDC	5-24 VDC <sup>1</sup>
Output Volts Maximum	36VDC	26.4 VDC <sup>1</sup>
Output Current Maximum	500mA	500mA
Overcurrent Protection	Short circuit detect, overcurrent shutdown <sup>1</sup>	
Output Self Limiting Current	1.2 to 2.4 amps	
Max. Inrush Current	Self limited	
Output Voltage Drop	0.7 VDC @ 0.5 A	0.7 VDC @ 0.5 A
Thermal Protection	Independent overtemperature protection each output	
Overtemperature Shutdown	155° to 185°C (311° to 365°F)	
Temperature Shutdown Hysteresis	5° to 15°C (41° to 59°F)	
Output Voltage Clamp During Inductive Switching	+45VDC	-20VDC
Maximum OFF to ON Response	25ms <sup>2</sup>	
Maximum ON to OFF Response	25ms <sup>2</sup>	


- Notes:
- Any fault shuts off the output. Fault is indicated and output is kept off until a new move start is received.
  - Operating voltage for current sourcing outputs must be less or equal to the external power.
  - Measured at 5VDC operating voltage, 0.5 A load.

Pulse Outputs Specifications		
Pulse Outputs	2 Channels	
Output Pulse Type, per Channel Select	Selectable for pulse & direction, up/down or quadrature	
Output Signal Type, per Channel Select	RS-422 Line Driver Current Sinking and Sourcing	Open Drain FET Outputs Current Sinking
Output Volts	RS-422 levels	24VDC
Output Volts Maximum	5VDC	36VDC
Protection for Overcurrent and Short Circuit to Power	Current limit and Thermal shutdown <sup>2</sup>	Current limit and Thermal shutdown <sup>1</sup>
Protection Short to Ground	Yes	Yes
Overcurrent Trip Level	Output current limit ±200mA max.2	100mA minimum
Maximum Continuous Output Current	±60mA	40mA
Max Switching Frequency, 1m Cable	1MHz	500kHz*
Max Switching Frequency, 10m Cable	1MHz	200kHz*

Status Inputs

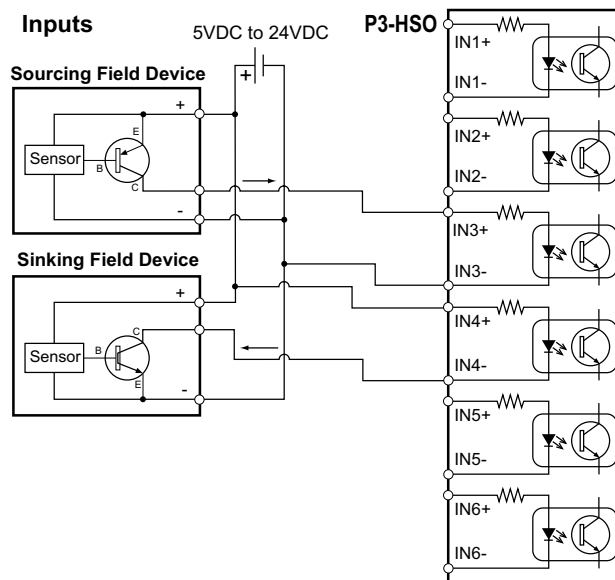

Status Outputs

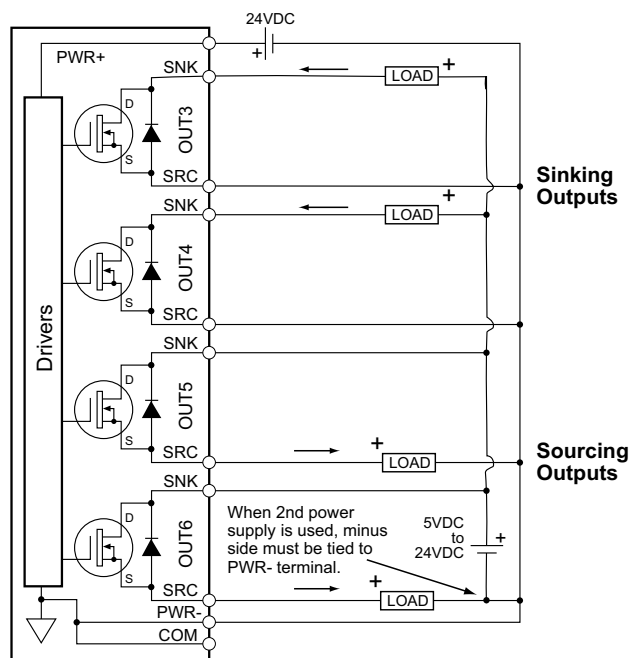


- Notes:
- Any fault shuts off the output. Fault is indicated and output is kept off until a new move start is received.
  - RS-422 thermal faults auto reset after device cool down.

\* Outputs are not limited to these speeds but single ended signals produced by the FETs are not usually reliable above these speeds due to cabling capacitance.


# Specialty Modules

## P3-HSO (cont'd)


### Sinking Pulse Outputs

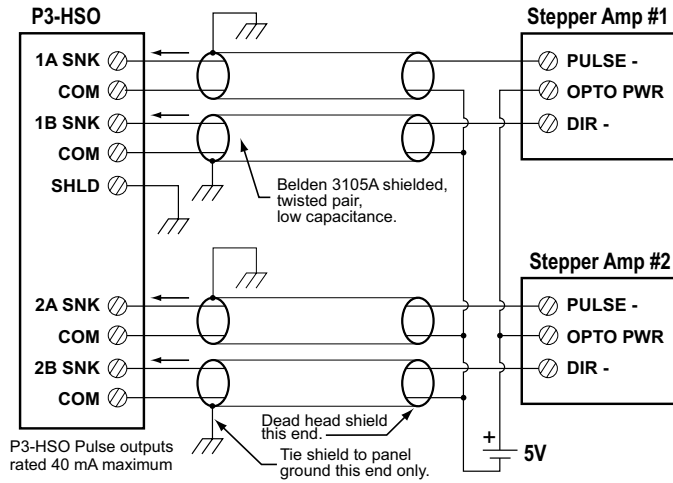


### Line Driver Pulse Outputs

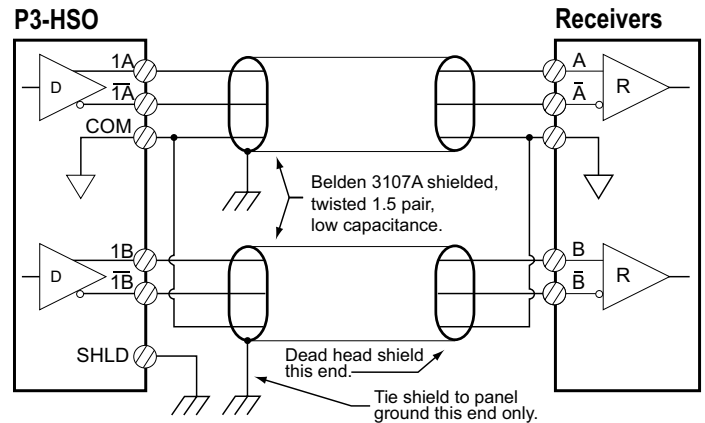

### SureServo Wiring Diagram

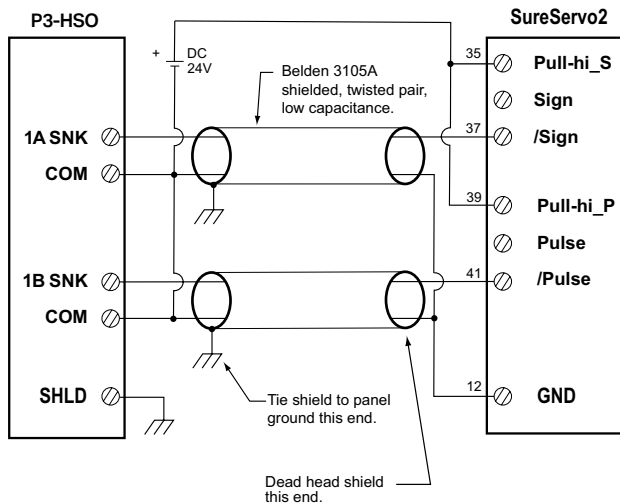


### SureStep Wiring Diagram

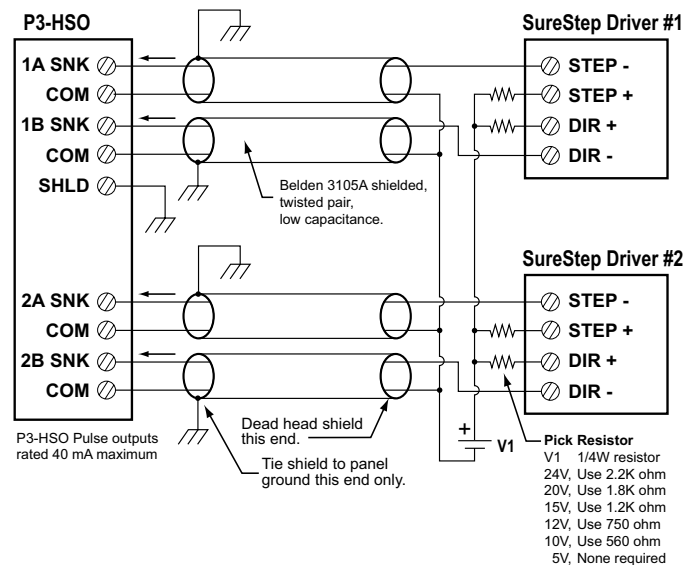


# Specialty Modules

## P3-HSO (cont'd)

### Sinking I/O Wiring Diagram

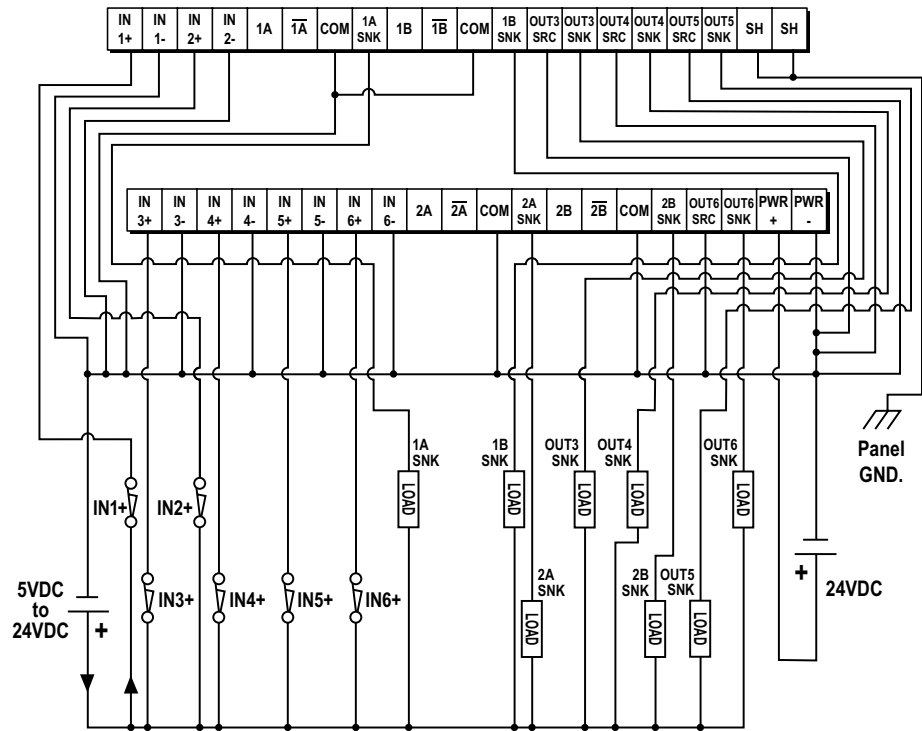

### Sourcing I/O Wiring Diagram

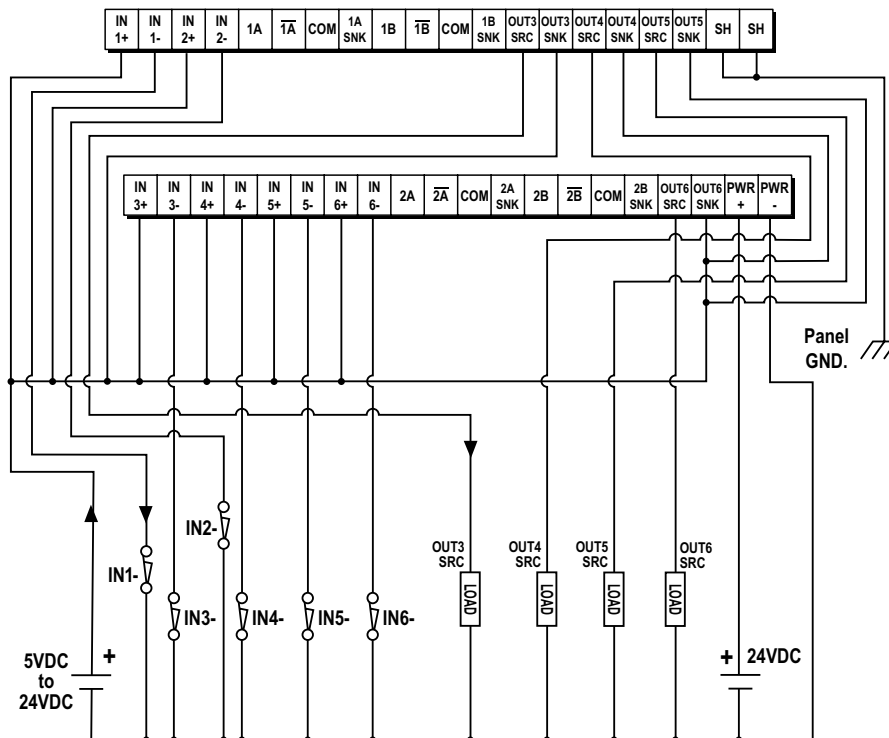




# Wiring Solutions

## Wiring Solutions using the ZIPLink wiring system

**ZIPLink**s eliminate the normally tedious process of wiring between devices by utilizing prewired cables and DIN rail mount connector modules. It's as simple as plugging in a cable connector at either end or terminating wires at only one end. Prewired cables keep installation clean and efficient, using half the space at a fraction of the cost of standard terminal blocks. There are several wiring solutions available when using the **ZIPLink** System ranging from

### **Solution 1: Productivity Series I/O Modules to ZIPLink Connector Modules**

When looking for quick and easy I/O-to-field termination, a **ZIPLink** connector module used in conjunction with a prewired **ZIPLink** cable, consisting of an I/O terminal block at one end and a multi-pin connector at the other end, is the best solution.

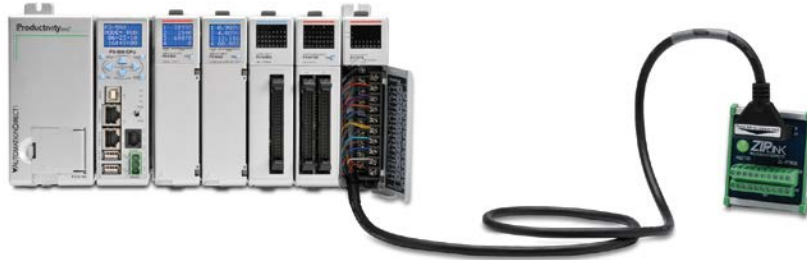


PLC I/O-to-**ZIPLink** Connector Modules that are ready for field termination, options for connecting to third party devices, GS, DuraPulse and SureServo Drives, and specialty relay, transorb and communications modules. Pre-printed I/O-specific adhesive label strips for quick marking of **ZIPLink** modules are provided with **ZIPLink** cables. See the following solutions to help determine the best **ZIPLink** system for your application.

Using the PLC I/O Modules to **ZIPLink** Connector Modules selector tables located in this section,

1. Locate your I/O module/PLC.
2. Select a **ZIPLink** Module.
3. Select a corresponding **ZIPLink** Cable.

### **Solution 2: Productivity Series I/O Modules to ZIPLink Connector Modules**

When wanting to connect I/O to another device within close proximity of the I/O modules, no extra terminal blocks are necessary when using the **ZIPLink** Pigtail Cables. **ZIPLink** Pigtail Cables are prewired to an I/O terminal block with color-coded pigtail with soldered-tip wires on the other end.

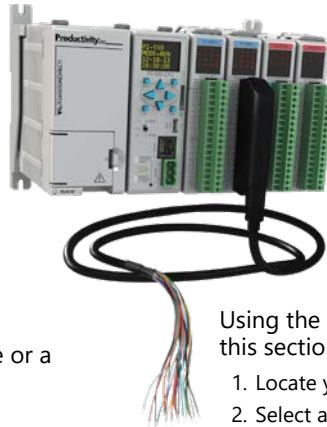

Using the I/O Modules to 3rd Party Devices selector tables located in this section,

1. Locate your PLC I/O module.
2. Select a **ZIPLink** Pigtail Cable that is compatible with your 3rd party device.

### **Solution 3: GS Series and DuraPulse Drives Communication Cables**

Need to communicate via Modbus RTU to a drive or a network of drives?

**ZIPLink** cables are available in a wide range of configurations for connecting to PLCs and SureServo, SureStep, Stellar Soft Starter and AC drives. Add a **ZIPLink** communications module to quickly and easily set up a multi-device network.

Using the Drives Communication selector tables located in this section,

1. Locate your Drive and type of communications.
2. Select a **ZIPLink** cable and other associated hardware.





# Wiring Solutions

## Solution 4: Serial Communications Cables

ZIPLink offers communications cables for use with DirectLOGIC, CLICK, and Productivity3000 CPUs, that can also be used with other communications devices. Connections include a 6-pin RJ12 or 9-pin, 15-pin and 25-pin D-sub connectors which can be used in conjunction with the RJ12 or D-Sub Feedthrough modules.

Using the Serial Communications Cables selector table located in this section,

1. Locate your connector type
2. Select a cable.



## Solution 5: Specialty ZIPLink Modules

For additional application solutions, ZIPLink modules are available in a variety of configurations including stand-alone relays, 24VDC and 120VAC transorb modules, D-sub and RJ12 feedthrough modules, communication port adapter and distribution modules, and SureServo 50-pin I/O interface connection.

Using the ZIPLink Specialty Modules selector table located in this section,

1. Locate the type of application.
2. Select a ZIPLink module.



## Solution 6: ZIPLink Connector Modules to 3rd Party Devices

If you need a way to connect your device to terminal blocks without all that wiring time, then our pigtail cables with color-coded soldered-tip wires are a good solution. Used in conjunction with any compatible ZIPLink Connector Modules, a pigtail cable keeps wiring clean and easy and reduces troubleshooting time.

Using the Universal Connector Modules and Pigtail Cables table located in this section,

1. Select module type.
2. Select the number of pins.
3. Select cable.







# CPU I/O Modules to ZIPLink Connector Modules - Productivity3000®

Productivity3000 CPU Input Module ZIPLink Selector				
CPU		ZIPLink		
Input Module	# of Terms	Component	Module Part No.	Cable Part No.
P3-08NAS	20	Feedthrough	ZL-RTB20	ZL-P3-CBL20 *
P3-08ND3S	20	Feedthrough		
P3-16NA	20	Feedthrough		
P3-16ND3	20	Feedthrough	ZL-LTB16-24-1	ZL-P3-CBL20-1L ZL-P3-CBL20-2L
		Sensor		
P3-32ND3	40	Feedthrough	ZL-RTB40	ZL-CBL40 ZL-CBL40-1
		Sensor	ZL-LTB32-24-1	
P3-64ND31	40	Feedthrough	ZL-RTB40	ZL-CBL40-2
		Sensor	ZL-LTB32-24-1	

Productivity3000 CPU Analog In Module ZIPLink Selector				
CPU		ZIPLink		
Analog Module	# of Terms	Component	Module	Cable
P3-04ADS	20	Feedthrough	ZL-RTB20	ZL-P3-CBL20-1L ZL-P3-CBL20-2L
P3-08AD	20	Feedthrough		
P3-16AD-1	20	Feedthrough		
P3-16AD-2	20	Feedthrough		
P3-08RTD <sup>2</sup>	Matched Only	See Note 2		
P3-08THM <sup>2</sup>	T/C Wire Only	See Note 2		
P3-04DA	20	Feedthrough	ZL-RTB20	ZL-P3-CBL20-1L ZL-P3-CBL20-2L
P3-08DA-1	20	Feedthrough		
P3-08DA-2	20	Feedthrough		
P3-16DA-1	20	Feedthrough		
P3-16DA-2	20	Feedthrough		
P3-8AD4DA-1	20	Feedthrough		
P3-8AD4DA-2	20	Feedthrough		

Productivity3000 CPU Specialty Module ZIPLink Selector				
CPU		ZIPLink		
Input Module	# of Terms	Component	Module Part No.	Cable Part No.
P3-HSI	40	Feedthrough	ZL-RTB40	ZL-CBL40-S
P3-HSO				ZL-CBL40-1S ZL-CBL40-2S

Productivity3000 CPU Output Module ZIPLink Selector				
CPU		ZIPLink		
Output Module	# of Terms	Component	Module Part No.	Cable Part No.
P3-08TAS	20	Feedthrough	ZL-RTB20	ZL-P3-CBL20 *
P3-08TD1S	20	Feedthrough		
P3-08TD2S	20	Feedthrough		
P3-08TRS	20	Feedthrough		
P3-16TA	20	Feedthrough	ZL-RTB20	ZL-P3-CBL20 ZL-P3-CBL20-1 ZL-P3-CBL20-2L
		Fuse		
P3-16TD1	20	Feedthrough	ZL-RTB20	ZL-P3-CBL20 ZL-P3-CBL20-1 ZL-P3-CBL20-2
		Fuse		
		Relay (sinking)		
P3-16TD2	20	Feedthrough	ZL-RTB20	ZL-P3-CBL20 ZL-P3-CBL20-1 ZL-P3-CBL20-2
		Fuse	ZL-RFU20 <sup>4</sup>	
		Relay (sourcing)	ZL-RRL16-24-2	
P3-16TR	20	Feedthrough	ZL-RTB20	ZL-P3-CBL20 ZL-P3-CBL20-1 ZL-P3-CBL20-2
		Fuse	ZL-RFU20 <sup>4</sup>	
P3-08TRS-1 <sup>3</sup>	20	Feedthrough	ZL-RTB20	ZL-P3-CBL20 ZL-P3-CBL20-1 ZL-P3-CBL20-2
		Fuse	ZL-RFU20 <sup>4</sup>	
P3-32TD1	40	Feedthrough	ZL-RTB40	ZL-CBL40 ZL-CBL40-1 ZL-CBL40-2
		Fuse	ZL-RFU40 <sup>4</sup>	
P3-32TD2	40	Feedthrough	ZL-RTB40	ZL-CBL40 ZL-CBL40-1 ZL-CBL40-2
		Fuse	ZL-RFU40 <sup>4</sup>	
P3-64TD1 <sup>1</sup>	40	Feedthrough	ZL-RTB40	ZL-CBL40 ZL-CBL40-1 ZL-CBL40-2
		Fuse	ZL-RFU40 <sup>4</sup>	
P3-64TD2 <sup>1</sup>	40	Feedthrough	ZL-RTB40	ZL-CBL40 ZL-CBL40-1 ZL-CBL40-2
		Fuse	ZL-RFU40 <sup>4</sup>	

\* Select the cable length by replacing the \* with: Blank = 0.5m, -1 = 1.0m, or -2 = 2.0m.

1 The P3-64ND3, P3-64TD1 and P3-64TD2 modules have two 32-point connectors and require two ZIPLink cables and two ZIPLink connector modules.

2 These modules are not supported by the ZIPLink wiring system.

3 The P3-08TRS-1 output module is derated not to exceed 2A per point maximum when used with the ZIPLink wiring system.

4 Note: Fuses (5 x 20 mm) are not included. See Edison Electronic Fuse section for (5 x 20 mm) fuse. S500 and GMA electronic circuit protection for fast-acting maximum protection. S506 and GMC electronic circuit protection for time-delay performance. Ideal for inductive circuits.

To ensure proper operation, do not exceed the voltage and current rating of ZIPLink module. ZL-RFU20 = 2A per circuit; ZL-RFU40 = 400 mA per circuit.



Note: ZIPLink Connector Modules specifications follow the Compatibility Matrix tables. ZIPLink Cables specifications are at the end of this ZIPLink section.

# I/O Modules

A variety of discrete, analog and specialty I/O modules are available for use in local, expansion, and remote I/O bases. Specifications for each module are on the following pages.

A filler module is available for unused I/O module slots (part number P3-FILL).

## Discrete Input Modules

Productivity3000 Discrete Input Modules			
Part Number	Number of Inputs	Description	Price
P3-16SIM	16	Input Simulator Module	\$197.00
P3-08ND3S	8	Isolated Sinking/Sourcing DC Input	\$99.00
P3-16ND3	16	Sinking/Sourcing DC Input	\$152.00
P3-32ND3	32	Sinking/Sourcing DC Input	\$208.00
P3-64ND3	64	Sinking/Sourcing DC Input	\$260.00
P3-08NAS	8	Isolated AC Input	\$126.00
P3-16NA	16	AC Input	\$159.00

\*ZIPLink required.

## Analog I/O Modules

Productivity3000 Analog Input Modules			
Part Number	Number of Channels	Description	Price
P3-04ADS	4	Isolated Analog Input	\$724.00
P3-08AD	8	Analog Input	\$393.00
P3-16AD-1	16	Analog Input (Current)	\$535.00
P3-16AD-2	16	Analog Input (Voltage)	\$524.00
P3-08RTD	8	Analog RTD Input	\$581.00
P3-08THM	8	Analog Thermocouple Input	\$736.00

Productivity3000 Analog Output Modules			
Part Number	Number of Channels	Description	Price
P3-04DA	4	Analog Output	\$449.00
P3-08DA-1	8	Analog Output (Current)	\$779.00
P3-08DA-2	8	Analog Output (Voltage)	\$725.00
P3-16DA-1	16	Analog Output (Current)	\$929.00
P3-16DA-2	16	Analog Output (Voltage)	\$911.00

Productivity3000 Analog Input/Output Modules			
Part Number	Number of Channels	Description	Price
P3-8AD4DA-1	8/4	Analog Input/Output (Current)	\$598.00
P3-8AD4DA-2	8/4	Analog Input/Output (Voltage)	\$617.00

## Specialty Modules

Productivity3000 Specialty Modules			
Part Number	Number of Channels	Description	Price
P3-HSI	2	High-Speed Pulse Input	\$563.00
P3-HSO*	2	High-Speed Output	\$587.00
P3-SCM	4 ports	Serial Communications Module	\$475.00


\*ZIPLink required.

## Discrete Output Modules

Productivity3000 Discrete Output Modules			
Part Number	Number of Outputs	Description	Price
P3-08TD1S	8	Isolated Sinking Output	\$135.00
P3-08TD2S	8	Isolated Sourcing Output	\$141.00
P3-16TD1	16	Sinking Output	\$162.00
P3-16TD2	16	Sourcing Output	\$167.00
P3-32TD1*	32	Sinking Output	\$208.00
P3-32TD2*	32	Sourcing Output	\$208.00
P3-64TD1*	*64	Sinking Output	\$280.00
P3-64TD2*	*64	Sourcing Output	\$265.00
P3-08TAS	8	Isolated AC Output	\$177.00
P3-16TA	16	AC Output	\$210.00
P3-08TRS	8	Isolated Relay Output	\$159.00
P3-08TRS-1	8	Isolated Relay Output	\$194.00
P3-16TR	16	Relay Output	\$177.00

\*ZIPLink required.


## Module Installation Procedure

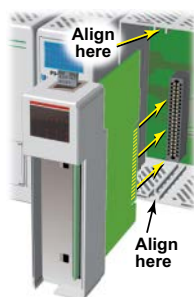

**WARNING:** DO NOT APPLY FIELD POWER UNTIL THE FOLLOWING STEPS ARE COMPLETED. SEE HOT-SWAPPING PROCEDURE FOR EXCEPTIONS.

**Step One:** Align circuit card with slot and press firmly to seat module into connector.


**Step Two:** Pull top and bottom locking tabs toward module face. Click indicates lock is engaged.

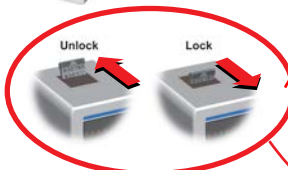

**Step Three:** Attach field wiring using optional terminal block or ZIPLink wiring system and install cover.



To install or remove terminal block cover, press middle to flex cover.

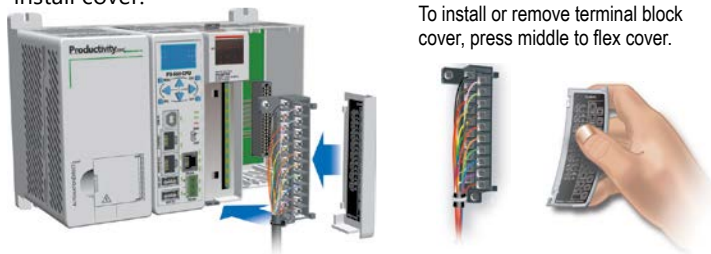

**WARNING:** EXPLOSION HAZARD – DO NOT CONNECT OR DISCONNECT CONNECTORS OR OPERATE SWITCHES WHILE CIRCUIT IS LIVE UNLESS THE AREA IS KNOWN TO BE NON-HAZARDOUS. DO NOT HOT-SWAP MODULES UNLESS THE AREA IS KNOWN TO BE NON-HAZARDOUS.