

Relay Output Modules

F4-08TRS-2 Relay Output \$00c4_:

Outputs per Module	8 relays
Commons per Module	8 (isolated)
Operating Voltage	12–30 VDC/ 12–250 VAC
Output Type	4, Form C (SPDT) 4, Form A (SPST-NO)
Peak Voltage	30VDC/ 250VAC @ 5A
AC Frequency	47–63 Hz
ON Voltage Drop	N/A
Max Current (Resistive)	5A/point 40A/module
Max Leakage Current	N/A
Max Inrush Current	10A
Minimum Load	100mA @ 12VDC
Base Power Required 5V	575mA max, 60mA/point
External DC Required	None
OFF to ON Response	7ms
ON to OFF Response	9ms
Terminal Type (included)	Removable
Status Indicators	Logic side
Weight	13.8 oz. (390g)
Fuses 19379-K- Wickman	1 (10A 250V) per common User replaceable
Replacement Fuse	D4-FUSE-2 \$-0ej9:

Maximum DC voltage rating is 120 VDC @ 0.5A @ 30,000 cycles typical. Motor starters up to and including NEMA size 3 can be used with this module.





See Wiring Solutions for part numbers of ZIPLink cables and connection modules compatible with this I/O module.



Typical Relay Life (Operations)

Maximum Resistive or Inductive Inrush Load Current	Operating Voltage		
	28 VDC	120 VAC	240 VAC
5.0 A	200K	100K	
3.0 A	325K	125K	50K
0.05 A	>50M		

CAUTION: the ZIPLink wiring system is rated at 2 Amps per I/O point and 4 Amps per common, therefore the F4-08TRS-2 relay outputs are derated to 2 Amps per point and 4 Amps per common when used with the ZIPLink wiring system.

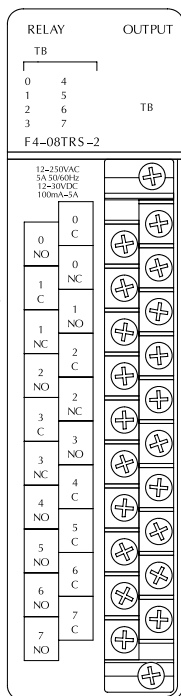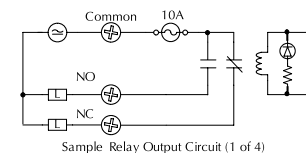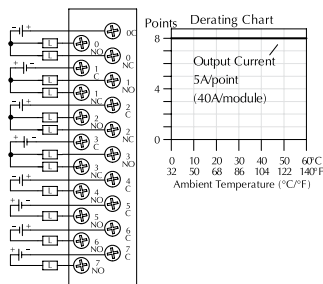

D4-16TR Relay Output \$00c4z:

Outputs per Module	16 relays
Commons per Module	2 (isolated)
Operating Voltage	5–30 VDC/ 5–250 VAC
Output Type	Form A (SPST-NO)
Peak Voltage	30VDC/ 250VAC
AC Frequency	47–63 Hz
ON Voltage Drop	N/A
Max Current (Resistive)	1A/point 5A/common
Max Leakage Current	0.1 mA @ 265VAC
Max Inrush Current	4A
Minimum Load	5mA
Base Power Required 5V	1000mA max, 60 mA/point
External DC Required	None
OFF to ON Response	10ms
ON to OFF Response	10ms
Terminal Type (included)	Removable
Status Indicators	Logic side
Weight	10.9 oz. (310g)
Fuses	1 (8A) per common (Non-replaceable)




See Wiring Solutions for part numbers of ZIPLink cables and connection modules compatible with this I/O module.



Typical Relay Life (Operations)

Maximum Resistive or Inductive Inrush Load Current	Operating Voltage		
	30 VDC	125 VAC	250 VAC
1A resistive	>1M	500K	300K
1 A inductive	400K	200K	100K
0.5 A resistive	>2M	800K	500K
0.5 A inductive	>1M	300K	200K

CAUTION: the ZIPLink wiring system is rated at 2 Amps per I/O point and 4 Amps per common, therefore the D4-16TR relay is derated to 4 Amps per common when used with the ZIPLink wiring system.

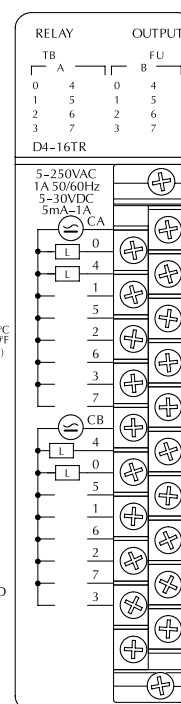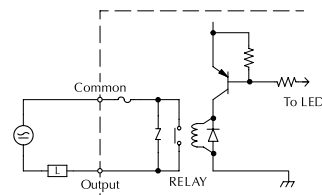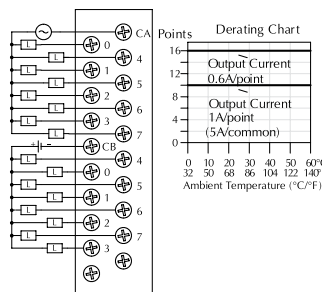

Check the Power Budget

Verify your power budget requirements

Your I/O configuration choice can be affected by the power requirements of the I/O modules you choose. When determining the types and quantity of I/O modules you will be using, it is important to remember there is a limited amount of power available from the power supply.

The chart on the opposite page indicates the power supplied and used by each DL405 device. The adjacent chart shows an example of how to calculate the power used by your particular system. These two charts should make it easy for you to determine if the devices you have chosen fit within the power budget of your system configuration.

If the I/O you have chosen exceeds the maximum power available from the power supply, you can resolve the problem by shifting some of the modules to an expansion base or remote I/O base (if you are using remote I/O).

Warning: It is extremely important to calculate the power budget correctly. If you exceed the power budget, the system may operate in an unpredictable manner which may result in a risk of personal injury or equipment damage.

Use ZIPLinks to reduce power requirements

If your application requires a lot of relay outputs, consider using the Ziplink AC or DC relay output modules. These modules can switch high current (10A) loads without putting a load on your base power budget. Refer to Wiring System for DL405 PLCs later in this section for more information.

This logo is placed next to I/O modules that are supported by the Ziplink connection systems.



See the I/O module specifications at the end of this section.

Calculating your power usage

The following example shows how to calculate the power budget for the DL405 system. The example is constructed around a single 8-slot base using the devices shown. It is recommended you construct a similar table for each base in your system.

A				
	Base Number 0	Device Type	5 VDC (mA)	External 24 VDC Power (mA)
B	CURRENT SUPPLIED			
	CPU/Expansion Unit /Remote Server	D4-454 CPU	3700	400
C	CURRENT REQUIRED			
	SLOT 0	D4-16ND2	+150	+0
	SLOT 1	D4-16ND2	+150	+0
	SLOT 2	F4-04DA-2	+90	+90
	SLOT 3	D4-08NA	+100	+0
	SLOT 4	D4-08NA	+100	+0
	SLOT 5	D4-16TD2	+100	+0
	SLOT 6	D4-16TD2	+100	+0
	SLOT 7	D4-16TR	+1000	+0
D	OTHER			
	BASE	D4-08B-1	+80	+0
	Handheld Programmer	D4-HPP-1	+320	+0
E	Maximum Current Required		2190	90
F	Remaining Current Available		3700-2190=1510	400-90=310
1. Using a chart similar to the one above, fill in column 2. 2. Using the tables on the opposite page, enter the current supplied and used by each device (columns 3 and 4). Pay special attention to the current supplied by the CPU, Expansion Unit, and Remote Server since they differ. Devices which fall into the "Other" category (Row D) are devices such as the Base and the Handheld programmer, which also have power requirements, but do not plug directly into the base. 3. Add the current used by the system devices (columns 3 and 4) starting with Slot 0 and put the total in the row labeled "maximum current required" (Row E). 4. Subtract the row labeled "Maximum current required" (Row E), from the row labeled "Current Supplied" (Row B). Place the difference in the row labeled "Remaining Current Available" (Row F). 5. If "Maximum Current Required" is greater than "Current Supplied" in either column 3 or 4, the power budget will be exceeded. It will be unsafe to use this configuration and you will need to restructure your I/O configuration. Note the auxiliary 24VDC power supply does not need to supply all the external power. If you need more than the 400mA supplied, you can add an external 24VDC power supply. This will help keep you within your power budget for external power.				

DL405 CPU power supply specifications and power requirements

Specification	AC Powered Units	24 VDC Powered Units
Part Numbers	D4-454, D4-EX (expansion base unit), D4-RS (remote Server unit)	D4-454DC-1, D4-EXDC (expansion base unit)
Voltage Withstand (dielectric)	1 minute @ 1,500 VAC between primary, secondary, field ground, and run relay	
Insulation Resistance	> 10MΩ at 500VDC	
Input Voltage Range	85-132 VAC (110V range) 170-264 VAC (220V range)	20-28 VDC (24VDC) with less than 10% ripple
Maximum Inrush Current	20A	20A
Maximum Power	50VA	38W

Power Requirements

Power Supplied					
CPUs/Remote Units/ Expansion Units	5 VDC Current Supplied in mA	24V Aux Power Supplied in mA	CPUs/Remote Units/ Expansion Units	5V Current Supplied in mA	24V Aux Power Supplied in mA
D4-454 CPU D4-454DC-1	3100 3100	400 NONE	D4-EX D4-EXDC D4-RS H4-EBC	4000 4000 3700 3470	400 NONE 400 400
Power Consumed					
Power-consuming Device	5V Current Consumed	External 24VDC Required	Power-consuming Device	5V Current Consumed	External 24VDC Current Required
I/O Bases			Analog Modules (continued)		
D4-04B-1	80	NONE	F4-16AD-1	75	100
D4-06B-1	80	NONE	F4-16AD-2	75	100
D4-08B-1	80	NONE	F4-08DA-1	70	75+20 per circuit
			F4-08DA-2	90	90
			F4-04DAS-1	60	60 per circuit
			F4-08DA-1	90	100+20 per circuit
			F4-08DA-2	80	150
			F4-16DA-1	90	100+20 per circuit
			F4-16DA-2	80	25 max.
			F4-08RTD	80	NONE
			F4-08THM-J(-n)	120	50
			F4-08THM	110	60
DC Input Modules			Remote I/O		
D4-16ND2	150	NONE	H4-ERM100	320(300)	NONE
D4-16ND2F	150	NONE	H4-ERM-F	450	NONE
D4-32ND3-1	150	NONE	D4-RM	300	NONE
D4-64ND2	300 max.	NONE			
AC Input Modules			Communications and Networking		
D4-08NA	100	NONE	H4-ECOM100	300	NONE
D4-16NA	150	NONE	D4-DCM	500	NONE
			F4-MAS-MB	235	NONE
AC/DC Input Modules			CoProcessors		
D4-16NE3	150	NONE	F4-CP128-1	305	NONE
DC Output Modules			Specialty Modules		
D4-16TD1	200	125	H4-CTRIO	400	NONE
D4-16TD2	400	NONE	D4-16SIM	150	NONE
D4-32TD1	250	140	F4-4LTC	280	75
D4-32TD2	350	120 (4A max including loads)			
D4-64TD1	800	NONE			
AC Output Modules			Programming		
D4-08TA	250	NONE	D4-HPP-1 (Handheld Prog.)	320	NONE
D4-16TA	450	NONE	Operator Interface		
Relay Output Modules			C-more Micro-Graphic	210	NONE
D4-08TR	550	NONE			
F4-08TRS-1	575	NONE			
F4-08TRS-2	575	NONE			
D4-16TR	1000	NONE			
Analog Modules					
F4-04AD	150	100			
F4-04ADS	370	120			
F4-08AD	75	90			



Wiring Solutions

Wiring Solutions using the ZIPLink Wiring System

ZIPLinks eliminate the normally tedious process of wiring between devices by utilizing prewired cables and DIN rail mount connector modules. It's as simple as plugging in a cable connector at either end or terminating wires at only one end. Prewired cables keep installation clean and efficient, using half the space at a fraction of the cost of standard terminal blocks. There are several wiring solutions available when using the **ZIPLink** System ranging from PLC I/O-to-**ZIPLink** Connector

Modules that are ready for field termination, options for connecting to third party devices, GS, DuraPulse and SureServo Drives, and specialty relay, transorb and communications modules. Pre-printed I/O-specific adhesive label strips for quick marking of **ZIPLink** modules are provided with **ZIPLink** cables. See the following solutions to help determine the best **ZIPLink** system for your application.

Solution 1: DirectLOGIC I/O Modules to ZIPLink Connector Modules

When looking for quick and easy I/O-to-field termination, a **ZIPLink** connector module used in conjunction with a prewired **ZIPLink** cable, consisting of an I/O terminal block at one end and a multi-pin connector at the other end, is the best solution.

Using the PLC I/O Modules to **ZIPLink** Connector Modules selector tables located in this section,

1. Locate your I/O module/PLC.
2. Select a **ZIPLink** Module.
3. Select a corresponding **ZIPLink** Cable.



Solution 2: DirectLOGIC I/O Modules to 3rd Party Devices

When wanting to connect I/O to another device within close proximity of the I/O modules, no extra terminal blocks are necessary when using the **ZIPLink** Pigtail Cables. **ZIPLink** Pigtail Cables are prewired to an I/O terminal block with color-coded pigtail with soldered-tip wires on the other end.

Using the I/O Modules to 3rd Party Devices selector tables located in this section,

1. Locate your PLC I/O module.
2. Select a **ZIPLink** Pigtail Cable that is compatible with your 3rd party device.



Solution 3: GS Series and DuraPulse Drives Communication Cables

Need to communicate via Modbus RTU to a drive or a network of drives?

ZIPLink cables are available in a wide range of configurations for connecting to PLCs and SureServo, SureStep, Stellar Soft Starter and AC drives. Add a **ZIPLink** communications module to quickly and easily set up a multi-device network.

Using the Drives Communication selector tables located in this section,

1. Locate your Drive and type of communications.
2. Select a **ZIPLink** cable and other associated hardware.





Wiring Solutions

Solution 4: Serial Communications Cables

ZIPLink offers communications cables for use with DirectLOGIC, CLICK, and Productivity3000 CPUs, that can also be used with other communications devices. Connections include a 6-pin RJ12 or 9-pin, 15-pin and 25-pin D-sub connectors which can be used in conjunction with the RJ12 or D-Sub Feedthrough modules.

Using the Serial Communications Cables selector table located in this section,

1. Locate your connector type
2. Select a cable.



Solution 5: Specialty ZIPLink Modules

For additional application solutions, **ZIPLink** modules are available in a variety of configurations including stand-alone relays, 24VDC and 120VAC transorb modules, D-sub, RJ12 and RJ45 feedthrough modules, communication port adapter and distribution modules, and SureServo 50-pin I/O interface connection.

Using the **ZIPLink** Specialty Modules selector table located in this section,

1. Locate the type of application.
2. Select a **ZIPLink** module.



Solution 6: ZIPLink Connector Modules to 3rd Party Devices

If you need a way to connect your device to terminal blocks without all that wiring time, then our pigtail cables with color-coded soldered-tip wires are a good solution. Used in conjunction with any compatible **ZIPLink** Connector Modules, a pigtail cable keeps wiring clean and easy and reduces troubleshooting time.

Using the Universal Connector Modules and Pigtail Cables table located in this section,

1. Select module type.
2. Select the number of pins.
3. Select cable.





PLC I/O Modules to ZIPLink Connector Modules - DL405

DL405 PLC Input Module ZIPLink Selector						
PLC	ZIPLink					
Input Module	# of Terms	Component	Module Part No.	Cable Part No.		
<u>D4-16ND2</u>	20	See Note 3				
<u>D4-16ND2F</u>						
<u>D4-32ND3-1²</u>	40	Feedthrough	<u>ZL-RTB40 (-1)</u>	straight conn: <u>ZL-D24-CBL40</u> <u>ZL-D24-CBL40-1</u> <u>ZL-D24-CBL40-2</u>		
<u>D4-64ND2^{1,2}</u>		Sensor	<u>ZL-LTB32-24-1</u>			
		Feedthrough	<u>ZL-RTB40 (-1)</u>			
		Sensor	<u>ZL-LTB32-24-1</u>	45 deg conn: <u>ZL-D24-CBL40-X</u> <u>ZL-D24-CBL40-1X</u> <u>ZL-D24-CBL40-2X</u>		
<u>D4-08NA</u>	11	See Note 3				
<u>D4-16NA</u>	20					
<u>D4-16NE3</u>						

DL405 PLC Analog Module ZIPLink Selector				
PLC	ZIPLink			
Analog Module	# of Terms	Component	Module	Cable
F4-04AD	20	See Note 3		
F4-04ADS				
F4-08AD				
F4-16AD-1				
F4-16AD-2				
F4-04DA-1				
F4-04DA-2				
F4-08DA-1				
F4-16DA-1				
F4-08DA-2				
F4-16DA-2				
F4-04DAS-1				
F4-08THM	T/C Wire Only			
F4-08THM-n				
F4-08RTD	Matched Only			



Note: ZIPLink Connector Module specifications follow the Compatibility Matrix tables in the ZIPLink section.

DL405 PLC Output Module ZIPLink Selector				
PLC	ZIPLink			
Output Module	# of Terms	Component	Module Part No.	Cable Part No.
<u>D4-16TD1</u>	20	See Note 3		
<u>D4-16TD2</u>				
<u>D4-32TD1</u> ²	40	Feedthrough	Feedthrough <u>ZL-RTB40</u> (-1) Fused <u>ZL-RFU40</u> ⁴	straight conn: <u>ZL-D24-CBL40</u> <u>ZL-D24-CBL40-1</u> <u>ZL-D24-CBL40-2</u>
<u>D4-32TD2</u> ²		Fuse		
		Feedthrough		
<u>D4-64TD1</u> ^{1,2}		Fuse		45 deg conn: <u>ZL-D24-CBL40-X</u> <u>ZL-D24-CBL40-1X</u> <u>ZL-D24-CBL40-2X</u>
		Feedthrough		
		Fuse		
<u>D4-08TA</u>	11	See Note 3		
<u>D4-16TA</u>	20			
<u>D4-08TR</u>	11			
<u>F4-08TRS-1</u>	20			
<u>F4-08TRS-2</u>				
<u>D4-16TR</u>				

Tables Footnotes:

1. The [D4-64ND2](#) and [D4-64TD1](#) modules have two 32-point connectors and require two ZIPLink cables and two ZIPLink connector modules.
2. To make a custom cable for the 32 or 64-point modules, use: Ribbon-style Connector [ZL-D24-CON-R](#), Solder-style 180° connector [ZL-D24-CON](#) or Solder-style 45° connector [ZL-D24-CON-X](#)
3. These modules are not supported by the ZIPLink wiring system.
4. Note: Fuses (5 x 20 mm) are not included. See Edison Electronic Fuse section for (5 x 20 mm) fuse. S500 and GMA electronic circuit protection for fast-acting maximum protection. S506 and GMC electronic circuit protection for time-delay performance. Ideal for inductive circuits. To ensure proper operation, do not exceed the voltage and current rating of ZIPLink module. [ZL-RFU20](#) = 2A per circuit; [ZL-RFU40](#) = 400 mA per circuit.

