

# DURAPULSE GS20(X) AC Drives – Introduction



DURAPULSE GS20(X) AC Drives													
Motor Rating	HP	1/4	1/2	1	2	3	5	7.5	10	15	20	25	30
	kW	0.2	0.4	0.75	1.5	2.2	3.7	5.5	7.5	11	15	18.5	22
120V Single-phase		✓	✓	✓									
230V Single-phase		✓	★	★	★	★							
230V Three-phase		✓	★	★	★	★	★	★	✓	✓	✓		
460V Three-phase			★	★	★	★	★	★	✓	✓	✓	✓	✓
575V Three phase				✓	✓	✓	✓	✓	✓				

✓ = GS20 model available    ★ = GS20 and GS20X models available

## Overview

The DuraPulse GS20(X) new generation high performance vector control drives provide many standard and advanced functions—all in a compact unit that has been reduced 40% in size. A NEMA 4X version provides service in the harshest of environments.

The drives include many of the same standard features as our GS family of drives including dynamic braking, PID, removable keypad, and RS-485 Modbus communication.

The GS20(X) drive expands the *DURAPULSE* family by adding single-phase input capability (ALL 230VAC drives can be supplied single-phase), a built-in PLC, and optional EtherNet/IP and ModbusTCP communication card. The drive supports up to four (4) independent IM motor parameter sets or supports control of a single AC PM motor.

*DURAPULSE* GS20(X) AC drives offer several different speed control modes: standard V/Hz with pulse input feedback, sensorless vector (SVC) for Induction Motors (IM) and Permanent Motors (PM), and ultra precise Field Oriented Vector control (FOC) for maximum open loop speed regulation control.

*DURAPULSE* GS20(X) offers two analog inputs, one analog output, one frequency output, seven digital inputs (including one pulse train input up to 33kHz), two digital outputs, one SPDT relay output, and two STO inputs. All of the analog and digital I/O can be configured for a wide variety of input or output functions. One option card slot is available for either the backup control power option card or Ethernet/IP and Modbus TCP communication option card.

## Features

- Broad offering from 1/4 to 30 hp
- NEMA 4X available up to 10hp
- Single-phase 120VAC up to 1hp
- Single-phase/three-Phase 230VAC up to 20HP
- Three-phase 460VAC and 575VAC
- Single-phase UL Ratings – 230VAC input for 1 to 20 hp models (see selection tables for derated output)
- Dual rating design – CT/VT Ratings (Light & Heavy Duty)
- “Zero Stack” side-by-side zero gap installation
- Compact Design
- Spring clamp terminal blocks
- Speed control potentiometer built in
- Flexible carrier frequency to 15khz and output frequency to 600Hz
- STO – Safe Torque Off (TUV Certified)
- Built-in PLC to support up to 2K steps
- Built-in USB port for fast & easy programming
- Free downloadable software for drive configuration and PLC programming
- Field-upgradable firmware (drive & communication option card)
- Optional LCD text-based advanced keypad (IP66/NEMA 1) can be remotely mounted
- Local/Remote control mode selection or digital/comm input with Hand/Off/Auto control
- Display custom values on keypad
- Momentary power loss restarts
- 100kA Short Circuit Current Rating
- DC Bus Connection Terminals (except 120VAC models)
- Conduit Box(s) for NEMA 1
- Analog I/O – configurable 2 Inputs and 1 Output
- Multi-Motor Control (4 total)
- Built-in Dynamic Braking – optional resistors
- PID Controller – including sleep and wake
- Password protection
- RTD and/or PTC input motor protection
- GS2 mode duplicates exact parameter configuration of GS2
- Modularized design eases maintenance and expansion, including quick replacement of cooling fan
- High speed communication interfaces

with MODBUS RTU built in, with optional EtherNet/IP and ModbusTCP Communication Card

- Circuit boards have conformal coating for improved environmental tolerance
- Excellent heat-sink design; able to operate at 50°C ambient temperature
- Fire Mode – Run fire mode during emergencies to have uninterrupted smoke removal and system pressure
- Two-year warranty
- CE, TUV, UL, cUL

## Accessories

- AC line reactors
- dV/dT output filters
- EMI filters
- RF filter
- Braking resistors
- Fuses
- Conduit boxes
- Mounting Kits
- Replacement cooling fans
- Replacement keypad
- Extension cable for remote keypad placement
- Optional advanced LCD keypad (and remote-mount bezel kit)
- EtherNet/IP and ModbusTCP comm card
- Four and eight-port RS-485 multi-drop termination boards
- GSoft2 drive configuration software
- GSLogic PLC programming software
- Type A to B USB cable
- Detailed descriptions and specifications for GS accessories are available in the “GS/ DURAPulse Accessories” section.

## Typical Applications

- Conveyors
- Compressors
- Material handling
- Extruding
- Grinding
- Shop tools
- Fans
- Pumps
- HVAC
- Mixing

# DURAPULSE GS20(X) AC Drives – Selection

## Selecting the Proper Drive Rating

Selecting the Proper Drive Rating																
<b>Determine Motor Voltage and Full-Load Amperage (FLA)</b>																
Motor voltage and FLA are located on the nameplate of the motor. <b>NOTE: FLA of motors that have been rewound may be higher than stated.</b>																
<b>Determine Motor Overload Requirements</b>																
Many applications experience temporary overload conditions due to starting requirements or impact loading. Most AC drives are designed to operate at 150% overload for 60 seconds. If the application requires an overload greater than 150% or longer than 60 seconds, the AC drive must be oversized. <b>NOTE: Applications that require replacement of existing motor starters with AC drives may require up to 600% overload.</b>																
<b>Determine Application Type: Constant Torque or Variable Torque</b>																
This torque requirement has a direct effect on which drive to select. Variable Torque applications are generally easier to start; typically fans and pumps. Most other applications outside fans and pumps fall into the Constant Torque category (machine control, conveyors, etc.). If you are unsure of the application, assume Constant Torque. The specification, derating, and selection tables are generally segregated by Constant Torque and Variable Torque.																
<b>Installation Altitude</b>																
AC drives rely on air flow for cooling. As the altitude increases, the air becomes less dense, and this drop in air density decreases the cooling properties of the air. Therefore, the AC drive must be oversized to compensate for the decrease in cooling. GS20(X) drives are designed to operate at 100% capacity at altitudes up to 1000 meters. <b>NOTE: For use above 1000m, the AC drive must be derated as described below.</b>																
<b>Derate Output Current Based on Altitude Above 1000 Meters</b>																
<ul style="list-style-type: none"><li>• If the AC drive is installed at an altitude of 0–1000m, follow normal operation restrictions.</li><li>• If installed at an altitude of 1000–2000m, decrease 1% of the rated current or lower 0.5°C of temperature for every 100m increase in altitude.</li><li>• Maximum altitude for Corner Grounded is 2000m. If installation at an altitude higher than 2000m is required, please contact AutomationDirect.</li></ul>																
<div><div>Derating for Altitude</div><div><table><caption>Derating for Altitude Data</caption><thead><tr><th>Altitude (m)</th><th>Current Rated Ratio (%) - 50°C (IP20/UL Open Type)</th><th>Current Rated Ratio (%) - 40°C (IP66/NEMA 4X/UL Type 4X)</th></tr></thead><tbody><tr><td>0</td><td>100</td><td>100</td></tr><tr><td>1000</td><td>100</td><td>100</td></tr><tr><td>2000</td><td>90</td><td>90</td></tr><tr><td>2500</td><td>70</td><td>70</td></tr></tbody></table></div></div>		Altitude (m)	Current Rated Ratio (%) - 50°C (IP20/UL Open Type)	Current Rated Ratio (%) - 40°C (IP66/NEMA 4X/UL Type 4X)	0	100	100	1000	100	100	2000	90	90	2500	70	70
Altitude (m)	Current Rated Ratio (%) - 50°C (IP20/UL Open Type)	Current Rated Ratio (%) - 40°C (IP66/NEMA 4X/UL Type 4X)														
0	100	100														
1000	100	100														
2000	90	90														
2500	70	70														

# DURAPULSE GS20(X) AC Drives – Selection

## Selecting the Proper Drive Rating, continued

### Determine Maximum Enclosure Internal Temperature

AC drives generate a significant amount of heat and can cause the internal temperature of an enclosure to exceed the rating of the GS20(X) drive, even when the ambient temperature is less than 104°F (40°C). Enclosure ventilation and/or cooling may be required to reduce maximum internal temperature to 104°F (40°C) or less. Ambient temperature measurements/calculations should be made for the maximum expected temperature.


**NOTE:** For use above 104°F (40°C), the AC drive must be derated as described below.

### Derate Output Current Based on Temperature Above 104°F (40°C) or 122°F (50°C)


Drive Derating by Temperature and Protection Level	
Protection Level	Derating
UL Open Type / IP20*	When the GS20(X) drive is operating at rated current, the ambient temperature has to be between -10°C and +50°C. When ambient temperature exceeds 50°C, decrease the rated current by 2.5% for every 1°C temperature increase. Maximum allowable temperature is 60°C.
UL Type 4X / NEMA 4X / IP66*	When the GS20(X) drive is operating at rated current, the ambient temperature has to be between -10°C and +40°C. When ambient temperature exceeds 40°C, decrease the rated current by 2.5% for every 1°C temperature increase. Maximum allowable temperature is 50°C.

\* For more information about environmental ratings, refer to "Environmental Conditions for GS20 AC Drives" on page tGSX-30 and "Environmental Conditions for GS20X AC Drives" on page tGSX-30.

**Ambient Temperature Derating for IP20 / UL Open Type**

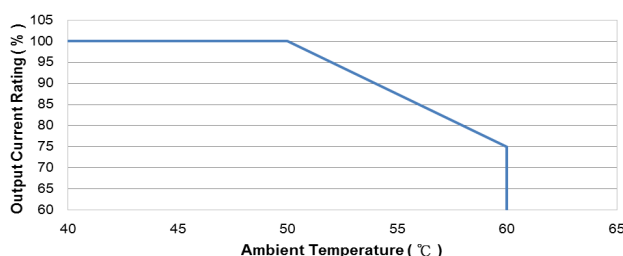

**Ambient Temperature Derating of UL Type 4X / NEMA 4X / IP66**

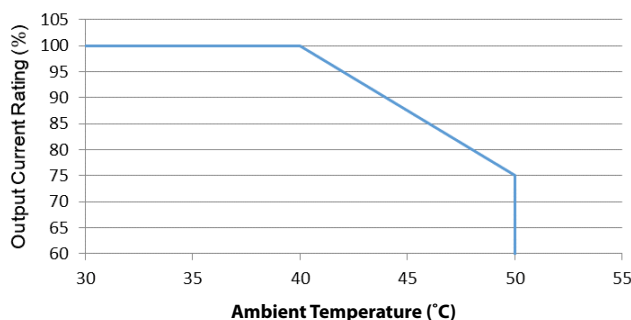

# DURAPULSE GS20(X) AC Drives – Selection

## Selecting the Proper Drive Rating, continued

### Derate Output Current Based on Carrier Frequency (if necessary)

#### Carrier Frequency Effects

AC Drives rectify the incoming 50 or 60Hz line power resulting in DC power at 0Hz. The resulting DC power is then pulse-width modulated and supplied to the motor by the drive's power electronics. IGBTs invert the DC power, simulating a sine wave at the desired frequency (that's what allows variable speed in AC induction motors). The speed at which the IGBTs are turned ON and OFF is called Carrier Frequency. In GS20(X) drives, the Carrier Frequency can range from 2kHz to 15kHz. Though Carrier Frequency can be adjusted, there are trade-offs between high Carrier Frequencies and low Carrier Frequencies.

#### Benefits of Higher Carrier Frequencies:

- Better efficiency (lower harmonic losses) in the motor
- Lower audible noise

#### Benefits of Lower Carrier Frequencies:

- Better efficiency in the drive
- Lower EMI (electrical noise)
- Reduced reflective wave peak voltage

As a general rule, the Carrier Frequency should be set as low as possible without creating unacceptable audible noise in the motor. Smaller systems can have higher Carrier Frequencies, but larger drives (>20 or 30hp) should not have Carrier Frequencies set higher than 6kHz. Heavy duty applications typically run around 2–4 kHz.

### Derating Tables

The tables below show the derating curves for both GS20 and GS20X drives running in two different modes under variable torque and constant torque conditions.

Line 1: Ta = 50°C / Load = 100%

Line 2: Ta = 50°C / Load = 75% or Ta = 40°C / Load = 100%

Line 3: Ta = 50°C / Load = 50% or Ta = 35°C / Load = 100%


Set PWM mode via P11.41.

SVPWM = Space Vector Pulse Width Modulation mode


DPWM = Two Phase Pulse Width Modulation mode

#### Variable Torque Carrier Frequency Derating

##### SVPWM Mode

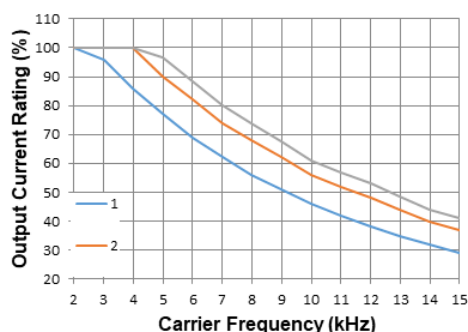


##### DPWM Mode

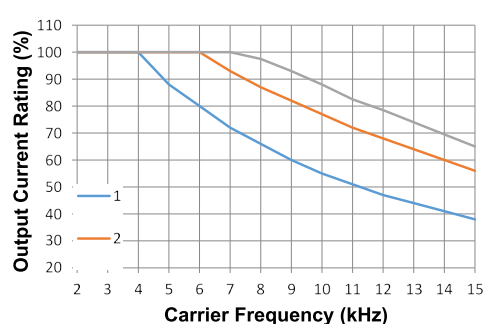


#### Constant Torque Carrier Frequency Derating

##### SVPWM Mode

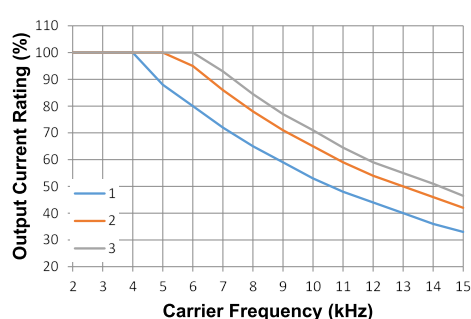

##### DPWM Mode

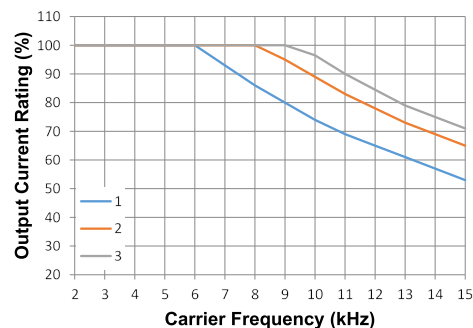

# DURApULSE GS20X AC Drives – Selection Specifications

## GS20X Drive Model Selection Tables

GS20X 230V <sup>1</sup> 1-Phase Specifications – Frame Sizes A, B							
Model Name			GS21X-20P5	GS21X-21P0	GS21X-22P0	GS21X-23P0	
Price			\$267.00	\$297.00	\$359.00	\$446.00	
Frame Size			A	A	A	B	
Drawing			<a href="#">PDF</a>	<a href="#">PDF</a>	<a href="#">PDF</a>	<a href="#">PDF</a>	
Output Rating	Max Motor Output		hp	1/2	1	2	3
			kW	0.4	0.75	1.5	2.2
	CT	Rated Output Capacity	kVA	1.1	1.7	2.9	4.2
		Rated Output Current	A	2.8	4.8	7.5	11
		Carrier Frequency <sup>3</sup>	kHz	2–15 (default 4)			
	VT	Rated Output Capacity	kVA	1.2	1.9	3.2	4.8
		Rated Output Current	A	3.2	5	8.5	12.5
		Carrier Frequency <sup>3</sup>	kHz	2–15 (default 4)			
Input Rating <sup>2</sup>	CT	Rated Input Current	A	7.3	10.8	16.5	24.2
	VT	Rated Input Current	A	8.3	11.3	18.5	27.5
	Rated Voltage/Frequency		One-phase 200–240 VAC (-15% to +10%), 50/60 Hz				
	Operating Voltage Range (VAC)		170–264				
	Frequency Tolerance (Hz)		47–63				
IE2 Efficiency - Relative Power Loss			3.4%	2.9%	2.6%	2.4%	
Weight (kg [lb])			2.25 [4.96]	2.6 [5.73]	3.1 [6.83]	3.5 [7.72]	
Cooling Method			Convective				Fan
IP Rating			IP66 / NEMA 4X				
1 - For Use With Three-Phase Motors Only.							
2- If 3-phase power source is non-symmetrical, refer to “Circuit Connections – RFI Jumper” in the GS20(X) AC Drives User Manual, Chapter 2.							
Please refer to “GS20(X) DURApulse Accessories – Fusing” (pg.tGSX-76) for input fusing information.							
3 - The carrier frequency is a factory default. Decrease the current value if you need to increase the carrier frequency. Refer to “Derate Output Current Based on Carrier Frequency”.							

# DURApULSE GS20X AC Drives – Selection Specifications

## GS20X Drive Model Selection Tables, continued

GS20X 230V <sup>1</sup> 3-Phase Specifications – Frame Sizes A, B, C									
Model Name			GS23X-20P5	GS23X-21P0	GS23X-22P0	GS23X-23P0	GS23X-25P0	GS23X-27P5	
Price			\$285.00	\$302.00	\$377.00	\$438.00	\$484.00	\$737.00	
Frame Size			A	A	A	B	B	C	
Drawing			<a href="#">PDF</a>	<a href="#">PDF</a>	<a href="#">PDF</a>	<a href="#">PDF</a>	<a href="#">PDF</a>	<a href="#">PDF</a>	
Output Rating	Max Motor Output (3-phase [1-phase]) <sup>4</sup>	hp	0.5 [0.25]	1 [0.5]	2 [1]	3 [1.5]	5 [2.5]	7.5 [3.5]	
		kW	0.4 [0.2]	0.75 [0.375]	1.5 [0.75]	2.2 [1.1]	3.7 [1.85]	5.5 [2.75]	
	CT	Rated Output Capacity 3-phase [1-phase])	kVA	1.1 [0.55]	1.8 [0.9]	2.9 [1.5]	4.2 [2.1]	6.5 [3.25]	9.5 [4.75]
		Rated Output Current 3-phase [1-phase])	A	2.8 [1.4]	4.8 [2.4]	7.5 [3.75]	11 [5.5]	17 [8.5]	25 [12.5]
		Carrier Frequency <sup>3</sup>	kHz	2–15 (default 4)					
	VT	Rated Output Capacity	kVA	1.2	1.9	3.	4.8	7.4	10.3
		Rated Output Current	A	3.2	5	8	12.5	19.5	27
		Carrier Frequency <sup>3</sup>	kHz	2–15 (default 4)					
Input Rating <sup>2</sup>	CT	Rated Input Current	A	3.4	5.8	9	13.2	20.4	30
	VT	Rated Input Current	A	3.8	6	9.6	15	23.4	32.4
	Rated Voltage/Frequency		3-phase or 1-phase 200–240 VAC (-15% to +10%), 50/60 Hz						
	Operating Voltage Range (VAC)		170–264						
	Frequency Tolerance (Hz)		47–63						
IE2 Efficiency - Relative Power Loss			3.4%	2.9%	2.5%	2.5%	2.2%	2.3%	
Weight (kg [lb])			2.3 [5.07]	2.45 [5.40]	2.75 [6.06]	3.4 [7.50]	3.5 [7.72]	4.25 [9.37]	
Cooling Method			Convective				Fan		
IP Rating			IP66 / NEMA 4X						
1 - For Use With Three-Phase Motors Only.									
2- If 3-phase power source is non-symmetrical, refer to “Circuit Connections – RFI Jumper” in the GS20(X) AC Drives User Manual, Chapter 2.									
Please refer to “GS20(X) DURApulse Accessories – Fusing” (pg.tGSX-76) for input fusing information.									
3 - The carrier frequency is a factory default. Decrease the current value if you need to increase the carrier frequency. Refer to “Derate Output Current Based on Carrier Frequency”.									
4 - Three phase models can be powered with 1-phase or 3-phase input power. If using 1-phase input power, GS21 models up to 3HP provide higher output power than equivalent GS23 models with 1-phase.									

# DURApULSE GS20(X) AC Drives – Selection Specifications

## GS20X Drive Model Selection Tables, continued

GS20X 460V <sup>1</sup> 3-Phase Specifications – Frame Sizes A, B, C										
Model Name			GS23X-40P5	GS23X-41P0	GS23X-42P0	GS23X-43P0	GS23X-45P0	GS23X-47P5	GS23X-4010	
Price			\$340.00	\$350.00	\$403.00	\$448.00	\$545.00	\$748.00	\$845.00	
Frame Size			A	A	A	A	B	C	C	
Drawing			<a href="#">PDF</a>	<a href="#">PDF</a>	<a href="#">PDF</a>	<a href="#">PDF</a>	<a href="#">PDF</a>	<a href="#">PDF</a>	<a href="#">PDF</a>	
Output Rating	Max Motor Output		hp	1/2	1	2	3	5	7 1/2	10
			kW	0.4	0.75	1.5	2.2	3.7	5.5	7.5
	CT	Rated Output Capacity	kVA	1.1	2.1	3.2	4.2	6.9	9.9	13
		Rated Output Current	A	1.5	2.7	4.2	5.5	9	13	17
		Carrier Frequency <sup>3</sup>	kHz	2–15 (default 4)						
	VT	Rated Output Capacity	kVA	1.4	2.3	3.5	5	8	12	15.6
		Rated Output Current	A	1.8	3	5.6	6.5	10.5	15.7	20.5
		Carrier Frequency <sup>3</sup>	kHz	2–15 (default 4)						
Input Rating <sup>2</sup>	CT	Rated Input Current	A	2.1	3.7	5.8	6.2	9.9	14.3	18.7
	VT	Rated Input Current	A	2.5	4.2	6.4	7.2	11.6	17.3	22.6
	Rated Voltage/Frequency		Three-phase 380–480 VAC (-15% to +10%), 50/60 Hz							
	Operating Voltage Range (VAC)		323–528							
	Frequency Tolerance (Hz)		47–63							
IE2 Efficiency - Relative Power Loss			4.0%	2.6%	2.3%	2.3%	2.0%	2.0%	1.9%	
Weight (kg [lb])			2.35 [5.18]	2.6 [5.73]	2.8 [6.17]	3.6 [7.94]	3.45 [7.61]	4.25 [9.37]	4.25 [9.37]	
Cooling Method			Convective					Fan		
IP Rating			IP66 / NEMA 4X							
1 - For Use With Three-Phase Motors Only.										
2- If 3-phase power source is non-symmetrical, refer to “Circuit Connections – RFI Jumper” in the GS20(X) AC Drives User Manual, Chapter 2. Please refer to “GS20(X) DURApulse Accessories – Fusing” (pg.tGSX-76) for input fusing information.										
3 - The carrier frequency is a factory default. Decrease the current value if you need to increase the carrier frequency. Refer to “Derate Output Current Based on Carrier Frequency”.										



# DURAPULSE GS20(X) AC Drives – General Specifications

## GS20(X) Drive Model Selection Tables, continued

GS20(X) General Specifications (Applicable to All Models)				
Control Characteristics	Control Method		V/F, Sensorless Vector (SVC), Field Oriented Control (FOC) Sensorless, Volt/Frequency with Pulse Generator input (VFPG), Torque (TQC Sensorless)	
	Applicable Motor		3-phase AC Induction Motor, 3-phase Permanent Magnet AC motor	
	Starting Torque <sup>1</sup>		150% / 3Hz 100% / (motor rated frequency/20) 200% / 0.5 Hz	(V/F, SVC control for IM, CT, rated) (SVC control for PM, CT, rated) (FOC control for IM, CT, rated)
	Torque Accuracy		± 15% TQC Sensorless	
	Torque Limits	120/230/460V	VT: 160% of output current, max CT: 180% of output current, max	
		575V	200% of output current, max	
	Speed Control Range <sup>1</sup>		1: 50 (V/F, SVC control for IM, CT, rated) 1: 20 (SVC control for PM, CT, rated) 1: 100 (FOC control for IM, CT, rated)	
	Max. Output Frequency		0.00–599.00 Hz	
	Overload Capacity		VT: rated output current of 120% 60 sec, 150% 3 sec. CT: rated output current of 150% 60 sec, 200% 3 sec.	
	Frequency Setting Signal		0–10 V / -10–10 V 4–20 mA / 0–10 V 1 channel pulse input (33kHz), 1 channel pulse output (33kHz)	
	Digital Inputs		Seven (7) - 24VDC NPN or PNP, includes 1 pulse train frequency input 33kHz	
	Digital Outputs		Three (3) - (2)-48VDC, (1) Relay-250VAC/30VDC	
	Analog Inputs		Two (2) - (1) voltage, (1) selectable Voltage or Current	
	Analog Outputs		One (1) - selectable voltage or current	
	Frequency Output		One (1) - 30VDC, 33kHz	
	Safe Torque Off		STO1 and STO2 inputs- 24VDC	
	Main Functions		Multiple motor switching (a maximum of four independent motor parameter settings), Fast start-up, Deceleration Energy Back (DEB) function, Wobble frequency function, Fast deceleration function, Master and Auxiliary frequency source selectable, Restart after momentary power loss, Speed tracking, Over-torque detection, 16-step speed (including the master speed), Accel./decel. time switch, S-curve accel./decel., three-wire operation control, JOG frequency, Frequency upper/lower limit settings, DC brake at start-up and stop, PID control, Built-in PLC (2000 steps), and Simple positioning function.	
	Application Macro		Built-in application parameter groups (selected by industry) and user-defined application parameter groups.	
Protection Characteristics	Motor Protection		Over-current, over-voltage, over-heating, phase loss.	
	Stall Prevention		Stall prevention during acceleration, deceleration, and running (independent settings).	
Accessory	Communication Card		GS20A-CM-ENETIP (EtherNet/IP and Modbus TCP)	
	External DC Power Supply		GS20A-BPS (24V power backup supply card)	
Agency Approvals			UL, CE <sup>2</sup> , TUV (SIL 2), RoHS, REACH	
1: Control accuracy may vary depending on the environment, application conditions, or different motors. For more information, contact AutomationDirect.				
2: See CE declaration here: <a href="https://support.automationdirect.com/docs/GS20A-GS20AX-CE.pdf">https://support.automationdirect.com/docs/GS20A-GS20AX-CE.pdf</a>				



# DURAPULSE GS20(X) AC Drives – Environmental Specifications


## GS20(X) Environmental Specifications

Environmental Conditions for GS20 AC Drives			
Condition	Operation	Storage	Transportation
Installation Location	IEC 60364-1/ IEC 60664-1 Pollution degree 2, Indoor use only.		n/a
Ambient Temperature	IP20/UL Open Type: -20–50°C (-20–60°C w/derating)	-40–85°C	-20–70°C
	Non-condensing, non-freezing		
Relative Humidity	90%, no water condensation		95%, no water condensation
Air Pressure	86–106 kPa		70–106 kPa
Pollution Level	IEC 60721-3, concentrate prohibited		
	Class 3C2; Class 3S2	Class 2C2; Class 2S2	Class 1C2; Class 1S2
Environmental Air	No corrosive/inflammable gases permitted		
Altitude	<1000 m (For altitudes > 1000 m, derate to use it.)		
Package Drop	n/a	ISTA procedure 1A (according to weight) IEC 60068-2-31	
Vibration	1.0 mm, peak to peak value range from 2–13.2 Hz; 0.7–2.0 G range from 13.2–55 Hz; 2.0 G range from 55–512 Hz. Compliance with IEC 60068-2-6		2.5 G peak, 5 Hz–2 kHz 0.015" maximum displacement
Impact	15G, 11ms Compliance with IEC/EN60068-2-27		30G
DO NOT expose the GS20 AC Drive to harsh environments such as dust, direct sunlight, corrosive/flammable gases, humidity, liquid, or vibrations. The salts in the air must be less than 0.01 mg/cm <sup>2</sup> every year.			

Environmental Conditions for GS20X AC Drives			
Condition	Operation	Storage	Transportation
Installation Location	PCB design is compliant with IEC 60364-1 / IEC 60664-1 Pollution Degree 2. The outer case meets IP66 standard for indoor use. If the drive is for outdoor application, avoid direct sunlight.	n/a	n/a
Ambient Temperature	IP66 / NEMA 4X / UL Type 4X: -20–40°C (-20–50°C w/derating)	-40–85°C	-20–70°C
	Non-condensing, non-freezing		
Relative Humidity	0-100%, no water condensation	95%, no water condensation	
Air Pressure	86–106 kPa	70–106 kPa	
Pollution Level	IEC 60721-3, concentrate prohibited		
	Class 3C2; Class 3S2	Class 2C2; Class 2S2	Class 1C2; Class 1S2
Altitude	<1000m (For altitudes > 1000m, derate to use it.)		
Package Drop	n/a	ISTA procedure 1A (according to weight) IEC 60068-2-31	
Vibration	1.0 mm, peak to peak value range from 2–13.2 Hz; 0.7–2.0 G range from 13.2–55 Hz; 2.0 G range from 55–512 Hz; complies with IEC 60068-2-6.	2.5 G peak, 5 Hz–2 kHz 0.015" maximum displacement	
Impact	15G, 11ms Compliance with IEC/EN60068-2-27	30G	
DO NOT expose the GS20X AC Drive to harsh environments such as direct contact with chemical substance and solvent, and exposure to direct sunlight.			

# DURAPULSE GS20(X) AC Drives Specifications – Air Flow and Power (Heat) Dissipation

## Minimum Clearances and Air Flow for GS20X Series Drives

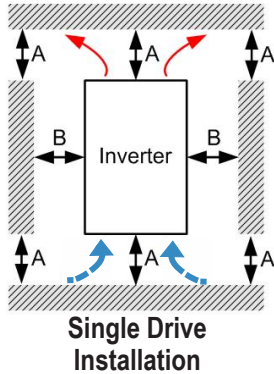

GS20X Minimum Mounting Clearances*				
Installation Method	A (mm)	B (mm)	Operation Temperature	
			Max (w/out derating)	Max (Derating)
Single drive installation	50	30	40	50

\* The minimum mounting clearances stated in this table apply to GS20X drives frames A to C. Failure to follow the minimum mounting clearances may cause a heat dissipation problem.

GS20X Airflow and Power Dissipation						
Model Number	Frame Size	Airflow Rate for Cooling		Power Dissipation (Watts)		
		Flow Rate (cfm)	Flow Rate (m <sup>3</sup> /hr)	Loss External (Heat sink)	Internal	Total
<a href="#">GS21X-20P5</a>	A	0.0	0.0	16.3	14.5	30.8
<a href="#">GS21X-21P0</a>				29.1	20.1	49.2
<a href="#">GS23X-20P5</a>				16.5	12.6	29.1
<a href="#">GS23X-21P0</a>				29.1	20.1	49.2
<a href="#">GS23X-40P5</a>				17.6	11.1	28.7
<a href="#">GS23X-41P0</a>				30.5	17.8	48.3
<a href="#">GS21X-22P0</a>				46.5	31	77.5
<a href="#">GS23X-22P0</a>				50.1	24.2	74.3
<a href="#">GS23X-42P0</a>				45.9	21.7	67.6
<a href="#">GS23X-43P0</a>				60.6	22.8	83.4
<a href="#">GS21X-23P0</a>	B	27.3	46.4	70.0	35.0	105.0
<a href="#">GS23X-23P0</a>				76.0	30.7	106.7
<a href="#">GS23X-25P0</a>				108.2	40.1	148.3
<a href="#">GS23X-45P0</a>				93.1	42.0	135.1
<a href="#">GS23X-27P5</a>	C	33.5	56.6	192.8	53.3	246.1
<a href="#">GS23X-47P5</a>				132.8	39.5	172.3
<a href="#">GS23X-4010</a>				164.7	53.3	246.1




- Published flow rates are the result of active cooling using fans, factory installed in the drive.
- Unpublished flow rates (-) are the result of passive cooling in drives without factory installed fans.
- The required airflow shown in the chart is for installing a single GS20X drive in a confined space.

- When calculating power dissipation (Watt Loss), use the Total value. Heat dissipation shown in the chart is for installing a single GS20X drive in a confined space.
- Heat dissipation for each model is calculated by rated voltage, current and default carrier frequency.

# DURAPULSE GS20(X) AC Drives Specifications

## – Terminals




### Control Circuit Terminal Names and Definitions

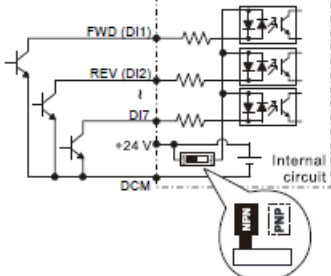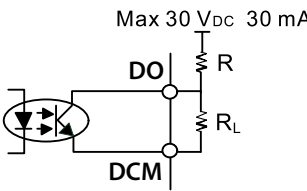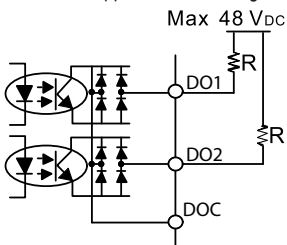Control Circuit Terminals		
Terminal Symbol	Terminal Function	Description
<b>+24V</b>	Digital control signal common (Source)	+24V $\pm$ 10% 100mA
<b>FWD (DI1) REV (DI2) DI3 - DI7</b>	Digital input 1-7 ① Sink Mode with internal power (+24 V <sub>DC</sub> )  See pg.tGSX-35 for sinking/sourcing wiring examples.	<p><b>Source Mode:</b> ON: activation current 3.3 mA <math>\geq</math> 11VDC OFF: cut-off voltage <math>\leq</math> 5VDC</p> <p><b>Sink Mode:</b> ON: activation current 3.3 mA <math>\leq</math> 13VDC OFF: cut-off voltage <math>\geq</math> 19VDC</p> <p>DI7: Single pulse input, maximum input frequency=33kHz.</p> <p>Digital inputs can be configured by the user for many different functions. Refer to P02.01-02.07 to program the digital inputs FWD (DI1), REV (DI2), DI3-DI7. When P02.00=0, FWD (DI1) and REV (DI2) can be programmed.</p> <ul style="list-style-type: none"> <li>When P02.00<math>\neq</math>0, the functions of FWD (DI1) and REV (DI2) act according to P02.00 setting.</li> <li>When P02.07=0, DI7 is pulse input terminal.</li> <li>DI7 uses pulse input can be used as frequency command source or connect it to the encoder for motor closed-loop control.</li> <li>DI7 motor closed-loop control only supports VFGP control mode.</li> </ul>
<b>DO</b>	Digital frequency signal output  Max 30 V <sub>DC</sub> 30 mA	DO uses pulse voltage as an output monitoring signal; Duty-cycle: 50% Min. load impedance RL: 1k $\Omega$ / 100pF Max. current endurance: 30 mA Max. voltage: 30VDC $\pm$ 1% (when 30VDC / 30mA / RL=100pF) Max. output frequency: 33kHz Current-limiting resistor R: $\geq$ 1K $\Omega$ Output load impedance RL Capacitive load $\leq$ 100pF
<b>DCM</b>	Digital control / Frequency signal common (Sink)	Resistive load $\geq$ 1k $\Omega$ , resistance determines the output voltage value. DO-DCM voltage = external voltage * ( RL / (RL+R) )
<b>DO1</b>	Digital Output 1 (photo coupler)	The AC motor drive outputs various monitoring signals, such as drive in operation, frequency reached, and overload indication through a transistor (open collector). Outputs can be wired as sinking or sourcing. See User manual Appendix D for wiring examples.  Max 48 V <sub>DC</sub> 50 mA
<b>DO2</b>	Digital Output 2 (photo coupler)	
<b>DO3</b>	Digital Output Common (photo coupler)	
<b>R10</b>	Relay Output 1 (N.O.)	<p><b>Resistive Load</b></p> <ul style="list-style-type: none"> <li>3.0 A (NO), 3.0 A (NC) @250VAC</li> <li>5.0 A (NO), 3.0 A (NC) @30VDC</li> </ul> <p><b>Inductive Load (COS 0.4)</b></p> <ul style="list-style-type: none"> <li>1.2 A (NO), 1.2 A (NC) @250VAC</li> <li>2.0 A (NO), 1.2 A (NC) @30VDC</li> </ul> <p>To output different kinds of monitoring signals such as motor drive in operation, frequency reached, and overload indication.</p>
<b>R1C</b>	Relay Output 1 (N.C.)	
<b>R1</b>	Relay Output 1 Common	
<b>+10V</b>	Potentiometer power supply	Power supply for analog frequency setting: +10.5 $\pm$ 0.5 VDC / 20mA

# DURAPULSE GS20(X) AC Drives Specifications

## – Terminals

### Control Circuit Terminal Names and Definitions

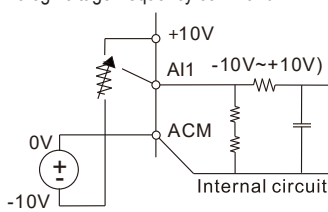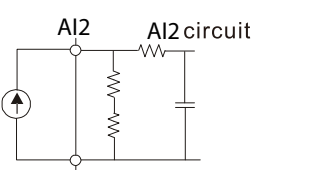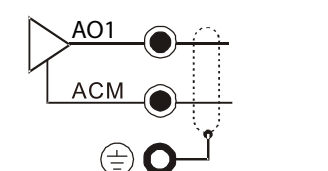Control Circuit Terminals (continued)		
Terminal Symbol	Terminal Function	Description
<b>AI1</b>	<p>Analog voltage frequency command</p> 	<p>Impedance: 20kΩ  Range: 0–10 V / -10–10 V = 0–Maximum Operation Frequency (P01.00)  Mode switching by setting P03.00, P03.28  AI1 resolution=10 bits</p>
<b>AI2</b>	<p>Analog current frequency command</p> 	<p>Impedance: Current mode=250 Ω, Voltage mode=20kΩ  Range: 0–20 mA / 4–20 mA / 0–10 V = 0–Maximum Operation Frequency (P01.00)  Mode switching by setting P03.01, P03.29  Switch: The AI2 default is 0–20 mA / 4–20 mA (current mode)  AI2 resolution = 12 bits</p>
<b>AO1</b>	<p>Multi-function analog voltage output</p> 	<p>Switch: The AO1 default is 0–10 V (voltage mode).  To switch to the current mode, two steps are required:  1. A dip switch must be configured (follow the instructions on the inner side of the front cover).  2. Change P03.31 to 1 or 2 (see Chapter 4 of the GS20(X) User Manual).  <b>Voltage mode</b>  Range: 0–10 V (P03.31=0) corresponds to the maximum operating range of the control target  Max. output current: 2mA  Max. Load: 5kΩ  <b>Current mode</b>  Range: 0–20 mA (P03.31=1) / 4–20 mA (P03.31=2) corresponds to the maximum operating range of the control target, maximum load 500Ω  AO1 resolution=10 bits</p>
<b>ACM</b>	Analog Signal Common	Analog signal common terminal
<b>+24V (red)</b>	STO 24V power terminal	
<b>STO1, STO2 (red)</b>	<p>Default: STO1 / STO2 short-circuited to +24V  Rated voltage: 24VDC ± 10 %; maximum voltage: 30VDC ± 10 %  Rated current: 6.67 mA ± 10 %  <b>STO activation mode</b>  Input voltage level: 0VDC &lt; STO1-SCM or STO2-SCM &lt; 5VDC  STO response time ≤ 20ms (STO1 / STO2 operates until the AC motor drive stops outputting current)  <b>STO cut-off mode</b>  Input voltage level: 11VDC &lt; STO1-SCM and STO2-SCM &lt; 30VDC  Power removal safety function per EN 954-1 and IEC / EN 61508  <b>Note:</b> Refer to Chapter 17 SAFE TORQUE OFF FUNCTION for details.</p>	
<b>SCM (red)</b>	STO Common - Signal Terminal	
<b>SG+</b>	Modbus RS-485	
<b>SG-</b>	<b>Note:</b> Refer to GS20(X) User Manual Chapter 4 Descriptions of Parameter Settings, Parameter Group 09: Communication Parameters for details.	
<b>SGND</b>		
<b>RJ45</b>	<p>PIN 1, 2, 6: Reserved  PIN 3, 7: SGND  PIN 4: SG-  PIN 5: SG+  PIN 8: +10V supply GS4-KPD (provides optional power supply)</p>	The RJ45 port provides a serial communications connection. Max Baud Rate = 115.2 kbps


# DURAPULSE GS20(X) AC Drives – Basic Wiring Diagram

## Main Circuit Wiring Diagram: GS20(X) All Models

Note: Users **MUST** connect wiring according to the circuit diagram shown below. (Refer to GS20(X) User Manual for additional specific wiring information.)

Note: DC reactors (chokes) are specified but not stocked by AutomationDirect.


Note: DC- and DC+/+1 terminals are not available on 120V series drives.

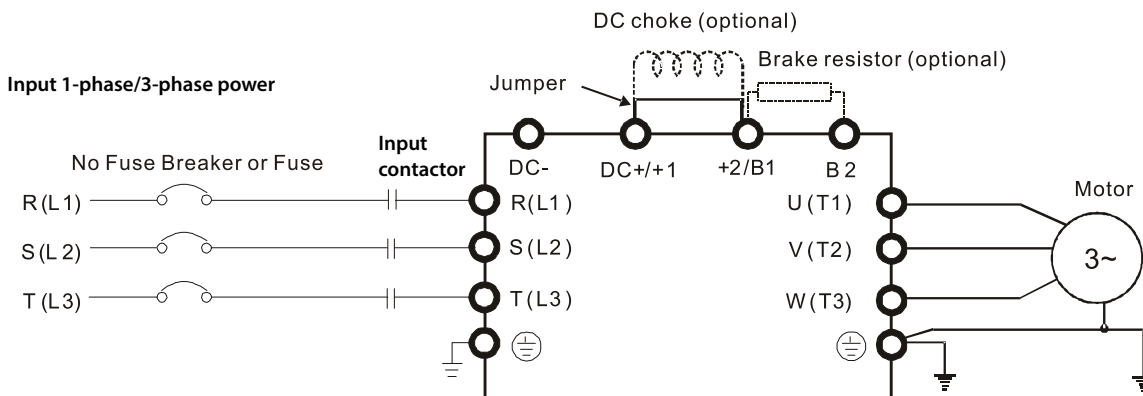


## Control Circuit Wiring Diagram: Digital Inputs - Internal Power

Note: Users **MUST** connect wiring according to the control circuit diagram shown below. (Refer to GS20(X) User Manual for additional specific wiring information.)

- ① Sink Mode with internal power (+24 V<sub>DC</sub>)

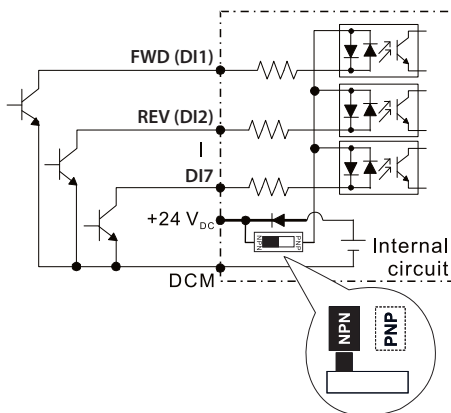


- ② Source Mode with internal power (+24 V<sub>DC</sub>)

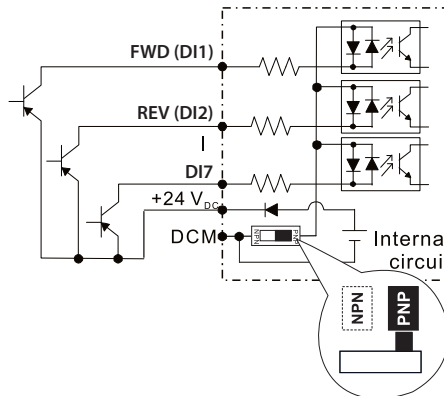


## Control Circuit Wiring Diagram: Digital Inputs - External Power

Note: Users **MUST** connect wiring according to the control circuit diagram shown below. (Refer to GS20(X) User Manual for additional specific wiring information.)

- ③ Sink Mode with external power

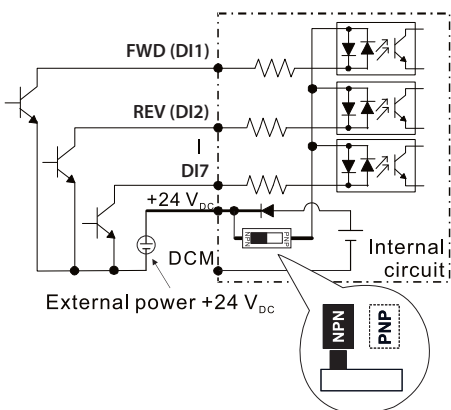


- ④ Source Mode with external power

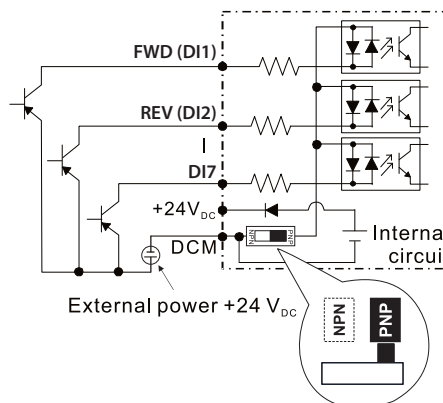

# DURAPULSE GS20(X) AC Drives – Basic Wiring Diagram

## System Wiring Diagram:

**Note:** Users **MUST** connect wiring according to the circuit diagram shown below. (Refer to user GS20(X) User Manual for additional specific wiring information.)

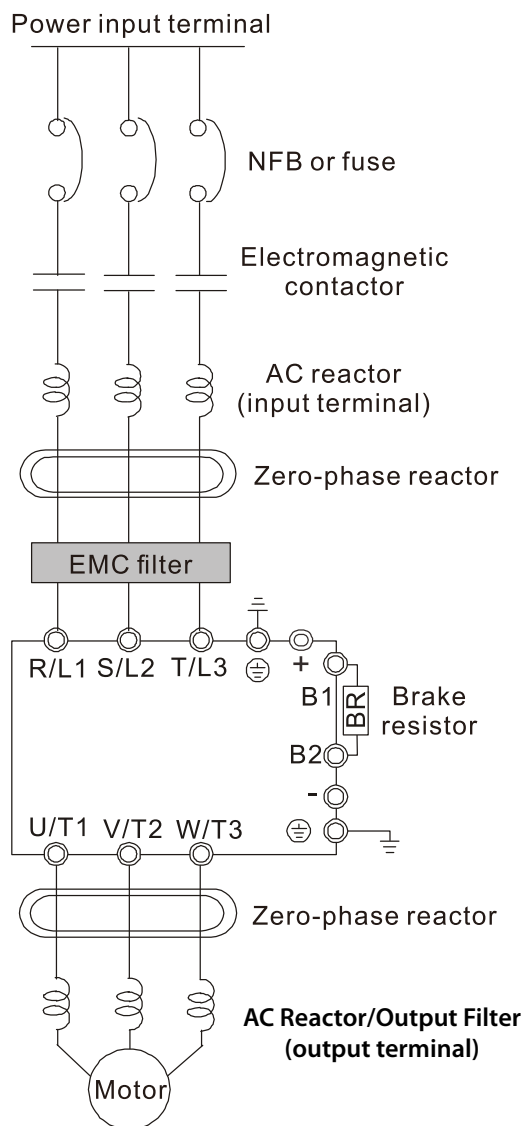


System Wiring Components	
Component	Function
Power input terminal	Supply power according to the rated power specifications indicated in the manual
NFB or fuse	There may be a large inrush current during power on. Select a suitable NFB or Fuse.
Electromagnetic contactor	Switching the power ON/OFF on the primary side of the electromagnetic contactor can turn the drive ON/OFF, but frequent switching can cause drive failure. Do not switch ON/OFF more than once an hour. Do not use the electromagnetic contactor as the power switch for the drive; doing so shortens the life of the drive.
AC reactor (input terminal)	When the main power supply capacity is greater than 500kVA, or when it switches into the phase capacitor, the instantaneous peak voltage and current generated may destroy the internal circuit of the drive. It is recommended that you install an input side AC reactor in the drive. This also improves the power factor and reduces power harmonics. The wiring distance should be within 10 m.
Zero phase reactor	Used to reduce radiated interference, especially in environments with audio devices, and reduce input and output side interference. The effective range is AM band to 10MHz.
EMC filter	Can be used to reduce electromagnetic interference.
Brake module and Brake resistor (BR)	Used to shorten the deceleration time of the motor.
AC Reactor/Output Filter (output terminal)	The motor cable length affects the size of the reflected wave on the motor end. For motor distances greater than 100feet, the VTF series dV/dT filter is recommended.

# DURAPULSE GS20(X) AC Drives – Basic Wiring Diagram

## Control Wiring Diagram: Full I/O

**Note:** Users **MUST** connect wiring according to the circuit diagram shown below. (Refer to user manual GS20-UMW for additional specific wiring information.)

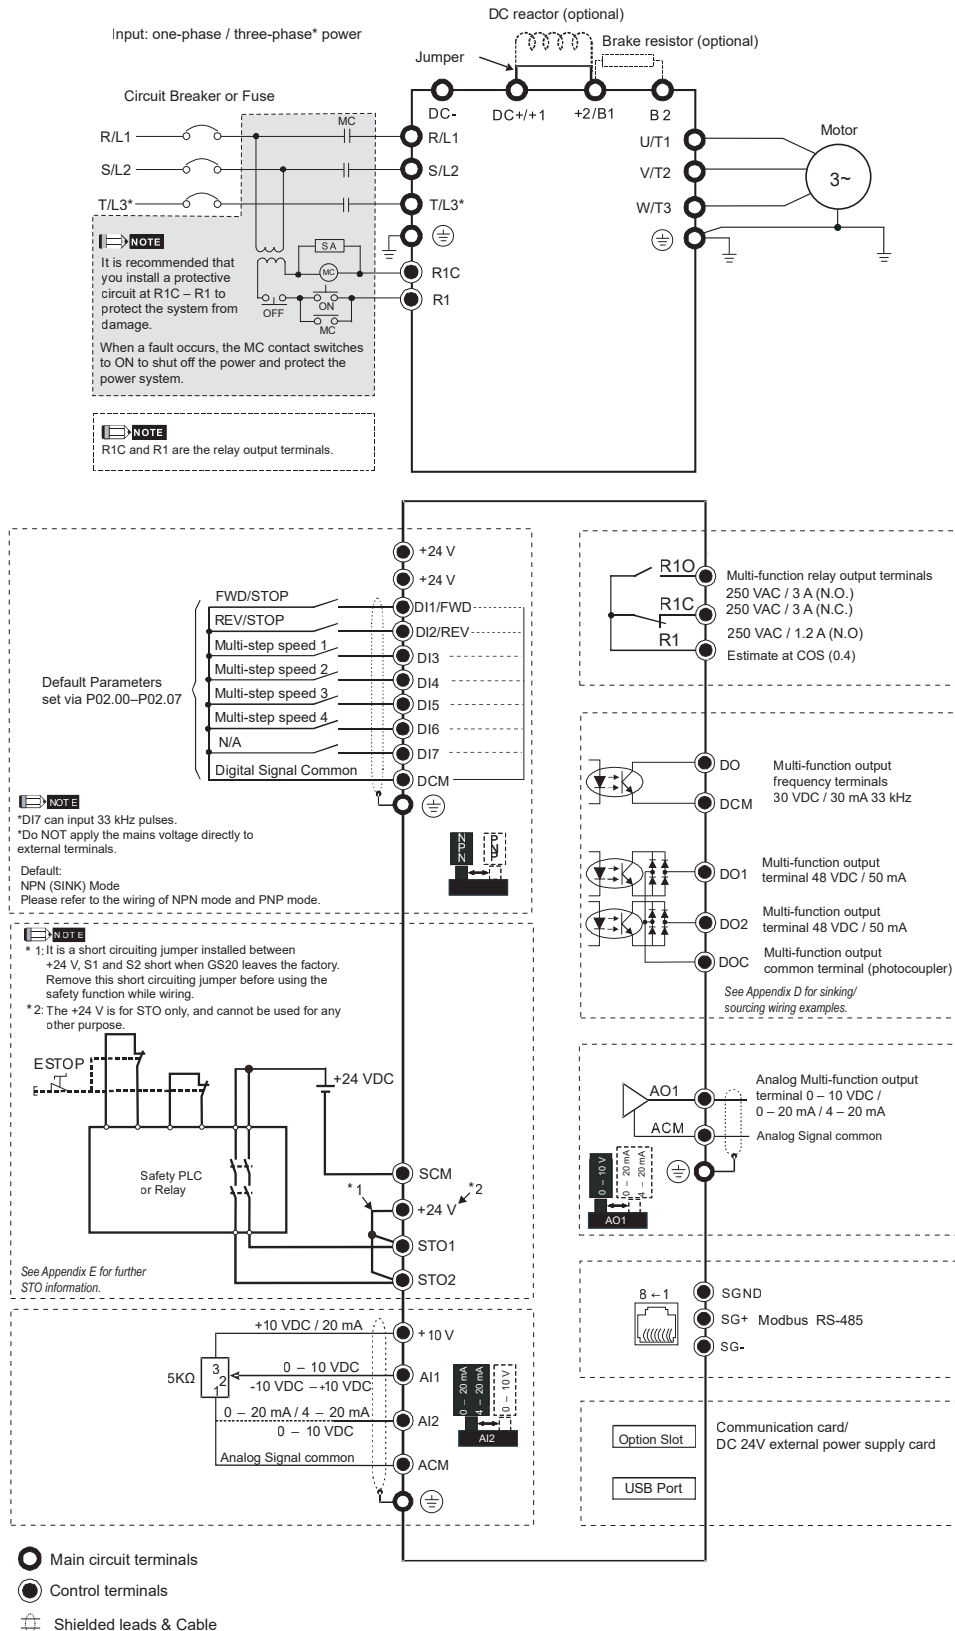



# DURApULSE GS20(X) AC Drives – Optional Accessories

## Accessories Available for GS20(X) AC Drives

The table below lists types of accessories available for your GS20 or GS20X series drive. To see if your specific model can use a particular accessory, please click the reference link to go to the accessory page.


GS20(X) AC Drives Available Software and Accessories			
Accessory	GS20 Series Drives	GS20X Series Drives	Reference
<b>GSoft 2 Drive Software</b>	✓	✓	"GSoft2 Drive Configuration Software" on page tGSX-103
<b>GSLogic PLC Software</b>	✓	✓	"GSLOGIC Drive Configuration Software" on page tGSX-104
<b>Backup Power Supply</b>	✓	✓	"GS20A-BPS" on page tGSX-59
<b>Braking Resistors</b>	✓	✓	"GS10/GS20 Braking Resistors" on page tGSX-64
<b>Capacitive Filter</b>	✓	✓	"Capacitive Filter" on page tGSX-79
<b>Communication Module</b>	✓	✓	"GS20A-CM-ENETIP" on page tGSX-59
<b>Conduit Boxes</b>	✓		"GS20 Conduit Boxes" on page tGSX-67
<b>DIN Rail Mounting (A–C frame only)</b>	✓		"DIN Rail Mounting" on page tGSX-85
<b>Disconnect Switch</b>		✓	"GS20(X) Disconnect Switch" on page tGSX-78
<b>Earthing Plates</b>		✓	"GS20X Earthing Plate" on page tGSX-78
<b>EMC Filter</b>	✓	✓	"GS10/GS20 High Performance EMI Input Filters" on page tGSX-73
<b>EMC Shield Plates</b>	✓		"EMC Shield Plate" on page tGSX-79
<b>EMI Filters</b>	✓	✓	"GS10/GS20 High Performance EMI Input Filters" on page tGSX-73
<b>Fuses/Circuit Breakers</b>	✓	✓	"GS20X Fuses/Circuit Breakers" on page tGSX-76
<b>Keypad Extension Cables</b>	✓		"GS20 Keypad Extension Cables" on page tGSX-80
<b>Line/Load Reactor/Voltage Time Filter</b>	✓	✓	"GS20(X) Line Reactors/Voltage Time Filters" on page tGSX-83
<b>Mounting Adapter Plate (A–C frame only)</b>	✓		"Mounting Adapter Plate" on page tGSX-86
<b>Optional Advanced Keypad</b>	✓	✓	"Advanced Keypad" on page tGSX-105
<b>Replacement Fan Kit</b>	✓	✓	"Cooling Fans for GSxx Series Drives (Spare/Replacement)" on page tGSX-87
<b>Replacement Keypad</b>	✓		"GS20(X) Replacement Keypad" on page tGSX-80
<b>RF Filter</b>	✓	✓	"RF Filter" on page tGSX-88

# GS20(X) Optional Accessories – Expansion Cards

## GS20(X) Optional Modules

The GS20A-BPS is a backup power supply option card that can be used to maintain functionality to your GS20 or GS20X drive when external power is unavailable. The GS20A-CM-ENETIP is a communication module that can be used to enable Modbus TCP and EtherNet/IP communication. Note that only one option module can be installed at a time. Please see the GS20(X) User Manual for additional information and installation instructions.

GS20(X) DURApULSE Drives I/O and Communication Cards					
Part Number	Price	Description	Features/Specifications	Placement*	GS Drive
<b><u>GS20A-BPS</u></b>	\$157.00	DURApULSE GS20(X) series Backup Power Supply Module	Provides external power supply and supports 24VDC input. Supports parameter read/write and drive status monitoring. When providing backup power, the following functions work normally: <ul style="list-style-type: none"> <li>• Parameter reading and writing</li> <li>• Keypad display</li> <li>• Keys on the keyboard panel (except the RUN key)</li> <li>• Analog input with +10V terminal supply power</li> <li>• Multi-function inputs with +24V terminal or external power supply</li> <li>• Relay output</li> <li>• Pulse sequence frequency command</li> <li>• Testing RS485 communications</li> </ul>	Slot 1	GS20(X) – all
<b><u>GS20A-CM-ENETIP</u></b>	\$92.00	DURApULSE GS20(X) series communication module, EtherNet/IP and Modbus TCP	<b>Features:</b> <ul style="list-style-type: none"> <li>• Supports Modbus TCP and EtherNet/IP protocol</li> <li>• 32/32 words read/write parameters correspondence</li> <li>• User-defined corresponding parameters</li> <li>• MDI/MDI-X auto-detect</li> <li>• IP filter simple firewall function</li> </ul> <b>Specifications:</b> <ul style="list-style-type: none"> <li>• RJ45 with Auto MDI/MDIX interface</li> <li>• 1 port (ENETIP) or 2 ports (EIP2)</li> <li>• IEEE 802.3, IEEE 802.3u transmission method with Cat 5e shielding 100MHz cable at 10/100 Mbps Auto-detect transmission speed</li> <li>• Network protocol: ICMP, IP, TCP, UDP, DHCP, HTTP, SMTP, Modbus over TCP/IP, EtherNet/IP, BOOTP</li> <li>• Requires 15VDC provided by AC drive</li> <li>• 500VDC insulation voltage</li> <li>• 0.8 W power consumption</li> <li>• 25g (ENETIP) or 30g (EIP2) weight</li> </ul>	Slot 1	GS20(X) – all
<b><u>GS20A-CM-EIP2</u></b>	\$99.00	DURApulse GS20 series communication module, EtherNet/IP and Modbus TCP, 2 ports, (2) Ethernet (RJ45) port(s).		Slot 1	GS20(X) – all

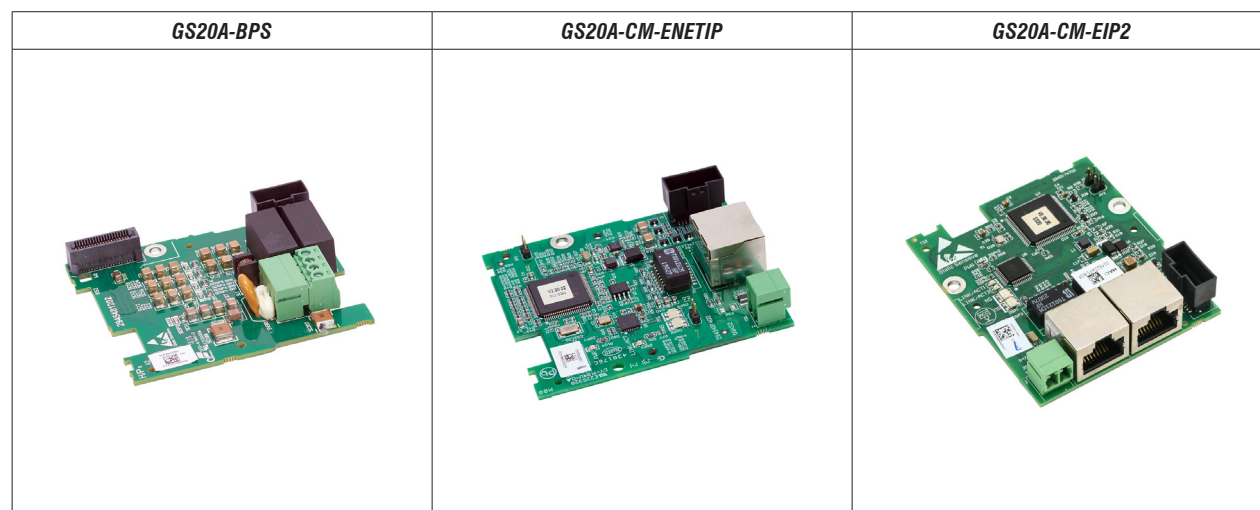

# GS20(X) Series Optional Accessories - Braking

## GS20(X) Braking Resistors

Use the table below to find the appropriate braking resistor model for your GS20(X) series AC drive. For more information and installation instructions, please see the GS20 User Manual. All listed resistors are available for purchase at [www.automationdirect.com](http://www.automationdirect.com).

GS20(X) AC Drive Braking Component Selection												
Drive Voltage	Drive Model	Motor Power (hp)	Drive Brake Capacity - Max Torque		125% Braking Torque @ 10% Duty Cycle*							
			Min Resistor Value (Ω)	Max Total Brake Current (A)	Open Type Braking Resistor				NEMA1 Resistors with Thermal Switch			
					Part #	Qty.	Brake Torque (kg·m)	Total Brake Current (A)	Part #	Qty.	Total Brake Current (A)	
120V	GS21-10P2	1/4	190.0	2	GS-BR-080W750	1	0.1	0.5	BR-N1-240W200	1	2.0	
	GS21-10P5	1/2	95.0	4	GS-BR-080W200	1	0.3	1.9	BR-N1-240W150	1	2.6	
	GS21-11P0	1	63.3	6		1	0.5			1		
230V	GS21-20P2	1/4	190.0	2	GS-BR-080W750	1	0.1	0.5	BR-N1-240W200	1	2.0	
	GS21-20P5	1/2	95.0	4	GS-BR-080W200	1	0.3	1.9	BR-N1-240W150	1	2.6	
	GS21-21P0	1	63.3	6		1	0.5			1		
	GS21-22P0	2	47.5	8	GS-BR-200W091	1	1	4.2	BR-N1-280W50	1	7.8	
	GS21-23P0	3	38.0	10	GS-BR-300W070	1	1.5	5.4		1		
	GS23-20P2	1/4	190.0	2	GS-BR-080W750	1	0.1	0.5	BR-N1-240W200	1	2.0	
	GS23-20P5	1/2	95.0	4	GS-BR-080W200	1	0.3	1.9	BR-N1-240W150	1	2.6	
	GS23-21P0	1	63.3	6		1	0.5			1		
	GS23-22P0	2	47.5	8	GS-BR-200W091	1	1	4.2	BR-N1-280W50	1	7.8	
	GS23-23P0	3	38.0	10	GS-BR-300W070	1	1.5	5.4		1		
	GS23-25P0	5	19.0	20	GS-BR-400W040	1	2.5	9.5	BR-N1-800W25	1	15.6	
	GS23-27P5	7 1/2	16.5	23	GS-BR-1K0W020	1	3.7	19	BR-N1-800W18P0	1	21.7	
	GS23-2010	10	14.6	26		1	5.1		BR-N1-1K1W15P0	1	26.0	
	GS23-2015	15	12.6	29	GS-BR-1K5W013	1	7.4	29	BR-N1-1K5W14P0	1	27.9	
	GS23-2020	20	8.3	46	GS-BR-1K0W4P3 (x2 series)	2	10.2	44	BR-N1-2K2W08P6	1	45.3	
	460V	GS23-40P5	1/2	380.0	2	GS-BR-080W750	1	0.3	1	BR-N1-250W400	1	2.0
		GS23-41P0	1	190.0	4		1	0.5		BR-N1-240W200	1	3.9
		GS23-42P0	2	126.7	6	GS-BR-200W360	1	1	2.1	BR-N1-240W150	1	5.2
GS23-43P0		3	108.6	7	GS-BR-300W250	1	1.5	3	BR-N1-500W200	1	3.9	
GS23-45P0		5	84.4	9	GS-BR-400W150	1	2.5	5.1	BR-N1-500W130	1	6.0	
GS23-47P5		7 1/2	50.7	15	GS-BR-1K0W075	1	3.7	10.2	BR-N1-720W85	1	9.2	
GS23-4010		10	40.0	19		1	5.1		BR-N1-1K2W50	1	15.6	
GS23-4015		15	33.0	23	GS-BR-1K5W043	1	7.4	17.6	BR-N1-1K5W40	1	19.5	
GS23-4020		20	26.2	29	GS-BR-1K0W016(x2 series)	2	10.2	24	BR-N1-1K7W30	1	26.0	
GS23-4025		25	26.2	29	GS-BR-1K0W016 (x2 series)	2	12.2		BR-N1-2K3W26	1	30.0	
GS23-4030		30	23.0	33	GS-BR-1K5W013 (x2 series)	2	14.9	29	BR-N1-2K8W25	1	31.2	
575V	GS23-51P0	1	280.0	4	GS-BR-080W750	1	0.5	1.2	BR-N1-250W400	1	2.8	
	GS23-52P0	2	186.7	6	GS-BR-200W360	1	1	2.6	BR-N1-240W200	1	5.6	
	GS23-53P0	3	160.0	7	GS-BR-300W400	1	1.5	2.3	BR-N1-500W200	1		
	GS23-55P0	5	93.3	12	GS-BR-500W100	1	2.5	9.2	BR-N1-500W130	1	8.6	
	GS23-57P5	7 1/2	80.0	14	GS-BR-750W140	1	3.7	6.6	BR-N1-720W85	1	13.2	
	GS23-5010	10	70.0	16	GS-BR-1K0W075	1	5.1	12.3	BR-N1-1K2W75	1	14.9	
GS20X - 230V	GS21X-20P5	1/2	95.0	4	GS-BR-080W200	1	0.3	1.9	BR-N1-240W150	1	2.6	
	GS21X-21P0	1	63.3	6		1	0.5			1		
	GS21X-22P0	2	47.5	8	GS-BR-200W091	1	1	4.2	BR-N1-280W50	1	7.8	
	GS21X-23P0	3	38.0	10	GS-BR-300W070	1	1.5	5.4		1		
	GS23X-20P5	1/2	190.0	2	GS-BR-080W200	1	0.1	0.5	BR-N1-240W200	1	2.0	
	GS23X-21P0	1	95.0	4		1	0.3		BR-N1-240W150	1	2.6	
	GS23X-22P0	2	63.3	6	GS-BR-200W091	1	0.5	1.9		1		
	GS23X-23P0	3	47.5	8	GS-BR-300W070	1	1	4.2	BR-N1-280W50	1	7.8	
	GS23X-25P0	5	38.0	10	GS-BR-400W040	1	1.5	5.4		1		
	GS23X-27P5	7 1/2	19.0	20	GS-BR-1K0W020	1	2.5	9.5	BR-N1-800W25	1	15.6	
GS20X - 460V	GS23X-40P5	1/2	380.0	2	GS-BR-080W750	1	0.3	1	BR-N1-800W18P0	1	21.7	
	GS23X-41P0	1	190.0	4		1	0.5		BR-N1-240W200	1	3.9	
	GS23X-42P0	2	126.7	6	GS-BR-200W360	1	1	2.1	BR-N1-240W150	1	5.2	
	GS23X-43P0	3	108.6	7	GS-BR-300W250	1	1.5	3	BR-N1-500W200	1	3.9	
	GS23X-45P0	5	84.4	9	GS-BR-400W150	1	2.5	5.1	BR-N1-500W130	1	6.0	
	GS23X-47P5	7 1/2	50.7	15	GS-BR-1K0W075	1	3.7	10.2	BR-N1-720W85	1	9.2	
	GS23X-4010	10	40.0	19		1	5.1		BR-N1-1K2W50	1	15.6	
* 10% Duty Cycle with maximum ON (braking) time for 10 seconds.												

\* 10% Duty Cycle with maximum ON (braking) time for 10 seconds.

# GS20(X) Optional Accessories – EMC Filter & Zero Phase Reactor

## GS20(X) Standard Footprint EMC Filter and Zero Phase Reactor

If electromagnetic noise is harmful to your manufacturing environment, we recommend that you select an EMC filter as shown below. For some motor drive models, you need to work with zero phase reactors to be compliant with EMC regulations. Refer to the table and figure below for the recommended model, setting method, and maximum motor cable length of the EMC filter and zero phase reactor. The footprint filter allows mounting of the drive on top of the recommended filter, saving panel space and wiring. For more information and installation instructions, please see the GS20(X) User Manual.

GS20(X) EMC Filter and Zero Phase Reactor													
Frame	Drive Model	Input Current (A)	Footprint Filter Model #	Price	Recommended Zero Phase Reactor	Conducted Emission				Radiated Emission			
						C1-motor cable length-30m		C2-motor cable length-100m	C2-motor cable length- 100m				
						Position to Install a Zero Phase Reactor							
						1	2	3	n/a	1	2	3	
A	<a href="#">GS21-10P2</a>	6.8	<a href="#">EMF11AM21A</a>	\$60.00	RF008X00A				N/A				
	<a href="#">GS21-20P2</a>	3.8	<a href="#">EMF11AM21A</a>	\$60.00			✓	✓	N/A		✓	✓	
	<a href="#">GS21-20P5</a>	6.7	<a href="#">EMF11AM21A</a>	\$60.00			✓	✓	N/A		✓	✓	
	<a href="#">GS23-20P2</a>	2.2	<a href="#">EMF10AM23A</a>	\$83.00			✓	✓	N/A		✓	✓	
	<a href="#">GS23-20P5</a>	3.8	<a href="#">EMF10AM23A</a>	\$83.00			✓	✓	N/A		✓	✓	
	<a href="#">GS23-21P0</a>	6	<a href="#">EMF10AM23A</a>	\$83.00			✓	✓	N/A		✓	✓	
	<a href="#">GS23-40P5</a>	2.5	<a href="#">EMF6A0M43A</a>	\$76.00				✓	N/A			✓	
	<a href="#">GS23-41P0</a>	4.2	<a href="#">EMF6A0M43A</a>	\$76.00				✓	N/A			✓	
	<a href="#">GS23-51P0</a>	2.4	<a href="#">EMF6A0M63B</a>	\$174.00					N/A*				
	<a href="#">GS21-10P5</a>	10.1	<a href="#">EMF11AM21A</a>	\$60.00					N/A				
	GS20X A	<a href="#">GS21X-20P5</a>	8.3	<a href="#">EMF11AM21A</a>		\$60.00			✓	✓	N/A		✓
<a href="#">GS21X-21P0</a>		11.3	<a href="#">EMF11AM21A</a>	\$60.00				✓	✓	N/A		✓	✓
<a href="#">GS21X-22P0</a>		18.5	<a href="#">EMF27AM21B</a>	\$106.00					✓	N/A			✓
<a href="#">GS23X-20P5</a>		3.8	<a href="#">EMF10AM23A</a>	\$83.00				✓	✓	N/A		✓	✓
<a href="#">GS23X-21P0</a>		6	<a href="#">EMF10AM23A</a>	\$83.00				✓	✓	N/A		✓	✓
<a href="#">GS23X-22P0</a>		9.6	<a href="#">EMF10AM23A</a>	\$83.00				✓	✓	N/A		✓	✓
<a href="#">GS23X-40P5</a>		2.5	<a href="#">EMF6A0M43A</a>	\$76.00					✓	N/A			✓
<a href="#">GS23X-41P0</a>		4.2	<a href="#">EMF6A0M43A</a>	\$76.00					✓	N/A			✓
<a href="#">GS23X-42P0</a>		6.4	<a href="#">EMF6A0M43A</a>	\$76.00					✓	N/A			✓
<a href="#">GS23X-43P0</a>		7.2	<a href="#">EMF12AM43B</a>	\$133.00						N/A			
B		<a href="#">GS21-21P0</a>	10.5	<a href="#">EMF11AM21A</a>		\$60.00			✓	✓	N/A		✓
	<a href="#">GS23-22P0</a>	9.6	<a href="#">EMF10AM23A</a>	\$83.00				✓	✓	N/A		✓	✓
	<a href="#">GS23-52P0</a>	4.2	<a href="#">EMF6A0M63B</a>	\$174.00						N/A*			
	<a href="#">GS23-42P0</a>	6.4	<a href="#">EMF6A0M43A</a>	\$76.00					✓	N/A			✓
GS20X B	<a href="#">GS21X-23P0</a>	27.5	<a href="#">EMF27AM21B</a>	\$106.00					✓	N/A			✓
	<a href="#">GS23X-23P0</a>	15	<a href="#">EMF24AM23B</a>	\$130.00				✓	✓	N/A		✓	✓
	<a href="#">GS23X-25P0</a>	23.4	<a href="#">EMF24AM23B</a>	\$130.00				✓	✓	N/A		✓	✓
	<a href="#">GS23X-45P0</a>	11.6	<a href="#">EMF12AM43B</a>	\$133.00				✓	✓	N/A		✓	✓
C	<a href="#">GS21-11P0</a>	20.6	<a href="#">EMF27AM21B</a>	\$106.00						N/A			
	<a href="#">GS21-22P0</a>	17.9	<a href="#">EMF27AM21B</a>	\$106.00					✓	N/A			✓
	<a href="#">GS21-23P0</a>	26.3	<a href="#">EMF27AM21B</a>	\$106.00					✓	N/A			✓
	<a href="#">GS23-23P0</a>	15	<a href="#">EMF24AM23B</a>	\$130.00				✓	✓	N/A		✓	✓
	<a href="#">GS23-25P0</a>	23.4	<a href="#">EMF24AM23B</a>	\$130.00				✓	✓	N/A		✓	✓
	<a href="#">GS23-43P0</a>	7.2	<a href="#">EMF12AM43B</a>	\$133.00						N/A			
	<a href="#">GS23-53P0</a>	5.8	<a href="#">EMF16AM63B</a>	\$177.00						N/A*			
	<a href="#">GS23-55P0</a>	9.3	<a href="#">EMF16AM63B</a>	\$177.00						N/A			
	<a href="#">GS23-45P0</a>	11.6	<a href="#">EMF12AM43B</a>	\$133.00						N/A			
	<a href="#">GS23X-27P5</a>	32.4	<a href="#">EMF33AM23B</a>	\$189.00		✓	✓			N/A	✓	✓	
	GS20X C	<a href="#">GS23X-47P5</a>	17.3	<a href="#">EMF23AM43B</a>		\$182.00	✓	✓	✓		N/A	✓	✓
<a href="#">GS23X-4010</a>		22.6	<a href="#">EMF23AM43B</a>	\$182.00		✓	✓	✓		N/A	✓	✓	✓
Continued on next page													

Continued on next page


# GS20(X) Optional Accessories – EMC Filter & Zero Phase Reactor

GS20(X) Standard Footprint EMC Filter and Zero Phase Reactor, continued


GS20(X) EMC Filter and Zero Phase Reactor (continued)												
Frame	Drive Model	Input Current (A)	Footprint Filter Model #	Price	Recommended Zero Phase Reactor	Conducted Emission				Radiated Emission		
						C1-motor cable length-30m			C2-motor cable length-100m	C2-motor cable length- 100m		
						Position to Install a Zero Phase Reactor						
						1	2	3	n/a	1	2	3
D	<a href="#">GS23-27P5</a>	32.4	<a href="#">EMF33AM23B</a>	\$189.00	RF008X00A	✓	✓		N/A	✓	✓	
	<a href="#">GS23-47P5</a>	17.3	<a href="#">EMF23AM43B</a>	\$182.00		✓	✓	✓	N/A	✓	✓	✓
	<a href="#">GS23-57P5</a>	13.4	<a href="#">EMF16AM63B</a>	\$177.00					N/A			
	<a href="#">GS23-5010</a>	17.5	<a href="#">EMF16AM63B</a>	\$177.00					N/A			
	<a href="#">GS23-4010</a>	22.6	<a href="#">EMF23AM43B</a>	\$182.00		✓	✓	✓	N/A	✓	✓	✓
E	<a href="#">GS23-2010</a>	43.2	n/a	–			✓	✓	N/A		✓	✓
	<a href="#">GS23-2015</a>	61.2	n/a	–			✓	✓	N/A		✓	✓
	<a href="#">GS23-4015</a>	30.8	n/a	–					N/A			
	<a href="#">GS23-4020</a>	39.6	n/a	–			✓	✓	N/A		✓	✓
	<a href="#">GS23-2020</a>	82.8	n/a	–			✓	✓	N/A		✓	✓
F	<a href="#">GS23-4025</a>	45.7	n/a	–			✓	✓	N/A		✓	✓
	<a href="#">GS23-4030</a>	53.9	n/a	–			✓	✓	N/A		✓	✓
Note: It is not necessary to add a zero phase reactor for passing the C2 conducted emission test.												
* The maximum motor cable length of the conducted emission C2 class for GS23-51P0, GS23-52P0, and GS23-53P0 is 75 meters. All others are 100 meters.												
** See diagram below for installation positions.												

## EMF Series Filter Dimensions

( Units = mm [in] )

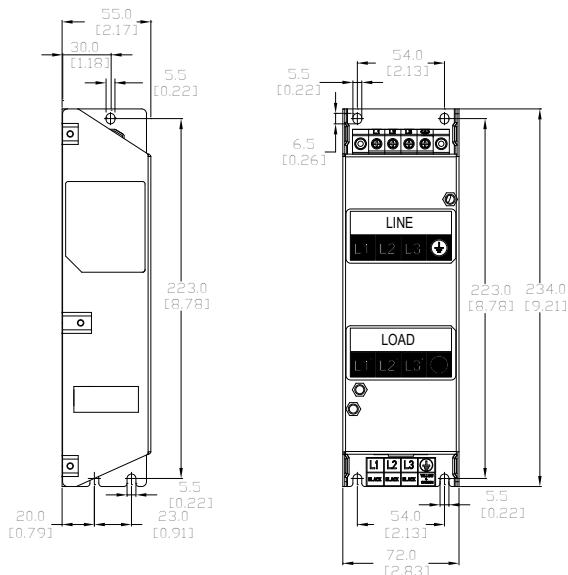

EMF11AM21A  
EMF10AM23A  
EMF6A0M43A

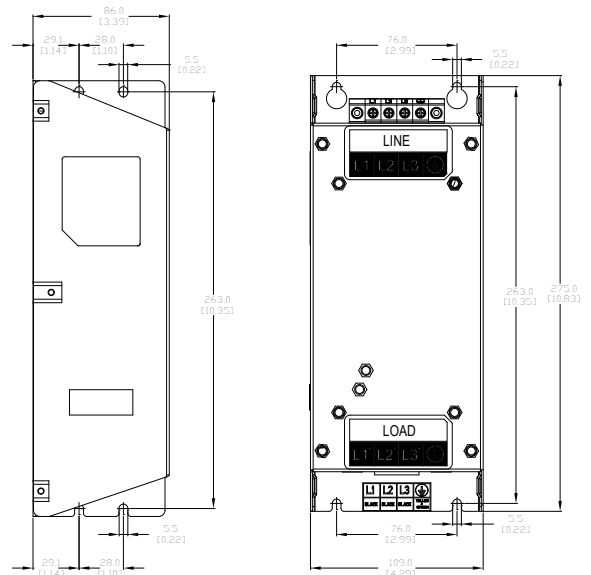

EMF27AM21B; EMF24AM23B  
EMF33AM23B; EMF12AM43B  
EMF23AM43B; EMF6A0M63B;  
EMF16AM63B



# GS10/GS20 Series Optional Accessories – EMI Input Filters

## GS10/GS20 High Performance EMI Input Filters

High performance EMI filters may improve drive performance for certain applications. Use the table below to select the correct filter for your drive. For additional information and installation instructions, please see your GSx series User Manual.

EMI Filters Selection				
Model		Description	EMI Filter*	
GS10 Drives	GS20(X) Drives		Roxburgh Filters Chassis 1ph	Roxburgh Filters C2 Rated
<a href="#">GS11N-10P2</a>	<a href="#">GS21-10P2</a>	120V 1ph 0.25 hp	<a href="#">RES90F10</a>	<a href="#">MIF10</a>
<a href="#">GS11N-10P5</a>	<a href="#">GS21-10P5</a>	120V 1ph 0.5 hp	<a href="#">RES90F16</a>	<a href="#">MIF16</a>
<a href="#">GS11N-11P0</a>	<a href="#">GS21-11P0</a>	120V 1ph 1.0 hp	<a href="#">RES90S30</a>	<a href="#">MIF23</a>
<a href="#">GS11N-20P2</a>	<a href="#">GS21-20P2</a>	230V 1ph 0.25 hp	<a href="#">RES90F06</a>	<a href="#">MIF06</a>
<a href="#">GS11N-20P5</a>	<a href="#">GS21-20P5</a>	230V 1ph 0.5 hp	<a href="#">RES90F10</a>	<a href="#">MIF10</a>
<a href="#">GS11N-21P0</a>	<a href="#">GS21-21P0</a>	230V 1ph 1.0 hp	<a href="#">RES90F16</a>	<a href="#">MIF16</a>
<a href="#">GS11N-22P0</a>	<a href="#">GS21-22P0</a>	230V 1ph 2.0 hp	<a href="#">RES90S20</a>	<a href="#">MIF23</a>
<a href="#">GS11N-23P0</a>	<a href="#">GS21-23P0</a>	230V 1ph 3.0 hp	<a href="#">RES90S30</a>	<a href="#">MIF330B</a>
<a href="#">GS13N-20P2</a>	<a href="#">GS23-20P2</a>	230V 3ph 0.25 hp	-	<a href="#">KMF306A</a>
<a href="#">GS13N-20P5</a>	<a href="#">GS23-20P5</a>	230V 3ph 0.5 hp	-	<a href="#">KMF306A</a>
<a href="#">GS13N-21P0</a>	<a href="#">GS23-21P0</a>	230V 3ph 1.0 hp	-	<a href="#">KMF306A</a>
<a href="#">GS13N-22P0</a>	<a href="#">GS23-22P0</a>	230V 3ph 2.0 hp	-	<a href="#">KMF318A</a>
<a href="#">GS13N-23P0</a>	<a href="#">GS23-23P0</a>	230V 3ph 3.0 hp	-	<a href="#">KMF318A</a>
<a href="#">GS13N-25P0</a>	<a href="#">GS23-25P0</a>	230V 3ph 5.0 hp	-	<a href="#">KMF325A</a>
<a href="#">GS13N-27P5</a>	<a href="#">GS23-27P5</a>	230V 3ph 7.5 hp	-	<a href="#">KMF336A</a>
n/a	<a href="#">GS23-2010</a>	230V 3ph 10hp	-	<a href="#">KMF350A</a>
	<a href="#">GS23-2015</a>	230V 3ph 15hp	-	<a href="#">KMF370A</a>
	<a href="#">GS23-2020</a>	230V 3ph 20hp	-	<a href="#">KMF3100A</a>
<a href="#">GS13N-40P5</a>	<a href="#">GS23-40P5</a>	460V 3ph 0.5 hp	-	<a href="#">KMF306A</a>
<a href="#">GS13N-41P0</a>	<a href="#">GS23-41P0</a>	460V 3ph 1.0 hp	-	<a href="#">KMF306A</a>
<a href="#">GS13N-42P0</a>	<a href="#">GS23-42P0</a>	460V 3ph 2.0 hp	-	<a href="#">KMF306A</a>
<a href="#">GS13N-43P0</a>	<a href="#">GS23-43P0</a>	460V 3ph 3.0 hp	-	<a href="#">KMF310A</a>
<a href="#">GS13N-45P0</a>	<a href="#">GS23-45P0</a>	460V 3ph 5.0 hp	-	<a href="#">KMF318A</a>
<a href="#">GS13N-47P5</a>	<a href="#">GS23-47P5</a>	460V 3ph 7.5 hp	-	<a href="#">KMF318A</a>
<a href="#">GS13N-4010</a>	<a href="#">GS23-4010</a>	460V 3ph 10hp	-	<a href="#">KMF325A</a>
n/a	<a href="#">GS23-4015</a>	460V 3ph 15hp	-	<a href="#">KMF336A</a>
	<a href="#">GS23-4020</a>	460V 3ph 20hp	-	<a href="#">KMF350A</a>
	<a href="#">GS23-4025</a>	460V 3ph 25hp	-	<a href="#">KMF350A</a>
	<a href="#">GS23-4030</a>	460V 3ph 30hp	-	<a href="#">KMF370A</a>
	<a href="#">GS23-51P0</a>	575V 3ph 1.0 hp	-	<a href="#">KMF306V</a>
	<a href="#">GS23-52P0</a>	575V 3ph 2.0 hp	-	<a href="#">KMF306V</a>
	<a href="#">GS23-53P0</a>	575V 3ph 3.0 hp	-	<a href="#">KMF306V</a>
	<a href="#">GS23-55P0</a>	575V 3ph 5.0 hp	-	<a href="#">KMF310V</a>
	<a href="#">GS23-57P5</a>	575V 3ph 7.5 hp	-	<a href="#">KMF318V</a>
	<a href="#">GS23-5010</a>	575V 3ph 10hp	-	<a href="#">KMF318V</a>
	<a href="#">GS21X-20P5</a>	230V 1ph 0.5 hp	<a href="#">RES90F10</a>	<a href="#">MIF10</a>
	<a href="#">GS21X-21P0</a>	230V 1ph 1.0 hp	<a href="#">RES90F16</a>	<a href="#">MIF16</a>
	<a href="#">GS21X-22P0</a>	230V 1ph 2.0 hp	<a href="#">RES90S20</a>	<a href="#">MIF23</a>
	<a href="#">GS21X-23P0</a>	230V 1ph 3.0 hp	<a href="#">RES90S30</a>	<a href="#">MIF330B</a>
	<a href="#">GS23X-20P5</a>	230V 3ph 0.5 hp	-	<a href="#">KMF306A</a>
	<a href="#">GS23X-21P0</a>	230V 3ph 1.0 hp	-	<a href="#">KMF306A</a>
	<a href="#">GS23X-22P0</a>	230V 3ph 2.0 hp	-	<a href="#">KMF310A</a>
	<a href="#">GS23X-23P0</a>	230V 3ph 3.0 hp	-	<a href="#">KMF318A</a>
	<a href="#">GS23X-25P0</a>	230V 3ph 5.0 hp	-	<a href="#">KMF325A</a>
	<a href="#">GS23X-27P5</a>	230V 3ph 7.5 hp	-	<a href="#">KMF336A</a>
	<a href="#">GS23X-40P5</a>	460V 3ph 0.5 hp	-	<a href="#">KMF306A</a>
	<a href="#">GS23X-41P0</a>	460V 3ph 1.0 hp	-	<a href="#">KMF306A</a>
	<a href="#">GS23X-42P0</a>	460V 3ph 2.0 hp	-	<a href="#">KMF306A</a>
	<a href="#">GS23X-43P0</a>	460V 3ph 3.0 hp	-	<a href="#">KMF310A</a>
	<a href="#">GS23X-45P0</a>	460V 3ph 5.0 hp	-	<a href="#">KMF318A</a>
	<a href="#">GS23X-47P5</a>	460V 3ph 7.5 hp	-	<a href="#">KMF318A</a>
	<a href="#">GS23X-4010</a>	460V 3ph 10hp	-	<a href="#">KMF325A</a>

\* All specs for the EMI filters can be found at [www.automationdirect.com](http://www.automationdirect.com) or by clicking the following links: [-KMF Series Filters](#), [-MIF Series Filters](#), [-RES90 Series Filters](#)

# GS20(X) Optional Accessories – Fuses/Circuit Breakers

## GS20X Fuses/Circuit Breakers

Protection devices are essential to prevent damage to your GS20(X) drive and application equipment. Please use the fuse specification chart below to select fuses that are applicable to your GS20(X) drive. Only use UL-certified fuses which comply with your local regulations.

Fuse Specification Chart GS20(X) DURAPULSE Drives									
Drive Model	HP	Input Power			Input Fuse			Circuit Breaker	
		Ø	Volts	GS20(X) Input Amps	Fuse Amps	Fast Acting Class T	Edison Class J*	Size	Molded Case CB
GS21-10P2	1/4	1	120	6.8	10	TJN10	JHL10	20	G3P-020
GS21-10P5	1/2	1	120	10.1	10	TJN10	JHL10	25	G3P-025
GS21-11P0	1	1	120	20.6	25	TJN25	JHL25	50	G3P-050
GS21-20P2	1/4	1	230	5.8	10	TJN10	JHL10	15	G3P-015
GS21-20P5	1/2	1	230	8.3	15	TJN15	JHL15	20	G3P-020
GS21-21P0	1	1	230	11.3	20	TJN20	JHL20	30	G3P-030
GS21-22P0	2	1	230	18.5	35	TJN35	JHL35	45	G3P-040
GS21-23P0	3	1	230	27.5	50	TJN50	JHL50	70	G3P-070
GS23-20P2	1/4	3	230	2.2	10	TJN10	JHL10	15	G3P-015
GS23-20P5	1/2	3	230	3.8	15	TJN15	JHL15	15	G3P-015
GS23-21P0	1	3	230	6	20	TJN20	JHL20	15	G3P-015
GS23-22P0	2	3	230	9.6	35	TJN35	JHL35	25	G3P-025
GS23-23P0	3	3	230	15	50	TJN50	JHL50	40	G3P-040
GS23-25P0	5	3	230	23.4	80	TJN80	JHL80	60	G3P-060
GS23-27P5	7 1/2	3	230	32.4	60	TJN60	JHL60	63	G3P-060
GS23-2010	10	3	230	43.2	80	TJN80	JHL80	90	G3P-090
GS23-2015	15	3	230	61.2	110	TJN110	JHL110	125	F3P-125
GS23-2020	20	3	230	82.8	150	TJN150	JHL150	160	BW250JAGU-3P160SB
GS23-40P5	1/2	3	460	2	10	TJS10	JHL10	15	G3P-015
GS23-41P0	1	3	460	3.3	15	TJS15	JHL15	15	G3P-015
GS23-42P0	2	3	460	5.1	20	TJS20	JHL20	15	G3P-015
GS23-43P0	3	3	460	7.2	25	TJS25	JHL25	20	G3P-020
GS23-45P0	5	3	460	11.6	45	TJS45	JHL45	30	G3P-030
GS23-47P5	7 1/2	3	460	17.3	35	TJS35	JHL35	32	G3P-030
GS23-4010	10	3	460	22.6	45	TJS45	JHL45	45	G3P-040
GS23-4015	15	3	460	30.8	60	TJS60	JHL60	60	G3P-060
GS23-4020	20	3	460	39.6	80	TJS80	JHL80	80	G3P-080
GS23-4025	25	3	460	45.7	90	TJS90	JHL90	90	G3P-090
GS23-4030	30	3	460	53.9	110	TJS110	JHL110	100	G3P-100
GS23-51P0	1	3	575	2.4	6	TJS6	JHL6	6	n/a
GS23-52P0	2	3	575	4.2	10	TJS10	JHL10	10	n/a
GS23-53P0	3	3	575	5.8	10	TJS10	JHL10	15	BW125JAGU-3P015SB
GS23-55P0	5	3	575	9.3	20	TJS20	JHL20	30	BW125JAGU-3P030SB
GS23-57P5	7 1/2	3	575	13.4	25	TJS25	JHL25	30	BW125JAGU-3P030SB
GS23-5010	10	3	575	17.5	30	TJS30	JHL30	30	BW125JAGU-3P030SB
GS21X-20P5	1/2	1	230	8.3	15	TJN15	JHL15	16	G3P-015
GS21X-21P0	1	1	230	11.3	20	TJN20	JHL20	25	G3P-025
GS21X-22P0	2	1	230	18.5	35	TJN35	JHL35	45	G3P-040
GS21X-23P0	3	1	230	27.5	50	TJN50	JHL50	63	G3P-060
GS23X-20P5	1/2	3	230	3.8	15	TJN15	JHL15	10	FAZ-C10-3-NA
GS23X-21P0	1	3	230	6	20	TJN20	JHL20	15	G3P-015
GS23X-22P0	2	3	230	9.6	35	TJN35	JHL35	25	G3P-025
GS23X-23P0	3	3	230	15	50	TJN50	JHL50	40	G3P-040
GS23X-25P0	5	3	230	23.4	80	TJN80	JHL80	60	G3P-060
GS23X-27P5	7 1/2	3	230	32.4	60	TJN60	JHL60	63	G3P-060
GS23X-40P5	1/2	3	460	2.5	10	TJS10	JHL10	6	FAZ-C5-3-NA
GS23X-41P0	1	3	460	4.2	15	TJS15	JHL15	10	FAZ-C10-3-NA
GS23X-42P0	2	3	460	6.4	20	TJS20	JHL20	16	G3P-015
GS23X-43P0	3	3	460	7.2	25	TJS25	JHL25	16	G3P-015
GS23X-45P0	5	3	460	11.6	35	TJS35	JHL35	30	G3P-030
GS23X-47P5	7 1/2	3	460	17.3	35	TJS35	JHL35	30	G3P-030
GS23X-4010	10	3	460	22.6	45	TJS45	JHL45	45	G3P-040

\* High-speed Class J.

Note: JHL fuses can be used with GS and DURAPULSE drives in non-UL applications. Fuse the drive according to NEC guidelines (NEC Article 430). For UL applications, GS, and DURAPULSE drives require Class T fuses (refer to the drive's user manual for details).




# GS20(X) Series Optional Accessories – General

## GS20(X) Disconnect Switch

The GS20XA-DSx series disconnect switch provides a local on/off disconnect switch that is easily mounted to the GS20(X) drive. This accessory provides an easy, quick, single hasp lockout point to isolate power to the drive. For more information and installation instructions, see the GS20(X) User Manual.


GS20X Disconnect Switch Selection						
Frame	Part Number	Price	Dimensions (mm [in])			
			A	B	C	D
A	<a href="#">GS20XA-DSA</a>	\$140.00	154.5 [6.08]	145.0 [5.71]	145.2 [5.72]	2x $\varnothing$ 25.0 [ $\varnothing$ 0.98]
B	<a href="#">GS20XA-DSB</a>	\$146.00	164.5 [6.48]	165.0 [6.50]	152.5 [6.01]	2x $\varnothing$ 32.4 [ $\varnothing$ 1.28]
C	<a href="#">GS20XA-DSC</a>	\$219.00				

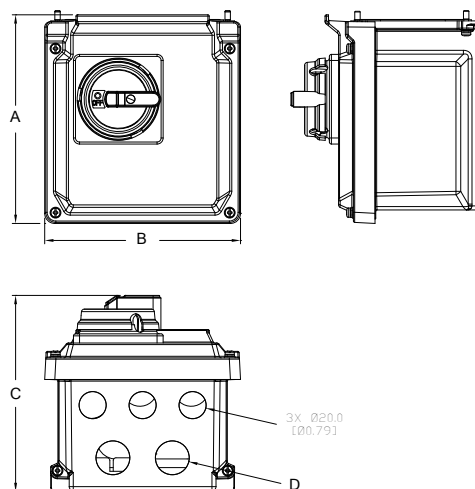

## GS20X Earthing Plate

Earthing plates are available for use with shielded cable and your GS20X drive. For GS20 drives, please use EMC shield plates. Each earthing plate is compatible with all GS20X drives of that frame size. For more information and installation instructions, see the GS20(X) User Manual.

Earthing Plate Selection			
Drive Series	Frame	Earthing Plate Model	Price
GS20X	A	<a href="#">GS20XA-EPA</a>	\$44.00
GS20X	B	<a href="#">GS20XA-EPB</a>	\$51.00
GS20X	C	<a href="#">GS20XA-EPC</a>	\$52.00

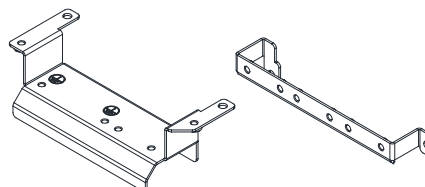

Example Earthing Plate - GS20XA-EPA


# DuraPulse Optional Accessories – General

## EMC Shield Plate

EMC Shield Plates are available for use with shielded cable and your GS10/GS20/GS30 drive. For GS20X drives, please use Earthing Plates. Each shield plate is compatible with all GS10, GS20, and GS30 drives of that frame size. For more information and installation instructions, see your GSxx series User Manual.

EMC Shield Plate Selection			
Drive Series	Frame	EMC Shield Plate Model	Price
GS10/20/30	A	<a href="#">GS20A-ESP-A</a>	\$29.00
GS10/20/30	B	<a href="#">GS20A-ESP-B</a>	\$30.00
GS10/20/30	C	<a href="#">GS20A-ESP-C</a>	\$31.00
GS10/20/30	D	<a href="#">GS20A-ESP-D</a>	\$32.00
GS20/30	E	<a href="#">GS20A-ESP-E</a>	\$44.00
GS20/30	F	<a href="#">GS20A-ESP-F</a>	\$45.00
GS30	G	<a href="#">GS30A-ESP-G</a>	\$49.00
GS30	H	<a href="#">GS30A-ESP-H</a>	\$52.00
GS30	I	<a href="#">GS30A-ESP-I</a>	\$57.00

EMC Shield Plate Dimensions		
Model	Dimensions mm [inch]	
	a	b
<a href="#">GS20A-ESP-A</a>	69.3 [2.73]	80.0 [3.15]
<a href="#">GS20A-ESP-B</a>	67.7 [2.67]	79.7 [3.14]
<a href="#">GS20A-ESP-C</a>	78.0 [3.07]	91.0 [3.58]
<a href="#">GS20A-ESP-D</a>	103.4 [4.07]	97.0 [3.82]
<a href="#">GS20A-ESP-E</a>	124.3 [4.89]	77.4 [3.05]
<a href="#">GS20A-ESP-F</a>	168.0 [6.61]	80.0 [3.15]
<a href="#">GS30A-ESP-G</a>	243.5 [9.59]	154.9 [6.10]
<a href="#">GS30A-ESP-H</a>	262.0 [10.31]	201.9 [7.95]
<a href="#">GS30A-ESP-I</a>	304.0 [11.97]	260.7 [10.26]



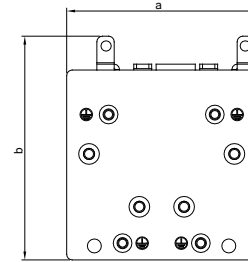


## Capacitive Filter

The GS20A-CAPF capacitive filter supports basic filtering and noise interference reduction for all GS10, GS20(X), and G30 models, 460V and below. For more information and installation instructions, please see your GSxx series User Manual.

The GS20A-CAPF cannot be used with 575V models.

Capacitive Filter					
Drive Series	Model	Price	Applicable Voltage	Temperature Range	Capacitance
GS10/ GS20(X)/ GS30	<a href="#">GS20A-CAPF</a>	\$25.00	110–480 VAC	–40–85°C	Cx: 1uF ± 20% Cy: 0.1uF ± 20%

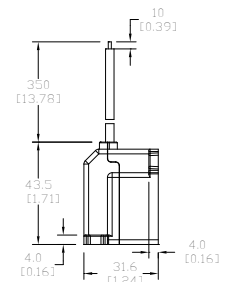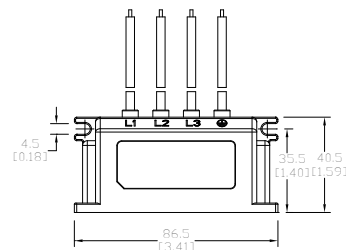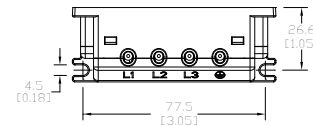


# GS20(X) Optional Accessories – Keypad


## GS20(X) Replacement Keypad

The GS20A-KPD can be used to replace the keypad that comes with each GS20 drive. The replacement keypad can be plugged directly into the drive (no screws needed) or mounted remotely using M3 screws and a keypad extension cable.

GS20-KPD Replacement Keypad			
Price	Part	Screw	Torque
\$30.00	<a href="#">GS20A-KPD</a>	M3	8–9 kg·cm (6.947.81 lb-in.) [0.78–0.88 N·m]

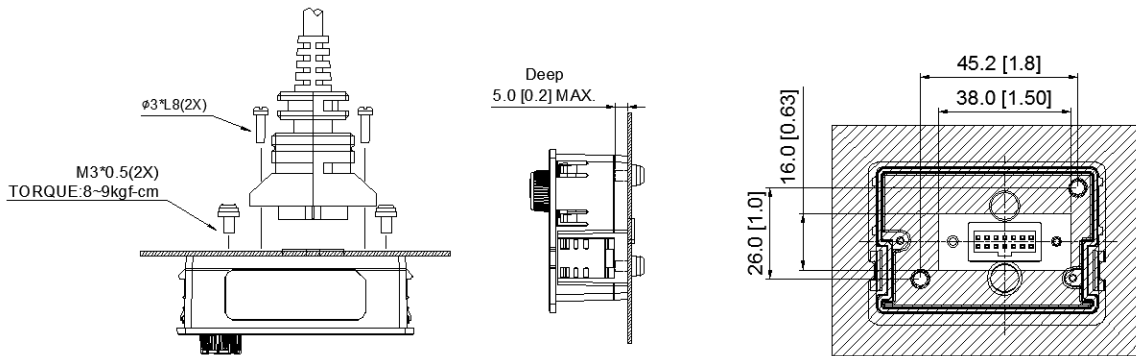

Direct Mounting on Plate

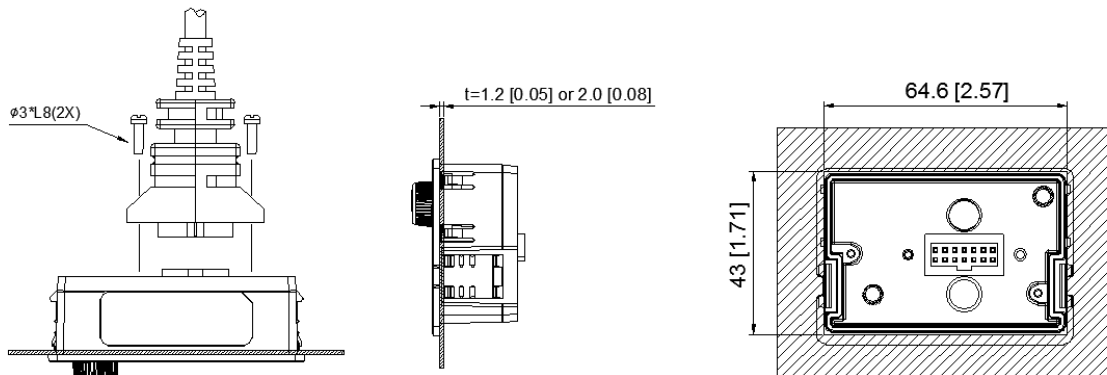

Embedded Mounting in Plate

## GS20 Keypad Extension Cables

The default GS20 keypad is removable and can be remote installed if desired. Use one of the cables below to connect the remotely installed keypad back to the GS20 drive.

GS20 Keypad Compatible Extension Cables		
Price	Cable	Length (m [ft])
\$21.00	<a href="#">GS-CBL2-1L</a>	1 [3.28]
\$27.00	<a href="#">GS-CBL2-3L</a>	3 [9.84]
\$32.00	<a href="#">GS-CBL2-5L</a>	5 [16.4]

# GS20(X) Optional Accessories – Line Reactors/ VTF Filters

## GS20(X) Line Reactors/Voltage Time Filters

Installing an AC Line Reactor on the input side of an AC motor drive can increase line impedance, improve the power factor, reduce input current, increase system capacity, and reduce interference generated from the motor drive.

Installing a load reactor or voltage time filter on the drive's output side can increase the high-frequency impedance to reduce the dV/dT and terminal voltage to protect the motor. Use output filters if the motor cable length exceeds 100ft.

GS20(X) Line/Load Reactor, AC Output Filter, & DC Reactor Selections						
GS20(X) Model	CT Input Amps (rms)	Saturation Amps (rms)	Motor HP	Line Reactor (LR2)*	Load Reactor (LR2)*	AC Output Filter (VTF)*
GS21-10P2	1.6	3.2	1/4	LR2-10P2-1PH-A	LR2-20P2	VTF-46-DE
GS21-10P5	2.5	5	1/2	LR2-10P5-1PH-A	LR2-20P5	VTF-246-CFG**
GS21-11P0	5	9.6	1	LR2-11P5-1PH	LR2-21P0	VTF-24-FH**
GS21-20P2	1.6	3.2	1/4	LR2-20P5-1PH	LR2-20P2	VTF-46-DE
GS21-20P5	2.8	5.6	1/2	LR2-20P5-1PH	LR2-20P5	VTF-246-CFG**
GS21-21P0	4.8	9.6	1	LR2-23P0	LR2-21P0	VTF-24-FH**
GS21-22P0	7.5	15	2	LR2-22P0-1PH	LR2-22P0	VTF-246-HKL**
GS21-23P0	11	22	3	LR-27P5	LR-25P0	VTF-24-JL
GS23-20P2	1.6	3.2	1/4	LR2-20P2	LR2-20P2	VTF-46-DE
GS23-20P5	2.8	5.6	1/2	LR2-20P5	LR2-20P5	VTF-246-DGH
GS23-21P0	4.8	9.6	1	LR2-20P7	LR2-20P7	VTF-24-FH**
GS23-22P0	7.5	15	2	LR2-22P0	LR2-22P0	VTF-246-HKL**
GS23-23P0	11	22	3	LR-25P0	LR-25P0	VTF-24-JL
GS23-25P0	17	34	5	LR-27P5	LR-25P0	VTF-46-LM**
GS23-27P5	25	50	7 1/2	LR-2010	LR-2010	VTF-46-NP**
GS23-2010	33	66	10	LR-2015	LR-2010	VTF-246-LPQ**
GS23-2015	46	92	15	LR-2020	LR-2020	VTF-246-NRS**
GS23-2020	65	130	20	LR-2025	LR-2025	VTF-246-PSU**
GS23-40P5	1.5	3	1/2	LR2-40P5	LR2-40P5	VTF-46-DE
GS23-41P0	2.7	5.4	1	LR2-41P0	LR2-41P0	VTF-246-CFG**
GS23-42P0	4.2	8.4	2	LR2-43P0	LR2-42P0	VTF-24-FH**
GS23-43P0	5.5	11	3	LR2-45P0	LR2-43P0	VTF-24-FH**
GS23-45P0	9	18	5	LR2-47P5	LR2-45P0	VTF-246-HKL**
GS23-47P5	13	26	7 1/2	LR2-4010	LR2-47P5	VTF-24-JL
GS23-4010	17	34	10	LR-4015	LR2-4010	VTF-24-JL
GS23-4015	25	50	15	LR-4015	LR-4015	VTF-246-LPQ**
GS23-4020	32	64	20	LR-4020	LR-4020	VTF-246-LPQ**
GS23-4025	38	76	25	LR-4025	LR-4025	VTF-246-MQR**
GS23-4030	45	90	30	LR-4030	LR-4030	VTF-246-NRS**
GS23-51P0	1.7	3.4	1	LR2-51P0	LR2-51P0	VTF-46-DE
GS23-52P0	3	6	2	LR2-52P0	LR2-52P0	VTF-246-CFG**
GS23-53P0	4.2	8.4	3	LR2-53P0	LR2-53P0	VTF-246-DGH
GS23-55P0	6.6	13.2	5	LR2-55P0	LR2-55P0	VTF-246-GJJ**
GS23-57P5	9.9	19.8	7 1/2	LR2-5010	LR2-57P5	VTF-246-HKL**
GS23-5010	12.2	24.4	10	LR2-4010	LR2-5010	VTF-246-HKL**
GS21X-20P5	2.8	5.6	1/2	LR2-20P5-1PH	LR2-20P2	VTF-246-DGH
GS21X-21P0	4.8	9.6	1	LR2-21P0-1PH-A	LR2-20P7	VTF-24-FH**
GS21X-22P0	7.5	15.0	2	LR2-22P0-1PH	LR2-22P0	VTF-246-HKL**
GS21X-23P0	11.0	22.0	3	LR-27P5	LR-25P0	VTF-24-JL
GS23X-20P5	2.8	5.6	1/2	LR2-20P2	LR2-20P2	VTF-246-DGH
GS23X-21P0	4.8	9.6	1	LR2-21P5	LR2-21P0	VTF-24-FH**
GS23X-22P0	7.5	15.0	2	LR2-22P0	LR2-22P0	VTF-246-GJJ**
GS23X-23P0	11.0	22.0	3	LR-25P0	LR-25P0	VTF-24-JL
GS23X-25P0	17.0	34.0	5	LR-27P5	LR-27P5	VTF-4-M
GS23X-27P5	25.0	50.0	7 1/2	LR-2010	LR-2010	VTF-246-KMN**
GS23X-40P5	1.5	3.0	1/2	LR2-40P5	LR2-40P5	VTF-46-DE
GS23X-41P0	2.7	5.4	1	LR2-41P5	LR2-41P0	VTF-246-CFG**
GS23X-42P0	4.2	8.4	2	LR2-43P0	LR2-42P0	VTF-24-FH**
GS23X-43P0	5.5	11.0	3	LR2-44P0	LR2-43P0	VTF-24-FH**
GS23X-45P0	9.0	18.0	5	LR2-47P5	LR2-45P0	VTF-246-HKL**
GS23X-47P5	13.0	26.0	7 1/2	LR2-4010	LR2-47P5	VTF-24-JL
GS23X-4010	17.0	34.0	10	LR-4015	LR2-4010	VTF-46-LM**

\* Reactor sizing is based on rated HP NEMA motor load, not drive output amp load. Size the reactor based on the motor nameplate current. All specs for the LR2 and VTF can be found at [www.automationdirect.com](http://www.automationdirect.com)

\*\* NEMA1 versions also available on noted models. Add -N1 to the end of the part number for NEMA1.

# DuraPulse Optional Accessories – Replacement Cooling Fans

## Cooling Fans for GSxx Series Drives (Spare/Replacement)

**NOTE:** The fans described below are included with the applicable GS10, GS20(X), and GS30 AC Drive, and are also available for purchase separately as spare/replacement components.

GS10, GS20(X), GS30 – Fan Selection Table							
Drive Model			Fan Model *		Description	Size	Voltage
GS10 Series	GS20(X) Series	GS30 Series	Part #	Price			
GS13N-22P0 GS13N-42P0	GS23-22P0 GS23-42P0 GS23-52P0	GS31-21P0 GS33-22P0 GS33-42P0	<a href="#">GS20A-FAN-B</a>	\$25.00	GS20 series main cooling fan, replacement.	40x40x15 mm	12VDC
–	GS21X-23P0 GS23X-23P0 GS23X-25P0 GS23X-45P0	–	<a href="#">GS20XA-FAN-B</a>	\$59.00	GS20X series main cooling fan, replacement	60x60x25 mm	
GS11N-11P0 GS11N-23P0 GS13N-23P0 GS13N-25P0 GS13N-43P0 GS13N-45P0	GS21-11P0 GS21-22P0 GS21-23P0 GS23-23P0 GS23-25P0 GS23-43P0 GS23-45P0 GS23-53P0 GS23-55P0	GS31-22P0 GS31-23P0 GS33-23P0 GS33-25P0 GS33-43P0 GS33-45P0	<a href="#">GS20A-FAN-C</a>	\$27.00	GS20 series main cooling fan, replacement.	50x50x20 mm	
–	GS23X-27P5 GS23X-47P5 GS23X-4010	–	<a href="#">GS20XA-FAN-C</a>	\$60.00	GS20X series main cooling fan, replacement	60x60x25 mm	
GS13N-27P5 GS13N-47P5 GS13N-4010	GS23-27P5 GS23-47P5 GS23-4010 GS23-57P5 GS23-5010	GS33-27P5 GS33-47P5 GS33-4010	<a href="#">GS20A-FAN-D</a>	\$31.00	GS20 series main cooling fan, replacement.	60x60x25 mm	
–	GS23-2010 GS23-2015 GS23-4015 GS23-4020	GS33-2010 GS33-2015 GS33-4020	<a href="#">GS20A-FAN-E</a>	\$43.00	GS20 series main cooling fan, replacement.	92x92x28 mm	24VDC
–	GS23-2020 GS23-4025 GS23-4030	GS33-2020 GS33-4025 GS33-4030	<a href="#">GS20A-FAN-F</a>	\$47.00	GS20 series main cooling fan, replacement.	92x92x38 mm	
–	–	GS33-2025 GS33-2030 GS33-4040	<a href="#">GS30A-FAN-G</a>	\$55.00	GS30 series main cooling fan, replacement	204x87x50 mm	
–	–	GS33-4050 GS33-4060	<a href="#">GS30A-FAN-H</a>	\$103.00	GS30 series main cooling fan, replacement	206x95x50 mm	
–	–	GS33-2040 GS33-2050 GS33-4075 GS33-4100	<a href="#">GS30A-FAN-I</a>	\$158.00	GS30 series main cooling fan, replacement	260x121x50 mm	

\* These fans are included with the GSx series drive, and also available separately as spare or replacement components. Electrical connectors are included.



Example GS20A replacement Fan

# DuraPulse Optional Accessories – RF Filter

## RF Filter

Zero phase reactors, (aka RF noise filters) help reduce radiated noise from the inverter wiring. The wiring must go through the opening to reduce the RF component of the electrical noise. Loop the wires three times (four turns) to attain the full RF filtering effect. For larger wire sizes, place multiple zero-phase reactors (up to four) side by side for a greater filtering effect. These are effective for noise reduction on both the input and output sides of the inverter. Attenuation quality is good in a wide range from 500kHz to 10MHz.




## Wiring Method

Wind each wire four times around the core, as shown in diagram A to the right. The reactor must be put at inverter side as closely as possible.

If you are unable to wire as above due to wire size or another aspect of your application, put all wires through four cores in series without winding, as in diagram B to the right.

RF Filter Selection			
Drive Series	Filter Model	Drawing	Price
GS10 / GS20(X) / GS30	RF008X00A	<a href="#">PDF</a>	\$38.00
GS30	RF004X00A	<a href="#">PDF</a>	\$49.00
GS30 (Frame H-I)	RF002X00A	<a href="#">PDF</a>	\$245.00

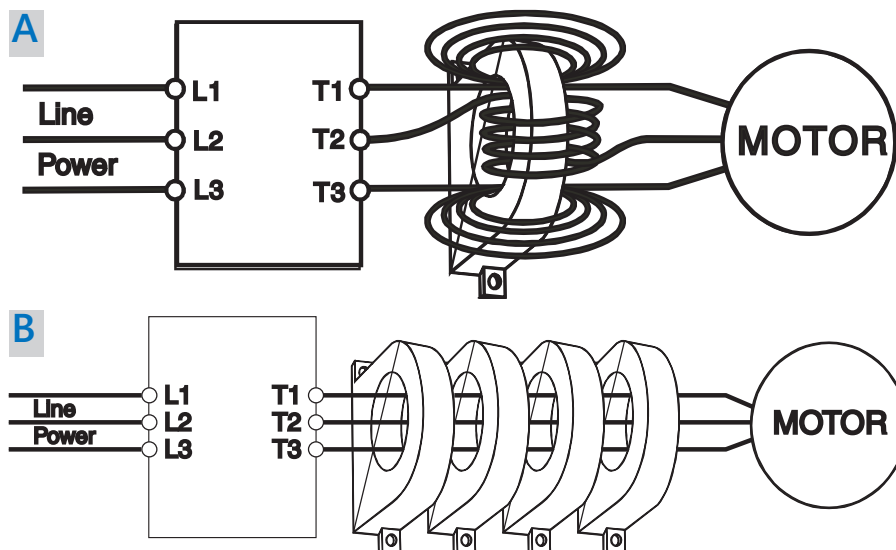

# DuraPulse Accessories – Software

## GSoft2 Drive Configuration Software

### GSoft2 Drive Configuration Software

Available for *FREE* Download

<b>DURAPULSE Drives GSOFT2 Drive Configuration Software</b>			
<b>Part Number</b>	<b>Price*</b>	<b>Description</b>	<b>For GS Drive</b>
<b>GSOFT2</b>	\$10.50	GSOFT2 Windows configuration software, USB or free download. For use with DURApulse GS4, GS10, GS20, GS20X and GS30 series AC drives. Requires PC serial port or USB-485M serial adapter.	GS4 – all GS10 – all GS20(X) – all GS30 – all
<b>USB-485M</b>	\$69.00	PC adapter, USB A to RS-485 (RJ45/RJ12).	GS4/GS10
<b>USB-CBL-AB3</b>	\$12.00	Programming cable, USB A to USB B, 3ft cable length.	GS4 – all (for Drive FW only) GS20(X) – all GS30 – all
* GSOFT2 can be downloaded for <u>free</u> or purchased on USB from AutomationDirect.com (search for GSOFT2).			

### GSOFT2 Drive Configuration Software

GSoft2 is the configuration software for the Automation DuraPulse family of drives. It is designed to allow you to connect a personal computer to the drive, and perform a variety of functions.

GSoft2 includes an integral help file with software instructions. GSoft2 can be downloaded for free or purchased on USB from AutomationDirect.com (search for GSoft2).

### Functions

- Create new drive configurations
- Upload/download drive configurations
- Edit drive configurations
- Archive/store multiple drive configurations on your PC
- Trend drive operation parameters (not available with GS10)
- Tune the drive PID loop
- View real time key operating parameters
- Real-time trending
- Start/Stop drive and switch directions, provided drive is set up for remote operation
- View drive faults

### Computer System Requirements

GSoft2 will run on Windows PCs that meet the following requirements:

- Windows OS: **8**: 32 & 64 bit, **8.1**: 32 & 64 bit, **10**: 64 bit, 11
- Edge or Chrome (for HTML help support)
- 32 Mb of available memory
- 10 Mb hard drive space
- Available USB port
- USB to RS485 adapter needed for GS4 and GS10 models





# GS4/GS20(X)/GS30 Accessories – Software

## GSLogic PLC Programming Software

Optional Accessory Software Applicable Only to AC Drive Series:

- GS4
- GS20(X)
- GS30

### GSLOGIC Drive Configuration Software

Available for **FREE** Download

GS4/GS20(X)/GS30 DURAPULSE Drives GSLogic PLC Programming Software			
Part Number	Price*	Description	For GS Drive
<b>GSLOGIC</b>	\$10.50	GSLOGIC Windows logic software, USB or free download. For use with DURApulse GS4, GS20, GS20X and GS30 series AC drives. Requires PC serial port or USB-485M serial adapter.	GS4 - all GS20(X) - all GS30 - all
<b>USB-485M</b>	\$69.00	PC adapter, USB A to RS-485 (RJ45/RJ12).	GS4 - all
<b>USB-CBL-AB3</b>	\$12.00	Programming cable, USB A to USB B, 3ft cable length.	GS20(X) - all GS30 - all
* GSLOGIC can be downloaded for <b>free</b> or purchased on USB from AutomationDirect.com (search for GSLOGIC).			

### PLC Summary

The GS4, GS20(X), and GS30 drives include a built-in PLC. Programmed in ladder logic, the PLC provides a comprehensive set of instructions and 2,000 (GS20(X)), 5,000 (GS30), or 10,000 (GS4) steps of programming capacity. GSLogic PLC software includes a Help File which contains the detailed information needed to use the PLC.

The PLC functionality is included with every GS4, GS20(X), and GS30 drive, and can be accessed over communications by external PLCs (via serial Modbus), or by the drive itself (using built-in PLC instructions). The PLC is perfectly suited for applications where digital and analog I/O requirements are small. For applications with complex PLC programming or large I/O requirements, please consider Click, Productivity, or Do-More/BRX. All of these PLCs can be easily integrated with the GS drive family or PLC. The GS4-KPD keypad is capable of storing multiple PLC programs.

There are two methods for communicating from the PLC to the drive. The first method is to use the WPR and RPR instructions available in the PLC's library. These two instructions can read from or write to any AC drive parameter in the same physical drive. The second method is to use Modbus RTU. The PLC is a Serial Modbus slave only. A Modbus RTU master can communicate with the PLC via serial only; optional communication cards cannot address the PLC. If communication cards (EtherNet/IP or Modbus TCP) are the desired method of communication, the drive includes PLC Buffers parameters that can be used. Simply write the needed information from the PLC into the drive's PLC buffer parameters using the WPR instruction. The Modbus TCP or EtherNet/IP cards can then read the VFD parameters.

### GSLogic Introduction

GSLogic is the drive PLC programming software for the AutomationDirect GS4, GS20(X), and GS30 family of drives. It is designed to enable you to perform a variety of drive PLC programming functions. Windows editing functions like cut, copy, paste, multiple windows, etc., are supported. GSLogic also provides for register editing, settings, file reading, saving, online monitoring settings, and other convenience functions, such as:


- Upload/download drive PLC program files to the onboard PLC
- Create new drive PLC programs
- Edit drive PLC programs
- Archive/store multiple drive PLC programs on your PC or the GS4-KPD drive keypad
- Control drive PID loops (FPID instructions)
- View in real time all drive PLC registers
- Print drive PLC program files

GSLogic includes an integral help file that includes software instructions, how to use GSLogic, and how to use the GS drive PLC.

### GSLogic System Requirements

GSLogic is a Windows-based programming software environment. Please check the following requirements when choosing your PC configuration:

- Windows OS: **8**: 32 & 64 bit, **8.1**: 32 & 64 bit, **10**: 64 bit, **11**
- 300MB free hard-disk space
- USB Port required for project transfer to drive
- USB-485M serial adapter required for GS4 models

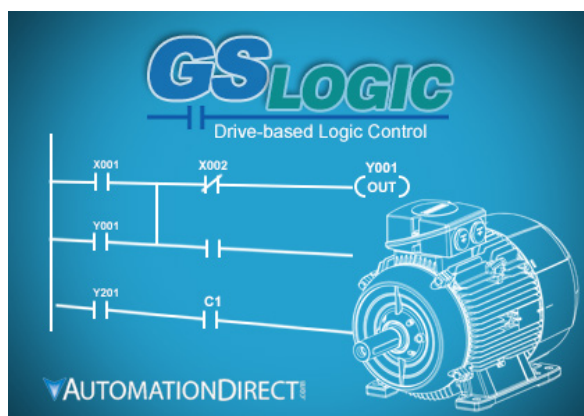

# DuraPulse Optional Accessories – Advanced LCD Keypad

## Advanced Keypad

NOTE: The keypad described below is included with the GS4 AC Drive, and is also available for purchase separately as a spare/replacement component for GS4, or an optional upgrade for GS10/GS20(X)/GS30.

## Keypad Panel-Mounting Kit

NOTE: The keypad panel-mounting kit described below is an optional accessory that is NOT included with the GS10/GS20(X)/GS30 AC drive.

GSx Series <i>DURAPULSE</i> Drives Keypad and Keypad Panel-Mounting Kit			
Part Number	Price	Description	For GS Drive
<b>GS4-KPD*</b>	\$121.00	Spare or replacement keypad for GS4 AC drives; optional advanced keypad for GS20(X) drives; includes RJ45 connector; great for maintenance or back-up programs.	GS4 – all GS10 – all GS20(X) – all GS30 – all
<b>GS4-BZL**</b>	\$34.00	Keypad Panel-Mounting Kit for remote surface mounting or embedded mounting of the AC drive removable keypad; hardware included. Use a standard Cat5e RJ45 patch cable (not included) to connect a remote-mounted keypad to the drive. Max cable length for remote-mounted keypad = 5m.	GS4 – all GS10 – all GS20(X) – all GS30 – all

\* A keypad is included with each GS4 AC Drive; additional keypads are available for spare/replacement components.  
 \*\* The keypad mounting kit is an optional accessory that is NOT included with the GS4 AC drive; for mounting the keypad remotely from the drive.  
 Note: Keypad firmware can only be upgraded when connected to a GS4 drive.

