




Micro Detectors

AUTOMATIONDIRECT.com

3505 HUTCHINSON ROAD
CUMMING, GA 30040-5860

MD CX0 Area Detectors Quick Start Guide

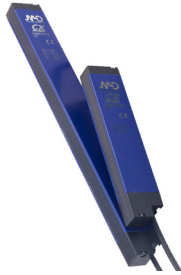

1

Startup

The system must be aligned.

1. All connections between emitter and receiver must be made. (See section 2.)
2. Connect the NO/NC as you wish the system to respond. (For NO connect to common or leave open. For NC connect to 24 VDC).
3. Teach input must be open.
4. Power on the system.
5. Connect the Teach input momentarily to the common (Teach Fine command) and wait for the end of Teach-in (wait for illumination of the Green and Blue LED).
6. Insure maximum alignment by adjusting the position of the sensor.
7. Mechanically fix the system, making sure to maintain the alignment.
8. Determine which teach function that you need for your system: fine or gross. Fine Teach allows for the smallest detectable object. Gross Teach will avoid pitfalls in the stability and repeatability of performance and is less sensitive to environmental conditions. For these reasons, Gross Teach is preferred.
9. For Gross Teach connect the input momentarily to the 24VDC and for Fine Teach connect the input momentarily to the common. The yellow LED of the Emitter starts to blink.
10. In the Emitter, wait until the Yellow LED becomes constantly ON and the Red LED remains OFF. In the Receiver, the Red LED turns OFF. Your sensors are now set up and ready for testing.

Alignment

Mechanical mounting:

It is extremely important to secure the light curtains to a rigid structure, not subject to deformation or strong vibrations.

Decide where to place the Receiver so that it is not subject to strong natural or artificial light sources or to luminous interference of other sensors.

Place the Emitter and Receiver facing one another, at the same height above the reference plane, following the same orientation. The output wires of the transmitter and receiver must be on the same side.

The distance between the two elements must not exceed the limits set by the specifications.

The optical beams can be partially deflected by nearby reflective surfaces. Because of that, the path beam interruption may not be detected. Therefore, all reflective surfaces and objects should be placed at a minimum safe distance from the optical beam path.

Safety Information

WARNING:



This it is NOT a protective device. Therefore, it should not be used to guarantee personnel safety.



This is a low-voltage, direct current device. Proper functioning is only guaranteed between 16, 8VDC and 30VDC. Under 15VDC voltage all outputs are in an OFF state. Over 30VDC voltage may damage the device. When the device is switched on, outputs are inactive for a certain amount of time known as Time Delay Before Availability.



The Emitter emits near-infrared light at non-dangerous levels. The device is classified as RG0 (exempt) according to IEC 62471: 2006-07.



- Please make sure that light curtains are used in proper environmental conditions.
- Automatic calibration must always be carried out aiming for the best possible alignment. More than one calibration and alignment adjustment may be necessary to guarantee the best alignment.
- Check any reflective surface next to the light beams which may influence them.
- Check any transparent panels or similar panels which may change the beam angle of the light curtains.
- Prevent the light curtain's optical window from getting scratched or tarnished.
- Do not expose the receiver to strong natural or artificial light sources, including stroboscopic light.
- Do not expose the receiver directly to optical beams projected by other optical devices.
- Ensure that the ambient temperature does not exceed the stated limits.
- Bear in mind that smoke, vapor, liquids and powders may alter transparency of air or dirty the optical window.
- Always dispose of unusable or irreparable devices always in accordance with national regulations regarding waste disposal.


2

Wiring

Refer to the Electrical Installation section in the manual for power supply requirements.

RECEIVER

EMITTER

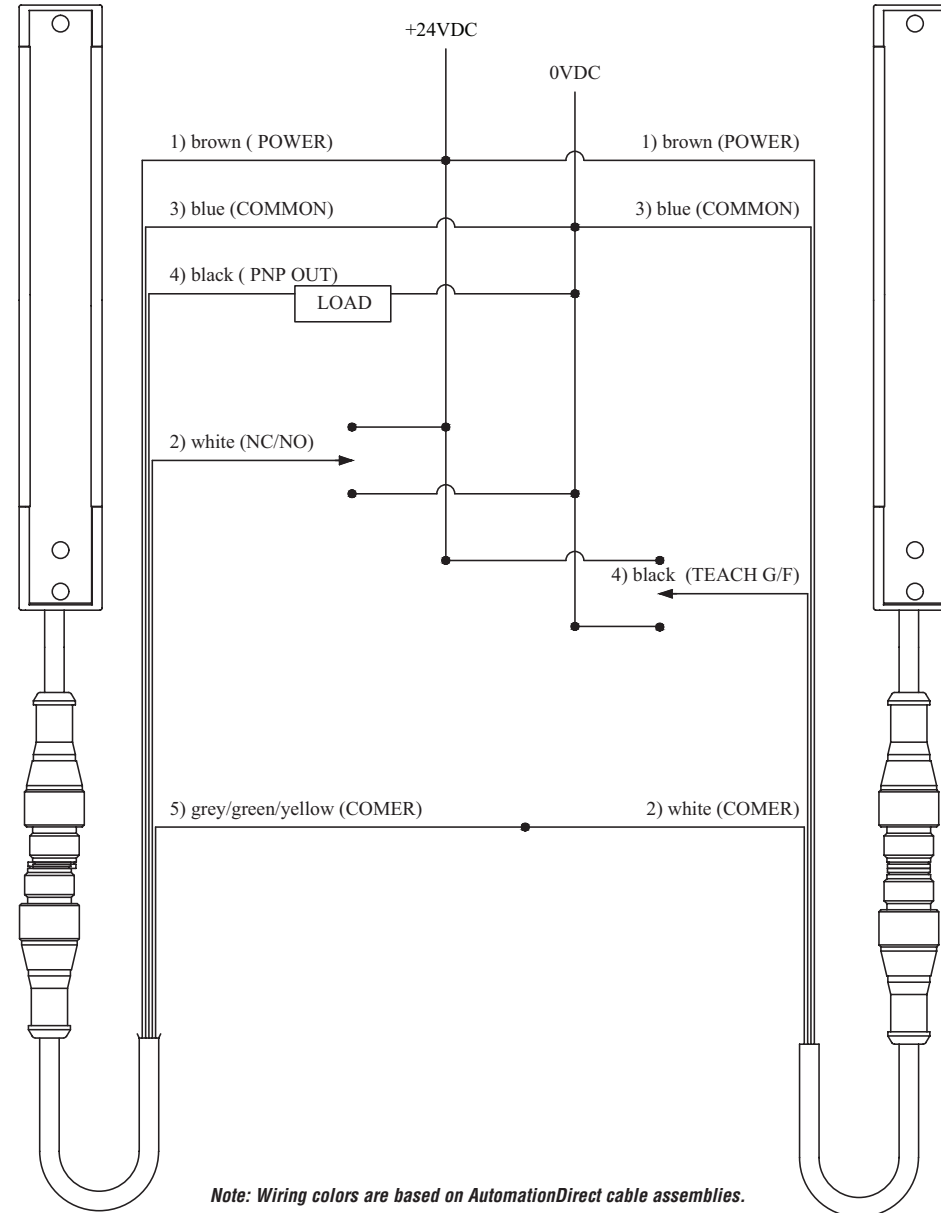

Note: Wiring colors are based on AutomationDirect cable assemblies.