



# Errata Sheet

This Errata Sheet contains corrections or changes made after the publication of this manual.

---

<b>Product Family:</b>	DL205 / DL305	<b>Date:</b>	September 2018
<b>Manual Number</b>	D2-DCM		
<b>Revision and Date</b>	2nd Edition; February 2003		

---

## Change to Table of Contents

There is a typo on the first page of the Table of Contents. "Install" is spelled "Insall" for the section named "Install the D2-DCM".

## Change to Page 2. Introduction

Add the following note to this page:

*NOTE: The D3-DCM module is only supported by the D3-350 processor only.*

## Change to Page 7. Specifications

In the Operating Specifications table, revise the "CPU Required" entry. It should say:

*D2-240 (firmware V1.8 or later), D2-250-1 and D2-260*

## Change to Page 11. Building the Cable

The NOTE at the bottom of the page is incorrect. Only the D2-230 and D2-240 CPUs support RS232 only. D2-250(-1) and D2-260 CPUs support RS232/422/485 without extra hardware.

## Change to Page 12. Building the Cable (continued)

Change the reference in the first paragraph to "Belden 9855" cable to "AutomationDirect L19772-1 (Belden 8102) or equivalent".

## Change to Page 13. Building the Cable (continued)

In the first paragraph, change the last sentence to "For example, AutomationDirect L19772-1 (Belden 8102) or equivalent has a nominal characteristic impedance of 100 ohms".

In the top wiring drawing ("Line-to-Line Termination for the D2-DCM"), change both "120 Ohm Resistor" callouts to "100 Ohm Resistor".

In the bottom wiring drawing, change the "65 Ohm Resistors" callouts to "51 Ohm Resistors".

In the top drawing, move the termination resistor on the left connector (Master) from the 24-25 pins to the 16-17 pins.



# Errata Sheet

**This Errata Sheet contains corrections or changes made after the publication of this manual.**

## **The Change to Page 17. D2–DCM Switch Settings**

Add the following note near the first bullet point, “*Direct*NET Slave”:

*NOTE: Although it is not listed in the switch settings, K-sequence is also available whenever the D2–DCM is set for DirectNET Slave operation.*

## **Change to Page 18. D2–DCM Switch Settings (continued)**

There is an error in the last paragraph, “Response Delay Time”. The first sentence refers to switch “SW4”. It should say “SW5”. (SW4 is used for firmware updates.)

## **Change to Page 21. Install the D2–DCM and Starting the Network**

Add the following note to this page:

*D3-DCM cannot be mounted in the farthest slot from the CPU in a base. It requires 300 mA of +9 V base power. Make sure you will not exceed the available base power budget by installing the D3-DCM.*

*See the DL305 User Manual for complete details on power budget calculations.*

## **Changes to Appendix A. Cable Diagrams**

Page A-4. Point-to-Point RS422 D2–DCM as Master

In the lower left drawing there are some pin number errors for the DL405 port 1 25-pin connector. The correct pin numbers are:

19 +RTS (not 10 as shown)

18 -RTS (not 11 as shown)

11 +CTS (not 12 as shown)

23 -CTS (not 13 as shown)

In the top set of drawings, change the callout that says “DL405 CPU Bottom Port” to DL405 Port 1”





# Errata Sheet

This Errata Sheet contains corrections or changes made after the publication of this manual.

## Change to Appendix A. Cable Diagrams (continued)

Page A-7. Revisions were made to both drawings:

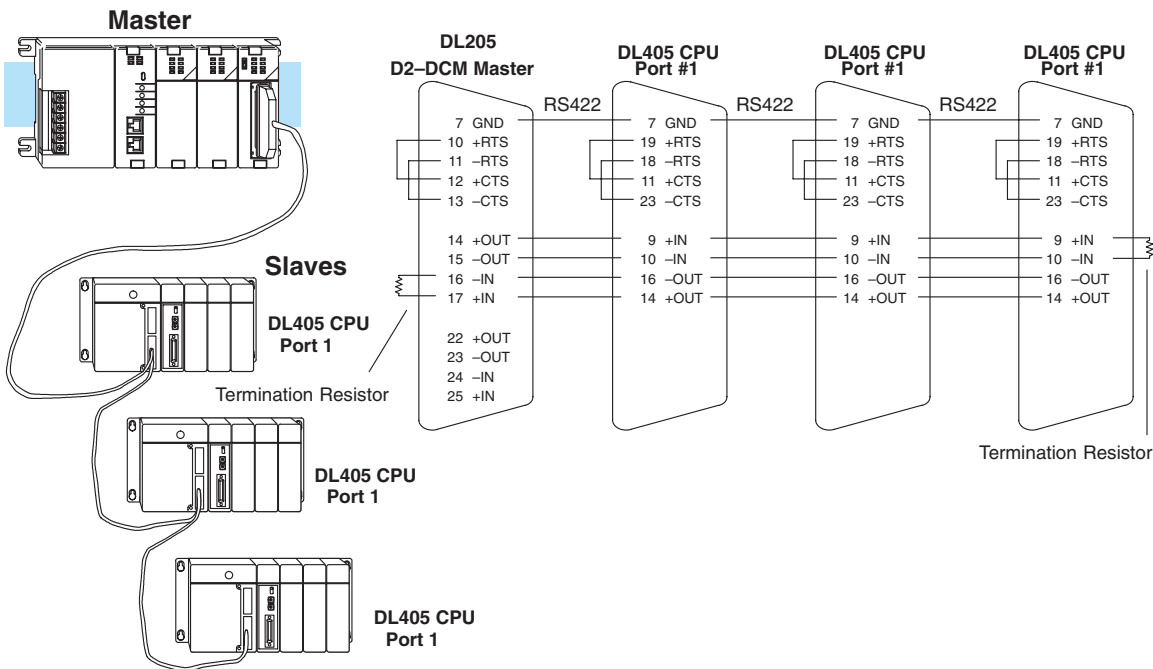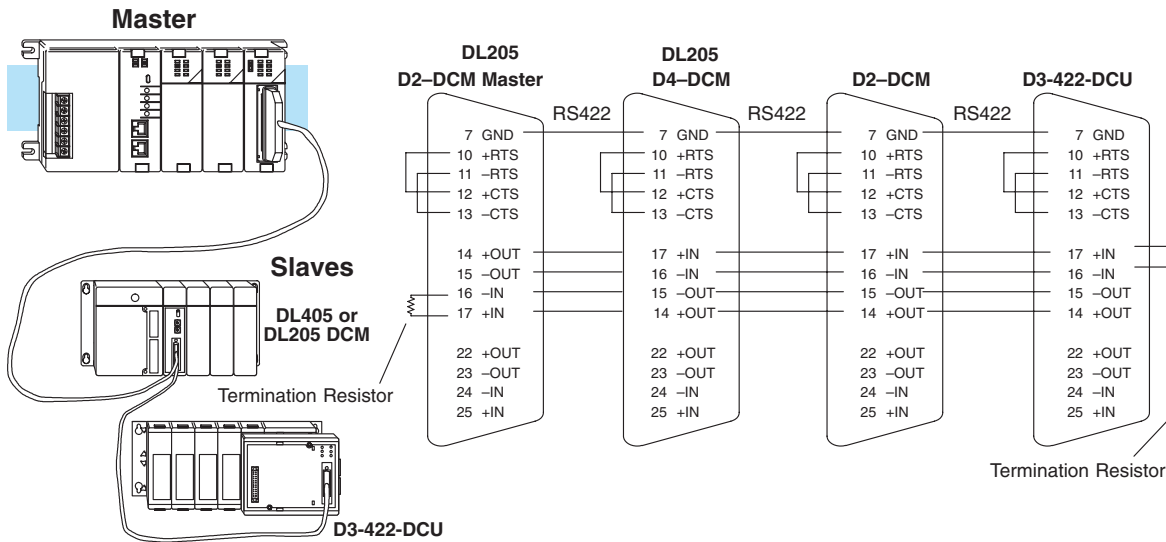

## Change to Appendix A. Cable Diagrams (continued)

Page A-8. Change the call-out that says "DL240 CPU Bottom Port or DL450 Phone Jack" to: "DL450 Port 2 (RJ12)"