Output Specificati	Output Specifications		
Outputs per Module	8 sinking		
Output Type	N-channel MOSFET, open drain		
Rated Voltage	3.3-24 VDC		
Operating Voltage Range	2.8-30 VDC		
Maximum Output Current	2A per point		
Minimum Load Current	0.4 mA		
Maximum Leakage Current	0.3 mA @ 30VDC		
On Voltage Drop	0.2 VDC @ 2A		
Maximum Inrush Current	4A for 40ms, 6A for 10ms		
OFF to ON Response	≤0.5 ms		
ON to OFF Response	≤0.5 ms		
Status Indicators	Logic Side (8 points)		
Commons	2 isolated (4 points / common)		
Recommended External Fuse	None		
External Power Supply Required	12-24 VDC (-15% / +20%) @12mA		

VAUTOMATIONDIRECTS Productivity2000



P2-08TD1S Sinking DC Output

The P2-08TD1S DC Output Module provides eight outputs, isolated four per common, that sink up to 2A per output from loads powered from 3.3–24 VDC supplies for use with the Productivity2000 system.

Output Specifications	1
Module Installation	2
Wiring Options	2
Wiring Diagram and Schematic	3
QR Code	3
Hot Swap Information	3
Warning	4
Removable Terminal Block	
Specifications	4
General Specifications	
-	

Terminal Block sold separately, (see wiring options on page 2).


Warranty: Thirty-day money-back guarantee. Two-year limited replacement. (See www.productivity2000.com for details).

Module Installation

WARNING: Do not apply field power until the following steps are completed. See hot-swapping procedure for exceptions.

Step One: Align module catch with base slot and rotate module into connector.

Step Two: Pull top locking tab toward module face. Click indicates lock is engaged.

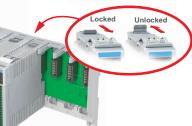

2 rotate

to seated


position

with slot

Step Three: Attach field wiring using the removable terminal block or ZIPLink wiring system.




Wiring Options

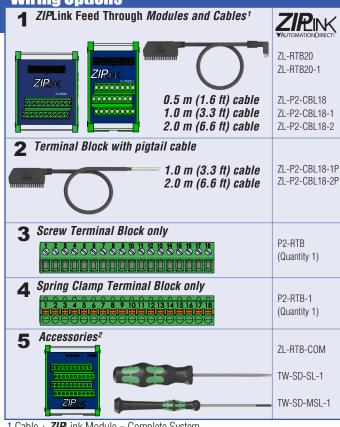


- 1.Cable + **ZIP**Link Module = Complete System
- 2. ZL-RTB-COM provides a common connection point for power or ground

Wiring Diagram and Schematic

QR Code

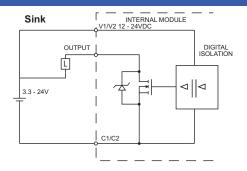

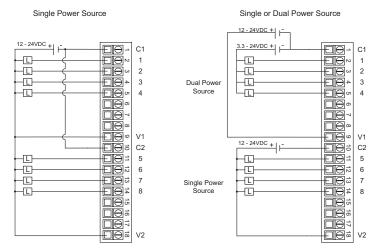



Use any QR Code reader application to display the module's product insert.

Caution: If possible, remove field power prior to proceeding. If not, then EXTREME care MUST be taken to prevent damage to the module, or even personal injury due to a short circuit from the live terminal block.

Important Hot-Swap Information

The Productivity2000 supports hot-swap! Individual modules can be taken offline, removed, and replaced while the rest of the system continues controlling your process. Before attempting to use the hot-swap feature, be sure to read the hot-swap topic in the programming software's help file or our online documentation at AutomationDirect.com for details on how to plan your installation for use of this powerful feature.

WARNING: To minimize the risk of potential safety problems, you should follow all applicable local and national codes that regulate the installation and operation of your equipment. These codes vary from area to area and it is your responsibility to determine which codes should be followed, and to verify that the equipment, installation, and operation are in compliance with the latest revision of these codes.

Equipment damage or serious injury to personnel can result from the failure to follow all applicable codes and standards. We do not guarantee the products described in this publication are suitable for your particular application, nor do we assume any responsibility for your product design, installation, or operation.

If you have any questions concerning the installation or operation of this equipment, or if you need additional information, please call Technical Support at 770-844-4200.

This publication is based on information that was available at the time it was printed. At AutomationDirect.com® we constantly strive to improve our products and services, so we reserve the right to make changes to the products and/or publications at any time without notice and without any obligation. This publication may also discuss features that may not be available in certain revisions of the product.

Removable Terminal Block Specifications

		a opositionations	
Part Number	P2-RTB	P2-RTB-1	
Number of Positions	18 Screw Terminals	18 Spring Clamp Terminals	
Wire Range	30–16 AWG (0.051–1.31 mm²) Solid / Stranded Conductor 3/64 in. (1.2 mm) Insulation Maximum 1/4 in. (6–7 mm) Strip Length	28–16 AWG (0.081–1.31 mm²) Solid / Stranded Conductor 3/64 in. (1.2 mm) Insulation Maximum 19/64 in. (7–8 mm) Strip Length	
Conductors	"USE COPPER CONDUCTORS, 75°C" or Equivalent.		
Screw Driver Width	0.1 inch (2.5 mm) Maximum*		
Screw Size	M2	N/A	
Screw Torque	2.5 lb·in (0.28 N·m)	N/A	

^{*}Recommend Screw Driver TW-SD-MSL-1

General Specifications		
Operating Temperature	0° to 60°C (32° to 140°F)	
Storage Temperature	-20° to 70°C (-4° to 158°F)	
Humidity	5 to 95% (non-condensing)	
Environmental Air	No corrosive gases permitted	
Vibration	IEC60068-2-6 (Test Fc)	
Shock	IEC60068-2-27 (Test Ea)	
Field to Logic Side Isolation	to Logic Side Isolation 1800VAC applied for 1 second	
Insulation Resistance	>10MΩ @ 500 VDC	
Heat Dissipation	sipation 1800mW	
Enclosure Type	Open Equipment	
Module Keying to Backplane	ckplane Electronic	
Module Location	Any I/O slot in a Productivity2000 System.	
Field Wiring	Use ZIP Link Wiring System or removable terminal block (not included). See "Wiring Options" on page 2.	
EU Directive	See the "EU Directive" topic in the Productivity Suite Help File. Information can also be obtained at: www.productivity2000.com	
Connector Type (sold separately)	18 Position Removable Terminal Block	
Weight	98g (3.5 oz)	
Agency Approvals	UL 61010-1 and UL 61010-2-201 File E139594, Canada and USA CE (EN 61131-2 EMC, EN 61010-1 and EN 61010- 2-201 Safety)*	

^{*}Meets EMC and Safety requirements. See the D.O.C. for details.

Document Name	Edition/Revision	Date
P2-08TD1S-DS	2nd Ed.	9/5/2019

Copyright 2016, AutomationDirect.com Incorporated/All Rights Reserved Worldwide