



Errata Sheet

This Errata Sheet contains corrections or changes made after the publication of this manual.

Product Family:	Terminator I/O	Date:	January 2019
Manual Number	T1H-EBC-M		
Revision and Date	2nd Edition, Rev. B; May, 2014		

Changes to Chapter 3. Configuring the T1H-EBC(100) Using NetEdit3

Page 3-8. Using NetEdit3

Add the following NOTE to the top of page 3-8:

NOTE: T1H-EBC100 modules have a DIP switch located under the cover on the left side. Turning this switch on will reset the IP Address, subnet and gateway to the factory defaults. (T1H-EBC modules do not have a DIP switch.)

Changes to Chapter 4. MODBUS® TCP/IP for T1H-EBC100

Page 4-8. T1H-EBC100 System Memory

In the fourth column of the table, replace the existing text for “4 - Flags:” with the following:

4 - Flags:

Bit 0: REBOOT BIT (R/W) - This bit is a status bit indicating if any module has rebooted. In other words it is OFF after a proper power up. It is ON only if a module has disappeared from the base and has reappeared. This normally might occur if a module in the base has been hot swapped. To clear this bit write ANY value to this word.

Bit 1: RE-SCAN BIT (RO) - Turning this bit ON will cause the EBC100 to re-scan its base. This should be done after a hot swap of a module.

Bit 2: CLEAR OUTPUTS BIT (RO) - Turning this bit ON will cause all discrete outputs to go OFF and all analog outputs to go to zero during a re-scan of the base (see Bit 1). Leaving this bit OFF will cause all discrete and analog outputs to remain at their current value after the rescan of the base (see Bit 1).

Bit 3-7: Reserved

Configuring the T1H-EBC(100) Using NetEdit3


In This Chapter. . . .

- NetEdit3 Software
- Using NetEdit3
- Locating the MAC Address Label


NetEdit3 Software

NetEdit3 is a software utility which can be used to set network identifiers (Module ID or IP Address), configure the EBC serial port, perform diagnostic and troubleshooting tasks and upgrade the firmware in the EBC module if necessary. The T1H-EBC100 requires NetEdit 3.x or later.

Installing NetEdit3 You can install NetEdit3 on Windows98/ME/2000/XP™ or Windows NT4™. NetEdit3 is included with this manual on the AutomationDirect Software Product Showcase CD (also available online at www.automationdirect.com). After inserting the CD into the drive, the following window will appear.

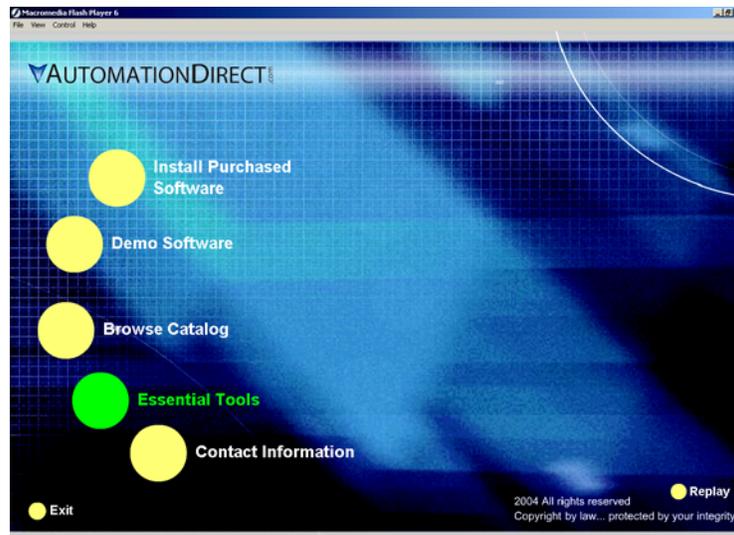

Click on the Essential Tools button. The following window will be displayed.

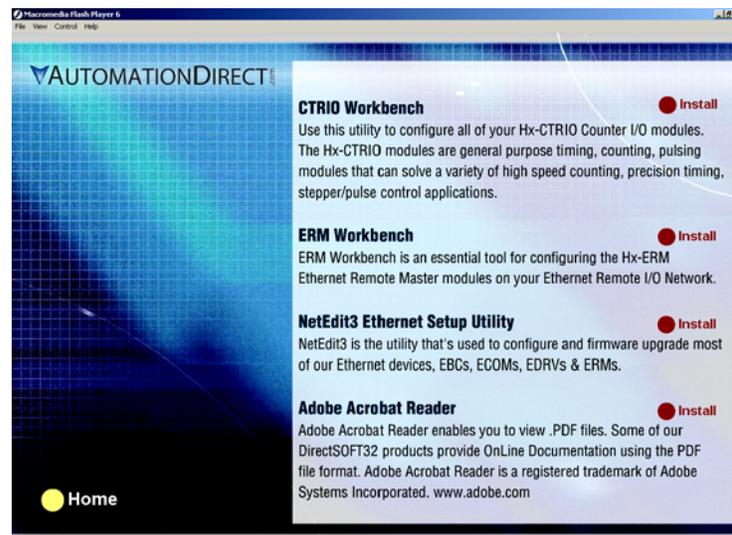


Click on Install NetEdit3. A series of windows will step you through the installation process. Fill in the necessary information as the installation wizard prompts through the install. In the Setup Type window, select Typical setup. This setup type is recommended for most users. The installation process places NetEdit3 in the C:\HAPTools directory (default).

Launching NetEdit3


There are three methods to launch NetEdit3.
The three methods are:

- using the Windows Start menu Programs>AutomationDirect Tools>NetEdit3 as shown below
- launching **DirectSoft32** (if installed), from the programming window, select PLC>Tools>NetEdit3
- launching **DirectSoft32** (if installed), then select Utilities>NetEdit3

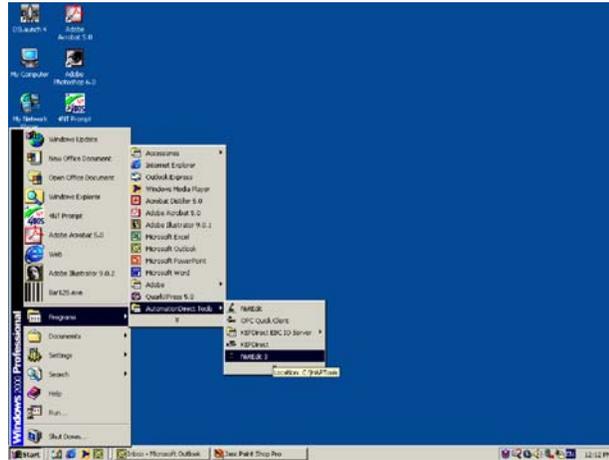

The NetEdit3 Screen


Starting NetEdit brings up the screen below. All NetEdit3 functions are accessed from this screen.

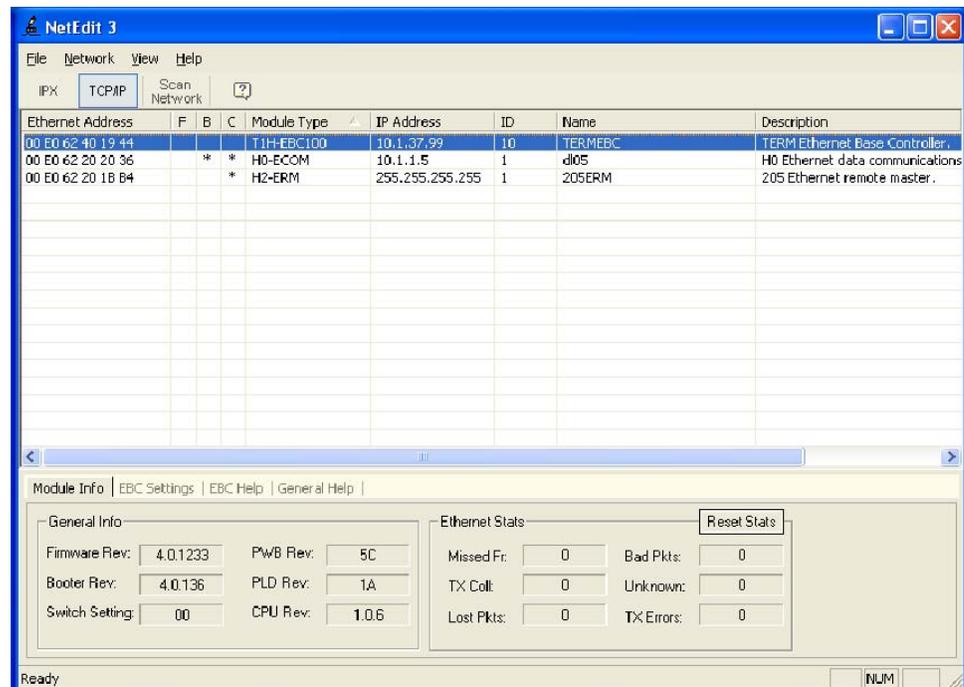

Adding Network Protocol Support to the NetEdit3 PC

You may have already set up your PC with selected networking protocols for Ethernet communications. If not, you will need to select the protocols now for communication with the Ethernet modules. We strongly recommend that you include the IPX protocol. For Windows 2000, go from My Computer on your Windows desktop to Control Panel. Double click on Network and Dial-up Connections, then double click on the desired Network Device to see the installed Protocols. If IPX is not listed among the protocols already loaded, add it now by clicking on the Install button. For Windows XP, go from Start>Settings>Control Panel. The steps are the same as Windows 2000 from this point.

Add the TCP/IP protocol if it is necessary for your application. The TCP/IP selection will give you support for the UDP/IP protocol. Also, add the IPX protocol if it is not already active.

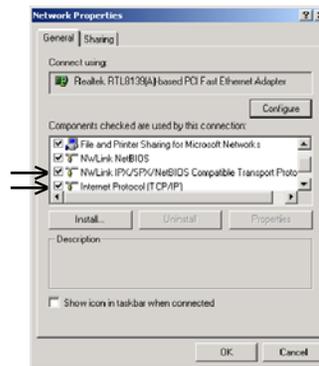

NOTE: We strongly recommend you load IPX protocol on your PC for the connection from your PC to the ethernet modules. Use UDP/IP in your application, if required, but also add IPX to your list of active protocols. Having IPX loaded on your PC gives you a backup for troubleshooting communication problems.



Using NetEdit3

This section steps through the features and uses of NetEdit3. We will describe the individual segments of the NetEdit3 screen and the function of each.



NOTE: Your PC-based Control software may be capable of configuring the EBC module. If so, please refer to the appropriate documentation for that software product to determine the best method to configure the EBC. Depending on which software you are using, it may not be necessary to use NetEdit3.

Ethernet Communication Protocol

In the upper left corner of the NetEdit3 screen, you will find buttons labeled *IPX* and *TCP/IP*. The EBC module understands these protocols. Both protocols are *permanently resident* in the firmware of the module.

When you click on one of these buttons, you are selecting the protocol you want your PC to use to communicate with the EBC module. You are not telling the module which protocol to use, because it is using both protocols all the time. IPX is a Novell standard in widespread use, and UDP/IP is a popular protocol supported by the TCP/IP suite of protocols in your PC.

The figure to the right shows the Protocol selection buttons in the upper left corner of the NetEdit3 screen. The choice you make here tells **your PC** which protocol to send to the EBC to link NetEdit3 to the module.


Some PC-based control software products may support only one of these protocols. Read the documentation for your software to be sure the protocol you select is supported.



Ethernet Address The upper left section of the NetEdit3 screen displays the *Ethernet Address* of the modules currently on the network.

If modules are added or removed from the network, click on the *Scan Network* button to update the list. Notice that the MAC Address is the factory-assigned address that is on the permanent label on the module.

Select a specific module here by clicking on the MAC Address or by using the arrow keys. The selected module is highlighted.

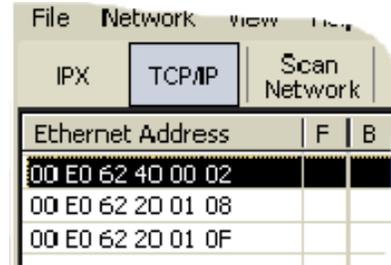

NOTE: The Module window may list the MAC Addresses of devices not covered by this manual.

Module Type, IP Address and ID

Module Type	IP Address	ID	Name	Description
T1H-EBC100	192.168.26.47	33	Station 1	Machine Control/Oper
...	10.1.1.31	55		

The upper mid section of the NetEdit3 screen displays the *Module Type*, *IP Address*, *module ID*, *Name* and *Description* of the modules currently on the network.


A new EBC will have an IP Address of 0.0.0.0, a Module ID of 0 (zero), and no Module Name or Description. To assign or change a module an IP address, ID, name or description refer to the EBC Settings>General Information description later in this section.

Right clicking on an EBC module listed on the NetEdit3 screen will display the window to the right. This is an alternative to using the Module Info or EBC settings tabs (shown below) to access the module's configuration settings. The settings are discussed later in this section.



**Module Info>
General
Information**


When the Module Info tab is selected, the *General Info* box lists the selected module's Firmware Revision, Booter Revision, DIP Switch Setting, PWB Revision, PLD Revision and CPU Revision. This box is in the lower left section of the NetEdit3 screen.

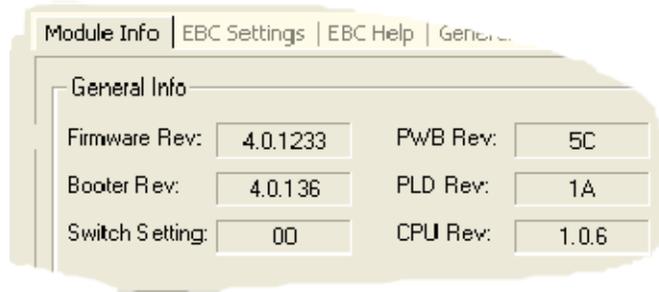

**Module Info>
Ethernet Stats**

When the Module Info tab is selected, the *Ethernet Stats* box displays statistics related to the selected module's communication errors. Click on the Reset Stats button to reset all categories to 0 (zero).


This box is in the lower middle section of the NetEdit3 screen.

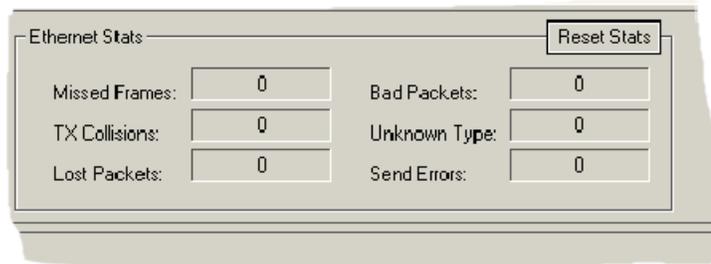

EBC Settings


When the EBC Settings tab is selected, the selected module's Configuration, Utilities and Firmware tools can be accessed.

This box is in the lower middle section of the NetEdit3 screen.

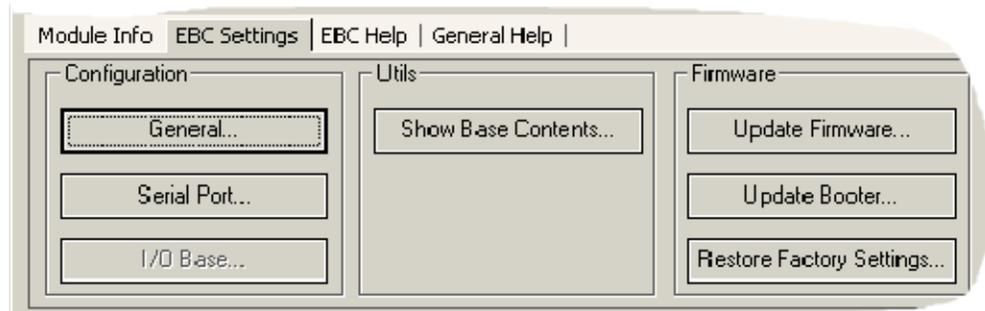


**EBC Settings>
Configuration>
General**

Clicking the General button in the EBC Settings>Configuration box brings up the General Settings window below.

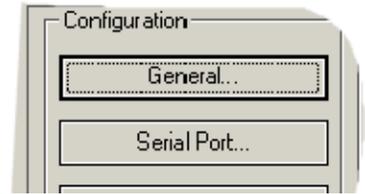

See Errata Sheet at the beginning of this file. Add this note:
NOTE: T1H-EBC100 modules have a DIP switch located under the cover on the left side. Turning this switch on will reset the IP Address, subnet and gateway to the factory defaults. (T1H-EBC modules do not have a DIP switch.)

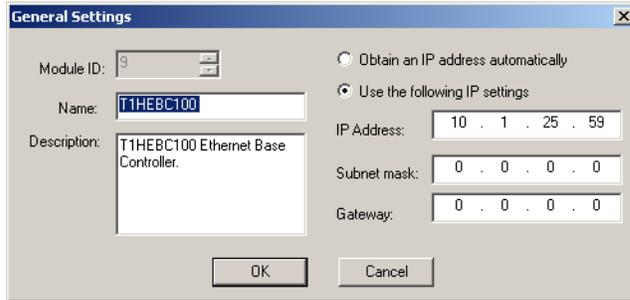

The General Settings box allows you to assign a **Module ID**. Module IDs must be unique for each EBC, but they do not have to be in sequence. The module's Node Address rotary switches must both be set to zero to allow NetEdit3 to set a Module ID. Do not use address zero for communications.

The **Name** field and **Description** field are optional.


To set an **IP Address**, highlight the number in each of the four boxes, and overwrite the number. Use the twelve-digit number assigned to the EBC module by your network administrator. If you change the IP Address, do not use the number "255" in any field. Doing so will cause communication problems.

The OK button sends all the entries to the module's flash memory.

An **IP Address** is assigned to the EBC module if your network will be using the TCP/IP or MODBUS TCP/IP (T1H-EBC100 only) protocols. If you have a separate dedicated network for your EBCs, you may be able to use the Module ID identifier (IPX protocol) for communications instead of an IP address. To set an IP Address, use the twelve-digit number assigned to the EBC module by your network administrator. If you change the IP address, do not use the number "0" or "255" in any field. Doing so will cause communications problems. The **valid settings are 1 through 254**. The module ships from the factory with an IP Address of 0.0.0.0. This is not a usable IP Address for communications. Click on *Use the following IP settings* radio button before clicking on the OK button to write the updated settings to the module's flash memory. It is extremely important not to have duplicate IP Addresses on your network.

Example

Client Subnet Mask:	255.255.0.0	
Valid Client IP Address	192.168.50.2	1-254
Valid EBC IP Address	192.168.55.5	Valid settings for
Valid EBC IP Address	192.168.70.15	Bold number fields
		(Do not duplicate)



WARNING: If you are using the T1H-EBC100, be sure to read Chapter 5 concerning DHCP issues.

IP Address


**EBC Settings>
Configuration>
Serial Port**

Clicking the Serial Port button in the EBC Settings>Configuration box brings up the Serial Port Settings window below.

On the *Serial Port Settings* window, make any necessary changes to the serial communication parameters. After making changes, be sure to click on the OK button. Also, Be sure these parameters match the parameters of the serial device with which you are communicating.


Note: Some PC-based Control software packages may automatically overwrite settings selected here. Refer to the documentation for your PC-based Control software.

The OK button sends all the entries to the module's flash memory.

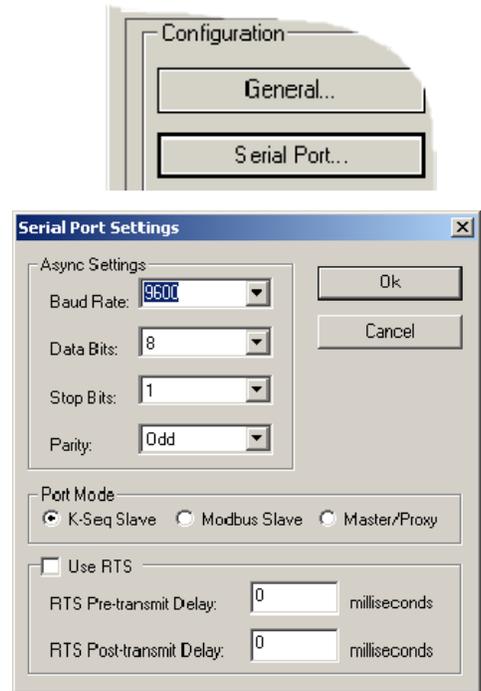


**EBC Settings>
Utils>Show Base
Contents**

Clicking the Show Base Contents button in the EBC Settings>Utilities box brings up the Show Base Contents Window shown below.

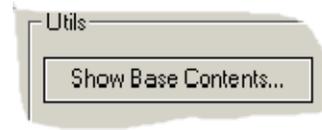

This function queries the EBC for a list of I/O modules it has in its base. The Module Type and the MODBUS 584/984 addressing will be listed as well. This will help confirm that the EBC can recognize all the I/O modules connected to the EBC controller. The Show Base Contents information can be saved as a (*.txt) file or printed for reference or future use.

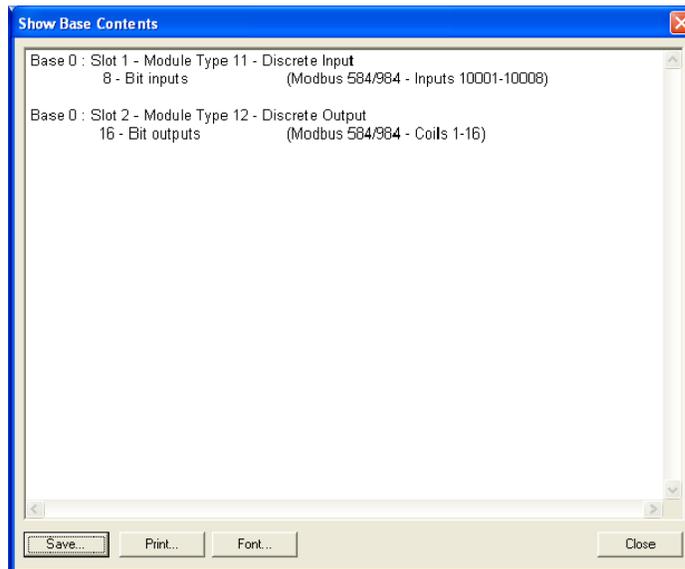


**EBC Settings>
Firmware**

The functions in the Firmware box are used to update the selected module's Firmware and Booter versions. The Restore Factory Settings buttons resets the selected module's IP address, ID, Name and Description to factory defaults. Refer the sections on the next page to determine if updates are necessary.



Clicking on the either of the Update buttons opens the appropriate EBC folder within the Images folder, which is created during the install of NetEdit3. The Images folder is located in the same folder as NetEdit3.exe. Each module folder contains the module's firmware and boot loader files. The next section discusses keeping the firmware files up to date.

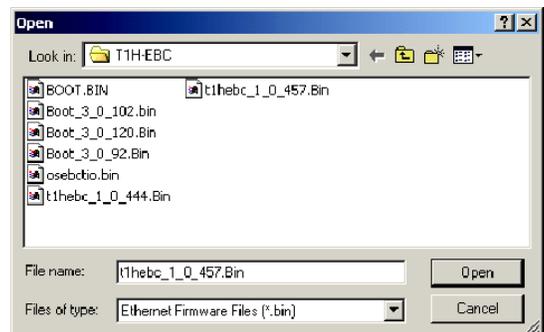


FileMenu> Live Update

The Live Update will retrieve the latest firmware and boot loader files from the Host Engineering web site and place them in the NetEdit3 Images folder that was created during the install of NetEdit3. The feature requires that you have a functional Internet connection (dial-up or broadband). If the Images folder does not exist on your PC, it will be created as part of the retrieval process.



When you click the Go! button on the Live Update window, NetEdit3 will compare the version information of the files on the Host Engineering web site against the files you have locally on your PC, and it will download any newer files. Once this process is complete, NetEdit3 will rescan the devices on your network and refresh the "F" and "B" columns next to the listed devices.

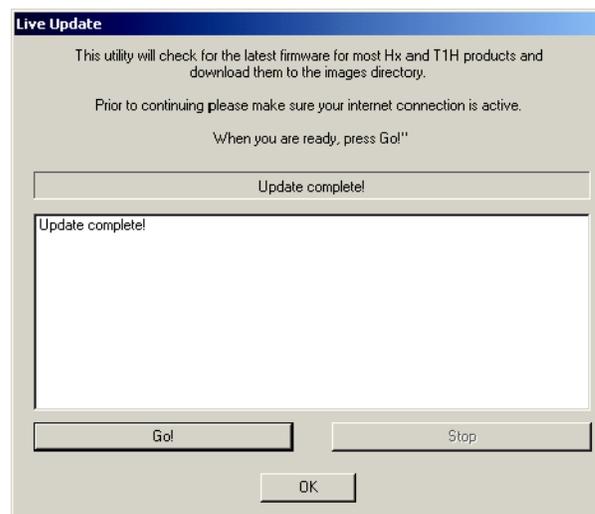

F / B / C Columns

The F, B, and C columns are provided to signify potential issues with devices on the network.

The "F" column will display an asterick beside any device whose firmware is older than its firmware file in your Images folder.


The "B" column will display an asterick beside any device whose boot loader is older than its boot loader file in your Images folder.

The "C" column will display an asterick beside any device that has a configuration conflict with another device on the network. Duplicate module IDs (that are non-zero) and duplicate IP Addresses (that are not 255.255.255.255) will report as conflicts.

Ethernet Address	F	B	C	Module Type
00 E0 62 40 06 34	*			T1H-EBC
00 E0 62 20 21 ED				H0-ECOM
00 E0 62 20 01 08				H2-ECOM
00 E0 62 20 01 0F				H2-EBC

Locating the MAC Address Label

Factory-assigned MAC Address

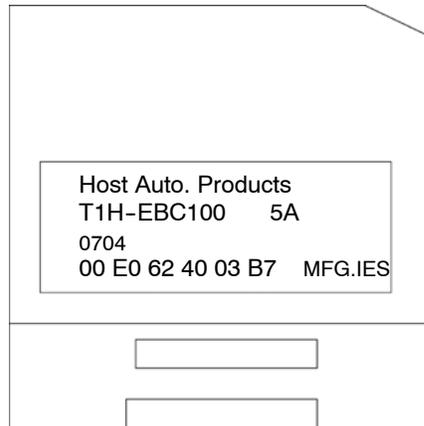

MAC Address

A unique Media Access Control (MAC) Address is assigned to each module at the factory and cannot be changed. It is a twelve digit number, and it is printed on a label permanently attached to the EBC circuit board. The MAC address label can be viewed through the translucent module cover. NetEdit3 and HTML Configuration can be used to read the MAC address.