ReeR MOSAIC-MOS8 Output Expansion Module



The ReeR MOSAIC (MOdular SAfety Integrated Controller) MOS8 output expansion module provides eight programmable digital signal outputs.

Features

- 8 programmable digital signal outputs programmable with the MOSAIC Safety Designer Software
- Removable terminal block plus screw contacts
- Connection to M1 or M1S via MSC 5-way ReeR proprietary bus. Bus connector included.

MOSAIC-MOS8 Expansion Unit						
Part Number	Price	Voltage	Description	Connection		
MOSAIC-MOS8	\$02exo:	24VDC	Automation expansion module with 8 programmable digital signal outputs	Removable terminal block, screw contacts		











MOSAIC-MOS8 Specifications					
General Specifications					
Operating Temperature	-10°C to +55°C [14°F to 131°F]				
Storage Temperature	-20°C to +85°C [-4°F to 185°F]				
Altitude	2000m (max)				
Vibration Resistance	Tested to IEC 60068-2-6				
Degree of Protection	IP 20				
Housing	Polyamide				
Weight	200g [7.05 oz]				
Agency Approvals and Standard	cULus, CE, TÜV				
Terminal Designation per EN 50 005	AWG 12-30 solid/stranded. Use 60/75°C copper (Cu) conductor only.				
Wire Fixing	Screw or clamp terminal blocks with 8, 16 or 24 terminals, plus rear panel plug-in connector. Terminal tightening torque 5-7 lb•in (0.6-0.7 N•m).				
Input Specifications					
Nominal Voltage	24VDC				
Voltage Range	± 20%				
Maximum Consumption	3W				
Digital Inputs	-				
Input FBK / Reset	-				
Test Outputs	-				
OSSD Outputs	-				
Signaling Outputs	8 programmable - PNP high				

Note: See product manual for complete details.

Note: To obtain the most current agency approval information, see the Agency Approval Checklist section on the specific part number's web page.


Electrical Connections to MOSAIC-MOS8




- Wire size range: AWG 12-30 (solid/stranded) (UL).
- Use 60/75°C copper (Cu) conductor only.
- Turn off power before making connections.
- \bullet The supply voltage must be 24VDC \pm 20% (PELV, in compliance with the standard EN 60204-1 (Chapter 6.4).
- · Do not use the MOSAIC to supply external devices.
- The same ground connection (0VDC) must be used for all system components.
- Separate power supplies are recommended for the safety module and for other electrical power equipment (electric motors, inverters, frequency converters) or other sources of disturbance.
- Cables used for connections of longer than 50m [164ft] must have a cross-section of at least 1mm² (AWG16).

Dimensions

mm [inches]

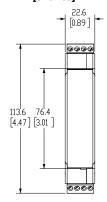

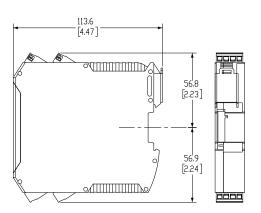

MOS8 Module Connections					
Terminal	Signal	Туре	Description		
1	24VDC	_	24VDC power supply		
2	NODE_SEL0	Input	Node selection		
3	NODE_SEL1	Input			
4	0VDC	_	0VDC power supply		
5	24VDC STATUS 108	-	24VDC power supply OUTPUT STATUS 1-8		
6	Not connected	_	_		
7	Not connected	_	-		
8	Not connected	_	-		
9	OUT_STATUS1	Output	Programmable signal output 1		
10	OUT_STATUS2	Output	Programmable signal output 2		
11	OUT_STATUS3	Output	Programmable signal output 3		
12	OUT_STATUS4	Output	Programmable signal output 4		
13	OUT_STATUS5	Output	Programmable signal output 5		
14	OUT_STATUS6	Output	Programmable signal output 6		
15	OUT_STATUS7	Output	Programmable signal output 7		
16	OUT_STATUS8	Output	Programmable signal output 8		

Please see the ReeR MOSAIC Supplemental Manual for basic wiring examples.





MODULAR **SA**FETY INTEGRATED CONTROLLER

The MOSAIC system is a unique safety controller that's modular, expandable and configurable for managing all safety functions of a single machine or an entire plant. It offers cost reductions with minimal wiring.

COMMS



MOSAIC-MBEI

Industrial Fieldbus: EtherNet/IP.

MOSAIC-MBEM

Industrial Fieldbus: ModBus TCP/IP.

DIGITAL INPUTS



MOSAIC-MI8

8 digital inputs and four test outputs.

MOSAIC-MI16

16 digital inputs and 4 test outputs.

MOSAIC-MI12T8

12 digital inputs, 8 test outputs.

I/O EXPANSION UNIT



MOSAIC-MI8O2

8 digital inputs, 2 EDM/ RST inputs, 4 test outputs, 2 OSSD pairs, and 2 status outputs.

MOSAIC-MI8O4

- 8 digital inputs, 4 test outputs,
- 4 individual or 2 pair OSSD outputs, and
- 4 configurable I/O.

SPEED MONITORING

MOSAIC-MV0

2 prox switch inputs.

MOSAIC-MV1T

1 TTL encoder and 2 prox switch inputs.



MOSAIC-MV1H

1 HTL encoder and 2 prox switch inputs.

MOSAIC-MV1S

1 SIN/COS encoder and 2 prox switch inputs.

MOSAIC-MV2T

2 TTL encoder and 2 prox switch inputs.

MOSAIC-MV2H

2 HTL encoder and 2 prox switch inputs.

MOSAIC-MV2S

2 SIN/COS encoder and 2 prox switch inputs.

MOSAIC SYSTEM



MOSAIC M1, M1S, or M1S-USBC controller units are able to interface with up to 14 individual expansion modules (up to a maximum of 4 of any one module type).

Controller units can also be used in a stand-alone configuration.

Blue-highlighted modules work only with the MOSAIC-M1S or MOSAIC-M1S-USBC controller.

SAFETY RELAYS

MOSAIC-MR2

2 relays – 2 NO + 1 NC connectable to 1 OSSD pair + 1 NC contact for external device monitoring. 2 safety relays with guided contacts. Screw contacts.



MOSAIC-MR4

4 relays – 4 NO + 2 NC connectable to 2 OSSD pair + 2 NC contacts for external device monitoring. 4 safety relays with guided contacts. Screw contacts.

These extension relays can connect to the outputs on the MOSAIC M1, M1S, or to any of the output cards

DIGITAL OUTPUTS

MOSAIC-MO2

2 EDM/RST inputs, 2 OSSD pairs and 2 status outputs.



MOSAIC-MO4

4 EDM/RST inputs, 4 OSSD pairs and 4 status outputs.

MOSAIC-MOR4

4 single-channel outputs or 2 dual-channel outputs.

MOSAIC-MOR4S8

4 single-channel outputs or 2 dual-channel outputs with 8 status outputs.

MOSAIC-MO4L

4 individual or 2 pair OSSD outputs, and 4 configurable I/O.

ANALOG INPUTS



MOSAIC-MA4 4 analog inputs.

STATUS OUTPUTS

MOSAIC-MOS8

8 status outputs.



16 status outputs.



ACCESSORIES

MOSAIC-MSC-C

Safety communication bus connector and terminal end caps. Required to connect additional module to MOSAIC-M1, MOSAIC-M1S, or MOSAIC-M1S-USBC.

MOSAIC-MCM, MOSAIC-MCMB

A proprietary removable memory card that can be used to save MOSAIC configuration data for subsequent transfer to a new device without using a PC.



Safety Products



Warning: Safety products sold by AutomationDirect are Safety components only. The purchaser/installer is solely responsible for the application of these components and ensuring all necessary steps have been taken to assure each application and use meets all performance and applicable safety requirements and/or local, national and/or international safety codes as required by the application. AutomationDirect cannot certify that our products, used solely or in conjunction with other AutomationDirect or other vendors' products, will assure safety for any application. Any person using or applying any products sold by AutomationDirect is responsible for learning the safety requirements for their individual application and applying them, and therefore assumes all risks, and accepts full and complete responsibility, for the selection and suitability of the product for their respective application.

AutomationDirect does not provide design or consulting services, and cannot advise whether any specific application or use of our products would ensure compliance with the safety requirements for any application.