


6" ADAPTER PLATE GASKET REPLACEMENT INSTRUCTIONS

P/N EA-6-ADPTR-GSK



NOTE: EA-6-ADPTR IS COMPATIBLE WITH EA7-S6M-R, EA7-S6M, EA7-T6CL-R AND EA7-T6CL TOUCH PANELS ONLY.
EA-6-ADPTR IS NOT COMPATIBLE WITH EA9 SERIES PANELS

Preparation: Disconnect input power and all other connections, remove the touch panel from the 6" adapter plate, and then remove the adapter plate from the control cabinet by removing the six (6) screws that secure the adapter to the control cabinet. In a clean environment, place the adapter plate face down on a lint-free soft surface to prevent scratching the adapter plate.

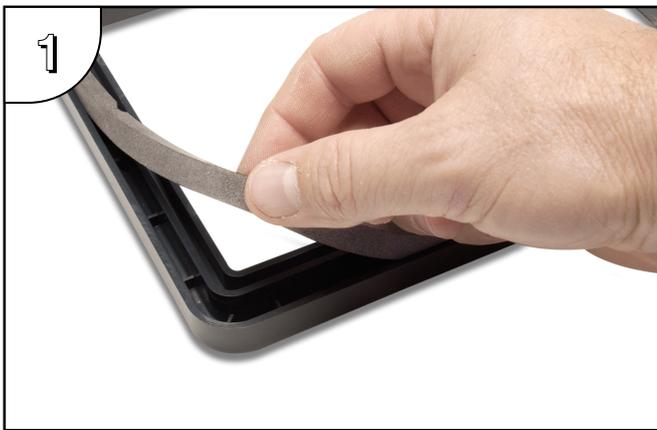

Start at one corner and pull the old gasket out of the channel that holds the gasket in place. Pull the gasket up as you work around the entire perimeter of the adapter plate. Discard the old gasket.



Lay the new gasket over the channel so that the long and short sides of the gasket match up to the long and short sides of the adapter plate. Start at one corner and match the gasket's corner to the channel's corner. Press the gasket into the channel and work all away around the perimeter of the adapter plate. Re-install the adapter plate and then the touch panel.

6" Adapter Plate Gasket

