# **HWST - SERIES**

## ASSEMBLY INSTRUCTIONS FOR WALL MOUNT STAND OFF KITS

#### **Instructuions**

#### Option 1: Mount to cement wall with 1/2-13 anchor studs


- 1. Mark positions of the four mounting holes in the position the enclosure is to be mounted.
  - 2. Install anchor studs as per manufacturers specifications.
- 3. Thread the stand off (Item 1) onto the wall anchors and tighten down using machined flats and a wrench.
- 4. Bolt the enclosure to the stand offs (Item 1) using a sealing washer (Item 2) and the 1/2-13 bolt (Item 3) provided. Tighten until the sealing washer is flat.


### **Option 2: Mount to machine plate**

- 1. Mark positions of the four mounting holes in the position the enclosure is to be mounted and drill holes.
- 2. Install stand offs (Item 1) to enclosure using the 1/2" sealing washer (Item 2) and the 1/2-13 bolt (Item 3) and tighten down until sealing washer is flat.
- 3. Attach enclosure with stand offs (Item 1) installed to plate using a 1/2-13 threaded fastner.

#### Option 3: Mount using a through bolt

1. Stand off is supplied with a through hole that is 3/8" in diameter, use appropriate hardware and sealing where required.

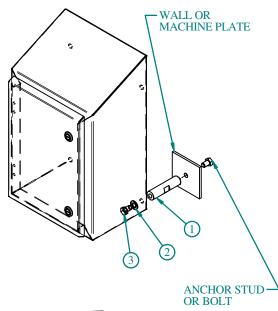

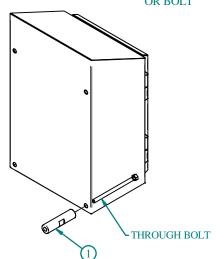

ITEM#	DESCRIPTION	QTY
1	STAND OFF	4
2	1/2" SEALING WASHER	4
3	1/2-13 BOLT	4

