

# proSense® Thermowells



## Overview

- Thermowells designed for use with ProSense thermocouple and RTD probes or ProSense Thermometers eliminate the need for a separate probe mounting fitting or adapter

### TW Series Thermowells

- Drilled bar stock one piece construction (no welds) from 304 or 316 stainless steel
- 1/2" and 3/4" NPT male process threads available
- Designs and fabrication comply with ASME B31.1 and boiler and pressure vessel codes
- Material complies with NACE MR 0175 / ISO 15156
- CRN registered for all Canadian provinces
- 1-year warranty

### RTDTW Series Thermowells

- Welded 316 stainless steel construction
- 1/2" NPT male process threads
- 3-year warranty



| Thermowells for Thermocouples -TW Series |             |        |         |       |                                 |                         |                         |                    |                                                                                  |                                   |
|------------------------------------------|-------------|--------|---------|-------|---------------------------------|-------------------------|-------------------------|--------------------|----------------------------------------------------------------------------------|-----------------------------------|
| Part Number                              | Pcs/<br>Pkg | Wt(lb) | Price   | I.D.  | Overall<br>Length/"U"<br>Length | Male Process<br>Threads | Female Probe<br>Threads | Wetted<br>Material | Temperature/<br>Pressure<br>Rating                                               | Use With Probe or<br>Thermometer  |
| <a href="#">TW025-01</a>                 | 1           | 0.4    | \$08g2: | 0.26" | 2-3/4" / 1"                     | 1/2" NPT                | 1/2" NPT                | 304 SS             | 304SS: 1000°F<br>max; 3400psi<br>max<br><br>316SS: 1000°F<br>max; 5200psi<br>max | See Sensor<br>Compatibility Table |
| <a href="#">TW025-03</a>                 | 1           | 0.4    | \$08g3: |       |                                 | 1/2" NPT                |                         | 316 SS             |                                                                                  |                                   |
| <a href="#">TW04-01</a>                  | 1           | 0.5    | \$08g4: |       | 4-1/4" / 2-1/2"                 | 1/2" NPT                |                         | 304 SS             |                                                                                  |                                   |
| <a href="#">TW04-02</a>                  | 1           | 0.5    | \$08g5: |       |                                 | 3/4" NPT                |                         | 304 SS             |                                                                                  |                                   |
| <a href="#">TW04-03</a>                  | 1           | 0.5    | \$08g6: |       |                                 | 1/2" NPT                |                         | 316 SS             |                                                                                  |                                   |
| <a href="#">TW04-04</a>                  | 1           | 0.5    | \$08g7: |       |                                 | 3/4" NPT                |                         | 316 SS             |                                                                                  |                                   |
| <a href="#">TW06-01</a>                  | 1           | 0.7    | \$08g8: |       | 6-1/4" / 4-1/2"                 | 1/2" NPT                |                         | 304 SS             |                                                                                  |                                   |
| <a href="#">TW06-02</a>                  | 1           | 0.7    | \$08g9: |       |                                 | 3/4" NPT                |                         | 304 SS             |                                                                                  |                                   |
| <a href="#">TW06-03</a>                  | 1           | 0.7    | \$08ga: |       |                                 | 1/2" NPT                |                         | 316 SS             |                                                                                  |                                   |
| <a href="#">TW06-04</a>                  | 1           | 0.7    | \$08gb: |       |                                 | 3/4" NPT                |                         | 316 SS             |                                                                                  |                                   |
| <a href="#">TW09-01</a>                  | 1           | 1.0    | \$08gc: |       | 9-1/4" / 7-1/2"                 | 1/2" NPT                |                         | 304 SS             |                                                                                  |                                   |
| <a href="#">TW09-03</a>                  | 1           | 1.0    | \$08gd: |       |                                 | 1/2" NPT                |                         | 316 SS             |                                                                                  |                                   |
| <a href="#">TW12-01</a>                  | 1           | 1.2    | \$08ge: |       | 12-1/4" / 10-1/2"               | 1/2" NPT                |                         | 304 SS             |                                                                                  |                                   |
| <a href="#">TW12-02</a>                  | 1           | 1.2    | \$08gf: |       |                                 | 3/4" NPT                |                         | 304 SS             |                                                                                  |                                   |
| <a href="#">TW12-03</a>                  | 1           | 1.2    | \$08gg: |       |                                 | 1/2" NPT                |                         | 316 SS             |                                                                                  |                                   |
| <a href="#">TW12-04</a>                  | 1           | 1.2    | \$08gh: |       |                                 | 3/4" NPT                |                         | 316 SS             |                                                                                  |                                   |

# prosense® Thermowells

| Thermowells for Thermocouples -RTDTW Series |             |        |           |                  |                   |                         |                         |                    |                                               |                                                                                           |
|---------------------------------------------|-------------|--------|-----------|------------------|-------------------|-------------------------|-------------------------|--------------------|-----------------------------------------------|-------------------------------------------------------------------------------------------|
| Part Number                                 | Pcs/<br>Pkg | Wt(lb) | Price     | I.D.             | Overall<br>Length | Male Process<br>Threads | Female Probe<br>Threads | Wetted<br>Material | Temperature/<br>Pressure<br>Rating            | Use With                                                                                  |
| <a href="#"><u>RTDTW-06-010-50N</u></a>     | 1           | 0.10   | \$,08f_:  | 7 mm<br>(0.28")  | 113mm (4.4")      | 1/2" NPT                | 1/4" NPT                | 316 SS             | 600°F (315°C)<br>max; 232 psi (16<br>bar) max | XTP-160-N40140F<br>XTP-160-0300F<br>XTP-160-0100C<br>RTD0100-06-010-H<br>CF06-25N fitting |
| <a href="#"><u>RTDTW-06-020-50N</u></a>     | 1           | 0.20   | \$,08f#:  |                  | 213mm (8.4")      |                         |                         |                    |                                               | XTP-260-N40140F<br>XTP-260-0300F<br>XTP-260-0100C<br>RTD0100-06-020-H<br>CF06-25N fitting |
| <a href="#"><u>RTDTW-06-030-50N</u></a>     | 1           | 0.30   | \$,;08f#: |                  | 313mm (12.3")     |                         |                         |                    |                                               | XTP-360-N40140F<br>XTP-360-0300F<br>XTP-360-0100C<br>RTD0100-06-030-H<br>CF06-25N fitting |
| <a href="#"><u>RTDTW-10-010-50N</u></a>     | 1           | 0.10   | \$,08f?:  | 11 mm<br>(0.43") | 92mm (3.62")      | 1/2" NPT                | 1/2" NPT                |                    |                                               | RTD0100-10-010-H<br>CF10-50N fitting                                                      |
| <a href="#"><u>RTDTW-10-030-50N</u></a>     | 1           | 0.22   | Retired   |                  | 292mm (11.48")    |                         |                         |                    |                                               | CF10-50N fitting                                                                          |




Note: Check the chemical compatibility of the thermowell's wetted parts with the medium to be measured.




Note: Response time will be slower when installed in a thermowell. Be sure to install the probe so that it contacts the end of the thermowell for faster response. Thermal compound may be used depending on application

## Probe & Thermowell Assembly Example

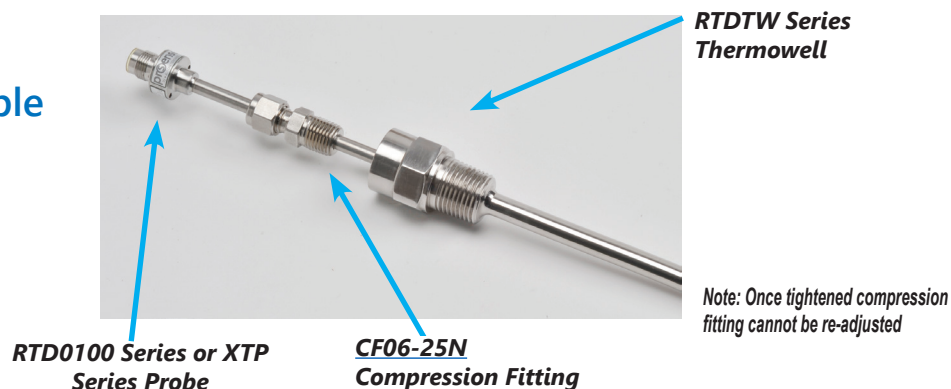

## Spring-loaded Thermocouple or RTD and Thermowell Assembly Example

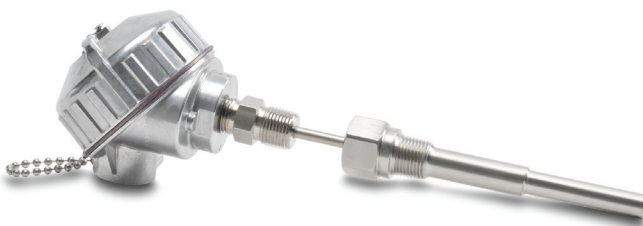


- Using spring-loaded probe design ensures positive tip contact with the bottom of the thermowell.
- Probes with hex nipple thread directly into thermowell. No additional probe mounting fittings are required.

# prosense® Thermowells

## Dimensions

inches [mm]

TW04-XX & TW025-XX

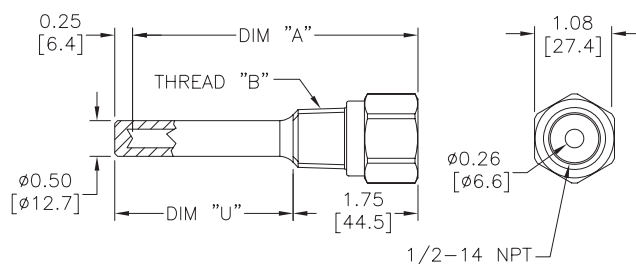

| TABLE A     |             |                |            |
|-------------|-------------|----------------|------------|
| PART NUMBER | DIM "A"     | THREAD "B" NPT | DIM "U"    |
| TW025-01    | 2.50[63.5]  | 1/2-14         | 1.00[25.5] |
| TW025-03    | 2.50[63.5]  | 1/2-14         |            |
| TW04-01     | 4.00[101.6] | 1/2-14         | 2.50[63.5] |
| TW04-02     | 4.00[101.6] | 3/4-14         |            |
| TW04-03     | 4.00[101.6] | 1/2-14         |            |
| TW04-04     | 4.00[101.6] | 3/4-14         |            |


## Dimensions

inches [mm]

TW06-XX

TW09-XX

TW12-XX

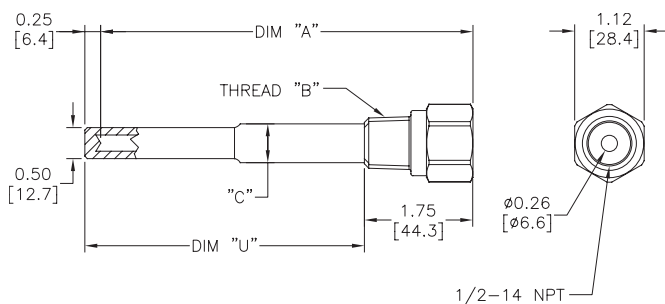


| TABLE A     |              |                |            |              |
|-------------|--------------|----------------|------------|--------------|
| PART NUMBER | DIM "A"      | THREAD "B" NPT | DIM "C"    | DIM "U"      |
| TW06-01     | 6.00[152.4]  | 1/2-14         | 0.63[15.9] | 4.50[114.3]  |
| TW06-02     | 6.00[152.4]  | 3/4-14         | 0.75[19.1] |              |
| TW06-03     | 6.00[152.4]  | 1/2-14         | 0.63[15.9] |              |
| TW06-04     | 6.00[152.4]  | 3/4-14         | 0.75[19.1] | 7.50[190.5]  |
| TW09-01     | 9.00[228.6]  | 1/2-14         | 0.63[15.9] |              |
| TW09-03     | 9.00[228.6]  | 1/2-14         | 0.63[15.9] | 10.50[266.7] |
| TW12-01     | 12.00[304.8] | 1/2-14         | 0.63[15.9] |              |
| TW12-02     | 12.00[304.8] | 3/4-14         | 0.75[19.1] |              |
| TW12-03     | 12.00[304.8] | 1/2-14         | 0.63[15.9] |              |
| TW12-04     | 12.00[304.8] | 3/4-14         | 0.75[19.1] |              |

# prosense® Thermowells

## Dimensions

mm [inches]

### RTDTW-06 Series

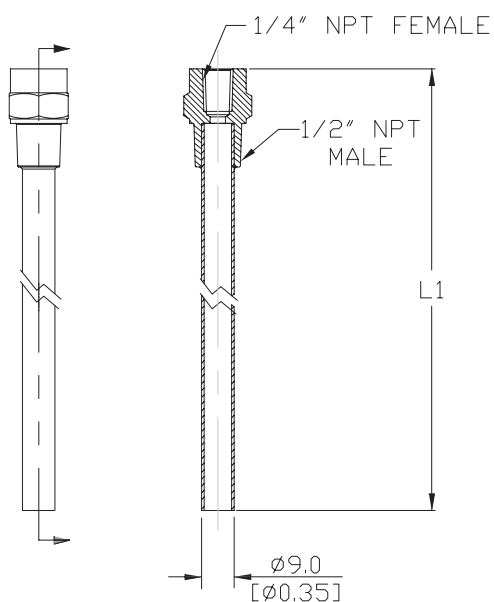


| Part Number                      | L1           |
|----------------------------------|--------------|
| <a href="#">RTDTW-06-010-50N</a> | 113mm [4.4]  |
| <a href="#">RTDTW-06-020-50N</a> | 213mm [8.4]  |
| <a href="#">RTDTW-06-030-50N</a> | 313mm [12.3] |

Torque threads to 40 lb-ft [54.23 Nm]\*

\* Torque values are for reference. Actual torque required for a proper seal of NPT threads is influenced by tolerance, sealant, lubricant, etc.

### RTDTW-10 Series

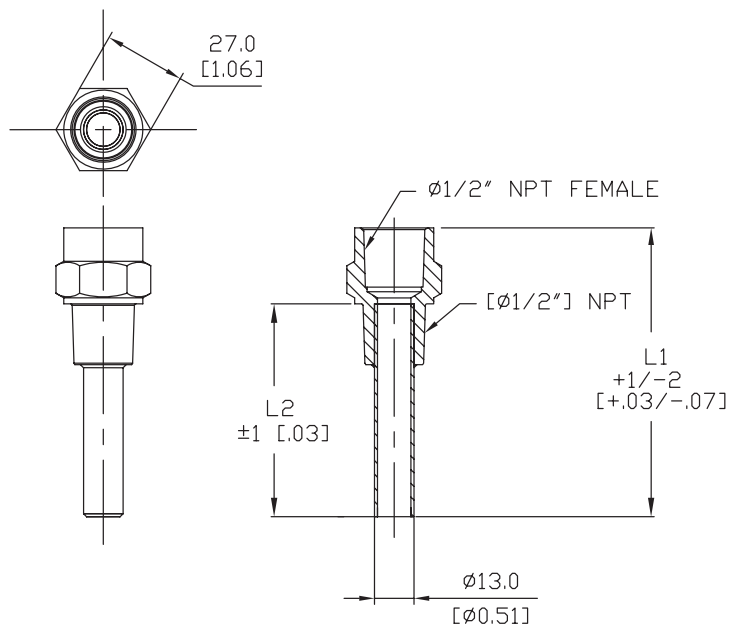

| Part Number                      | L1            | L2           |
|----------------------------------|---------------|--------------|
| <a href="#">RTDTW-10-030-50N</a> | 92mm [3.62]   | 70mm [2.75]  |
| <a href="#">RTDTW-10-050-50N</a> | 292mm [11.48] | 270mm [10.6] |

Torque threads to 40 lb-ft [54.23 Nm]\*

# prosense® Thermowells

## TW Series Thermowells Sensor Compatibility Table

|                                                                                                  | Junction Box                                                                      | Connection Head                                                                   | Hex Nipple                                                                        | Attached Plug                                                                                                           | Lead Wire Transition                                                                                                               | M12                                                                                                                                                                                                                                     | Thermometer                                                                                                                            |
|--------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------|
| <b>Thermowell</b>                                                                                |  |  |  |                                        |                                                  |                                                                                                                                                      |                                                     |
| <b><u>TW025-01</u></b><br><b><u>TW025-03</u></b>                                                 | -                                                                                 | -                                                                                 | -                                                                                 | -                                                                                                                       | -                                                                                                                                  | -                                                                                                                                                                                                                                       | T30-N40160-25C<br>T30-0250-25C<br>T30-50500-25C<br>T30-150750-25C<br>T50-N40160-25A<br>T50-0250-25A<br>T50-50500-25A<br>T50-150750-25A |
| <b><u>TW04-01</u></b><br><b><u>TW04-02</u></b><br><b><u>TW04-03</u></b><br><b><u>TW04-04</u></b> | NTC10K3-JB04-03                                                                   | RTD1-C04-03<br>THMJ-C04-03<br>THMK-C04-03<br>NTC10K3-C04-03                       | RTD1-H04L01-02<br>THMJ-H04L01-02<br>THMK-H04L01-02<br>NTC10K3-H04L01-02           | RTD1-P06-01 w/<br>CF14-50N<br>THMJ-P06-02 w/<br>CF14-50N<br>THMK-P06-02 w/<br>CF14-50N<br>NTC10K3-P06-02 w/<br>CF14-50N | RTD1-T06L06-01 w/<br>CF14-50N<br>THMJ-T06L06-02 w/<br>CF14-50N<br>THMK-T06L06-02 w/<br>CF14-50N<br>NTC10K3-T06L06-02<br>w/CF14-50N | RTD1-50N-100-H<br>RTD0100-06-010-H w/CF14-50N<br>XTP-160-N40140F w/CF14-50N<br>XTP-160-0300F w/CF14-50N<br>XTP-160-0100C w/CF14-50N<br>XTP50N-100-N40140F<br>XTP50N-100-0300F<br>XTP50N-100-0100C<br>ETS50N-100-1001<br>ETS50N-100-1003 | T30-N40160-4C<br>T30-0250-4C<br>T30-50500-4C<br>T30-150750-4C<br>T50-N40160-4A<br>T50-0250-4A<br>T50-50500-4A<br>T50-150750-4A         |
| <b><u>TW06-01</u></b><br><b><u>TW06-02</u></b><br><b><u>TW06-03</u></b><br><b><u>TW06-04</u></b> | NTC10K3-JB06-03                                                                   | RTD1-C06-03<br>THMJ-C06-03<br>THMK-C06-03<br>NTC10K3-C06-03                       | RTD1-H06L01-02<br>THMJ-H06L01-02<br>THMK-H06L01-02<br>NTC10K3-H06L01-02           | RTD1-P12-01 w/<br>CF14-50N<br>THMJ-P12-02 w/<br>CF14-50N<br>THMK-P12-02 w/<br>CF14-50N<br>NTC10K3-P12-02 w/<br>CF14-50N | RTD1-T12L06-01 w/<br>CF14-50N<br>THMJ-T12L06-02 w/<br>CF14-50N<br>THMK-T12L06-02 w/<br>CF14-50N<br>NTC10K3-T12L06-02<br>w/CF14-50N | RTD1-50N-150-H<br>RTD0100-06-020-H w/CF14-50N<br>XTP-260-N40140F w/CF14-50N<br>XTP-260-0300F w/CF14-50N<br>XTP-260-0100C w/CF14-50N<br>XTP50N-150-N40140F<br>XTP50N-150-0300F<br>XTP50N-150-0100C<br>ETS50N-150-1001<br>ETS50N-150-1003 | T30-N40160-6C<br>T30-0250-6C<br>T30-50500-6C<br>T30-150750-6C<br>T50-N40160-6A<br>T50-0250-6A<br>T50-50500-6A<br>T50-150750-6A         |
| <b><u>TW09-01</u></b><br><b><u>TW09-03</u></b>                                                   | -                                                                                 | -                                                                                 | -                                                                                 | -                                                                                                                       | -                                                                                                                                  | -                                                                                                                                                                                                                                       | T50-N40160-9A<br>T50-0250-9A<br>T50-50500-9A<br>T50-150750-9A                                                                          |
| <b><u>TW12-01</u></b><br><b><u>TW12-02</u></b><br><b><u>TW12-03</u></b><br><b><u>TW12-04</u></b> | NTC10K3-JB12-03                                                                   | RTD1-C12-03<br>THMJ-C12-03<br>THMK-C12-03<br>NTC10K3-C12-03                       | RTD1-H12L01-02<br>THMJ-H12L01-02<br>THMK-H12L01-02<br>NTC10K3-H12L01-02           | RTD1-P18-01 w/<br>CF14-50N<br>THMJ-P18-02 w/<br>CF14-50N<br>THMK-P18-02 w/<br>CF14-50N<br>NTC10K3-P18-02 w/<br>CF14-50N | RTD1-T18L06-01 w/<br>CF14-50N<br>THMJ-T18L06-02 w/<br>CF14-50N<br>THMK-T18L06-02 w/<br>CF14-50N<br>NTC10K3-T18L06-02<br>w/CF14-50N | RTD0100-06-030-H w/CF14-50N<br>XTP-360-N40140F w/CF14-50N<br>XTP-360-0300F w/CF14-50N<br>XTP-360-0100C w/CF14-50N                                                                                                                       | -                                                                                                                                      |

 Note: Response time will be slower when installed in a thermowell. Be sure to install the probe so that it contacts the end of the thermowell for faster response. Thermal compound may be used depending on application.

# prosense® Thermowells Sanitary Clean-in-Place (CIP)



STW06-01

## Overview

- Sanitary Clean-In-Place 3-A approved thermowells allow the use of standard temperature sensors in hygienic applications
- All wetted parts are 316 stainless steel
- Surface finish that meets or exceeds 32µin Ra
- Up to 1500/1200 psi (103/83 bar) at 70/250 °F (21/121 °C) dependent on clamp and seal assembly.
- Bore diameter of 0.260" to accommodate sensing probes with a 0.252" maximum diameter
- Probes with integral 1/2" male NPT process threads mount directly into the thermowell. Probes without threads require a compression fitting with 1/2" male NPT threads.



| Thermowells Sanitary Clean-in-Place (CIP) |         |        |           |        |                           |                    |                      |                     |                                |
|-------------------------------------------|---------|--------|-----------|--------|---------------------------|--------------------|----------------------|---------------------|--------------------------------|
| Part Number                               | Pcs/Pkg | Wt(lb) | Price     | I.D.   | Overall Length/"U" Length | Process Connection | Female Probe Threads | Wetted Material     | Use With                       |
| <a href="#"><u>STW04-01</u></a>           | 1       | 0.75   | \$054k7:  | ø0.260 | 4-1/4" / 2-1/2"           | 1-1/2" tri-clamp   | 1/2" NPT             | 316 stainless steel | See Sensor Compatibility Table |
| <a href="#"><u>STW06-01</u></a>           | 1       | 0.88   | \$054kc:  |        | 6-1/4" / 4-1/2"           |                    |                      |                     |                                |
| <a href="#"><u>STW12-01</u></a>           | 1       | 1.13   | \$054ke:  |        | 12-1/4" / 10-1/2"         |                    |                      |                     |                                |
| <a href="#"><u>STW04-02</u></a>           | 1       | 0.75   | \$054k8:  |        | 4-1/4" / 2-1/2"           | 2" tri-clamp       |                      |                     |                                |
| <a href="#"><u>STW06-02</u></a>           | 1       | 0.88   | \$054kd:  |        | 6-1/4" / 4-1/2"           |                    |                      |                     |                                |
| <a href="#"><u>STW12-02</u></a>           | 1       | 1.13   | \$;054kf: |        | 12-1/4" / 10-1/2"         |                    |                      |                     |                                |




Note: Check the chemical compatibility of the thermowell's wetted parts with the medium to be measured.



Note: Response time will be slower when installed in a thermowell. Be sure to install the probe so that it contacts the end of the thermowell for faster response. Thermal compound may be used depending on application

## Probe & Thermowell Assembly Example

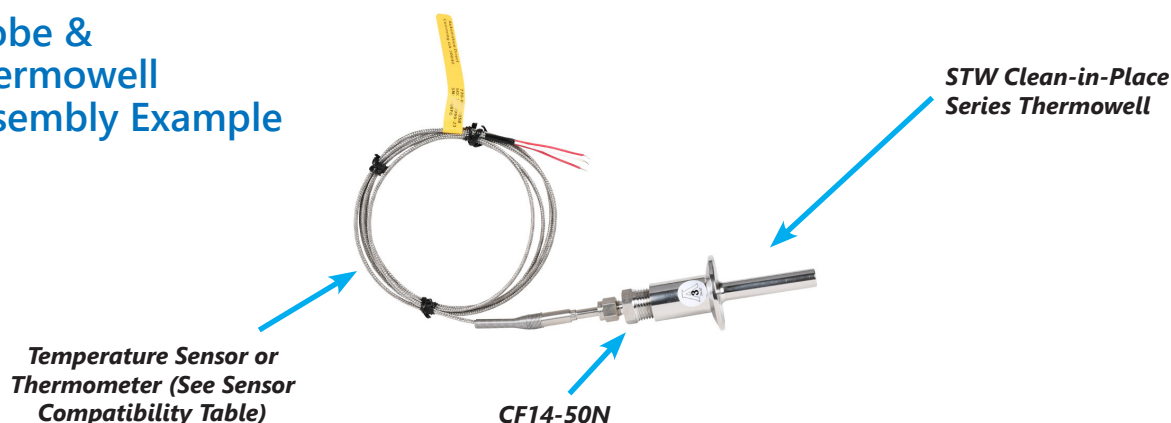

# proSense® Thermowells Sanitary Clean-in-Place (CIP)

## Spring-loaded Thermocouple or RTD and Thermowell Assembly Example



- Using spring-loaded probe design ensures positive tip contact with the bottom of the thermowell.
- Probes with hex nipple thread directly into thermowell. No additional probe mounting fittings are required.

## Dimensions

inches [mm]

STWXX-XX

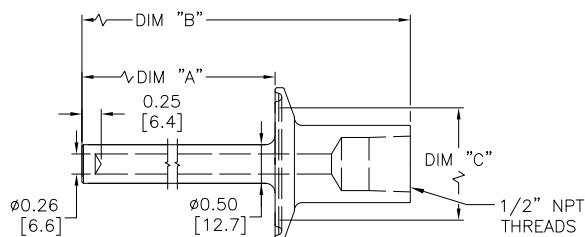


TABLE A

| PART NUMBER | DIM "A"      | DIM "B"      | DIM "C"    |
|-------------|--------------|--------------|------------|
| STW04-01    | 2.50[63.5]   | 4.25[108.0]  | 1.50[38.1] |
| STW06-01    | 4.50[114.3]  | 6.25[158.8]  | 1.50[38.1] |
| STW12-01    | 10.50[266.8] | 12.25[311.3] | 1.50[38.1] |
| STW04-02    | 2.50[63.5]   | 4.25[108.0]  | 2.00[50.8] |
| STW06-02    | 4.50[114.3]  | 6.25[158.5]  | 2.00[50.8] |
| STW12-02    | 10.50[266.8] | 12.25[311.3] | 2.00[50.8] |



# Thermowells Sanitary Clean-in-Place (CIP)

| Thermowells Sanitary Clean-in-Place (CIP) Sensors Compatibility Table |                                                                                   |                                                                                   |                                                                                   |                                                                                                                         |                                                                                                 |                                                                                                                                                                                                                                         |                                                                                                                                |
|-----------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------|
|                                                                       | Junction Box                                                                      | Connection Head Sensor                                                            | Hex Nipple Sensor                                                                 | Attached Plug Sensor                                                                                                    | Lead Wire Transition Sensor                                                                     | M12 Sensor                                                                                                                                                                                                                              | Thermometer                                                                                                                    |
| <b>Thermowell</b>                                                     |  |  |  |                                        |               |                                                                                                                                                      |                                             |
| <b>STW04-01</b>                                                       | NTC10K3-JB04-03                                                                   | RTD1-C04-03<br>THMJ-C04-03<br>THMK-C04-03<br>NTC10K3-C04-03                       | RTD1-H04L01-02<br>THMJ-H04L01-02<br>THMK-H04L01-02<br>NTC10K3-H04L01-02           | RTD1-P06-01 w/<br>CF14-50N<br>THMJ-P06-02 w/<br>CF14-50N<br>THMK-P06-02 w/<br>CF14-50N<br>NTC10K3-P06-02 w/<br>CF14-50N | RTD1-T06L06-01 w/<br>CF14-50N<br>THMJ-T06L06-02 w/<br>CF14-50N<br>THMK-T06L06-02 w/<br>CF14-50N | RTD1-50N-100-H<br>RTD0100-06-010-H w/CF14-50N<br>XTP-160-N40140F w/CF14-50N<br>XTP-160-0300F w/CF14-50N<br>XTP-160-0100C w/CF14-50N<br>XTP50N-100-N40140F<br>XTP50N-100-0300F<br>XTP50N-100-0100C<br>ETS50N-100-1001<br>ETS50N-100-1003 | T30-N40160-4C<br>T30-0250-4C<br>T30-50500-4C<br>T30-150750-4C<br>T50-N40160-4A<br>T50-0250-4A<br>T50-50500-4A<br>T50-150750-4A |
| <b>STW06-01</b>                                                       | NTC10K3-JB06-03                                                                   | RTD1-C06-03<br>THMJ-C06-03<br>THMK-C06-03<br>NTC10K3-C06-03                       | RTD1-H06L01-02<br>THMJ-H06L01-02<br>THMK-H06L01-02<br>NTC10K3-H06L01-02           | RTD1-P12-01 w/<br>CF14-50N<br>THMJ-P12-02 w/<br>CF14-50N<br>THMK-P12-02 w/<br>CF14-50N<br>NTC10K3-P12-02 w/<br>CF14-50N | RTD1-T12L06-01 w/<br>CF14-50N<br>THMJ-T12L06-02 w/<br>CF14-50N<br>THMK-T12L06-02 w/<br>CF14-50N | RTD1-50N-150-H<br>RTD0100-06-020-H w/CF14-50N<br>XTP-260-N40140F w/CF14-50N<br>XTP-260-0300F w/CF14-50N<br>XTP-260-0100C w/CF14-50N<br>XTP50N-150-N40140F<br>XTP50N-150-0300F<br>XTP50N-150-0100C<br>ETS50N-150-1001<br>ETS50N-150-1003 | T30-N40160-6C<br>T30-0250-6C<br>T30-50500-6C<br>T30-150750-6C<br>T50-N40160-6A<br>T50-0250-6A<br>T50-50500-6A<br>T50-150750-6A |
| <b>STW12-01</b>                                                       | NTC10K3-JB12-03                                                                   | RTD1-C12-03<br>THMJ-C12-03<br>THMK-C12-03<br>NTC10K3-C12-03                       | RTD1-H12L01-02<br>THMJ-H12L01-02<br>THMK-H12L01-02<br>NTC10K3-H12L01-02           | RTD1-P18-01 w/<br>CF14-50N<br>THMJ-P18-02 w/<br>CF14-50N<br>THMK-P18-02 w/<br>CF14-50N<br>NTC10K3-P18-02 w/<br>CF14-50N | RTD1-T18L06-01 w/<br>CF14-50N<br>THMJ-T18L06-02 w/<br>CF14-50N<br>THMK-T18L06-02 w/<br>CF14-50N | RTD0100-06-030-H w/CF14-50N<br>XTP-360-N40140F w/CF14-50N<br>XTP-360-0300F w/CF14-50N<br>XTP-360-0100C w/CF14-50N                                                                                                                       | -                                                                                                                              |
| <b>STW04-02</b>                                                       | NTC10K3-JB04-03                                                                   | RTD1-C04-03<br>THMJ-C04-03<br>THMK-C04-03<br>NTC10K3-C04-03                       | RTD1-H04L01-02<br>THMJ-H04L01-02<br>THMK-H04L01-02<br>NTC10K3-H04L01-02           | RTD1-P06-01 w/<br>CF14-50N<br>THMJ-P06-02 w/<br>CF14-50N<br>THMK-P06-02 w/<br>CF14-50N<br>NTC10K3-P06-02 w/<br>CF14-50N | RTD1-T06L06-01 w/<br>CF14-50N<br>THMJ-T06L06-02 w/<br>CF14-50N<br>THMK-T06L06-02 w/<br>CF14-50N | RTD1-50N-100-H<br>RTD0100-06-010-H w/CF14-50N<br>XTP-160-N40140F w/CF14-50N<br>XTP-160-0300F w/CF14-50N<br>XTP-160-0100C w/CF14-50N<br>XTP50N-100-N40140F<br>XTP50N-100-0300F<br>XTP50N-100-0100C<br>ETS50N-100-1001<br>ETS50N-100-1003 | T30-N40160-4C<br>T30-0250-4C<br>T30-50500-4C<br>T30-150750-4C<br>T50-N40160-4A<br>T50-0250-4A<br>T50-50500-4A<br>T50-150750-4A |
| <b>STW06-02</b>                                                       | NTC10K3-JB06-03                                                                   | RTD1-C06-03<br>THMJ-C06-03<br>THMK-C06-03<br>NTC10K3-C06-03                       | RTD1-H06L01-02<br>THMJ-H06L01-02<br>THMK-H06L01-02<br>NTC10K3-H06L01-02           | RTD1-P12-01 w/<br>CF14-50N<br>THMJ-P12-02 w/<br>CF14-50N<br>THMK-P12-02 w/<br>CF14-50N<br>NTC10K3-P12-02 w/<br>CF14-50N | RTD1-T12L06-01 w/<br>CF14-50N<br>THMJ-T12L06-02 w/<br>CF14-50N<br>THMK-T12L06-02 w/<br>CF14-50N | RTD1-50N-150-H<br>RTD0100-06-020-H w/CF14-50N<br>XTP-260-N40140F w/CF14-50N<br>XTP-260-0300F w/CF14-50N<br>XTP-260-0100C w/CF14-50N<br>XTP50N-150-N40140F<br>XTP50N-150-0300F<br>XTP50N-150-0100C<br>ETS50N-150-1001<br>ETS50N-150-1003 | T30-N40160-6C<br>T30-0250-6C<br>T30-50500-6C<br>T30-150750-6C<br>T50-N40160-6A<br>T50-0250-6A<br>T50-50500-6A<br>T50-150750-6A |
| <b>STW12-02</b>                                                       | NTC10K3-JB12-03                                                                   | RTD1-C12-03<br>THMJ-C12-03<br>THMK-C12-03<br>NTC10K3-C12-03                       | RTD1-H12L01-02<br>THMJ-H12L01-02<br>THMK-H12L01-02<br>NTC10K3-H12L01-02           | RTD1-P18-01 w/<br>CF14-50N<br>THMJ-P18-02 w/<br>CF14-50N<br>THMK-P18-02 w/<br>CF14-50N<br>NTC10K3-P18-02 w/<br>CF14-50N | RTD1-T18L06-01 w/<br>CF14-50N<br>THMJ-T18L06-02 w/<br>CF14-50N<br>THMK-T18L06-02 w/<br>CF14-50N | RTD0100-06-030-H w/CF14-50N<br>XTP-360-N40140F w/CF14-50N<br>XTP-360-0300F w/CF14-50N<br>XTP-360-0100C w/CF14-50N                                                                                                                       | -                                                                                                                              |



Note: Response time will be slower when installed in a thermowell. Be sure to install the probe so that it contacts the end of the thermowell for faster response. Thermal compound may be used depending on application.