

Operating instructions
RFID compact unit

EN

RFID-SA-HF-EIP



Contents

1	Preliminary note	3
1.1	Symbols used	3
1.2	Warnings used	3
1.3	Legal and copyright information	3
1.4	Open source information	4
2	Safety instructions	5
3	Intended use	6
4	Items supplied	7
5	Function	8
5.1	Device overview	8
6	Installation	9
6.1	Installation instructions for devices	9
6.2	Installation instructions for ID tags	9
6.3	Avoiding interference	9
6.4	Mechanical design	10
6.5	Mounting options	10
6.5.1	Installation with angle bracket RFID-SA-BA1	10
6.6	Mounting distances	11
6.7	Positioning of the ID tags	12
7	Electrical connection	13
7.1	Wiring	13
7.2	Connecting the functional earth	14
8	Operating and display elements	15
8.1	Display elements RFID-SA-HF-EIP	16
9	Maintenance, repair and disposal	18
10	Approvals / standards	19

1 Preliminary note

You will find instructions, technical data, approvals and further information using the QR code on the unit / packaging or at www.AutomationDirect.com

1.1 Symbols used

- ✓ Requirement
- ▶ Instructions
- ▷ Reaction, result
- [...] Designation of keys, buttons or indications
- Cross-reference
-  Important note
Non-compliance may result in malfunction or interference.
-  Information
Supplementary note

1.2 Warnings used

ATTENTION

Warning of damage to property

1.3 Legal and copyright information

© All rights reserved by AutomationDirect.com. No part of these instructions may be reproduced and used without the consent of AutomationDirect.com.

All product names, pictures, companies or other brands used on our pages are the property of the respective rights owners.

- AS-i is the property of AS-International Association, (→ www.as-interface.net)
- CAN is the property of Robert Bosch GmbH, Germany (→ www.bosch.de)
- CAN is the property of CiA (CAN in Automation e.V.), Germany (→ www.can-cia.org)
- CODESYS™ is the property of CODESYS GmbH, Germany (→ www.codesys.com)
- DeviceNet™ is the property of ODVA™ (Open DeviceNet Vendor Association), USA (→ www.odva.org)
- EtherNet/IP® is the property of → ODVA™
- EtherCAT® is a registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.
- IO-Link® is the property of PROFIBUS Nutzerorganisation e.V., Germany (→ www.io-link.com)
- ISOBUS is the property of AEF - Agricultural Industry Electronics Foundation e.V., Germany (→ www.aef-online.org)
- Microsoft® is the property of Microsoft Corporation, USA (→ www.microsoft.com)
- Modbus® is the property of Schneider Electric SE, France (→ www.schneider-electric.com)
- PROFIBUS® is the property of PROFIBUS Nutzerorganisation e.V., Germany (→ www.profibus.com)
- PROFINET® is the property of → PROFIBUS Nutzerorganisation e.V., Deutschland

- Windows® is the property of → Microsoft Corporation, USA

1.4 Open source information

This product can contain Free Software or Open Source Software from various software developers which is subject to the following licenses: General Public License version 1, version 2 and version 3 (General Public License version 3 in conjunction with the GNU Compiler Collection Runtime Library Exception version 3.1), Lesser General Public License version 2.1, Lesser General Public License version 3, Berkeley Software Distribution (BSD-2-Clause, BSD-3-Clause, BSD-4-Clause), MIT-License (MIT), Python Software Foundation License 2.0, Pearl Artistic License and Artistic License 2.0, Microsoft Public License, Apache Software License Version 1.0, 1.1 und 2.0, ISC License, libpng License, zlib Licence, the Academic Free License version 2.1. For the components subject to the General Public License in their respective versions the following applies:

This program is free software: you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation. If version 1 applies to the software: either version 1 of the License or (at your option) any later version; if version 2 (or 2.1) applies to the software: either version 2 (or 2.1) of the License or (at your option) any later version; if version 3 applies to the software: either version 3 of the License or (at your option) any later version. The following disclaimer of the software developers applies to the software components that are subject to the General Public License or the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License and the GNU Lesser General Public License for more details.

The responsibility of AutomationDirect.com for AutomationDirect.com products, in the case of product-specific software, remains unaffected by the above disclaimer. Please note that the firmware for the Automation Direct products is in some cases provided free of charge.

The price of the AutomationDirect.com products has then to be paid for the respective device itself (hardware) and not for the firmware. For the latest information on the license agreement for your product please visit www.AutomationDirect.com

For binaries that are licensed under any version of the GNU General Public License (GPL) or the GNU LGPL you may obtain the complete corresponding source code of the GPL software from us by sending a written request to AutomationDirect.com.

This offer is valid to anyone in receipt of this information. This offer is valid for at least three years (from the date you received the GPL/LGPL covered code).

2 Safety instructions

- The unit described is a subcomponent for integration into a system.
 - The system architect is responsible for the safety of the system.
 - The system architect undertakes to perform a risk assessment and to create documentation in accordance with legal and normative requirements to be provided to the operator and user of the system. This documentation must contain all necessary information and safety instructions for the operator, the user and, if applicable, for any service personnel authorised by the architect of the system.
- Read this document before setting up the product and keep it during the entire service life.
- The product must be suitable for the corresponding applications and environmental conditions without any restrictions.
- Only use the product for its intended purpose (→ Intended use).
- If the operating instructions or the technical data are not adhered to, personal injury and/or damage to property may occur.
- The manufacturer assumes no liability or warranty for any consequences caused by tampering with the product or incorrect use by the operator.
- Installation, electrical connection, set-up, operation and maintenance of the product must be carried out by qualified personnel authorised by the machine operator.
- Protect units and cables against damage.

3 Intended use

The device is composed of an evaluation unit and an integrated RFID read/write head and provides the following functions

- read and write ID tags which conform to the system without contact,
- can be configured via a web server,
- RFID-SA-HF-EIP: communication with the control level via EtherNet/IP,

Possible applications:

- Material flow control in production lines
- Warehouse management by the automatic detection of stored products
- Tank management, order picking or product tracking.



The device may only be used under the operating conditions specified in the data sheet.

4 Items supplied

- RFID compact unit
- Package insert general information / radio approval



The device is supplied without installation and connection accessories.

Available accessories: www.AutomationDirect.com

The optimum function is not ensured when using components from other manufacturers.

5 Function

The ID tags are operated passively without battery. The energy required for operation is provided by the compact RFID device.


The energy is transferred via an electromagnetic wave. The receiving antenna takes up the wave and transforms it into voltage which supplies the data carrier with energy.

The radiated power is specified in ERP (Effective Radiated Power) and in EIRP (Effective Isotropic Radiated Power) for the devices. The respective value can be converted using the following formula:

$$P \text{ [dBm EIRP]} = P \text{ [dBm ERP]} + 2.15 \text{ [dB]}$$

5.1 Device overview

RFID-SA-HF-EIP

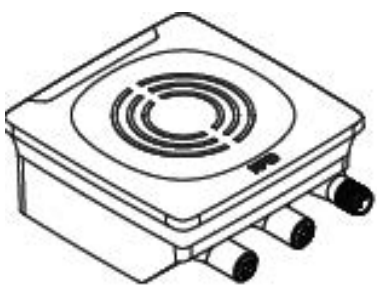	Article number:	RFID-SA-HF-EIP
	Function:	RFID compact unit
	Type designation:	13.56 MHz - ISO 15693
	Type:	rectangular

6 Installation

ATTENTION

Radiated electromagnetic field strengths

- ▷ The device sends ultrahigh frequency electromagnetic waves. It complies with the country-specific limit values for the public and workers.
- ▶ Disconnect the device in the vicinity of medical equipment.

6.1 Installation instructions for devices



Devices installed next to each other interfere if they are not configured correspondingly.



When mounting several RFID units adhere to the minimum distances between the systems.



Installing a unit in or on metal reduces the read and write distance.



Device performance can be affected if positioned in the immediate vicinity of powerful HF emission sources such as welding transformers or converters.

6.2 Installation instructions for ID tags



For installation in and on metal use the ID tags provided for this purpose.



Position the ID tag in the area of the sensing face. When doing so, the angle of aperture and the operating distance must be adhered to (→ Data sheet of the device).



Align the axes of the RFID device and the ID-TAG in the same way.

6.3 Avoiding interference

The device generates a modulated electromagnetic field with a frequency of 13.56 MHz.

Interference in data communication is avoided if there are no other RFID HF devices in the vicinity. If there are other RFID HF devices in the vicinity:


- ▶ The mounting distances between the devices should be as large as possible.
- ▶ Use the devices in alternating operation.
- ▶ Switch the HF field of the device on/off.



The HF field is attenuated if there are people or objects (cables, metal profiles, etc.) between the device and ID tag.

- ▶ Keep the area between the device and ID tag clear during reading or writing.

6.4 Mechanical design

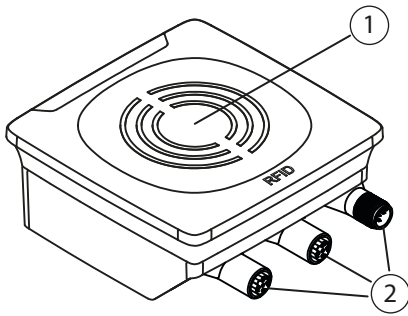

1 Sensing face

2 Connections (can be rotated by 270°)


6.5 Mounting options




The device can be mounted without the accessories.

- ▶ For installation, please use the threaded sleeves on the back of the device.
- ▷ The required screws are not supplied with the device.

6.5.1 Installation with angle bracket RFID-SA-BA1

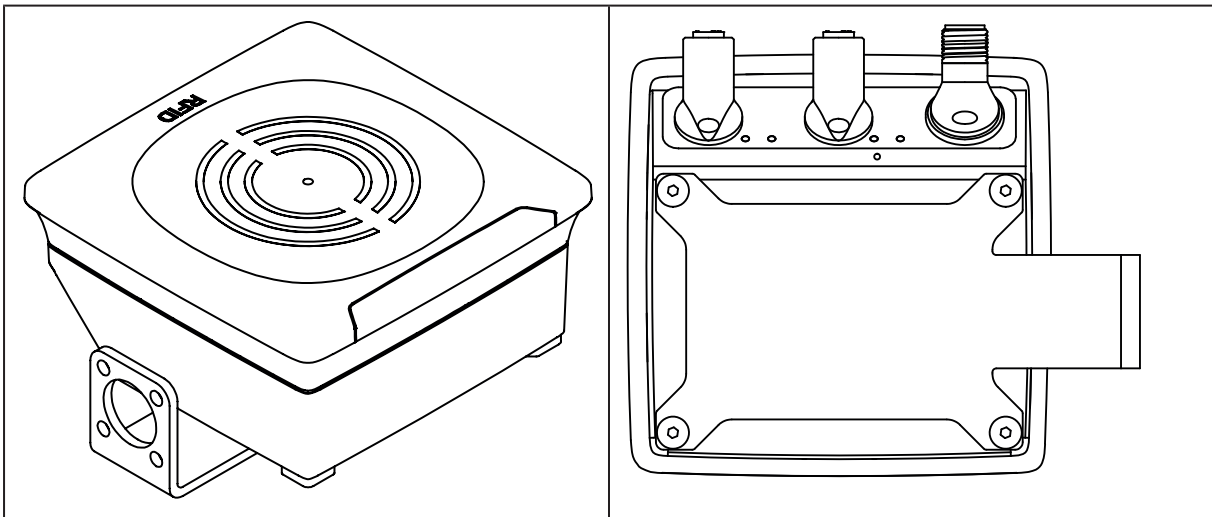

6.6 Mounting distances

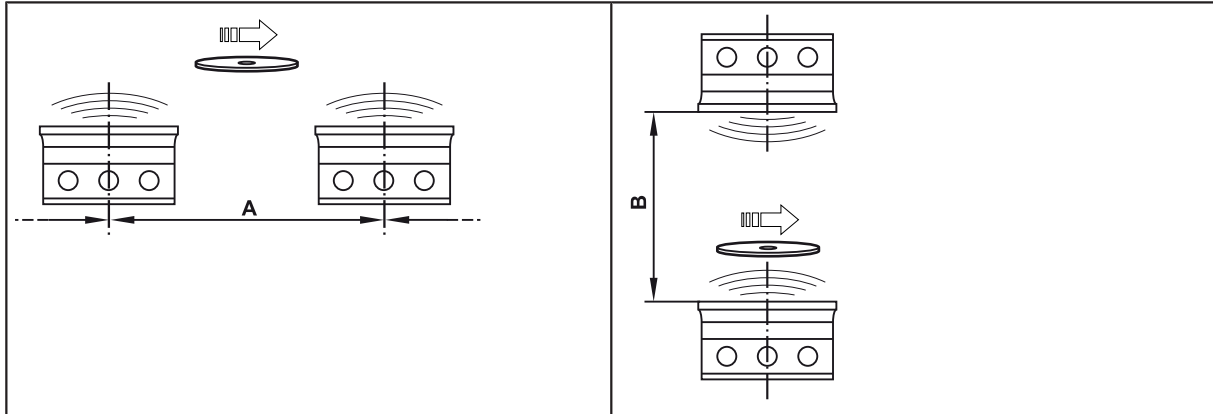

Operating mode	Distance side (A)	Distance front (B)
Read and write (at 100% transmitter power)	≥ 850 mm	≥ 600 mm



Interference in data communication is avoided if there are no other RFID HF devices in the vicinity. If there are other RFID HF devices in the vicinity:

- ▶ The mounting distances between the devices should be as large as possible.
- ▶ Use the devices in alternating operation.
- ▶ Switch the HF field of the device on/off.

6.7 Positioning of the ID tags

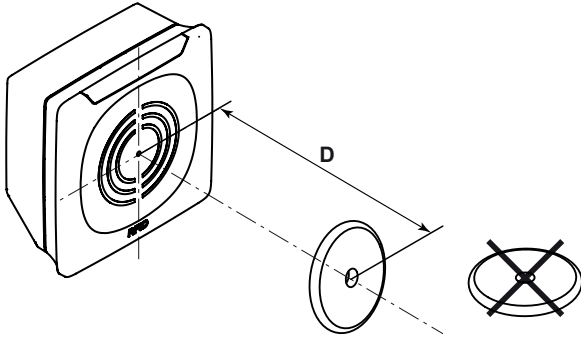


Fig. 1: Position the ID tag

- ▶ Align the ID tag on the antenna central axis.
- ▷ The distance “D” is indicated in the data sheet.



ID tags are also detected on the back of the device.

7 Electrical connection



The device must be connected by a qualified electrician.

Device of protection class III (PC III).

The electrical supply must only be made via PELV/SELV circuits.

- ▶ Disconnect power before connecting the device.

ATTENTION

The IP rating indicated in the data sheet is only guaranteed if the M12 connectors are firmly screwed. The device can be damaged by insufficiently tightened M12 connectors.

- ▶ Screw the M12 connector to the device applying 1 to 1.5 Nm.

7.1 Wiring

PWR voltage supply

- ▶ Connect the device to a voltage supply using an M12 connection cable.

	Pin assignment	Wiring
	1	24 V DC
	2	Digital input / output 2
	3	0 V
	4	Digital input / output 1
	5	not connected

Ethernet

- ▶ Connect the device to a PC using a suitable M12 Ethernet connection cable.

	Pin assignment	Wiring
	1	TD+
	2	RD+
	3	TD-
	4	RD-



For trouble-free operation:

- ▶ use a shielded M12 Ethernet connection cable.

The following parameters are preset at the factory:

Parameter	Preset
IP address	192.168.0.79
Gateway address	192.168.0.100
Subnet mask	255.255.255.0
Auto-negotiation	On
DHCP	Off

The settings can be changed via the unit's web server or via a connected PC.



Reset Ethernet parameters

- ▷ Reset the Ethernet parameters to factory setting:
 - ▶ Remove all cable connections from the device.
 - ▶ Insert an electrically conductive bridge between pin 2 and pin 4 on the connection “voltage supply PWR”.
 - ▶ Connect the device to the voltage supply.
 - ▷ The LEDs of the signal bar (yellow) are on one after the other. Then LED 4 of the signal bar (yellow) flashes at 8 Hz.
 - ▶ As soon as the LEDs of the signal bar (yellow) flash at 8 Hz, disconnect the unit.
 - ▶ Remove the bridge.
 - ▶ Connect the device to the voltage supply.
 - ▷ The Ethernet parameters are reset.

7.2 Connecting the functional earth



For trouble-free operation:

- ▶ Connect the device to an earth potential free from external voltage.

Connect the mounting plate to functional earth.

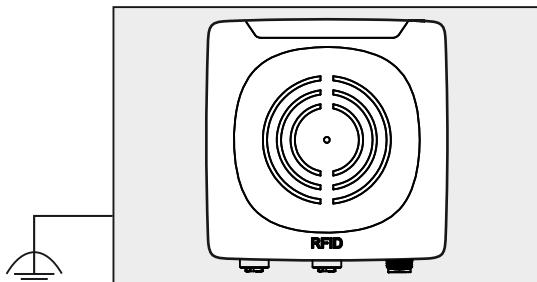


Fig. 2: Mounting plate with mounted device

When the device is mounted on a mounting plate:

- ▶ Connect one of the 4 mounting bolts on the back of the device to the mounting plate.
- ▶ Connect the mounting plate to an earth potential free from external voltage.

8 Operating and display elements

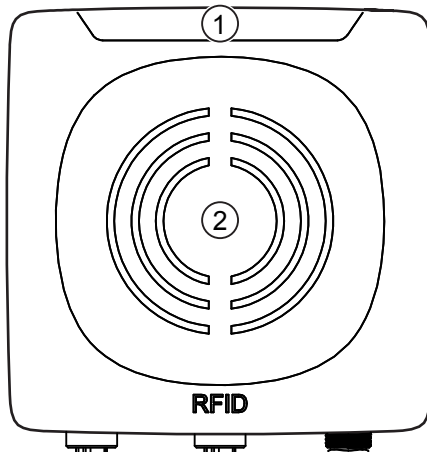


Fig. 3: Operating and display elements

- 1 1x LED power (green)
- 4x LED signal bar (yellow)
- 2x LED field bus (green/red)

2 Sensing face

The following table applies to all units.

State	Power LED (green)	LED signal bar (yellow)
Voltage supply OK ($18\text{ V} \leq \text{UPWR} \leq 36\text{ V}$)	on	off
Antenna (HF field) is deactivated	flashes at 2 Hz	off
ID tag read / written successfully	on	flashes twice
ID tag read / written incorrectly	on	flashing quickly



The maximum receive signal strength depends on the type of the ID tag.



If the ID tag has a high receive signal strength, all LEDs of the signal bar are on.

▷ The response of the LEDs of the signal bar is adjustable.

LED LINK/ACT ETH 1 / ETH 2

LED green	LED yellow	State	Note
off	off	No connection to an Ethernet counterpart.	Link status: "No Link"
on	off	Connection to Ethernet counterpart exists, no data exchange.	Link status: "Link", "No traffic"
on	flashes sporadically	Connection to Ethernet counterpart exists, data exchange running.	Link status: "Link", "Traffic"

Special device LED indicators

LED	State	Note
Power LED (green) on LEDs of signal bar (yellow) flashing at 8 Hz.	Device is in the service mode "emergency system started".	A firmware update is necessary and can be executed via the web server.
Power LED (green) on LEDs of signal bar (yellow) flashing at 8 Hz.	Major error, device has to be returned.	Hardware fault or permanent data in the device are corrupt.

LED	State	Note
Power LED (green) on The LEDs of the signal bar (yellow) are on one after the other. Then LED 4 of the signal bar (yellow) flashes at 8 Hz.	Reset to factory settings.	-

8.1 Display elements RFID-SA-HF-EIP

The following tables only apply to the RFID-SA-HF-EIP device. **LED Mod (module status)**

LED red	LED green	State	Note
off	off	no voltage supply	Verify voltage supply.
off	flashes	Ready for operation	The device is not configured. There is no exchange of data: <ul style="list-style-type: none"> ▶ Check the connection of the Ethernet/ IP scanner. ▶ Check the parameter setting of the configuration assembly.

LED red	LED green	State	Note
off	on	Normal operation	Connection to the EtherNet/IP scanner is established. The device is configured. The data transfer is running.
flashes	off	Minor error	A connection to the EtherNet/IP scanner was not established: <ul style="list-style-type: none"> ▶ Verify voltage supply. ▶ Check the configuration of the unit.
on	off	Major error	Software / hardware error of the device: <ul style="list-style-type: none"> ▶ Reboot the device. ▷ If the error remains, send the device for service.
flashes	flashes	Self-test	Starting phase of the device.

LED Net (network status)

LED red	LED green	State	Note
off	off	No IP address or no voltage supply	<ul style="list-style-type: none"> ▶ Verify voltage supply. ▶ If DHCP is activated, check the accessibility of the DHCP server.
off	flashes	No connection	The device has received an IP address. An EtherNet/IP connection was not established. <ul style="list-style-type: none"> ▶ Check the configuration of the device via EtherNet/IP scanner.
off	on	Connection exists	At least one EtherNet/IP connection to the device was established.
flashes	off	Timeout of the connection	A timeout was found with one of the existing EtherNet/IP connections. <ul style="list-style-type: none"> ▶ Check the status of the connection in the EtherNet/IP scanner.
on	off	The IP address already exists	The same IP address as that of the device was detected in the EtherNet/IP network. <ul style="list-style-type: none"> ▶ Activate DHCP.
flashes	flashes	Self-test	Starting phase of the device.

9 Maintenance, repair and disposal

The unit is maintenance-free.

- ▶ Contact AutomationDirect.com in case of malfunction.
- ▶ Do not open the housing as the unit does not contain any components which can be maintained by the user. The unit must only be repaired by the manufacturer.
- ▶ Clean the device using a dry cloth.
- ▶ Dispose of the unit in accordance with the national environmental regulations.

10 Approvals / standards

The EU Declaration of Conformity, approvals and country-specific certificates are available at:
→ www.AutomationDirect.com

Notes relevant for approval: → Package insert