

KEYPAD OPERATION AND QUICK-START



TABLE OF CONTENTS

Chapter 3: Keypad Operation and Quickstart

<i>The DURApulse GS10 Digital Keypad</i>	<i>3-2</i>
<i>Keypad Indicator LEDs.</i>	<i>3-3</i>
<i>GS10 Keypad Operation</i>	<i>3-4</i>
<i>GS10 Keypad Function Examples.</i>	<i>3-4</i>
<i>Main Page</i>	<i>3-5</i>
<i>Frequency Command Settings</i>	<i>3-5</i>
<i>Parameter Settings</i>	<i>3-6</i>
<i>Setting Direction.</i>	<i>3-7</i>
<i>Application Settings.</i>	<i>3-7</i>
<i>Reference Table for Digital LED Character Display</i>	<i>3-9</i>








THE DURAPULSE GS10 DIGITAL KEYPAD

The GS10 drives come with a digital keypad equipped with six buttons and a potentiometer. You can use the digital keypad to control the drive, set parameters, change drive modes, etc. For more detailed control options, you can use GSoft2 software by connecting to a computer via USB (see Chapter 7).

It is also possible to use the GS4-KPD with the GS10 for expanded keypad functionality. For more about using the GS4-KPD, please see “Optional Advanced Keypad” on page A-37.



GS10 Digital Keypad

Descriptions of Keypad Functions	
	RUN Key <ul style="list-style-type: none"> Valid only when the source of operation command is from the keypad. RUN can be pressed even when drive is in process of stopping. When in “LOCAL” mode, RUN is valid only when the source of operation command is from the keypad.
	STOP/RESET Key <i>This key has the highest processing priority in any situation.</i> <ul style="list-style-type: none"> When the drive receives a STOP command, whether the drive is in operation or stop status, the drive will execute a “STOP” command. The RESET key can be used to reset the drive after a fault occurs. For those faults that can't be reset by the RESET key, see the fault records after pressing MENU key for details. <p><i>NOTE: The ability to STOP the drive from the keypad is effective ONLY if the drive is configured to RUN and/or STOP from the keypad. Keypad STOP can be disabled by parameter 00.32, Digital Keypad STOP Function.</i></p>
	ENTER Key Press ENTER to go to the next menu level or accept parameter entry. If it is the last level, then press ENTER to execute the command.
	MENU Key Press MENU to return to the Main Menu or cycle through the available menu options.
	Direction: Up Press to make the value set on the current menu/parameter higher.
	Direction: Left/Down <ul style="list-style-type: none"> Press to make the value set on the current menu/parameter lower. In the menu/text selection mode, the arrows are used for item selection. Long press the MENU key to use the left direction function.
	Frequency Setting Dial (Potentiometer) The dial can be set as the main frequency input. Set Parameter 00-20 or 00-30 to equal '7-Digital Keypad Dial'.

KEYPAD INDICATOR LEDs

The left and right sides of the digital display contain a series of LEDs that light up to indicate certain drive functions.

<i>Descriptions of LED Functions</i>	
RUN	Steady ON: Drive is running. Blinking: Drive is stopping or in base block. Steady OFF: Drive is not running.
FWD	Steady ON: Drive is operating in Forward mode. Blinking: Drive is changing direction. Steady OFF: Drive is operating in Reverse mode.
REV	Steady ON: Drive is operating in Reverse mode. Blinking: Drive is changing direction. Steady OFF: Drive is operating in Forward mode.
STOP	Steady ON: Drive is stopped or in the process of stopping. Blinking: Drive is in standby (run but does not output). Steady OFF: Drive is not currently executing an operational (STOP) command. <i>NOTE: The ability to STOP the drive from the keypad is effective ONLY if the drive is configured to RUN and/or STOP from the keypad. Keypad STOP can be disabled by parameter 00.32, Digital Keypad STOP Function.</i>

GS10 KEYPAD OPERATION


The following section details digital keypad operation for the GS10 series drives.

GS10 KEYPAD FUNCTION EXAMPLES

<i>Instruction</i>	<i>Press Key</i>	<i>Display Will Show</i>	
First menu to display after power up.	n/a	Displays the present frequency setting of the drive	RUN ● FWD ● REV ● F600 ● STOP
Press MENU once from startup.	MENU	Displays the actual output frequency of the drive	RUN ● FWD ● REV ● 4500 ● STOP
Press MENU twice from startup.	MENU	Displays user defined output	RUN ● FWD ● REV ● U 18 ● STOP
Press MENU three times from startup.	MENU	Displays output current	RUN ● FWD ● REV ● A 50 ● STOP
Press MENU four times from startup. Displays Frd if the drive is currently configured for Forward operation. Press the UP or DOWN key to change to Reverse. Press ENTER to confirm the change.	MENU, UP/DOWN ENTER	Displays the Forward command if configured for Forward operation.	RUN ● FWD ● REV ● Frd ● STOP
		Displays the Reverse command if configured for Reverse operation.	RUN ● FWD ● REV ● rEv ● STOP
Enable the counter by setting parameter 00.04 to 1. See the user manual for full instructions on using the counter.	MENU	Displays the counter value	RUN ● FWD ● REV ● c 20 ● STOP
After selecting the desired menu option, press ENTER to bring up the parameter number (Format XX.YY). Use the UP and DOWN arrow keys to change the parameter number as needed, then press ENTER to adjust the parameter value.	ENTER, UP/DOWN, ENTER	Displays the parameter number	RUN ● FWD ● REV ● 0600 ● STOP
From the parameter number screen, press ENTER to bring up the current value of the selected parameter. Use the UP and DOWN arrows to adjust the value. Press ENTER again to confirm the choice.	ENTER, UP/DOWN	Displays the value of the selected parameter	RUN ● FWD ● REV ● 10 ● STOP
Once a desired parameter value has been set using the UP and DOWN arrow keys, press ENTER to save the choice and display End message.	ENTER	End message. Displays when data has been accepted and stored	RUN ● FWD ● REV ● End ● STOP
Displays when an external fault is detected.	n/a	External fault message	RUN ● FWD ● REV ● EF ● STOP
Displays when data is not accepted or the value exceeded	n/a	Error message.	RUN ● FWD ● REV ● Err ● STOP

MAIN PAGE

When the drive first starts up, it will display the present frequency setting of the drive. To access the other main pages of the keypad, press the MENU button to cycle through the options.

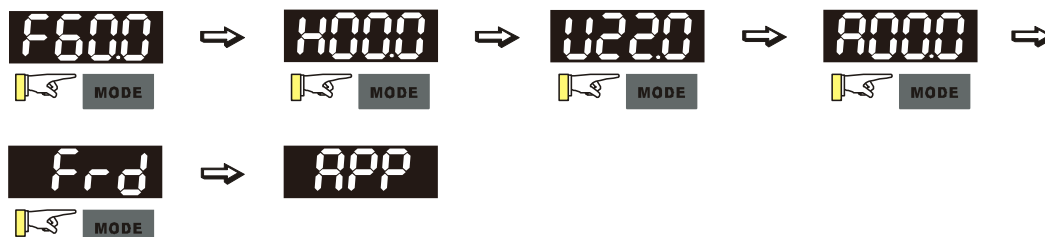

NOTE: In screen selection mode, press ENTER to set the parameters.


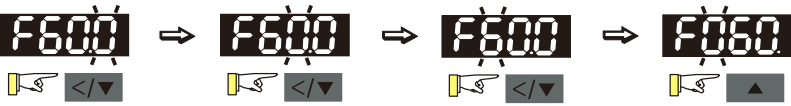
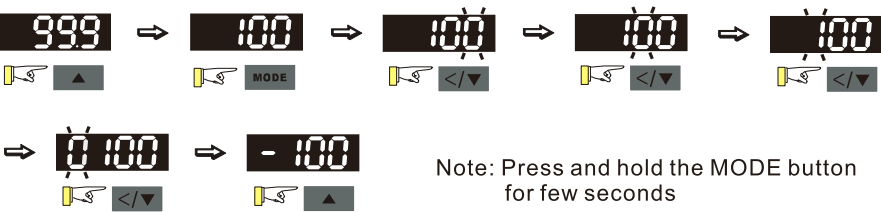


NOTE: APP only displays when parameter 13.00 does not equal 0.

FREQUENCY COMMAND SETTINGS

Frequency Command Instructions	
Change Frequency Setting	<p>The default maximum frequency setting (parameter 01.00) is 60.0 Hz. The command frequency on the drive can not be set higher than the maximum frequency value. To set the command frequency value, follow the instructions below:</p> <ol style="list-style-type: none"> 1) Press the MENU key until F60.0 is displayed (see “Parameter Settings” on page 3–6.). 2) Hold down MENU until the final digit of the value begins to blink. 3) Press the LEFT/DOWN button to select the digits you wish to change. Press the UP button to cycle through the values available. 4) Press and hold MENU until no digits are blinking.
	<p>Note: To change the value to something greater than 99.9, follow the steps above but press the LEFT/DOWN button until the left-most digit (normally blank) switches to a blinking 0. Then use the UP button to change to the desired value. The maximum frequency value is 599.0. If a higher value is chosen, the parameter screen will display Err, followed by 599.0 (the maximum possible), then revert to the previous good value.</p>

PARAMETER SETTINGS

Parameter Setting Instructions	
Setting Parameters	<ol style="list-style-type: none"> 1) Press MENU until the parameter screen appears (typically H 0.0). 2) Press ENTER to switch to the parameter group, then press the UP button to select the desired group number. 3) Press ENTER to switch to the parameter number, then press the UP button to select the desired number. 4) Press ENTER to switch to the parameter value, then press the UP or LEFT/DOWN button to cycle through the available options. 5) Press ENTER. If END displays, the parameter was successfully updated. If Err displays, the chosen configuration is not viable.  <p>Note: When working with Parameters, the leading digit on the GS10 display will toggle between a "P" and the parameter number. For example, parameter P04.01 will alternate between "P4.01" and "04.01".</p>
Unsigned Parameter Settings	<p>To set an unsigned parameter value, follow the steps for "Setting Parameters" above, until you reach the parameter value. Then:</p> <ol style="list-style-type: none"> 1) Press and hold the MENU button until the last digit of the parameter value begins to blink. 2) Change the value by pressing the UP button. 3) Press the LEFT/DOWN button to move to the next digit, and change its value using the UP button. Repeat the process until all digits have been configured as desired. 4) Press and hold the MENU button to disable the left shift function of the LEFT/DOWN button. 
Setting a negative parameter value	<p>Follow the normal steps for setting a parameter as above. To set the parameter value to negative:</p> <ol style="list-style-type: none"> 1) Press and hold the MENU button while on the parameter value until the final digit begins to blink. 2) Use the LEFT/DOWN button to navigate all the way to the left of the screen. 3) Use the UP button to cycle through the available digits. For parameters cable of being set to negative, the value will cycle from 0 to - instead of 0 to 9.  <p>Note: Press and hold the MODE button for few seconds</p> <p>For parameter values with three digits and two decimal places and a positive/negative setting, the keypad only displays three digits (-100, not -100.0).</p>

Application Settings Instructions	
Configuring the User-defined Parameter Set	<p>The user-defined APP setting (USER) allows you to configure your own list of parameters for quick access. Up to 50 parameters can be set by configuring parameters 13.01–13.50.</p> <ol style="list-style-type: none"> 1) Navigate to the parameter settings and set P13.00 to 1. 2) Next, select the parameter you wish to set a definition for, P13.01 through P13.50 are available. User-defined parameters must use parameter 13.xx in sequence or an Err will occur. The first user-defined parameter must be under 13.01, the second under 13.02, etc. If you wish to remove user-defined parameters, they must also be removed in order, starting with the highest 13.xx configured and working down. 3) Press and hold the MENU button until the last digit of the value (default will be 0.00) blinks, then use the UP and LEFT/DOWN buttons to set the parameter number you wish to reference. Note that you cannot set values for read-only parameters. 4) Press ENTER to accept. 5) Repeat as needed using parameters 13.02 and up until all desired parameters are referenced. 6) When you've finished setting parameters, press the MENU button to go back to the APP page and press the frequency setting dial. The keypad will display USER. Press it again and the corresponding parameter that you set appears.
	<pre> graph LR A[Set P13.00 to 1 to activate user-defined application selection] --> B[Set P13.01–P13.50 user-defined parameters in order] B --> C[Press MENU to display the APP page, then press frequency dial twice to display user parameters] C --> D[Use frequency dial to select defined parameters, then press ENTER to view] D --> E[To remove a user-defined parameter, go to parameter group 13 and set params to 0.00 starting with the highest] </pre> <p>Note: When working with Parameters, the leading digit on the GS10 display will toggle between a "P" and the parameter number. For example, parameter P04.01 will alternate between "P4.01" and "04.01".</p>
Modifying User-defined Parameter Set Values	<p>The APP page can be used to modify the values of parameters in the user-defined parameter set rather than needing to go to the parameter page. To modify the value of a parameter in the user-defined set, follow the steps below:</p> <ol style="list-style-type: none"> 1) Press MENU until APP appears, then press ENTER. 2) When USER displays, press ENTER to bring up the list of user-defined parameters. 3) Use the UP and LEFT/DOWN buttons to select the desired parameter, then press ENTER. 4) Use the UP and LEFT/DOWN buttons to select the desired parameter value, then press ENTER. 5) If the value is valid, End will display. If it is not valid, Err will display. Press MENU to return to the main page. <p>Successful parameter setting Input data error</p> <p>Press ENTER to change the parameter setting value</p> <p>Note: When working with Parameters, the leading digit on the GS10 display will toggle between a "P" and the parameter number. For example, parameter P04.01 will alternate between "P4.01" and "04.01".</p>

REFERENCE TABLE FOR DIGITAL LED CHARACTER DISPLAY

The table below shows how characters display on the LED screen with the number or letter represented above it. This can help for characters such as “V” that do not display normally on the LED.

Number	0	1	2	3	4	5	6	7	8	9
Display	0	1	2	3	4	5	6	7	8	9
Number	A	a	B	b	C	c	D	d	E	e
Display	A	-	-	b	C	c	-	d	E	-
Number	F	f	G	g	H	h	I	i	J	j
Display	F	-	G	-	H	h	-	i	J	j
Number	K	k	L	l	M	m	N	n	O	o
Display	K	-	L	-	-	-	-	n	-	o
Number	P	p	Q	q	R	r	S	s	T	t
Display	P	-	-	q	-	r	S	-	-	t
Number	U	u	V	v	W	w	X	x	Y	y
Display	U	u	-	v	-	-	-	-	y	-
Number	Z	z								
Display	Z	-								

**BLANK
PAGE**