

SERIAL COMMUNICATIONS



CHAPTER 5

TABLE OF CONTENTS

Chapter 5: Serial Communications

Communications Parameters Summary	5-2
Summary – Serial Communication Parameters	5-2
Serial Modbus Status Addresses	5-4
Status Addresses (Read Only).	5-4
Serial Communications Overview	5-7
Serial Communications Connectivity.	5-7
Minimum AC Drive Parameter Settings For Serial Communication	5-7
Common Third-Party Modbus RTU Masters.	5-8
AutomationDirect PLCs as Modbus Master	5-8
Connecting Communication Cables	5-9
Detailed Serial Modbus Communication Information	5-11
Data Format	5-11
Communication Protocol	5-12
CMD (command code) and DATA (data characters)	5-13
Common Third-Party Modbus RTU Masters.	5-8
AutomationDirect PLCs as Modbus Master	5-8
Connecting Communication Cables	5-9
Detailed Serial Modbus Communication Information	5-11
Data Format	5-11
Communication Protocol	5-12
CMD (command code) and DATA (data characters)	5-13

COMMUNICATIONS PARAMETERS SUMMARY

A summary of the GS10 AC drives Communications Parameters is listed below. Refer to “Parameters” Chapter 4 for a complete listing of all GS10 AC drives parameters, including details and Modbus addresses.

SUMMARY – SERIAL COMMUNICATION PARAMETERS

GS10 Parameters Summary – Communication Parameters (P09.xx)							
Parameter		Range	Run ¹⁾ Read/ Write	Modbus Address		Settings	
				Hex	Dec	Default ²⁾	User
1) ♦ in the Run-Read/Write column indicates that the parameter can be set during RUN mode. R/W indicates “Read/write.” Read indicates “Read-only.”							
2) Parameters can be restored to their <u>default values</u> using P00.02.							
P09.00	Communication address	1–254	♦R/W	0900	42305	1	
P09.01	COM1 transmission speed	4.8–38.4 Kbps	♦R/W	0901	42306	38.4	
P09.02	COM1 transmission fault treatment	0: Warn and continue operation 1: Fault and ramp to stop 2: Fault and coast to stop 3: No warning, no fault, and continue operation	♦R/W	0902	42307	3	
P09.03	COM1 time-out detection	0.0–100.0 sec.	♦R/W	0903	42308	0.0	
P09.04	COM1 communication protocol	1: 7, N, 2 (ASCII) 2: 7, E, 1 (ASCII) 3: 7, O, 1 (ASCII) 4: 7, E, 2 (ASCII) 5: 7, O, 2 (ASCII) 6: 8, N, 1 (ASCII) 7: 8, N, 2 (ASCII) 8: 8, E, 1 (ASCII) 9: 8, O, 1 (ASCII) 10: 8, E, 2 (ASCII) 11: 8, O, 2 (ASCII) 12: 8, N, 1 (RTU) 13: 8, N, 2 (RTU) 14: 8, E, 1 (RTU) 15: 8, O, 1 (RTU) 16: 8, E, 2 (RTU) 17: 8, O, 2 (RTU)	♦R/W	0904	42309	13	
P09.09	Communication response delay time	0.0–200.0 ms	♦R/W	0909	42314	2.0	
P09.10	Communication main frequency	0.00–599.00 Hz	R/W	090A	42315	60.00	
P09.11	Block transfer 1	0–65535	♦R/W	090B	42316	0	
P09.12	Block transfer 2	0–65535	♦R/W	090C	42317	0	
P09.13	Block transfer 3	0–65535	♦R/W	090D	42318	0	
P09.14	Block transfer 4	0–65535	♦R/W	090E	42319	0	
P09.15	Block transfer 5	0–65535	♦R/W	090F	42320	0	
P09.16	Block transfer 6	0–65535	♦R/W	0910	42321	0	
P09.17	Block transfer 7	0–65535	♦R/W	0911	42322	0	
P09.18	Block transfer 8	0–65535	♦R/W	0912	42323	0	
P09.19	Block transfer 9	0–65535	♦R/W	0913	42324	0	
P09.20	Block transfer 10	0–65535	♦R/W	0914	42325	0	
P09.21	Block transfer 11	0–65535	♦R/W	0915	42326	0	
P09.22	Block transfer 12	0–65535	♦R/W	0916	42327	0	
P09.23	Block transfer 13	0–65535	♦R/W	0917	42328	0	
P09.24	Block transfer 14	0–65535	♦R/W	0918	42329	0	

GS10 Parameters Summary - Serial Communication Parameters (P09.xx) - (continued)							
Parameter		Range	Run¹⁾ Read/ Write	Modbus Address		Settings	
				Hex	Dec	Default²⁾	User
P09.25	Block transfer 15	0–65535	♦R/W	0919	42330	0	
P09.26	Block transfer 16	0–65535	♦R/W	091A	42331	0	
P09.30	Communication decoding method	0: Decoding method 1 1: Decoding method 2	R/W	091E	42335	1	

BLOCK TRANSFER EXPLANATION

Block Transfer allows Parameters from many different Parameter Groups to be consolidated into one (or fewer) Modbus communication messages. This can greatly simplify PLC programming and reduce network traffic.

The Block Transfer parameters are P09.11 through P09.26. To use these parameters, enter the value of another parameter you wish to read or write through the keypad or GSoft2 configuration software. The parameter values must be converted by adding the upper byte value to the lower byte value, convert the sum to hex, then convert the hex to decimal.

Example:

Parameter P02.22. $0200 + 16$ (hex of 22) = $0x0216$ = result is 534. 534 is what would be entered in the Block Transfer parameter to read or write parameter P02.22.

Examples of Block Transfer are below:

- 1) Block transfer 1 (P09.11) = 0000 (AC Motor drive identity code). A Modbus read of P09.11 results in a value of 104. In this case, the drive is model # GS11-11P0 and corresponds to the value 104 in Parameter P00.00.
- 2) Block transfer 2 (P09.12) = 0006 (Firmware version). A Modbus read of P09.12 results in a value of 100. This is the firmware version of the GS10 drive.
- 3) Block transfer 3 (P09.13) = 8448 (decimal value of 0x2100 Status Monitor 1). A Modbus read of P09.13 returns the current status of Status Monitor 1.
- 4) Block transfer 4 (P09.14) = 8449 (decimal value of 0x2101 Status Monitor 2). A Modbus read of P09.14 returns the current status of Status Monitor 2.
- 5) Block transfer 5 (P09.15) = 8451 (decimal value of 0x2103 Output Frequency). A Modbus read of P09.15 returns the current running frequency of the GS10.
- 6) Block transfer 6 (P09.16) = 0268 (Acceleration time 1 is parameter P01.12. $12 = 0x0c$. $0100 + 0c = 0x010C = 0268$ decimal). A Modbus write to P09.16 will set the Acceleration time 1 value.
- 7) Block transfer 7 (P09.17) = 0269 (Deceleration time 1 is parameter P01.13. $13 = 0x0d$. $0100 + 0d = 0x010d = 0269$ decimal). A Modbus write to P09.17 will set the Deceleration time 1 value.
- 8) Block transfer 8 (P09.18) = 8192 (Control Word 1 (Run, Stop, etc...) is $0x2000 = 8192$). A Modbus write to P09.18 will control the Run/Stop of the drive along with other items.
- 9) Block transfer 9 (P09.19) = 8193 (Control Word 2 (Frequency Command) is $0x2001 = 8193$). A Modbus write to P09.19 will control the commanded Frequency of the drive.

Accessing all of the registers above would typically take about 6 Modbus messages but by blocking them together in the Block Transfer parameters, we can access everything with 1 read and 1 write.

SERIAL MODBUS STATUS ADDRESSES

The *DURAPULSE* GS10 AC drive has status memory addresses that are used to monitor the AC drive. For complete listing, see page 4–195.

STATUS ADDRESSES (READ ONLY)

GS10 Addresses						
Description		Range		Modbus Address		
				Hex	Dec	Octal
Status Monitor 1 Read Only	Error Codes	0: No Error	35: W phase current sensor detection error (cd3)	0611	41554	3021
		1: Overcurrent during Accel (ocA)	36: CC Hardware Logic error 0 (Hd0)			
		2: Overcurrent during Decel (ocd)	37: OC Hardware Logic error 1 (Hd1)			
		3: Overcurrent during normal speed (ocn)	40: Motor auto tune error (AuE)			
		4: Ground Fault (GFF)	41: PID Feedback loss (AFE)			
		6: Overcurrent during Stop (ocS)	48: Analog input signal loss (ACE)			
		7: Overvoltage during Accel (ovA)	49: External Fault (EF)			
		8: Overvoltage during Decel (ovd)	50: Emergency Stop (EF1)			
		9: Overvoltage during normal speed (ovn)	51: Base Block (bb)			
		10: Overvoltage during Stop (ovS)	52: Password Error (Pcod)			
		11: Low voltage during Accel (LvA)	54: PC Command error (CE1)			
		12: Low voltage during Decel (Lvd)	55: PC Address error (CE2)			
		13: Low voltage during normal speed (Lvn)	56: PC Data error (CE3)			
		14: Low voltage during Stop (LvS)	57: PC Slave error (CE4)			
		15: Input phase loss (OrP)	58: PC Communication Time Out (CE10)			
		16: IGBT Overheat (oH1)	63: Over Slip Error (oSL)			
		18: IGBT temperature detection failure (tH1o)	82: U Phase Loss (UPHL)			
		21: Overload (oL) (150% 1Min, Inverter)	83: V Phase Loss (VPHL)			
		22: Motor1 Thermal Overload (EoL1)	84: W Phase Loss (WPHL)			
		23: Motor2 Thermal Overload (EoL2)	87: Overload protection at low frequency (oL3)			
		24: Motor Overheat-PTC (oH3)	142: Auto-tune error 1 (AUE1)			
		26: Over Torque 1 (ot1)	143: Auto-tune error 2 (AUE2)			
		27: Over Torque 2 (ot2)	149: Total resistance measurement fault (AUE5)			
		28: Under current (uc)	150: No-load current IO measurement fault (AUE6)			
		31: EEPROM read error (cF2)	151: dq axis inductance measurement fault (AUE7)			
		33: U phase current sensor detection error (cd1)	152: High frequency injection measurement fault (AUE8)			
		34: V phase current sensor detection error (cd2)	157: Pump PID feedback error (dEv)			

Note: Status Monitor 1 corresponds to P06.17 Fault Record 1.

GS10 Addresses (continued)					
Description	Range		Modbus Address		
			Hex	Dec	Octal
Status monitor read only	High byte: Warning code / Low Byte: Error code		2100	48449	20400
	bit 1–0	AC motor drive operation status 00B: The drive stops 01B: The drive is decelerating 10B: The drive is in standby status 11B: The drive is operating	2101	48450	20401
	bit 2	1: JOG command			
	bit 4–3	Operation direction 00B: FWD running 01B: From REV running to FWD running 10B: From FWD running to REV running 11B: REV running			
	bit 8	1: Master frequency controlled by the communication interface			
	bit 9	1: Master frequency controlled by the analog / external terminal signal			
	bit 10	1: Operation command controlled by the communication interface			
	bit 11	1: Parameter locked			
	bit 12	1: Enable to copy parameters from keypad			
	bit 15–13	Reserved			
	Frequency command (XXX.XX Hz)		2102	48451	20402
	Output frequency (XXX.XX Hz)		2103	48452	20403
	Display the drive's output current (XX.XX A). When the current is higher than 655.35, it automatically shifts one decimal place as (XXX.X A). Refer to the high byte of 211F for information on the decimal places.		2104	48453	20404
	DC bus voltage (XXX.X V)		2105	48454	20405
	Output voltage (XXX.X V)		2106	48455	20406
	Current step for the multi-step speed operation		2107	48456	20407
	Reserved		2108	48457	20410
	Counter value		2109	48458	20411
	Output power factor angle (XXX.X)		210A	48459	20412
	Output torque (XXX.X %)		210B	48460	20413
	Actual motor speed (XXXXX rpm)		210C	48461	20414

GS10 Addresses (continued)					
Description	Range		Modbus Address		
			Hex	Dec	Octal
Command write only	bit 1–0	00B: No function	2000	48193	20000
		01B: Stop			
		10B: Run			
		11B: JOG + RUN			
	bit 3–2	Reserved			
	bit 5–4	00B: No function			
		01B: FWD			
		10B: REV			
		11B: Change direction			
	bit 7–6	00B: 1st accel. / decel.			
		01B: 2nd accel. / decel.			
		10B: 3rd accel. / decel.			
		11B: 4th accel. / decel.			
	bit 11–8	000B: Master speed			
		0001B: 1st step speed frequency			
		0010B: 2nd step speed frequency			
		0011B: 3rd step speed frequency			
		0100B: 4th step speed frequency			
		0101B: 5th step speed frequency			
		0110B: 6th step speed frequency			
		0111B: 7th step speed frequency			
		1000B: 8th step speed frequency			
		1001B: 9th step speed frequency			
		1010B: 10th step speed frequency			
		1011B: 11th step speed frequency			
		1100B: 12th step speed frequency			
		1101B: 13th step speed frequency			
		1110B: 14th step speed frequency			
		1111B: 15th step speed frequency			
	bit 12	1: Enable bit 06–11 function			
	bit 14–13	00B: No function			
		01B: Operated by the digital keypad			
		10B: Operated by Pr.00-21 setting			
		11B: Change the operation source			
	bit 15	Reserved			
	Frequency command (XXX.XX Hz)		2001	48194	20001
	bit 0	1: E.F. (External Fault) ON	2002	48195	20002
	bit 1	1: Reset command			
	bit 2	1: B.B. ON			
	bit 4–3	Reserved			
	bit 5	1: Enable fire mode			
	bit 15–6	Reserved			



See page 4-195 for complete serial address list.

SERIAL COMMUNICATIONS OVERVIEW

The *DURAPULSE* GS10 RJ-45 Serial Comm Port will accommodate an RS-485 connection, through which the drive can be controlled by a remote master device on an RS-485 network spanning up to 1200 meters (4000 feet) of cable. RS-232 signals can be converted to RS-485 by using a separate converter.

The *DURAPULSE* GS10 AC drive communication address is specified in P9.00, and the remote master device can control each AC drive according to its individual communication address.

The *DURAPULSE* GS10 AC drive can be configured to communicate using either Modbus RTU or ASCII. The desired protocol is selected in parameter P09.04, COM1 Protocol. (The GS10 drive cannot use both protocols simultaneously.)

- *Standard Modbus protocol using ASCII or RTU transmission modes.*
Parameter P09.04, Communication Protocol, is used to select the desired mode, number of data bits, parity, and number of stop bits. The mode and serial parameters must be the same for all devices on a Modbus network.



DURApulse GS10 drives have a provision for shutting down control or power to the drive in the event of a communications time out. This feature can be set up through parameters P09.02 (COM1 transmission fault treatment) and P09.03 (COM1 time-out detection).

SERIAL COMMUNICATIONS CONNECTIVITY



This section contains information regarding wiring connections to the GS10 RS-485 serial communication ports. For information regarding serial connections to AutomationDirect PLCs, please refer to Appendix D of this user manual, or to the applicable PLC user manual.

MINIMUM AC DRIVE PARAMETER SETTINGS FOR SERIAL COMMUNICATION

The following parameters need to be set as shown in order to communicate properly:

Minimum Parameter Settings (for Communication to ADC PLC)		
Parameter Setting	Description	Setting Value Explanation
P00.21 = 02	1st Source of Operation Command [Remote]	02: RS-485 communication input
P00.31 = 02	2nd Source of Operation Command [Local]	02: RS-485 communication input, Keypad STOP is Enabled (P00.32)
P02.01~P02.05 = 56	Multifunction Inputs (DI1-DI5) Definition	56: Local/Remote selection
P00.20 = 1	1st Source of Frequency Command [Remote]	1: RS-485 communication input
P00.30 = 1	2nd Source of Frequency Command [Local]	1: RS-485 communication input
P09.00 = 1~254	Communication Address	01~254 Drive Comm Address
P09.01 = 4.8~38.4	Transmission Speed	4.8~38.4 Kbps
P09.04 = 1 to 17	COM1 Protocol	1: 7, N, 2 (ASCII) 2: 7, E, 1 (ASCII) 3: 7, O, 1 (ASCII) 4: 7, E, 2 (ASCII) 5: 7, O, 2 (ASCII) 6: 8, N, 1 (ASCII) 7: 8, N, 2 (ASCII) 8: 8, E, 1 (ASCII) 9: 8, O, 1 (ASCII) 10: 8, E, 2 (ASCII) 11: 8, O, 2 (ASCII) 12: 8, N, 1 (RTU) 13: 8, N, 2 (RTU) 14: 8, E, 1 (RTU) 15: 8, O, 1 (RTU) 16: 8, E, 2 (RTU) 17: 8, O, 2 (RTU)



This list of parameter settings is the minimum required to communicate with an AutomationDirect PLC. There may be other parameters that need to be set to meet the needs of your particular application.

COMMON THIRD-PARTY MODBUS RTU MASTERS

- KESERVER EX 5.0 from www.kepware.com
- Modbus Poll from www.modbustools.com

AUTOMATIONDIRECT PLCs AS MODBUS MASTER

Serial Modbus-capable AutomationDirect PLCs can communicate with the GS10 drive.

Serial Modbus control is easier to accomplish from a PLC that has a built-in RS-485 port and supports dedicated Modbus messaging. [RS-232-only PLCs will require an RS-232–RS-485 converter (FA-ISOCOCON); and older PLCs may require programming to construct the Modbus strings.] We recommend PLCs with built-in RS-485 ports and dedicated Modbus serial commands: CLICK (with RS-485 ports), P1000, P2000, P3000, BRX/Do-more, DirectLogic (DL06, D2-260, or D2-262). Other PLC-Drive connectivity is possible: Please refer to the “Typical ADC PLC to GS10 Serial Connectivity Matrix” below.

Typical ADC PLC to GS10 Serial Communications Connectivity

Typical ADC PLC to GS10 Serial Communications Connectivity Matrix						
Recommended PLC Connectivity					GS10	
PLC	Port #	Port Type	Communication	Direct Cable	Port Type	Port #
CLICK	3	3 screw terminals	RS-485	Q8304-1 cable	RJ45	n/a
D2-260	2	HD15	RS-485	D2-DSCBL-2		
D2-262	2	HD15	RS-485	D2-DSCBL-2		
DL06	2	HD15	RS-485	D2-DSCBL-2		
BRX/Do-more	RS-485	3 screw terminals	RS-485	Q8304-1 cable		
Do-more H2-DM1	RS-232	RJ12	RS-232 to RS-485	FA-ISOCOCON with Q8304-1 cable		
P1-550	RS-485	4 screw terminals	RS-485	Q8304-1 cable		
P2-550	RS-485	3 screw terminals	RS-485	Q8304-1 cable		
P3-530	RS-485	3 screw terminals	RS-485	Q8304-1 cable		
P3-550	RS-485	3 screw terminals	RS-485	Q8304-1 cable		
P3-550E	RS-485	3 screw terminals	RS-485	Q8304-1 cable		
Other PLC Connectivity			—	—		
D2-250-1	2	HD15	RS-485	D2-DSCBL-2		
D4-450/D4-454	1	DB25	RS-232 to RS-485	FA-ISOCOCON with Q8304-1 cable		
DL05	2	RJ12	RS-232 to RS-485	FA-ISOCOCON with Q8304-1 cable		
DL06 + DCM	2	HD15	RS-485	D2-DSCBL-2		
Do-more H2-DM1 + H2-SERIO-4	3	5 screw terminals	RS-485	Q8304-1 cable		
Do-more T1H-DM1	RS-232	RJ12	RS-232 to RS-485	FA-ISOCOCON with Q8304-1 cable		
P2-SCM	4	4 screw terminals	RS-485	Q8304-1 cable		
P3-SCM	4	4 screw terminals	RS-485	Q8304-1 cable		



CONNECTING COMMUNICATION CABLES



A 120 ohm external terminating resistor is required for the drive end. An external termination resistor may be required on the other end of RS-485 network; especially on long runs. Select resistors that match the impedance of the cable (between 100Ω and 500Ω).

The DURAPULSE GS10 serial communication port is an RS-485 input. That means the user can use standard RJ45 patch cables or industrial RS-485 cabling to access the comm port. GS10 to GS10 serial connections can be accomplished with standard Ethernet patch cables (do not use cross-over cables). RS-232 signals can be converted to RS-485 by using a separate converter (see the FA-ISOCAN drawings on [page 5-10](#)).

DURAPULSE GS10 RS-485 SERIAL COMM PORTS

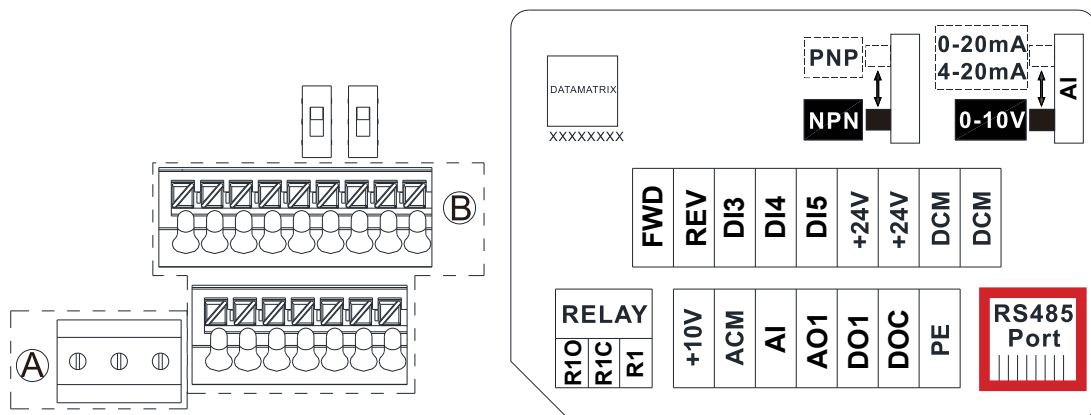

Modbus RS-485
Pin 1, 2, 6: Reserved
Pin 3, 7: SGND
Pin 4: SG-
Pin 5: SG+
Pin 8: +10VS



Recommended RS-485 cable: Belden 9842, AutomationDirect L19954 series, or equivalent.

RS-232C TO RS-485 CONVERSION

An RS-485 network cable can span up to 1200 meters (4000 feet). However, many AutomationDirect PLCs have only RS-232C communication ports, and require an FA-ISOCAN (RS-232C to RS-422/485 network adapter) in order to make an RS-485 connection.




*If an FA-ISOCAN module is used, set the module dipswitches as required.
Refer to the FA-ISOCAN manual for more detailed information.*

FA-ISOCAN Switch Settings:

- S21–S23: OFF, ON, ON (19200 baud)
- S24–S27: OFF (Automatic Network Transmit Enable)
- Terminate: ON (end of run term resistors)
- Bias (2): ON (end of run bias resistors)
- 1/2 DPX (2): ON (RS-485 TXD/RXD jumpers)

Helpful Hint: Some applications require that the FA-ISOCAN baud rate is set faster than the drive/network baud rate.

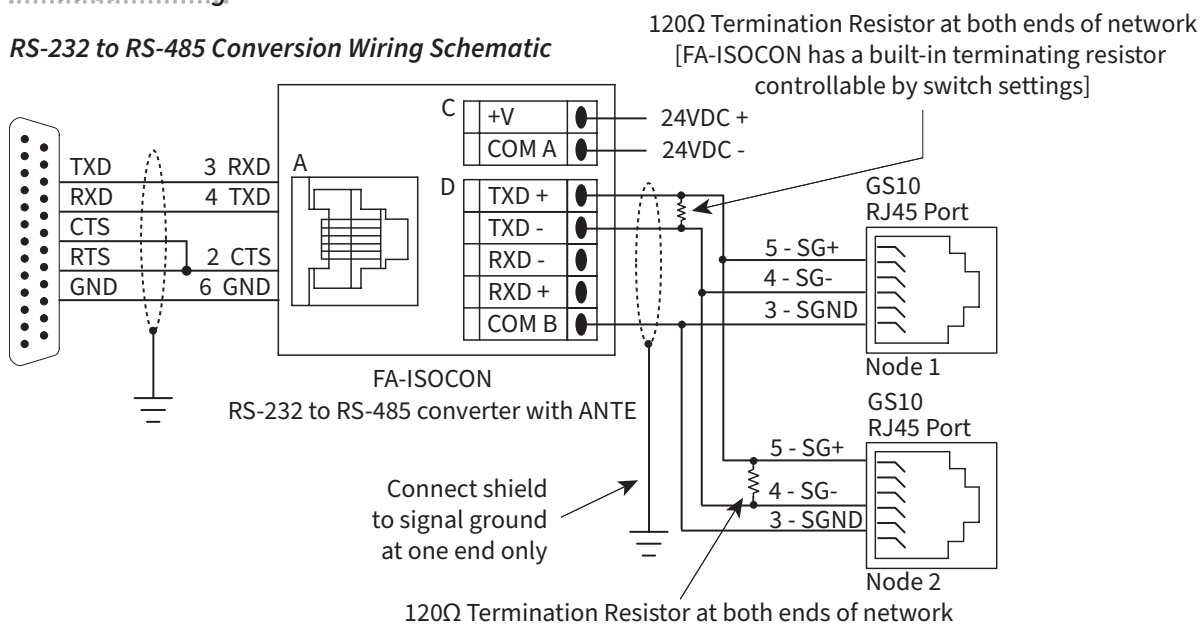FA-ISOCAN Wiring**RS-232 to RS-485 Conversion Wiring Schematic**

For information regarding configuration of AutomationDirect PLCs or other PLCs, please refer to Appendix C of this user manual, or to the applicable PLC user manual for your application.


DETAILED SERIAL MODBUS COMMUNICATION INFORMATION

The GS10 drive follows the standard Modbus RTU and Modbus ASCII protocols. The following pages provide some brief information on this but if your device does not support these protocols natively and you are required to develop this framework on your own, consult the more detailed documentation at www.modbus.org.


DATA FORMAT

ASCII Mode: 10-bit character frame (For 7-bit character):


P09.04 = 01 (7 data bits, no parity, 2 stop bits)

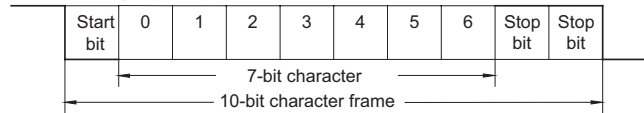

P09.04 = 02 (7 data bits, even parity, 1 stop bit)




P09.04 = 03 (7 data bits, odd parity, 1 stop bit)




RTU Mode: 11-bit character frame (For 8-bit character):


P09.04 = 13 (8 data bits, no parity, 2 stop bits)



P09.04 = 14 (8 data bits, even parity, 1 stop bit)



P09.04 = 15 (8 data bits, odd parity, 1 stop bit)



COMMUNICATION PROTOCOL**ASCII Mode:**

STX	Start Character: (3AH)
ADR 1	Communication Address: 8-bit address consists of 2 ASCII codes
ADR 0	
CMD 1	
CMD 0	
DATA (n-1)	Contents of data: n x 8-bit data consists of 2n ASCII codes. n ≤ 25 maximum of 50 ASCII codes
.....	
DATA 0	
LRC CHK 1	LRC check sum: 8-bit check sum consists of 2 ASCII codes
LRC CHK 0	
END 1	END characters: END 1 = CR (0DH); END 0 = LF (0AH)
END 0	

RTU Mode:

START	A silent interval of more than 10 ms
ADR	Communication Address: 8-bit address
CMD	Command Code: 8-bit command
DATA (n-1)	Contents of data: n x 8-bit data, n ≤ 25
.....	
DATA 0	
CRC CHK Low	CRC check sum: 16-bit check sum consists of 2 8-bit characters
CRC CHK High	
END	A silent interval of more than 10 ms

ADR (Communication Address)

Valid communication addresses are in the range of 0 to 254. A communication address equal to 0 means broadcast to all AC drives, in which case the drives will not acknowledge any message from the master device.

For example, communication to AC drive with address 16 decimal:

- *ASCII mode:* (ADR 1, ADR 0)='1','0' => '1'=31H, '0'=30H
- *RTU mode:* (ADR)=10H

CMD (COMMAND CODE) AND DATA (DATA CHARACTERS)

The format of data characters depends on the command code. The available command codes are described as followed: Command code: 03H, read N words. The maximum value of N is 12. For example, reading continuous 2 words from starting address 2102H of the AC drive with address 01H.

ASCII mode:

Command Message		Response Message	
STX	':'	STX	':'
ADR 1	'0'	ADR 1	'0'
ADR 0	'1'	ADR 0	'1'
CMD 1	'0'	CMD 1	'0'
CMD 0	'3'	CMD 0	'3'
Starting data address	'2'	Number of data (Count by byte)	'0'
	'1'	Content of starting data address 2102H	'4'
	'0'		'1'
	'2'		'7'
Number of data (Count by word)	'0'		'7'
	'0'	Content data address 2103H	'0'
	'0'		'0'
	'2'		'0'
LRC CHK 1	'D'		'0'
LRC CHK 0	'7'	LRC CHK 1	'7'
END 1	CR	LRC CHK 0	'1'
END 0	LF	END 1	CR
		END 0	LF

RTU mode:

Command Message		Response Message	
ADR	01H	ADR	01H
CMD	03H	CMD	03H
Starting data address	21H	Number of data (Count by byte)	04H
	02H		'0'
Number of data (Count by word)	00H	Content of data address 2102H	17H
	02H		70H
CRC CHK Low CRC CHK High	6FH	Content of data address 2103H	00H
	F7H		02H
		CRC CHK Low	FEH
		CRC CHK High	5CH

COMMAND CODE: 06H, WRITE 1 WORD

For example, writing 6000(1770H) to address 0100H of the AC drive with address 01H.

ASCII mode:

Command Message		Response Message	
STX	':'	STX	':'
ADR 1	'0'	ADR 1	'0'
ADR 0	'1'	ADR 0	'1'
CMD 1	'0'	CMD 1	'0'
CMD 0	'6'	CMD 0	'6'
Data Address	'0'	Data Address	'0'
	'1'		'1'
	'0'		'0'
	'0'	Data Content	'0'
	'1'		'1'
	'7'		'7'
	'7'		'7'
	'0'		'0'
LRC CHK 1	'7'	LRC CHK 1	'7'
LRC CHK 0	'1'	LRC CHK 0	'1'
END 1	CR	END 1	CR
END 0	LF	END 0	LF

RTU mode:

This is an example of using function code 16 for writing to multiple registers.

Command Message		Response Message	
ADR	01H	ADR	01H
CMD	10H	CMD	10H
Starting data address	20H	Starting data address	20H
	00H		00H
Number of registers	00H	Number of data (Count by word)	00H
	02H		02H
Byte count	04H	CRC CHK Low	4AH
Content of data address 2000H	00H	CRC CHK High	08H
	02H		
Content of data address 2001H	02H		
	58H		
CRC CHK Low	CBH		
CRC CHK High	34H		



NOTE Concerning 2100h: When GS10 drive is setup with reference RS-485 (P00.20 = 1 and drive in Remote/Auto) -OR- (P00.30 = 1 and drive in Local/Hand) -AND- Reference > P01.00 Drive Max Out Freq, the GS10 drive goes up to Max Out Freq and remains there until Max Out Freq is modified or a lower Freq Ref or a Stop Command is sent to the drive.

CHK (CHECK SUM)

ASCII Mode:

LRC (Longitudinal Redundancy Check) is calculated by summing up module 256, the values of the bytes from ADR1 to last data character, then calculating the hexadecimal representation of the 2's-complement negation of the sum.

For example, reading 1 word from address 0401h of the AC drive with address 01h.

Command Message	
STX	'.'
ADR 1	'0'
ADR 0	'1'
CMD 1	'0'
CMD 0	'3'
Starting data address	'0'
	'4'
	'0'
Number of data (Count by word)	'1'
	'0'
	'0'
	'1'
LRC CHK 1	'F'
LRC CHK 0	'6'
END 1	CR
END 0	LF

01h+03h+04h+01h+00h+01h=0Ah;
the 2's complement negation of 0Ah is F6h.

RTU Mode:

Response Message	
ADR	01h
CMD	03h
Starting data address	21h
	02h
Number of data (Count by word)	00h
	02h
CRC CHK Low	6Fh
CRC CHK High	F7h

CRC (Cyclical Redundancy Check) is calculated by the following steps:

- 10) Load a 16-bit register (called CRC register) with FFFFh.
- 11) Exclusive OR the first 8-bit byte of the command message with the low order byte of the 16-bit CRC register, putting the result in the CRC register.
- 12) Shift the CRC register one bit to the right with MSB zero filling. Extract and examine the LSB.
- 13) If the LSB of CRC register is 0, repeat step 3; else Exclusive or the CRC register with the polynomial value A001h.
- 14) Repeat step 3 and 4 until eight shifts have been performed. When this is done, a complete 8-bit byte will have been processed.
- 15) Repeat steps 2 to 5 for the next 8-bit byte of the command message.

Continue doing this until all bytes have been processed. The final contents of the CRC register are the CRC value.



When transmitting the CRC value in the message, the upper and lower bytes of the CRC value must be swapped, i.e. the lower order byte will be transmitted first.

The following is an example of CRC generation using C language. The function takes two arguments:

```

Unsigned char* data ← a pointer to the message buffer
Unsigned char length ← the quantity of bytes in the message buffer
The function returns the CRC value as a type of unsigned integer.
Unsigned int crc_chk(unsigned char* data, unsigned char length){
    int j;
    unsigned int reg_crc=0xFFFF;
    while(length--){
        reg_crc ^= *data++;
        for(j=0;j<8;j++){
            if(reg_crc & 0x01){ /* LSB(b0)=1 */
                reg_crc=(reg_crc>>1) ^ 0xA001;
            }else{
                reg_crc=reg_crc >> 1;
            }
        }
    }
    return reg_crc;
}

```



RTU mode is preferred. Limited support is available to ASCII users.
