

# INSTALLATION AND WIRING

---



## CONTENTS OF THIS CHAPTER

<i>Safety Guidelines</i> . . . . .	.4-2
<i>Introduction</i> . . . . .	.4-3
<i>UL Requirements</i> . . . . .	.4-4
<i>Cutout Dimensions</i> . . . . .	.4-5
<i>CM5-T4W</i> . . . . .	4-5
<i>CM5-T7W</i> . . . . .	4-6
<i>CM5-T10W</i> . . . . .	4-7
<i>CM5-T12W</i> . . . . .	4-8
<i>CM5-T15W</i> . . . . .	4-9
<i>CM5-T22W</i> . . . . .	.4-10
<i>Mounting Clearances</i> . . . . .	.4-11
<i>Wiring Guidelines</i> . . . . .	.4-12
<i>Agency Approvals</i> . . . . .	.4-12
<i>Providing Power to the Touch Panel</i> . . . . .	.4-13
<i>C-more LED Status Indicators</i> . . . . .	.4-14

## SAFETY GUIDELINES



**NOTE:** *Products with CE marks perform their required functions safely and adhere to relevant standards as specified by CE directives provided they are used according to their intended purpose and that the instructions in this manual are adhered to. The protection provided by the equipment may be impaired if this equipment is used in a manner not specified in this manual. A listing of our international affiliates is available on our Web site: <http://www.automationdirect.com>*



**WARNING:** *PROVIDING A SAFE OPERATING ENVIRONMENT FOR PERSONNEL AND EQUIPMENT IS YOUR RESPONSIBILITY AND SHOULD BE YOUR PRIMARY GOAL DURING SYSTEM PLANNING AND INSTALLATION. AUTOMATION SYSTEMS CAN FAIL AND MAY RESULT IN SITUATIONS THAT CAN CAUSE SERIOUS INJURY TO PERSONNEL OR DAMAGE TO EQUIPMENT. DO NOT RELY ON THE AUTOMATION SYSTEM ALONE TO PROVIDE A SAFE OPERATING ENVIRONMENT. YOU SHOULD USE EXTERNAL ELECTROMECHANICAL DEVICES, SUCH AS RELAYS OR LIMIT SWITCHES, THAT ARE INDEPENDENT OF THE PLC APPLICATION TO PROVIDE PROTECTION FOR ANY PART OF THE SYSTEM THAT MAY CAUSE PERSONAL INJURY OR DAMAGE. EVERY AUTOMATION APPLICATION IS DIFFERENT, SO THERE MAY BE SPECIAL REQUIREMENTS FOR YOUR PARTICULAR APPLICATION. MAKE SURE YOU FOLLOW ALL NATIONAL, STATE, AND LOCAL GOVERNMENT REQUIREMENTS FOR THE PROPER INSTALLATION AND USE OF YOUR EQUIPMENT.*

### PLAN FOR SAFETY

The best way to provide a safe operating environment is to make personnel and equipment safety part of the planning process. You should examine every aspect of the system to determine which areas are critical to operator or machine safety. If you are not familiar with control system installation practices, or your company does not have established installation guidelines, you should obtain additional information from the following sources.

- **NEMA** — The National Electrical Manufacturers Association, located in Washington, D.C. publishes many different documents that discuss standards for industrial control systems. You can order these publications directly from NEMA. Some of these include:
  - ICS 1, General Standards for Industrial Control and Systems*
  - ICS 3, Industrial Systems*
  - ICS 6, Enclosures for Industrial Control Systems*
- **NEC** — The National Electrical Code provides regulations concerning the installation and use of various types of electrical equipment. Copies of the NEC Handbook can often be obtained from your local electrical equipment distributor or your local library.
- **Local and State Agencies** — many local governments and state governments have additional requirements above and beyond those described in the NEC Handbook. Check with your local Electrical Inspector or Fire Marshall office for information.

**INTRODUCTION**

The installation and wiring of the **C-more®** touch panels requires selecting an appropriate location for the touch panel, laying out the cutout dimensions on the surface of the control cabinet that the panel will be mounted through, securing the touch panel with the provided mounting clips, tightening the screws to the appropriate torque rating to assure the gasket is sealing correctly, and finally connecting the appropriate power source to the touch panel.

This chapter covers the proper mounting of the touch panel and connecting power. Once power is applied to the touch panel, the user will want to read Chapter 5 on the System Setup Screens in order to set the internal time and date for the panel, become familiar with the touch panel test features, and check memory options.

**MOUNTING CLIPS - HMI-BRK-1**

HMI-BRK-1 mounting clips are used with CM5-T4W



**MOUNTING CLIPS - HMI-BRK-2**

HMI-BRK-2 mounting clips are used with CM5-T7W, CM5-T10W, CM5-T12W, CM5-T15W and CM5-T22W.



Touch Panel Size	Enclosure Thickness Range	Mounting Clip Screw Torque	Material
<b>4-inch</b>	0.039 - 0.20 inch [1 - 5 mm]	21 - 28 oz-in [0.15 - 0.20 Nm]	Metal
<b>7-inch through 22-inch</b>		135 - 149 oz-in [0.95 - 1.05 Nm]	


## UL REQUIREMENTS

UL Satisfaction Ratings	
<i>Model Number</i>	<i>Input Ratings</i>
<b>CM5-T4W</b>	10.2 - 26.4 VDC, Class 2, SELV / LIM, Maximum 8.0 W
<b>CM5-T7W</b>	10.2 - 26.4 VDC, Class 2, SELV / LIM, Maximum 10.0 W
<b>CM5-T10W</b>	10.2 - 26.4 VDC, Class 2, SELV / LIM, Maximum 21.0 W
<b>CM5-T12W</b>	10.2 - 26.4 VDC, Class 2, SELV / LIM, Maximum 35.0 W
<b>CM5-T15W</b>	
<b>CM5-T22W</b>	10.2 - 26.4 VDC, Class 2, SELV / LIM, Maximum 40.0 W
Terminal connecting wire size 16 - 24 AWG	
Connecting torque 35 oz-in (2.2 lbf-in) (0.25 Nm)	
Maximum surrounding air temperature rating, 50°C	
For use in Pollution Degree 2 environment	
All interface ports are intended to be directly connected to an isolated secondary circuit	
For use on a flat surface of a type 4X Indoor Use Only enclosure	


## CUTOUT DIMENSIONS

### CM5-T4W

The **C-more** CM5-T4W touch panel is mounted into a cutout through the control cabinet and secured with two (2) mounting clips. The mounting clips are provided with the touch panel. The mounting clips will insert into a series of slots around the rear perimeter of the touch panel. Each clip has a tab that will mate to a slot. The screw of each mounting clip needs to be tightened to the torque rating shown in the table below so that the gasket is compressed to form the proper seal between the panel and cabinet surface.

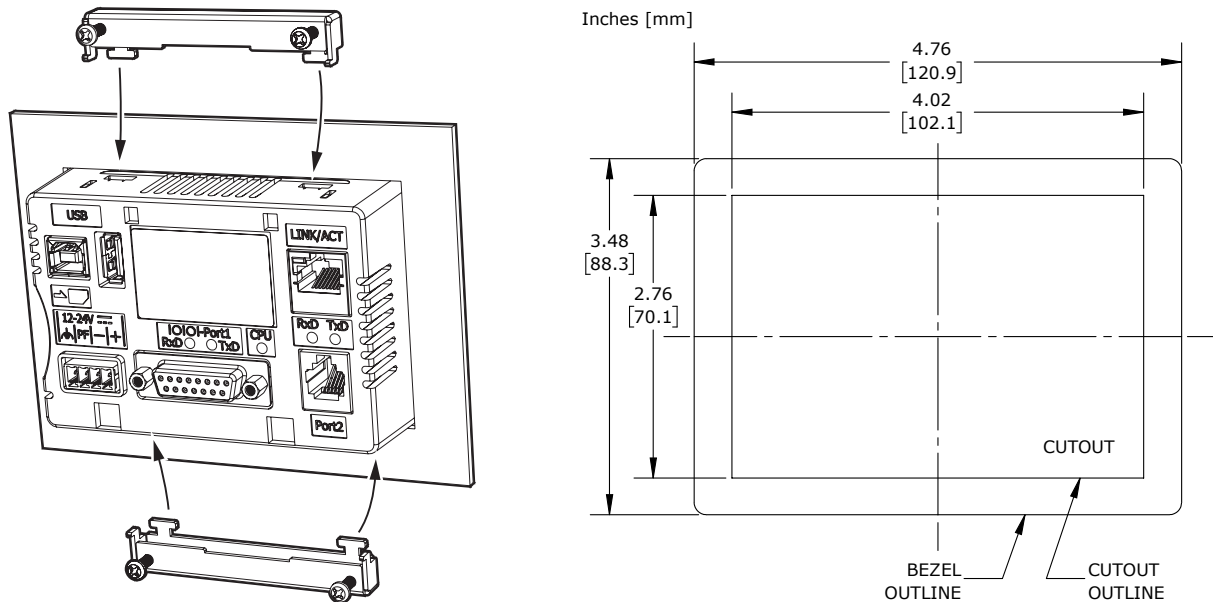


### ENCLOSURE MOUNTING THICKNESS RANGES AND MOUNTING CLIP SCREW TORQUE

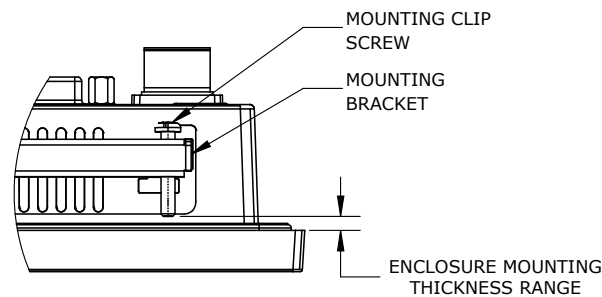


Touch Panel Size	Enclosure Thickness Range	Mounting Clip Screw Torque	Material
4-inch	0.039 - 0.20 inch [1 - 5 mm]	21 - 28 oz-in [0.15 - 0.20 Nm]	Metal
7-inch through 22-inch		135 - 149 oz-in [0.95 - 1.05 Nm]	

**CM5-T7W**

The **C-more** CM5-T7W touch panel is mounted into a cutout through the control cabinet and secured with four (4) mounting clips. The mounting clips are provided with the touch panel. The mounting clips will insert into a series of slots around the rear perimeter of the touch panel. Each clip has a tab that will mate to a slot. The screw of each mounting clip needs to be tightened to the torque rating shown in the table below so that the gasket is compressed to form the proper seal between the panel and cabinet surface.

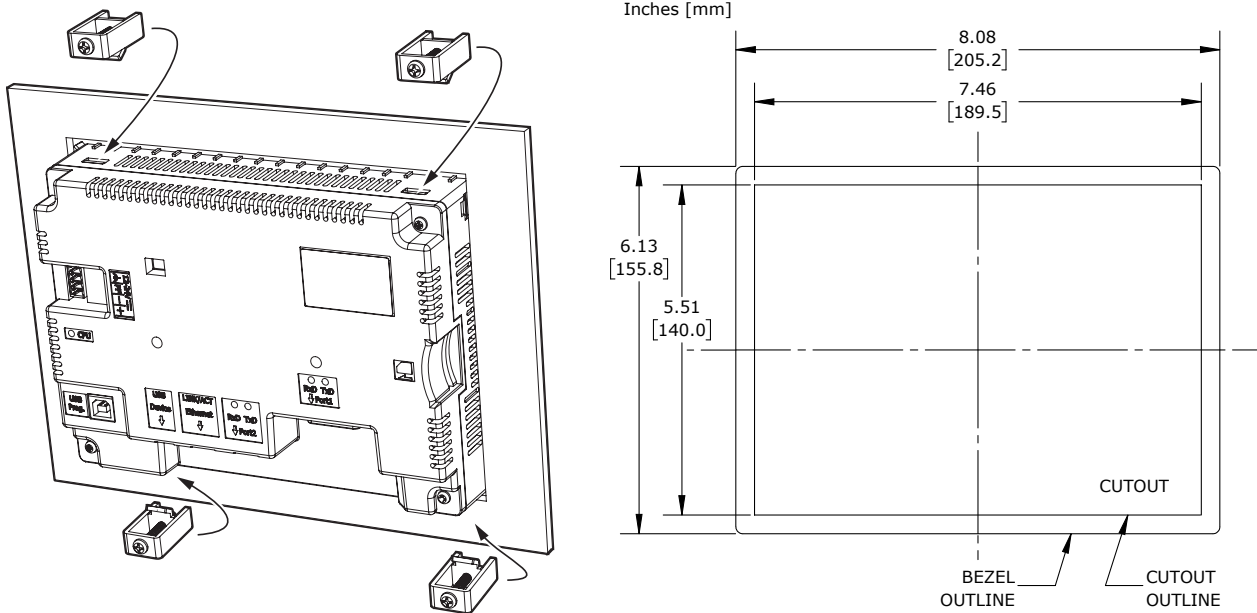


**ENCLOSURE MOUNTING THICKNESS RANGES AND MOUNTING CLIP SCREW TORQUE**

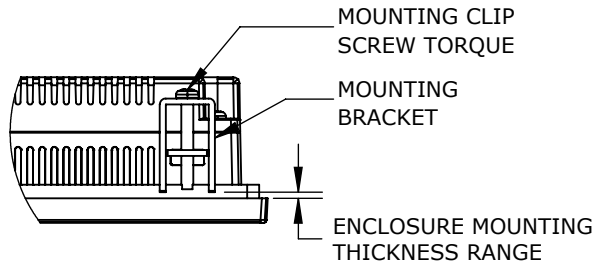


Touch Panel Size	Enclosure Thickness Range	Mounting Clip Screw Torque	Material
4-inch	0.039 - 0.20 inch [1 - 5 mm]	21 - 28 oz-in [0.15 - 0.20 Nm]	Metal
7-inch through 22-inch		135 - 149 oz-in [0.95 - 1.05 Nm]	

**CM5-T10W**

The **C-more** CM5-T10W touch panel is mounted into a cutout through the control cabinet and secured with four (4) mounting clips. The mounting clips are provided with the touch panel. The mounting clips will insert into a series of slots around the rear perimeter of the touch panel. Each clip has a tab that will mate to a slot. The screw of each mounting clip needs to be tightened to the torque rating shown in the table below so that the gasket is compressed to form the proper seal between the panel and cabinet surface.

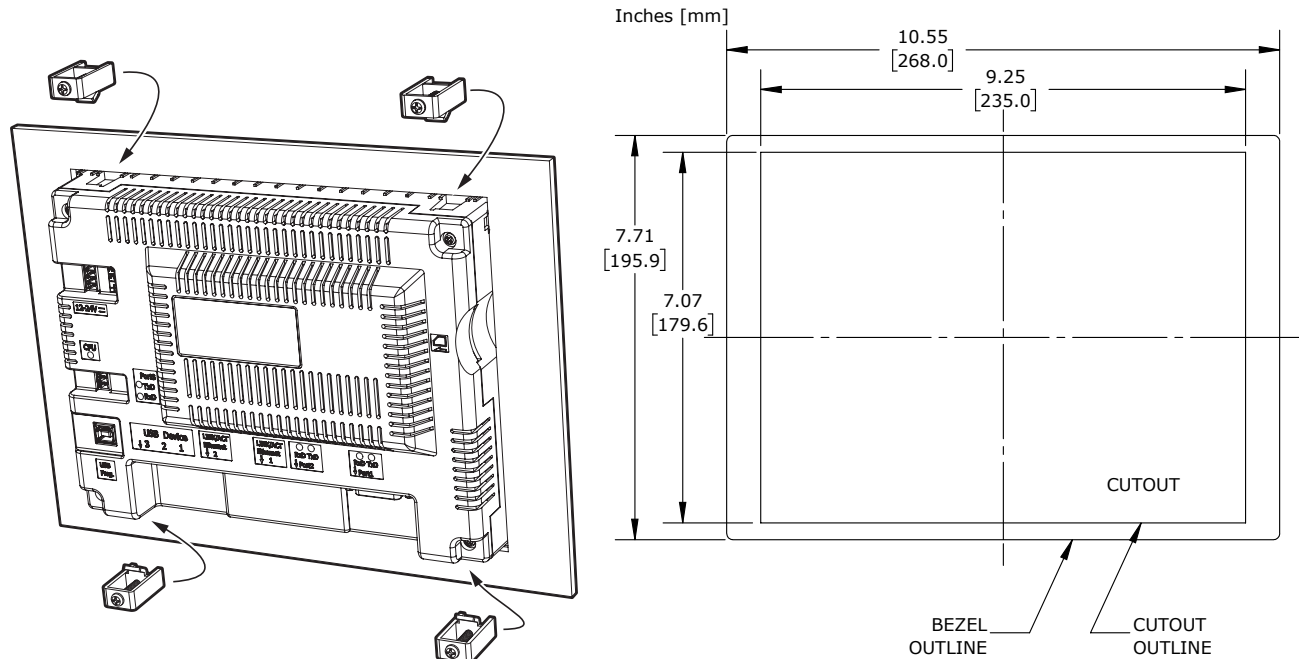


**ENCLOSURE MOUNTING THICKNESS RANGES AND MOUNTING CLIP SCREW TORQUE**

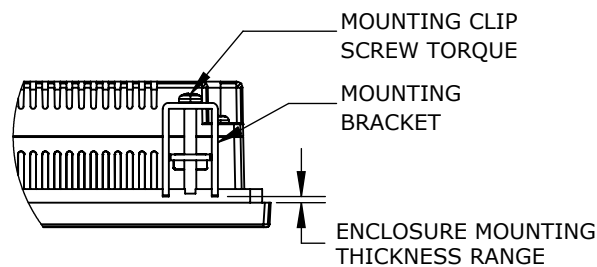


Touch Panel Size	Enclosure Thickness Range	Mounting Clip Screw Torque	Material
4-inch	0.039 - 0.20 inch [1 - 5 mm]	21 - 28 oz-in [0.15 - 0.20 Nm]	Metal
7-inch through 22-inch		135 - 149 oz-in [0.95 - 1.05 Nm]	

**CM5-T12W**

The **C-more** CM5-T12W touch panel is mounted into a cutout through the control cabinet and secured with eight (8) mounting clips. The mounting clips are provided with the touch panel. The mounting clips will insert into a series of slots around the rear perimeter of the touch panel. Each clip has a tab that will mate to a slot. The screw of each mounting clip needs to be tightened to the torque rating shown in the table below so that the gasket is compressed to form the proper seal between the panel and cabinet surface.

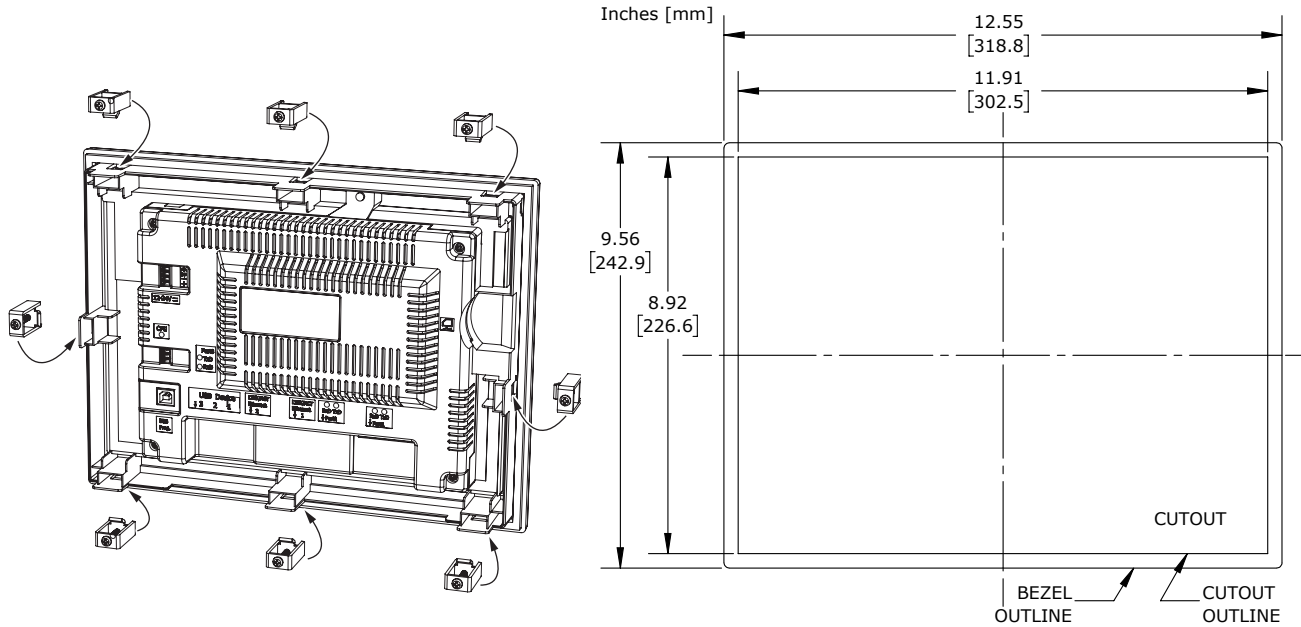

**ENCLOSURE MOUNTING THICKNESS RANGES AND MOUNTING CLIP SCREW TORQUE**

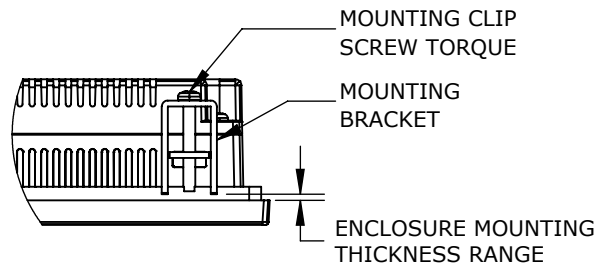


Touch Panel Size	Enclosure Thickness Range	Mounting Clip Screw Torque	Material
4-inch	0.039 - 0.20 inch [1 - 5 mm]	21 - 28 oz-in [0.15 - 0.20 Nm]	Metal
7-inch through 22-inch		135 - 149 oz-in [0.95 - 1.05 Nm]	




**CM5-T15W**

The **C-more** CM5-T15W touch panel is mounted into a cutout through the control cabinet and secured with eight (8) mounting clips. The mounting clips are provided with the touch panel. The mounting clips will insert into a series of slots around the rear perimeter of the touch panel. Each clip has a tab that will mate to a slot. The screw of each mounting clip needs to be tightened to the torque rating shown in the table below so that the gasket is compressed to form the proper seal between the panel and cabinet surface.

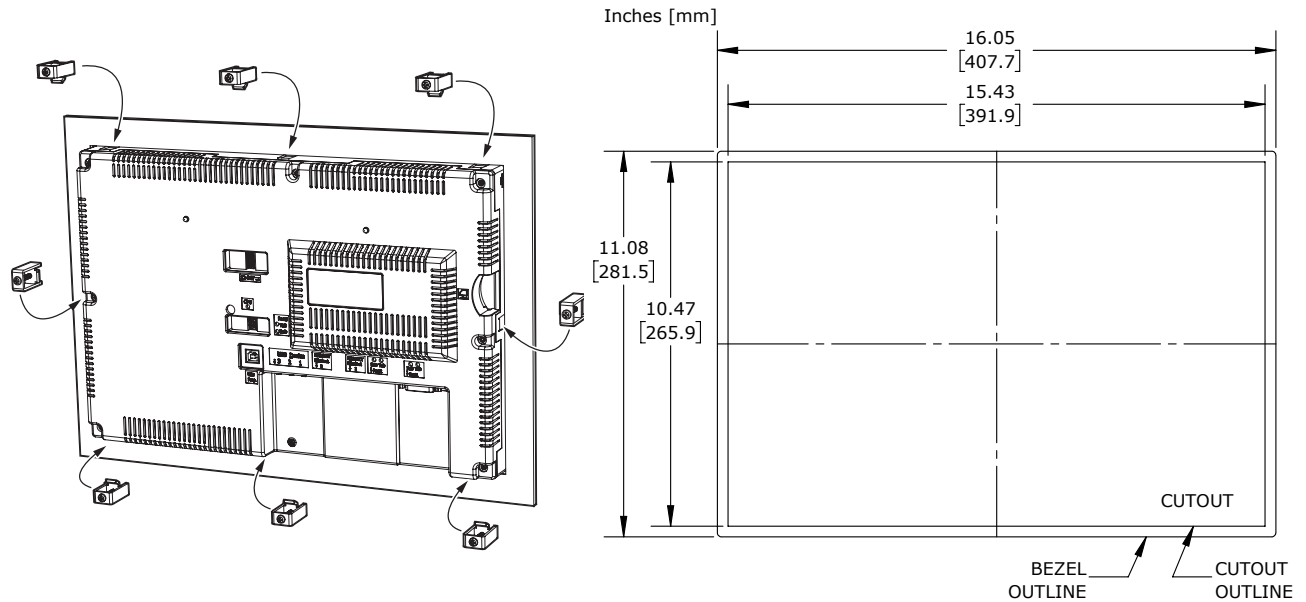


**ENCLOSURE MOUNTING THICKNESS RANGES AND MOUNTING CLIP SCREW TORQUE**

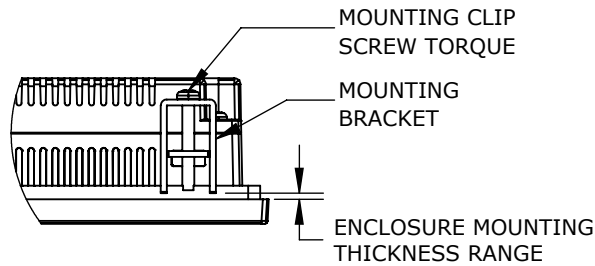


Touch Panel Size	Enclosure Thickness Range	Mounting Clip Screw Torque	Material
4-inch	0.039 - 0.20 inch [1 - 5 mm]	21 - 28 oz-in [0.15 - 0.20 Nm]	Metal
7-inch through 22-inch		135 - 149 oz-in [0.95 - 1.05 Nm]	

**CM5-T22W**

The **C-more** CM5-T22W touch panel is mounted into a cutout through the control cabinet and secured with twelve (12) mounting clips. The mounting clips are provided with the touch panel. The mounting clips will insert into a series of slots around the rear perimeter of the touch panel. Each clip has a tab that will mate to a slot. The screw of each mounting clip needs to be tightened to the torque rating shown in the table below so that the gasket is compressed to form the proper seal between the panel and cabinet surface.

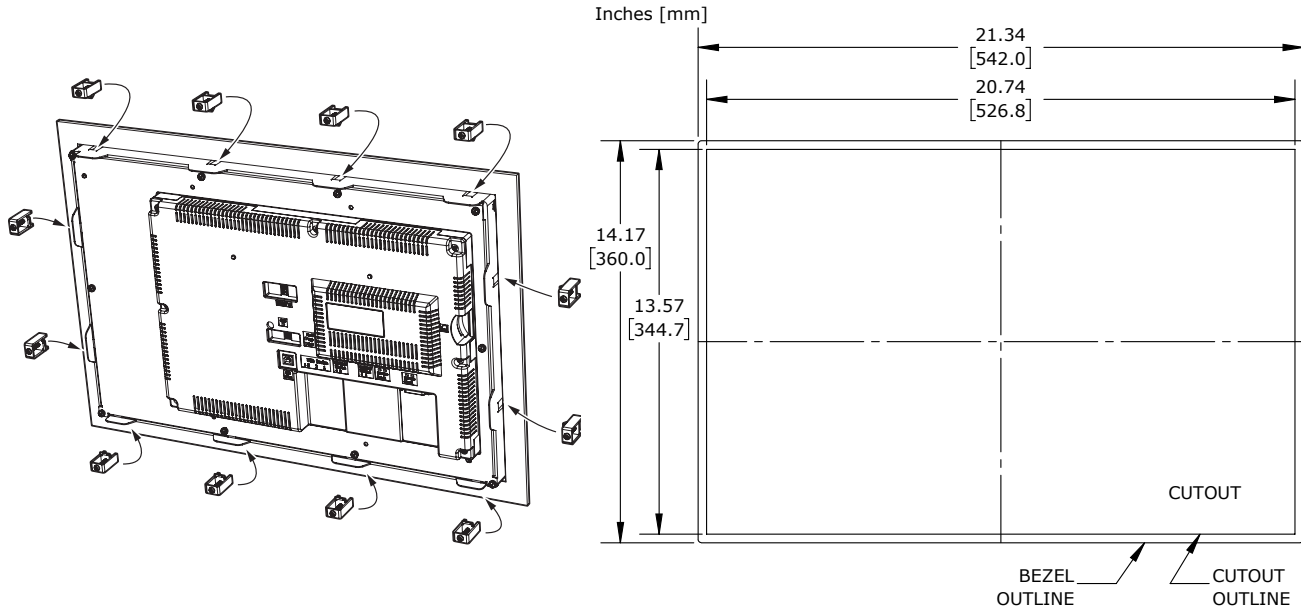


**ENCLOSURE MOUNTING THICKNESS RANGES AND MOUNTING CLIP SCREW TORQUE**

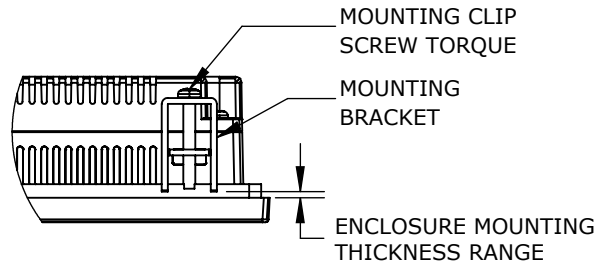

Touch Panel Size	Enclosure Thickness Range	Mounting Clip Screw Torque	Material
4-inch	0.039 - 0.20 inch [1 - 5 mm]	21 - 28 oz-in [0.15 - 0.20 Nm]	Metal
7-inch through 22-inch		135 - 149 oz-in [0.95 - 1.05 Nm]	

### MOUNTING CLEARANCES

The following drawing shows the mounting clearances for the **C-more** touch panel. There should be a minimum of 4 inches of space between all sides of the panel and the nearest object or obstruction and at least 1.72 inches between the rear of the panel and the nearest object or obstruction.

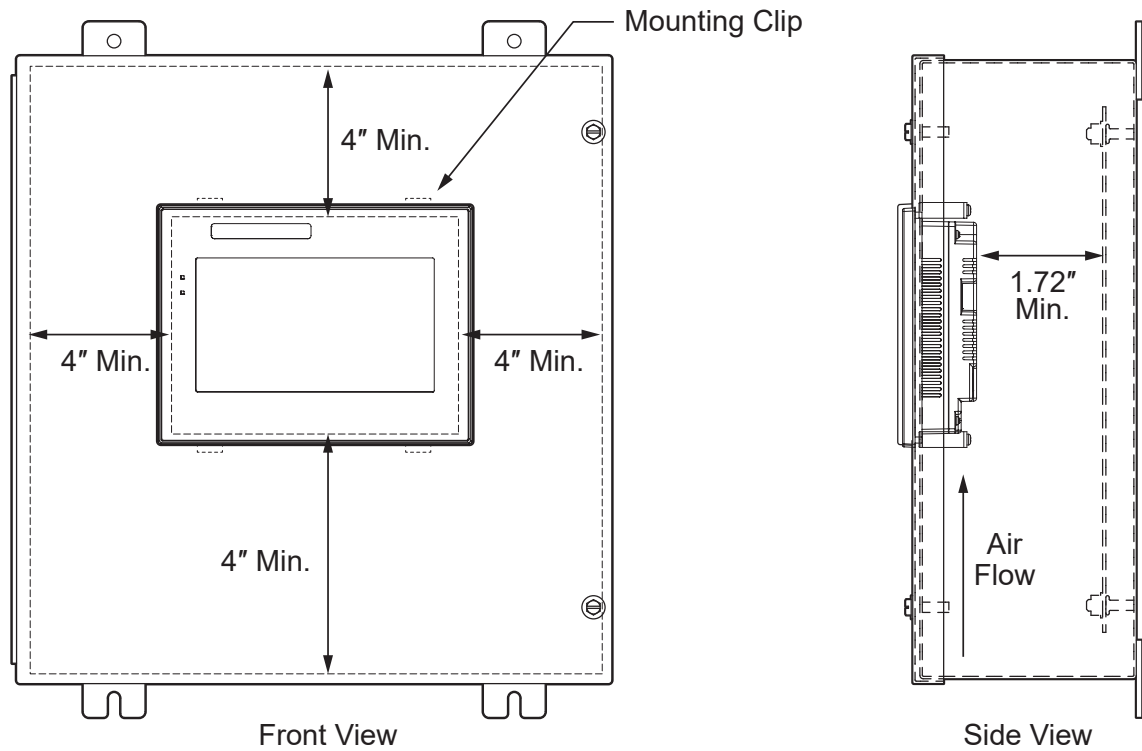

### WIRING GUIDELINES

---

**WARNING:** TO MINIMIZE THE RISK OF POTENTIAL SAFETY PROBLEMS, YOU SHOULD FOLLOW ALL APPLICABLE LOCAL AND NATIONAL CODES THAT REGULATE THE INSTALLATION AND OPERATION OF YOUR EQUIPMENT. THESE CODES VARY FROM AREA TO AREA AND IT IS YOUR RESPONSIBILITY TO DETERMINE WHICH CODES SHOULD BE FOLLOWED, AND TO VERIFY THAT THE EQUIPMENT, INSTALLATION, AND OPERATION ARE IN COMPLIANCE WITH THE LATEST REVISION OF THESE CODES.

EQUIPMENT DAMAGE OR SERIOUS INJURY TO PERSONNEL CAN RESULT FROM THE FAILURE TO FOLLOW ALL APPLICABLE CODES AND STANDARDS. WE DO NOT GUARANTEE THE PRODUCTS DESCRIBED IN THIS PUBLICATION ARE SUITABLE FOR YOUR PARTICULAR APPLICATION, NOR DO WE ASSUME ANY RESPONSIBILITY FOR YOUR PRODUCT DESIGN, INSTALLATION, OR OPERATION.



IF YOU HAVE ANY QUESTIONS CONCERNING THE INSTALLATION OR OPERATION OF THIS EQUIPMENT, OR IF YOU NEED ADDITIONAL INFORMATION, PLEASE CALL TECHNICAL SUPPORT AT 1-800-633-0405 OR 770-844-4200.

THIS PUBLICATION IS BASED ON INFORMATION THAT WAS AVAILABLE AT THE TIME IT WAS PRINTED. AT AUTOMATIONDIRECT.COM® WE CONSTANTLY STRIVE TO IMPROVE OUR PRODUCTS AND SERVICES, SO WE RESERVE THE RIGHT TO MAKE CHANGES TO THE PRODUCTS AND/OR PUBLICATIONS AT ANY TIME WITHOUT NOTICE AND WITHOUT OBLIGATION. THIS PUBLICATION MAY ALSO DISCUSS FEATURES THAT MAY NOT BE AVAILABLE IN CERTAIN REVISIONS OF THE PRODUCT.

---

#### AGENCY APPROVALS

Some applications require agency approvals for particular components. The **C-more** touch panel agency approvals are listed below:

- UL (Underwriters' Laboratories, Inc.)
- CUL (Canadian Underwriters' Laboratories, Inc.)
- CE (European Economic Union)


**WIRING GUIDELINES (CONT'D)**

**PROVIDING POWER TO THE TOUCH PANEL**

- Connect a dedicated 12-24 VDC Class 2 power supply to the DC connector on the rear of the **C-more** touch panel, include wiring the ground terminal to a proper equipment ground
- Turn on the power source and check the LED status indicators on the front and rear of the **C-more** touch panel for proper indication (see next page)



**NOTE:** A dedicated power supply is recommended. If the power supply also feeds inductive loads such as solenoids or relays, the transients caused by these loads can affect the operation of the panel or damage panel components.

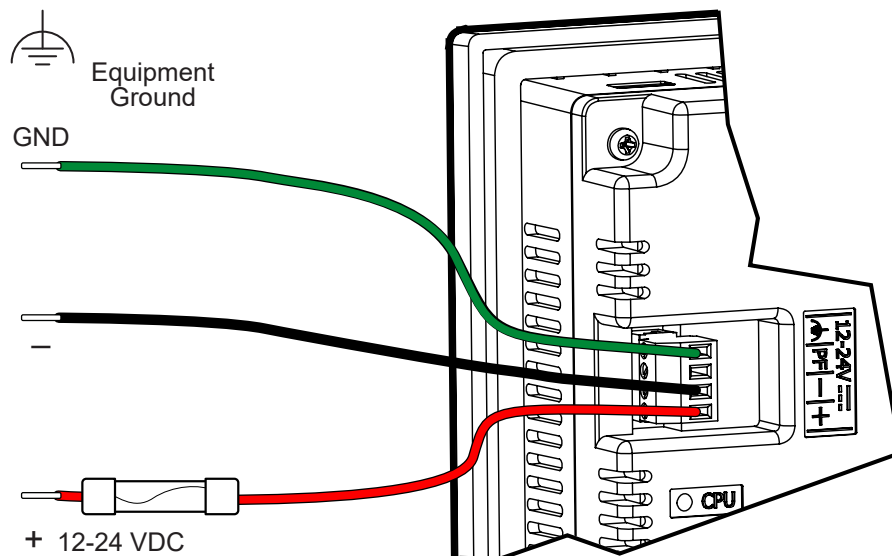

**WARNING:** CONNECTING POWER OR GROUND THE PF TERMINAL MAY RESULT IN THE CM5 PANEL NOT OPERATING PROPERLY.


Recommended DC Supply Fuse		
Panel Size	Rating	ADC p/n
4" - 10"	2.5 A	MDL2-5
12" - 22"	5.0 A	MDL5

DC-CON Tightening Torque	
Power connector screw torque	35.4 oz-in (0.25 Nm)



**WARNING:** Use 60 / 75°C COPPER CONDUCTORS ONLY. 16 - 24 AWG, STRIP LENGTH - 7MM [0.28"]

C-MORE LED STATUS INDICATORS

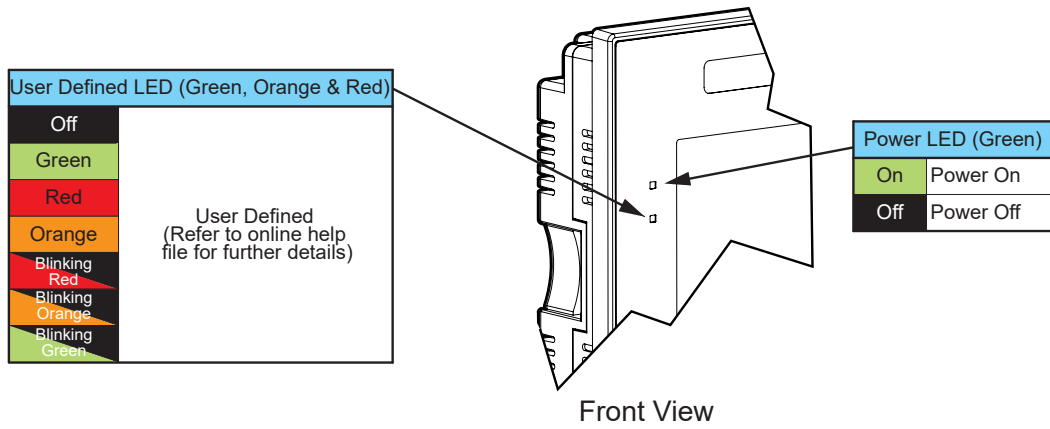

NOTE: CM5-T4W doesn't have a User Defined LED or Power LED.

