

DANGER!



Potentially hazardous voltages are present. Electrical shock can cause death or serious injury. Installation should be done by qualified personnel following all National, State & Local Codes.



Présence de tensions potentiellement dangereuses. Une décharge électrique peut causer la mort ou des blessures graves. L'installation devrait être effectuée par du personnel qualifié suivant tous les codes nationaux, provinciaux et locaux.


BE SURE TO REMOVE ALL POWER SUPPLYING THIS EQUIPMENT BEFORE CONNECTING OR DISCONNECTING WIRING. READ INSTRUCTIONS BEFORE INSTALLING OR OPERATING THIS DEVICE. KEEP FOR FUTURE REFERENCE.

S'ASSURER DE SUPPRIMER TOUTE ALIMENTATION ÉLECTRIQUE DE CET ÉQUIPEMENT AVANT DE BRANCHER OU DE DÉBRANCHER LES CÂBLAGES. LIRE LES INSTRUCTIONS AVANT D'INSTALLER OU D'UTILISER CET APPAREIL ET LES CONSERVER POUR RÉFÉRENCE ULTÉRIEURE.

INSTALLATION & SETUP

Mount the product to a panel in a suitable enclosure with one (1) #10 screw with a maximum tightening torque of 15 in.-lbs. Use ¼" quick-connect terminals and make all wiring connections as described on Page 2.

Setup is accomplished through the use of a 6-position DIP-switch (see Diagram right). Follow ON & OFF positions as marked on switches. A small screwdriver or pointed tool makes DIP-switch selection easier. Select the settings for function, time delay & onboard or remote pot adjustment as described below in Steps 1 & 2 (all products) and Step 3 (T2R-M1-ADJ-240U & T2R-M2-ADJ-240U).

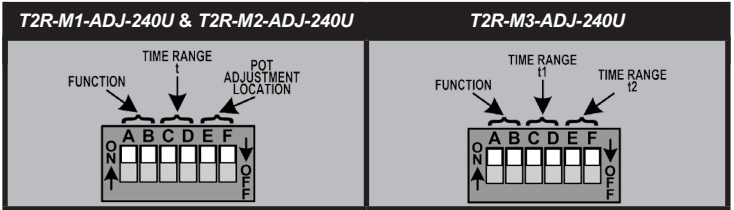

STEP 1 - SETTING THE FUNCTION (Switches A & B)
(T2R-M1-ADJ-240U, T2R-M2-ADJ-240U & T2R-M3-ADJ-240U)

Each product comes with four user-selectable functions (see table below to determine which functions are included with each Catalog Number). Switches A & B are used to select one of these four functions (see the descriptions of how each function operates on Page 2 as a guide). Using the table below, set Switches A & B to ON or OFF to select the function. **NOTE:** Selecting a function must be done without Input Voltage applied. Changes made with Input Voltage applied will not be recognized until the next application of Input Voltage.

CATALOG NUMBER	FUNCTION	SWITCHES	
		A	B
T2R-M1-ADJ-240U	ON DELAY	ON	ON
	OFF DELAY	OFF	ON
	INTERVAL	ON	OFF
	SINGLE SHOT	OFF	OFF
T2R-M2-ADJ-240U	FLASHER OFF	ON	ON
	FLASHER ON	OFF	ON
	WATCHDOG	ON	OFF
	ONE SHOT FALLING EDGE	OFF	OFF
T2R-M3-ADJ-240U	REPEAT CYCLE OFF	ON	ON
	REPEAT CYCLE ON	OFF	ON
	DELAYED INTERVAL	ON	OFF
	TRIGGERED DELAYED INTERVAL	OFF	OFF

STEP 2 - SETTING THE TIME DELAY (Switches C & D)
(T2R-M1-ADJ-240U & T2R-M2-ADJ-240U only)

There are four user-selectable time ranges (t) available in each product that are used with either onboard or remote adjustment. Switches C & D are used to select one of these time ranges. Using the table below, set Switches C & D to ON or OFF to select the time range. Then adjust within the selected time range using either the onboard potentiometer or remote potentiometer (see Step 3 below). **NOTE:** Selecting a time range must be done prior to the start of a timing cycle. Changes made during a timing cycle will be ignored until the start of the next timing cycle.

CATALOG NUMBER	TIME RANGE OPTIONS (t)	SWITCHES	
		C	D
T2R-M1-ADJ-240U	0.1-10S	ON	ON
	1-100S	OFF	ON
	10-1000S	ON	OFF
T2R-M2-ADJ-240U	1-100M	OFF	OFF
	0.1-10S	ON	ON
	1-100S	OFF	ON
T2R-M2-ADJ-240U	10-1000S	ON	OFF
	1-100M	OFF	OFF

STEP 2 - SETTING THE TIME DELAY (Switches C, D, E & F)
(T2R-M3-ADJ-240U only)

There are four user-selectable time ranges for both the first time (t1) and the second time (t2), allowing for independently selectable & adjustable ON & OFF times. Switches C & D are used to select the time range for t1. Switches E & F are used to select the time range for t2. Using the table below, set Switches C, D, E & F to ON or OFF to select the time range for t1 & t2. Then adjust within the selected time range using the onboard potentiometers. This product comes with onboard adjustable pot option only—it does not have an option to choose remote pot adjustment. **NOTE:** Selecting a time range must be done prior to the start of a timing cycle. Changes made during a timing cycle will be ignored until the start of the next timing cycle. Continue set-up & installation on the next page.

CATALOG NUMBER	TIME RANGE (t1) OPTIONS	SWITCHES		TIME RANGE (t2) OPTIONS	SWITCHES	
		C	D		E	F
T2R-M3-ADJ-240U	0.1-10S	ON	ON	0.1-10S	ON	ON
	1-100S	OFF	ON	1-100S	OFF	ON
	1-100M	ON	OFF	1-100M	ON	OFF
	10-1000M	OFF	OFF	10-1000M	OFF	OFF

STEP 3 - SELECTING ONBOARD OR REMOTE ADJUSTMENT (Switches E & F)
(T2R-M1-ADJ-240U & T2R-M2-ADJ-240U only)

These products come with an option to choose either onboard time delay adjustment using the blue knob or remote time delay adjustment using one of three different remote pot values. Switches E & F are used to select one of these options. Using the table below, set Switches E & F to ON or OFF to select either onboard or remote adjustment. If selecting remote pot, a value of 100KΩ, 1MΩ or 2MΩ must be chosen to match the value of the remote potentiometer. **NOTE:** Selecting a pot adjustment option must be done without Input Voltage applied. Changes made with Input Voltage applied will not be recognized until the next application of Input Voltage. If Remote Pot option is selected, the onboard Potentiometer setting is ignored. Continue set-up & installation on the next page.

CATALOG NUMBER	POT SELECT OPTIONS	SWITCHES	
		E	F
T2R-M1-ADJ-240U & T2R-M2-ADJ-240U	ONBOARD POT	ON	ON
	REMOTE POT 100K	OFF	ON
	REMOTE POT 1M	ON	OFF
	REMOTE POT 2M	OFF	OFF

TROUBLESHOOTING: If the unit fails to operate properly, check that all connections are correct per the appropriate wiring diagram on the next page. If problems continue, contact Automation Direct for assistance.

REPLACING EXISTING PRODUCTS

These products are designed to replace thousands of Catalog Numbers from other manufacturers. Follow these directions for set-up & wiring the unit depending on the options offered on the product being replaced:

Onboard Adjustable Time Delay

To replace a product that has Onboard Adjustable Time Delay, set the time delay as shown on the previous page for onboard time delay adjustment, then set the onboard potentiometer to the same delay value as the old unit.

Onboard Fixed Time Delay

Although these units come with an onboard potentiometer, they can be used to replace products with fixed time delays. After selecting the desired time range as shown on the previous page for onboard time delay adjustment, set the top-mounted potentiometer at the fixed delay required (epoxy can be applied to prevent further changes if desired).

Remote Time Delay (T2R-M1-ADJ-240U & T2R-M2-ADJ-240U only)

To replace a product that has a Remote Time Delay, use Terminals 6 & 7 for connecting either a separate potentiometer for remote time delay adjustment or a resistor for fixed time delay. First, set the time delay as shown on the previous page for remote time delay adjustment. Then select remote pot time delay adjustment with Switches E & F. Either connect a separate potentiometer with a value of 100KΩ, 1MΩ or 2MΩ to terminals 6 & 7 or a resistor with a value as calculated below:

$$R = \frac{T}{T_{max}} \times R_T$$

R = Resistance value required by T
 T = Desired time delay
 T_{max} = Maximum time delay of selected range
 R_T = Value of remote pot selected with Switches E & F

Relay Common

If the product being replaced has a connection to the Relay Common as a separate terminal (Fig. A below), connect the wires as shown in Fig. A. If the product being replaced has an internal connection between Input Voltage & the relay common (Fig. B), a jumper must be added between terminals 1 & 2 as shown in Fig. C to simulate the internal connection (see arrow below). No other connection is required to Terminal 1 other than this jumper:

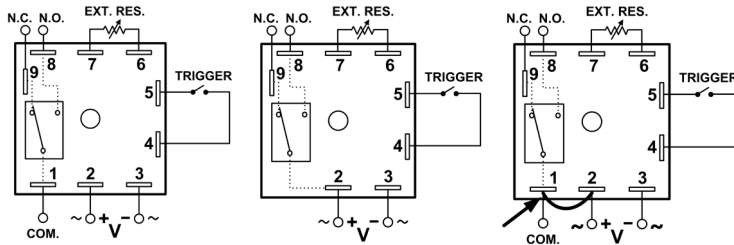


Fig. A

Fig. B

Fig. C

Trigger (Control Switch)

If the product being replaced has the Trigger isolated (Fig. D below), make wire connections as shown in Fig. D. If the product being replaced has the Trigger Switch connected to Input Voltage (Fig. E below), connect one wire of the Trigger Switch to Pin 5 & the other wire to Input Voltage as shown in Fig. D (see arrow below):

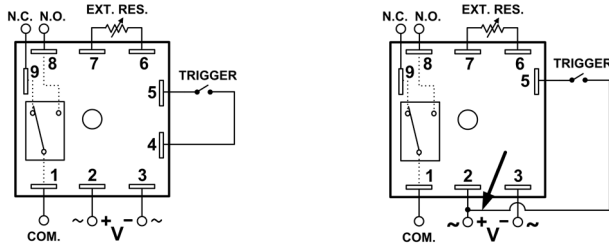


Fig. D

Fig. E

NOTE: Some Functions (noted by an asterisk in the tables at right) require the use of a Trigger to initiate the unit as indicated by the dotted line in the wiring diagrams above. For Triggered DC Input Voltages, make sure the polarity matches the connection diagram. Using a solid state switch to initiate the time sequence is acceptable. See www.macromatic.com/leakage or contact Macromatic for information regarding leakage current limits and other solid state design considerations.

Function Descriptions

T2R-M1-ADJ-240U	
FUNCTION	TIMING CHART
ON DELAY Delay on Make Delay on Operate	
INTERVAL ON Interval	
OFF DELAY * Delay on Release Delay on Break Delay on De-Energization	
SINGLE SHOT* One Shot Momentary Interval	

* Requires Trigger

T2R-M2-ADJ-240U

T2R-M2-ADJ-240U	
FUNCTION	TIMING CHART
FLASHER (Off First)	
FLASHER (On First)	
WATCHDOG * Retriggerable Single Shot	
SINGLE SHOT FALLING EDGE*	

* Requires Trigger

T2R-M3-ADJ-240U

T2R-M3-ADJ-240U	
FUNCTION	TIMING CHART
REPEAT CYCLE (Off 1st)	
REPEAT CYCLE (On First)	
DELAYED INTERVAL Single Cycle	
TRIGGERED DELAYED INTERVAL * Single Cycle	

* Requires Trigger