


Installation and Specifications

In This Chapter. . . .

- Dimensions for Mounting
 - Panel Specifications
 - Power Supply Connections
 - Connecting the Configuration Cable
 - Selecting a Communications Cable
 - Communications Cable Details
-

Dimensions for Mounting

Installation and Specifications

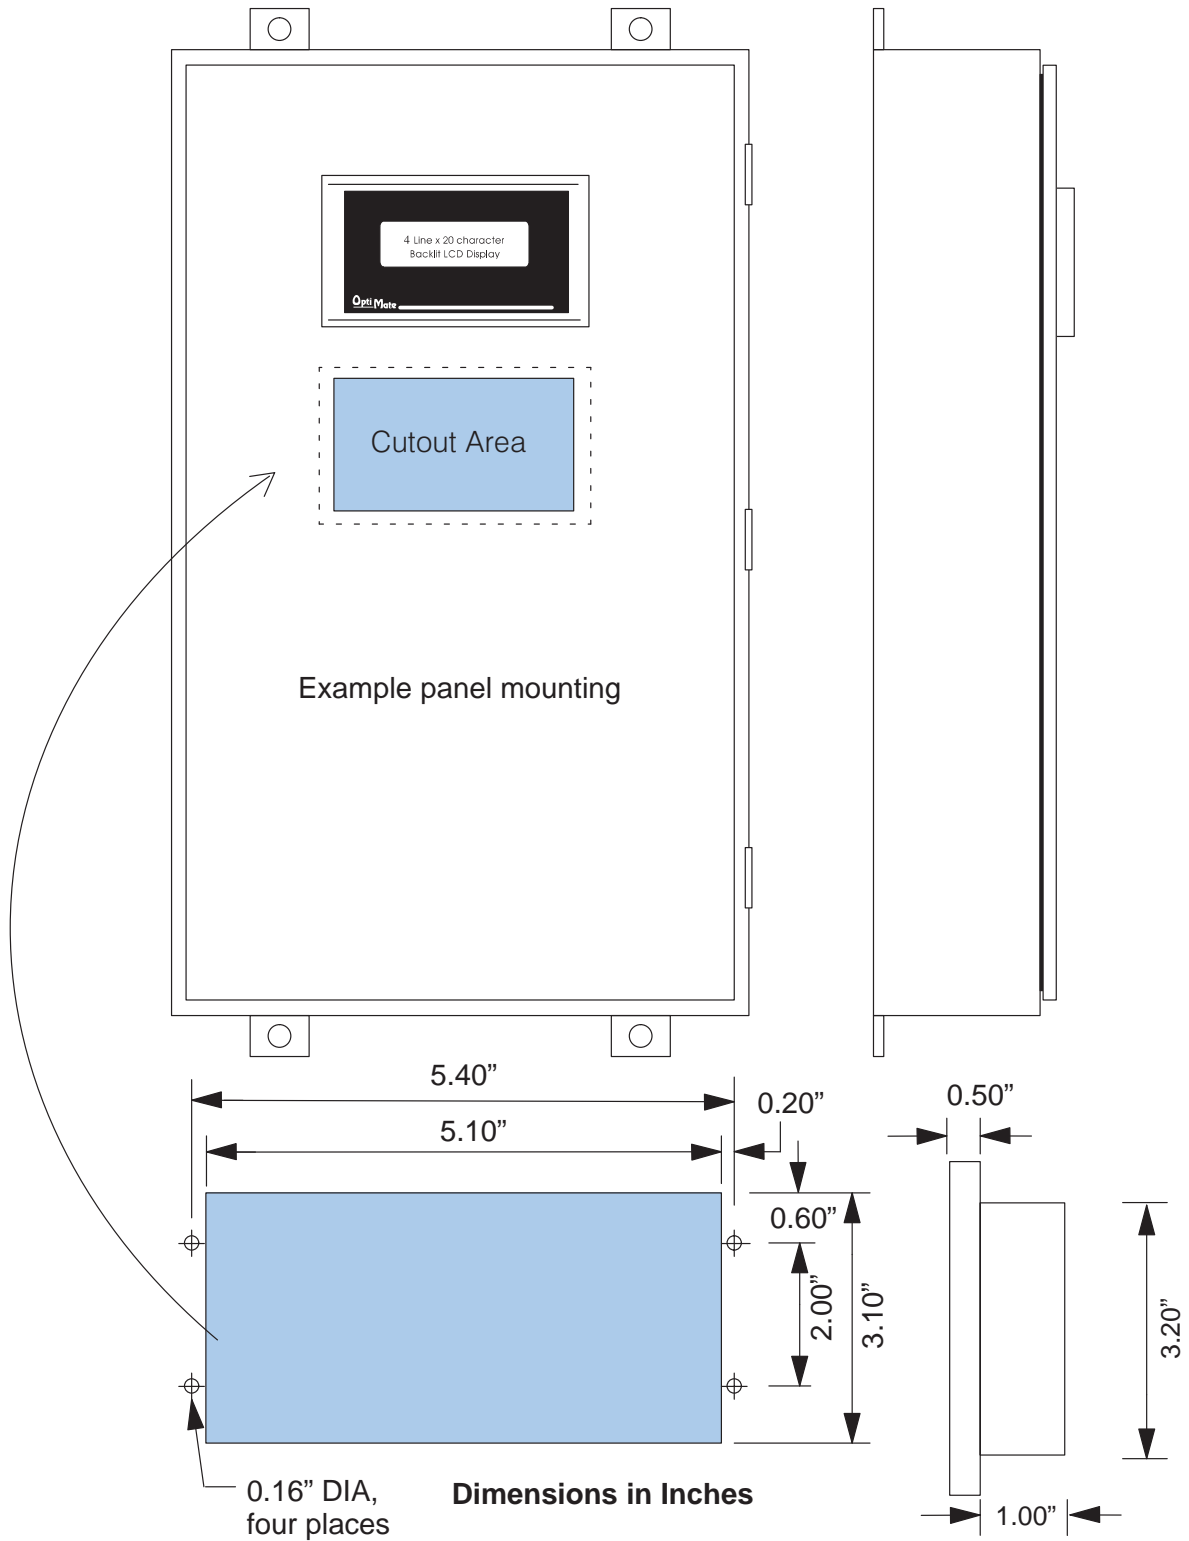

Panel Specifications

Physical Specifications

Weight	8 ounces
Panel Fasteners	Four 6x32 threaded studs
LED Display	4 line x 20 character STN with LED backlight; 4.75mm high x 2.95mm wide character size
NEMA Rating	NEMA 4 (when properly installed)

Environmental Specifications

Operating Temperature	32°F to 122°F (0°C to 50°C)
Storage Temperature	-4°F to 158°F (-20°C to 70°C)
Operating Humidity	95% (non-condensing)
Air Composition	No corrosive gases permitted

Operating Specifications

Power Consumption	0.75W @ 5 VDC (Power On surge of 0.44A for 1 ms)
Power Connector	Three terminal DC power plug, center negative
Power Supply	+5 VDC external power supply required for configuration on all panels; required for operation on all PLCs except DL05, DL105, DL205, and DL405
Minimum/Maximum Supply Voltage	+5 VDC only
Diagnostics	LED Status
Communication Link	RS-232 4800 to 19200 baud 6-pin RJ12 phone jack type connector


Power Supply Connections

OP400 series panels require +5 VDC input power. An optional 5 VDC external power supply that plugs into a standard 120 VAC receptacle is available (part no. OP-PS400). This power supply (or equivalent) is required for configuring your panel. The power supply is also required for operation **unless** you are using a DL05, DL105, DL205 or DL405 PLC (these products supply 5VDC through the communications cable). All other PLCs, including DL305 and Allen-Bradley 5/03, 5/04 and Micrologix, require the use of an external 5VDC power supply during operation.


NOTE: Only use a 5 VDC power supply that has a **center negative** DC power jack.




Configuration: 5 VDC Power Supply Required For All 400 series panels

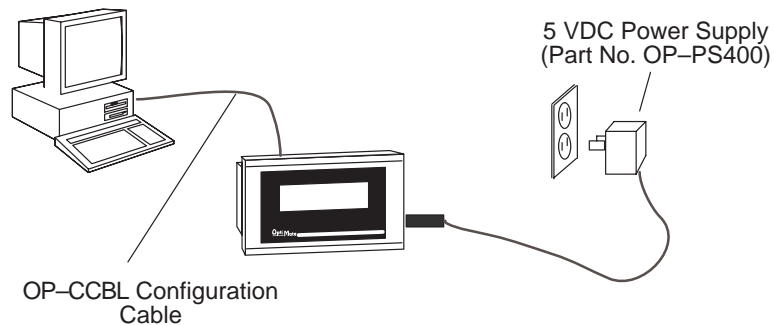

Operation Using a D3-330 w/DCU, D3-340, D3-350, bottom port of DL405, or Allen-Bradley CPU: 5 VDC Power Supply Required

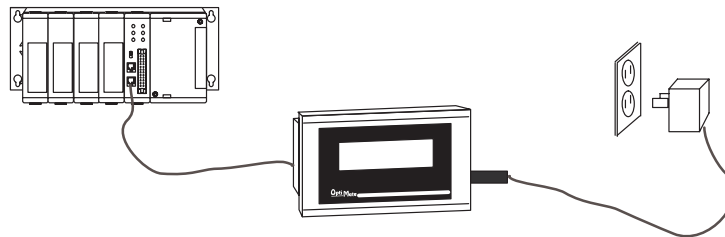

Operation Using a DL05, DL105, DL205, or top port of DL405 CPU: 5 VDC Power Supply Not Required

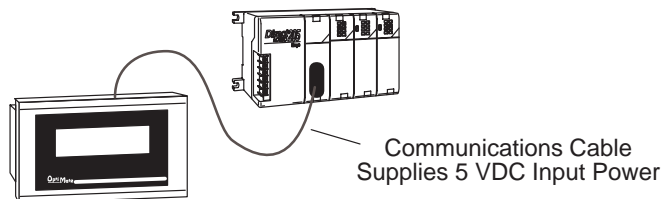

Power Supply Connections




Insert power supply connector into receptacle



Connecting the Configuration Cable

Configuration Cable

You will need two cables to use your OP-panel: A configuration cable (part number OP-CCBL) and a communications cable. Connect the configuration cable between the serial port on the rear of the OP-panel and the serial port of the personal computer. The panel may then be configured using the OP-WINEDIT configuration software. The figure below shows configuration cable connectors and wiring specifications. The wiring diagram refers to the cable connectors, *not* the communication ports. This cable is disconnected after configuration.

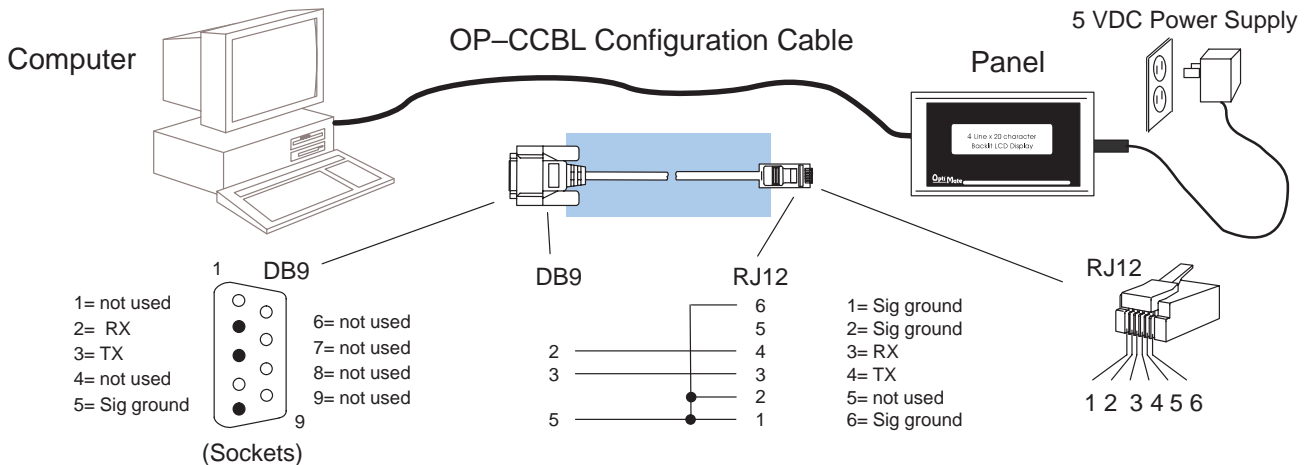

Selecting a Communications Cable

After configuration, connect the communications cable between the OP-panel and the PLC. Use the following table to select the proper communications cable.

Cables for OP400 Series OptiMate Panel-to-PLC Connections			
Family	CPU (or other device)	Port	Cable
<i>Direct</i> LOGIC™ DL05	D0-05xx	Ports 1 and 2	OP-2CBL-2
<i>Direct</i> LOGIC™ DL105	F1-130	Only one	OP-2CBL-2
<i>Direct</i> LOGIC™ DL205	D2-230	Only one	OP-2CBL-2
	D2-240	Top port	OP-2CBL-2
		Bottom port	OP-2CBL-2
	D2-250	Top port	OP-2CBL-2
		Bottom port	* (see note below)
D2-DCM (module)	Only port	* (see note below)	
<i>Direct</i> LOGIC™ DL305	D3-330	Requires DCU	* (see note below)
	D3-330P	Requires DCU	* (see note below)
	D3-340	Top port	OP-3CBL-1
		Bottom port	OP-3CBL-1
	D3-350	Top port	OP-2CBL-2
Bottom port		* (see note below)	
<i>Direct</i> LOGIC™ DL405	D4-430	Top port (15-pin)	OP-4CBL-3
		Bottom port (25-pin)	* (see note below)
	D4-440	Top port	OP-4CBL-3
		Bottom port	* (see note below)
	D4-450	Phone Jack	OP-2CBL-2
		Top port (15-pin)	OP-4CBL-3
		Bottom port (25-pin)	* (see note below)
	D4-DCM (module)	Only port	* (see note below)
	Slice I/O panels	Only one	OP-4CBL-3
TI305™ / SIMATIC® TI305™	325-07, PPX:325-07	Requires DCU	* (see note below)
	330-37, PPX:330-37	Requires DCU	* (see note below)
	325S-07 (or 325 w/ Stage Kt)	Requires DCU	* (see note below)
	330S-37, PPX:330S-37	Requires DCU	* (see note below)
	335-37, PPX:335-37	Phone Jacks	OP-3CBL-1
If DCU is used		* (see note below)	
TI405™ / SIMATIC® TI405™	425-CPU, PPX:425-CPU	Only one	OP-4CBL-3
	PPX:430-CPU	Top port (15-pin)	OP-4CBL-3
		Bottom port (25-pin)	* (see note below)
	435-CPU, PPX:435-CPU	Top port (15-pin)	OP-4CBL-3
		Bottom port (25-pin)	* (see note below)
Smart Slice™ I/O panels	Only one	OP-4CBL-3	
Allen-Bradley™ SLC 500	5/03, 5/04	Bottom port	OP-ACBL-3
Allen-Bradley	MicroLogix	Only one	OP-ACBL-4

* **Note:** Pre-assembled cables for connecting to these ports are not supplied by **Automationdirect.com**; however, you can use the cable pinout diagrams in the following section to make your own cables.

Communications Cable Details



The drawings on this page are for cables which **are** supplied by **Automationdirect.com**. Use this page if you need to make your own cables. We recommend using 22 AWG shielded cable.

OP400 Series Communications Cables



OP-2CBL-2
(DL05, DL105, DL205, D3-350, D4-450)




- 1= Sig ground
- 2= 5 VDC
- 3= RX
- 4= TX
- 5= not used
- 6= Sig ground

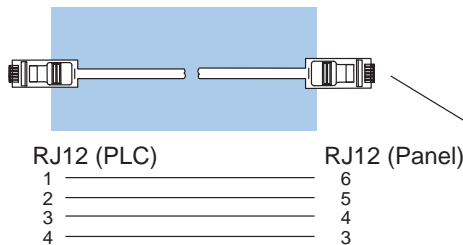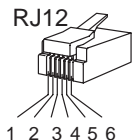

Panel Connection

OP-3CBL-1 (D3-340)


- 1= RX
- 2= TX
- 3= not used
- 4= Sig ground

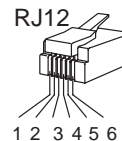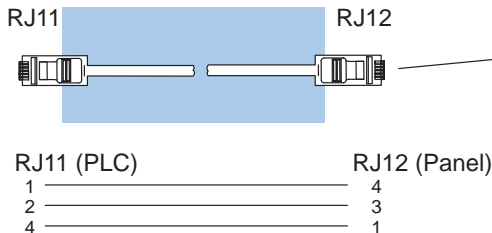


- 1= Sig ground
- 2= not used
- 3= RX
- 4= TX
- 5= 5 VDC
- 6= Sig ground

OP-4CBL-3 (DL405)

- 8= not used
- 7= not used
- 6= not used
- 5= not used
- 4= Sig ground
- 3= RX
- 2= TX
- 1= not used




- 15=Sig ground
- 14= Sig ground
- 13=Sig ground
- 12= not used
- 11= 5 VDC
- 10= not used
- 9= not used

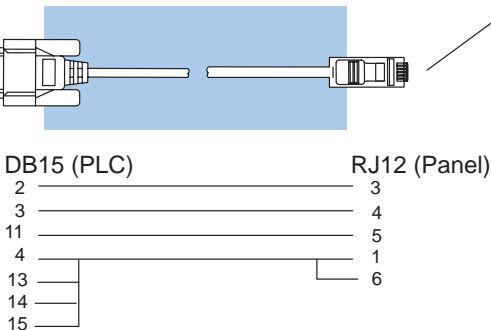


OP-ACBL-3
(Allen-Bradley)

- 1= not used
- 2= RX
- 3= TX
- 4= not used
- 5= Sig ground



- 6= not used
- 7= RTS
- 8= CTS
- 9= not used

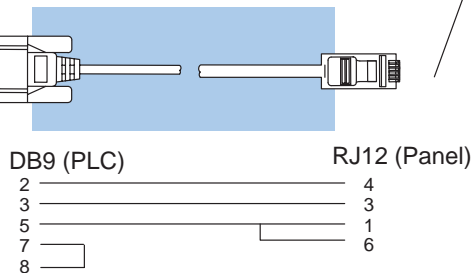


Installation and Specifications

The drawings on this page are for cables which **are not** supplied by **Automationdirect.com**. Use the drawings to make your own cable. We recommend using a 22 AWG or larger shielded cable.

OP400 Series Communications Cables (continued)



Make this cable for use with D2-250 15-pin bottom port.

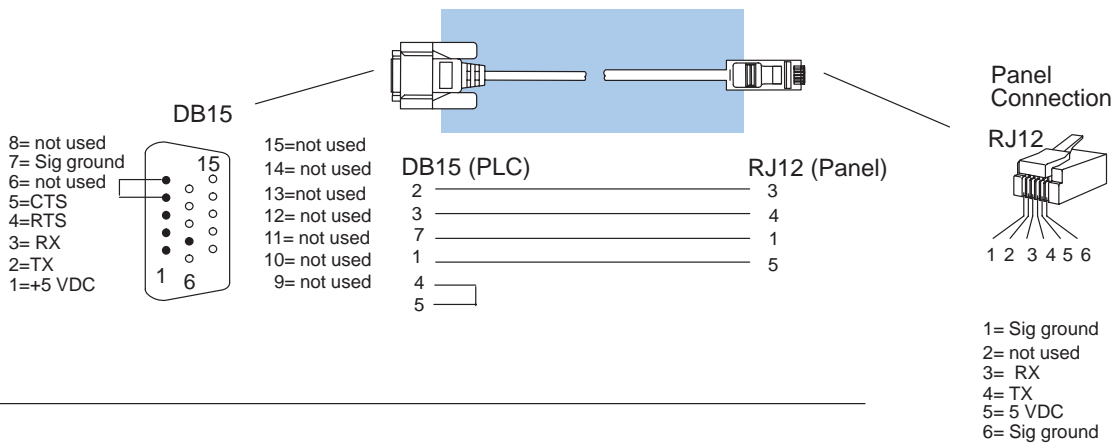

Make this cable for use with D3-330 w/DCU, D3-350, DL405 bottom ports, and all DCM modules (25-pin ports).

