

WARNING: To minimize the risk of potential safety problems, you should follow all applicable local and national codes that regulate the installation and operation of your equipment. These codes vary from area to area and it is your responsibility to determine which codes should be followed, and to verify that the equipment, installation, and operation are in compliance with the latest revision of these codes.

Equipment damage or serious injury to personnel can result from the failure to follow all applicable codes and standards. We do not guarantee the products described in this publication are suitable for your particular application, nor do we assume any responsibility for your product design, installation, or operation.


If you have any questions concerning the installation or operation of this equipment, or if you need additional information, please call Technical Support at 770-844-4200.

This publication is based on information that was available at the time it was printed. At AutomationDirect.com® we constantly strive to improve our products and services, so we reserve the right to make changes to the products and/or publications at any time without notice and without any obligation. This publication may also discuss features that may not be available in certain revisions of the product.

Removable Terminal Block Specifications

Part Number	P2-RTB	P2-RTB-1
Number of positions	18 Screw Terminals	18 Spring Clamp Terminals
Wire Range	30–16 AWG (0.051–1.31 mm ²) Solid / Stranded Conductor	28–16 AWG (0.081–1.31 mm ²) Solid / Stranded Conductor
	3/64 in. (1.2 mm) Insulation Maximum	3/64 in (1.2 mm) Insulation Maximum
	1/4 in (6–7 mm) Strip Length	19/64 in (7–8 mm) Strip Length
Conductors	"USE COPPER CONDUCTORS, 75°C" or equivalent.	
Screw Driver Width	0.1 in (2.5 mm) Maximum*	
Screw Size	M2	N/A
Screw Torque	2.5 lb-in (0.28 N-m)	N/A

*Recommended Screwdriver TW-SD-MSL-1

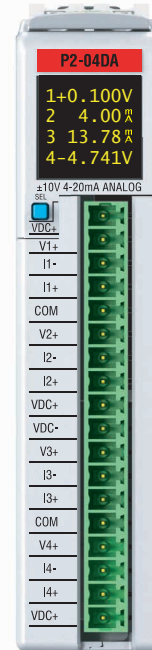

P2-04DA Analog Output

The P2-04DA Voltage/Current Analog Output Module provides four channels of $\pm 10\text{VDC}$ or 4–20 mA sink/source selectable outputs for use with the Productivity2000 System

Warning	1
Removable Terminal Block Specifications	1
General Specifications	2
Output Specifications	2
Wiring Diagram and Schematic	3
Module Installation Procedure	4
QR Code	4
Hot Swap Information	4
Wiring Options	5
Module Configuration	5
Linear Scaling	6
Non-Linear Scaling	6
OLED Panel Display Menus	7

Terminal Block sold separately, (see wiring options on page 5).

Warranty: Thirty-day money-back guarantee. Two-year limited replacement. (See www.productivity2000.com for details).

General Specifications



Operating Temperature	0° to 60°C (32° to 140°F)
Storage Temperature	-20° to 70°C (-4° to 158°F)
Humidity	5 to 95% (non-condensing)
Environmental Air	No corrosive gases permitted
Vibration	IEC60068-2-6 (Test Fc)
Shock	IEC60068-2-27 (Test Ea)
Field to Logic Side Isolation	1800VAC applied for 1 second
Insulation Resistance	> 10MΩ @ 500VDC
Heat Dissipation	3.6 W
Enclosure Type	Open Equipment
Module Keying to Backplane	Electronic
Module Location	Any I/O slot in a Productivity2000 System
Field Wiring	Use ZIPLink Wiring System or removable terminal block (not included). See "Wiring Options" on page 5.
EU Directive	See the "EU Directive" topic in the Productivity2000 Help File. Information can also be obtained at: www.productivity2000.com
Connector Type (not included)	18-position removable terminal block
Weight	90g (3.2 oz)
Agency Approvals	UL 61010-1 and UL 61010-2-201 File E139594, Canada and USA CE (EN 61131-2 EMC, EN 61010-1 and EN 61010-2-201 Safety)*

*Meets EMC and Safety requirements. See the D.O.C. for details.



Output Specifications

Output Channels	4
Module Signal Output Ranges	1) ±10VDC 2) 4–20 mA (sink or source per channel)
Signal Resolution	16-bit
Resolution Value of LSB (least significant bit)	±10V = 305µV/count 4–20 mA = 0.244 µA/count 1 LSB = 1 count
Data Range	0 to 65535 counts uni-polar and -32768 to +32767 counts bi-polar
Output Type	Voltage outputs sources/sinking at 10mA max. or Current outputs sink or source at 20mA max.
Output Value in Fault Mode	Voltage outputs 0V or 0mA current outputs
Load Impedance (Minimum External Power Supply)	>1000Ω voltage outputs (19.2–30 VDC) 0–755 Ω Sinking, 0–600 Ω Sourcing (19.2 VDC) 0–875 Ω Sinking, 0–700 Ω Sourcing (21.6 VDC) 0–1000 Ω Sinking, 0–855 Ω Sourcing (24VDC) 0–1110 Ω Sinking, 0–970 Ω Sourcing (26.4 VDC) 0–1350 Ω Sinking, 0–1150 Ω Sourcing (30VDC)
Maximum Capacitive Load	0.01µF maximum voltage outputs
Maximum Inductive Load	1mH maximum current outputs
Allowed Load Type	Grounded
Maximum Inaccuracy (% of range)	0.1% voltage, 0.1% current (including temperature drift)
Maximum Full Scale Calibration Error (not including offset error)	±0.025% of range maximum voltage outputs ±0.025% of range maximum current outputs
Maximum Offset Calibration Error	±0.025% of range maximum
Accuracy vs. Temperature	±25ppm/°C max f.s. calibration change (±0.0025% of range/°C)
Max Crosstalk	-80dB, 6 LSB
Linearity Error (End to End)	±16 LSB maximum (±0.025% of full scale) Monotonic with no missing codes
Output Stability and Repeatability	±10 LSB after 10 minute warm-up (typical)
Output Ripple	0.05% of Full Scale
Output Setting Time	0.3 ms max, 5µs min (full scale change)
All Channel Update Rate	0.6 ms
Maximum Continuous Overload	Voltage Outputs current limited to 35mA typical Current Outputs open circuit protected
Type of Output Protection	15VDC Peak Output Voltage Current outputs current limited to <=20mA
Output Signal (power-up,-down)	0V voltage outputs, 0mA current outputs
External DC Power Required	94mA voltage operation 4 channels 130mA current operation 4 channels 24VDC -20% / +25%



Voltage Output

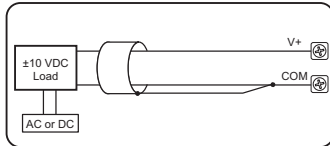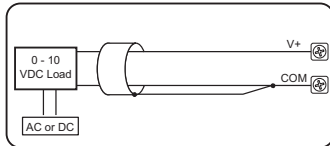

Current Source Output (Field device is sinking)

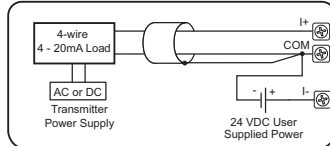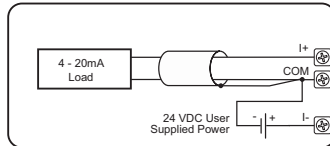


Current Sink Output (Field device is sourcing)

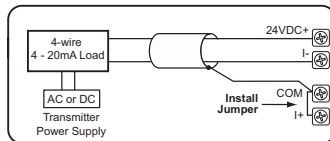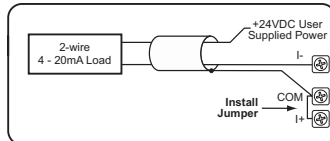

NOTE: Shield is connected to common at the source device.


INTERNAL MODULE CIRCUITRY

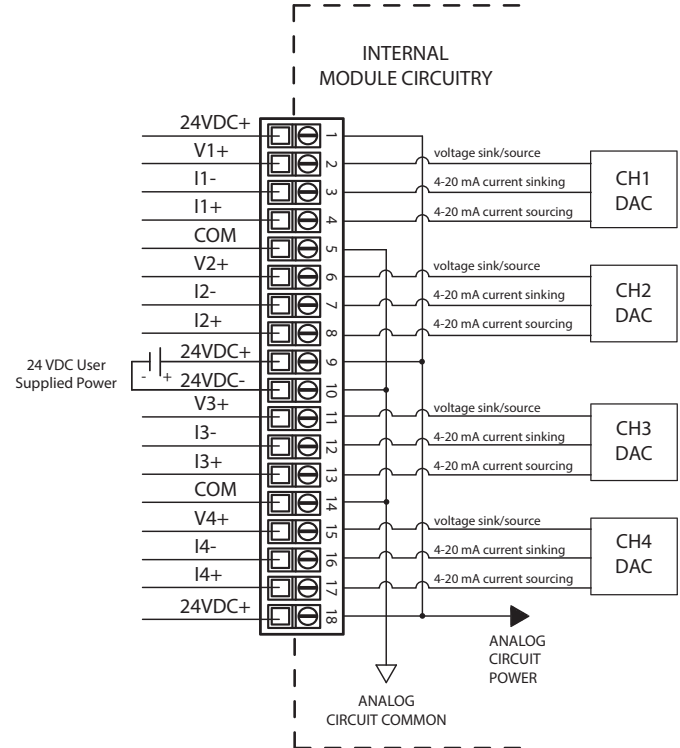


Module Installation

WARNING: Do not apply field power until the following steps are completed. See hot-swapping procedure for exceptions.

Step One: Align module catch with base slot and rotate module into connector.

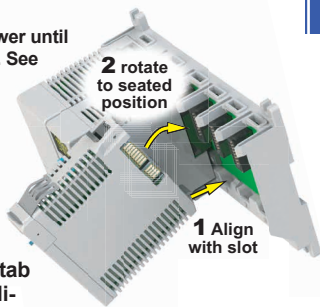

Step Two: Pull top locking tab toward module face. Click indicates lock is engaged.

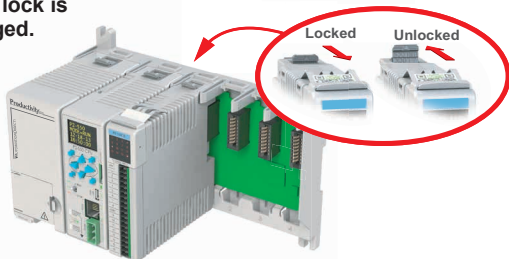

Step Three: Attach field wiring using the removable terminal block or ZIPLink wiring system.



QR Code



Use any QR Code reader application to display the module's product insert.


Caution: If possible, remove field power prior to proceeding. If not, then **EXTREME** care **MUST** be taken to prevent damage to the module, or even personal injury due to a short circuit from the live terminal block.

Important Hot-Swap Information

The Productivity2000 System supports hot-swap! Individual modules can be taken offline, removed, and replaced while the rest of the system continues controlling your process. Before attempting to use the hot-swap feature, be sure to read the hot-swap topic in the programming software's help file or our online documentation at AutomationDirect.com for details on how to plan your installation for use of this powerful feature.

Wiring Options

1 ZIPLink Feed Through Modules and Cables¹

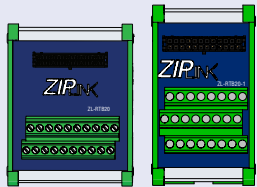

0.5 m (1.6 ft) cable
1.0 m (3.3 ft) cable
2.0 m (6.6 ft) cable



ZL-RTB20
ZL-RTB20-1

ZL-P2-CBL18
ZL-P2-CBL18-1
ZL-P2-CBL18-2

2 Terminal Block with pigtail cable



1.0 m (3.3 ft) cable
2.0 m (6.6 ft) cable


ZL-P2-CBL18-1P
ZL-P2-CBL18-2P

3 Screw Terminal Block only



P2-RTB
(Quantity 1)

4 Spring Clamp Terminal Block only



P2-RTB-1
(Quantity 1)

5 Accessories²



ZL-RTB-COM

TW-SD-SL-1

TW-SD-MSL-1

1. Cable + ZIPLink Module = Complete System

2. ZL-RTB-COM provides a common connection point for power or ground

Module Configuration

Using the Hardware Configuration tool in the Productivity Suite programming software, drag and drop the P2-04DA module into the base configuration.

Select *Automatic Module Verification* or *No Verification and Enable Hot Swap*. If desired, assign a *User Tagname* to each output point (channel) selected and to each *Status Bit Item*. *Range* with sink/source option and *Stop Mode Value* may also be assigned.

P2-04DA

4CH, 16-BIT, VOLTAGE/CURRENT, NAL OUT PUT

Automatic Module Verification
 No Verification and Enable Hot Swap

Point	User Tagname	Range	Stop Mode Value
1	AOS32-0.1.2.1	+/-10 V	0
2	AOS32-0.1.2.2	+/-10 V	0
3	AOS32-0.1.2.3	+/-10 V	0
4	AOS32-0.1.2.4	+/-10 V	0

Status Bit	User Tagname
Module Failed	MST-0.1.2.25
Missing 24V	MST-0.1.2.26

Linear Scaling

The Scale (Linear) function can be used to:

- Convert an application specific range to a range which is native to the analog output module.
- Make other linear conversions in ranges appropriate to the application.

Scale (Linear) (SCL)

Input: Tank Level Output: Control Valve

In Min: 220 In Max: 12500
Out Min: 0 Out Max: 65535

Select the Input and Output tags appropriate for the application. Convert raw input signals to engineering units for use in the program, or convert engineering units to output signals for control purposes

min max

Non-Linear Scaling

The Scale (Non-Linear) function can be used for Non-Linear applications.

Scale (Non-Linear) (SCLN)


Input: Level Transmitter Output: Tank Level

Input value	Desired Output
0	0
1	0.5
2	1
3	1.55
4	2.25
5	3
6	4.55
6.5	6.75
7	7
0	0
0	0
0	0
0	0
0	0
0	0

Select the minimum and maximum values of the raw input signal. These values will relate to the minimum and maximum scaled values.

min max

OLED Panel Display

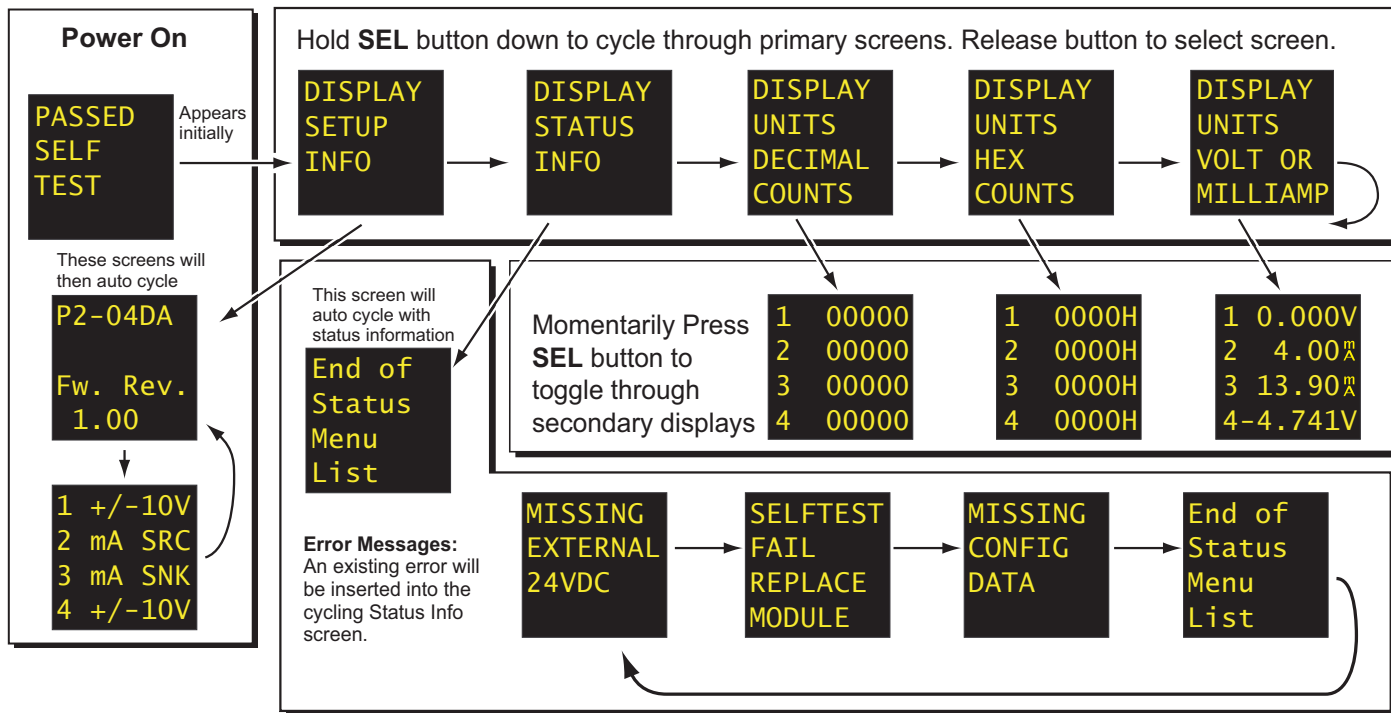

Document Name	Edition/Revision	Date
P2-04DA-DS	2nd Ed.	9/10/2019

Copyright 2014, AutomationDirect.com Incorporated/All Rights Reserved Worldwide