

WARNING: To minimize the risk of potential safety problems, you should follow all applicable local and national codes that regulate the installation and operation of your equipment. These codes vary from area to area and it is your responsibility to determine which codes should be followed, and to verify that the equipment, installation, and operation are in compliance with the latest revision of these codes.


Equipment damage or serious injury to personnel can result from the failure to follow all applicable codes and standards. We do not guarantee the products described in this publication are suitable for your particular application, nor do we assume any responsibility for your product design, installation, or operation.

If you have any questions concerning the installation or operation of this equipment, or if you need additional information, please call Technical Support at 770-844-4200.

This publication is based on information that was available at the time it was printed. At AutomationDirect.com® we constantly strive to improve our products and services, so we reserve the right to make changes to the products and/or publications at any time without notice and without any obligation. This publication may also discuss features that may not be available in certain revisions of the product.

Removable Terminal Block Specifications

Part Number	P2-RTB	P2-RTB-1
Number of positions	18 Screw Terminals	18 Spring Clamp Terminals
Wire Range	30–16 AWG (0.051–1.31 mm ²) Solid / Stranded Conductor	28–16 AWG (0.081–1.31 mm ²) Solid / Stranded Conductor
	3/64 in. (1.2 mm) Insulation Maximum	3/64 in (1.2 mm) Insulation Maximum
	1/4 in (6–7 mm) Strip Length	19/64 in (7–8 mm) Strip Length
Conductors	"USE COPPER CONDUCTORS, 75°C" or equivalent.	
Screw Driver Width	1/8 in (3.8 mm) Maximum	
Screw Size	M2	N/A
Screw Torque	2.5 lb-in (0.28 N-m)	N/A

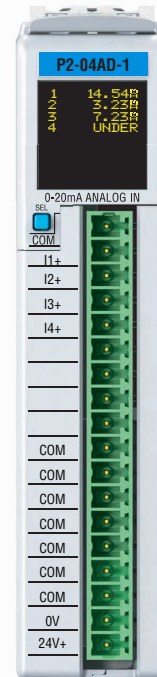

P2-04AD-1 Analog Input

The P2-04AD-1 Current Analog Input Module provides four channels for receiving 0–20 mA signals for use with the Productivity2000 system.

Warning	1
Removable Terminal Block Specifications	1
General Specifications	2
Input Specifications	2
Wiring Diagram and Schematic	3
Module Installation Procedure	4
QR Code	4
Hot Swap Information	4
Wiring Options	5
Module Configuration	5
Linear Scaling	6
Non-Linear Scaling	6
OLED Panel Display Menus	7
Diagnostic/Status	8

Terminal Block sold separately, (see wiring options on page 5).

General Specifications

Operating Temperature	0° to 60°C (32° to 140°F)
Storage Temperature	-20° to 70°C (-4° to 158°F)
Humidity	5 to 95% (non-condensing)
Altitude	2,000 meters max
Pollution Degree	2
Environmental Air	No corrosive gases permitted
Vibration	IEC60068-2-6 (Test Fc)
Shock	IEC60068-2-27 (Test Ea)
Field to Logic Side Isolation	1800VAC applied for 1 second
Insulation Resistance	> 10MΩ @ 500VDC
Heat Dissipation	1002mW
Overvoltage Category	II
Enclosure Type	Open Equipment
Module Keying to Backplane	Electronic
Module Location	Any I/O slot in a Productivity2000 System
Field Wiring	Use ZIP Link Wiring System or removable terminal block (not included). See "Wiring Options" on page 5.
Connector Type (not included)	18-position removable terminal block
Weight	90g (3.2 oz)
Agency Approvals	UL 61010-1 and UL 61010-2-201 File E139594, Canada and USA CE (EN 61131-2 EMC, EN 61010-1 and EN 61010-2-201 Safety)*

*Meets EMC and Safety requirements. See the D.O.C. for details.

Input Specifications

Input Channel	4
Input Ranges	0–20 mA
Signal Resolution	16-bit
Resolution Value of LSB (least significant bit)	0–20 mA = 0.305 µA per count (1 LSB = 1 count)
Data Range	0 to 65535 counts
Input Type	Sinking, Single-ended (1 common)
Maximum Continuous Overload	±31mA
Input Impedance	250Ω ±0.1% 1/4 W
Hardware Filter Characteristics	Low Pass, -3dB @ 100Hz
Sample Duration Time	9ms per channel (does not include ladder scan time)
All Channel Update Rate	80ms
Open Circuit Detection Time	Zero reading within 1s
Conversion Method	Successive approximation
Accuracy vs. Temperature	±25PPM / °C maximum
Maximum Inaccuracy	0.1% of range (including temperature drift)
Linearity Error	±0.015% of range Monotonic with no missing codes
Input Stability and Repeatability	±0.015% of range (after 10 min warmup)
Maximum Full Scale Calibration Error	±0.015% of range maximum
Offset Calibration Error	±0.015% of range maximum
Maximum Crosstalk at DC, 50Hz and 60Hz	-76dB, ±10 LSB
Recommended Fuse (external)	Edison S500-32-R, 0.032A fuse
External Power Supply Required	24VDC (-20% / +25%) 35mA

An Edison S500-32-R 0.032A fast-acting fuse is recommended for current loops.

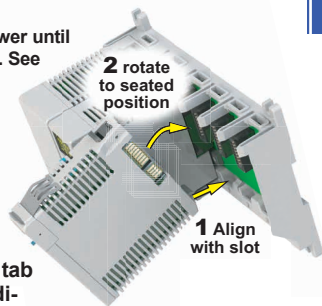


Diagram illustrating the internal module circuitry for the 24VDC module. The circuit shows a vertical stack of terminals on the left, including COM, I1+, I2+, I3+, I4+, and a 24V+ terminal. On the right, there are four ADC channels (CH1 ADC to CH4 ADC) and a common ground. The circuitry includes 2500 ohm resistors connecting the I1+ to I4+ terminals to their respective ADC channels. The 24V+ terminal is connected to the common ground, which is labeled "ISOLATED ANALOG CIRCUIT COMMON".


Module Installation

WARNING: Do not apply field power until the following steps are completed. See hot-swapping procedure for exceptions.

Step One: Align module catch with base slot and rotate module into connector.



Step Two: Pull top locking tab toward module face. Click indicates lock is engaged.

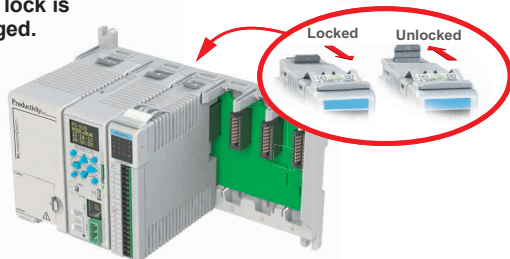

Step Three: Attach field wiring using the removable terminal block or ZIPLink wiring system.



QR Code



Use any QR Code reader application to display the module's product insert.


Caution: If possible, remove field power prior to proceeding. If not, then **EXTREME** care **MUST** be taken to prevent damage to the module, or even personal injury due to a short circuit from the live terminal block.

Important Hot-Swap Information

The Productivity2000 System supports hot-swap! Individual modules can be taken offline, removed, and replaced while the rest of the system continues controlling your process. Before attempting to use the hot-swap feature, be sure to read the hot-swap topic in the programming software's help file or our online documentation at AutomationDirect.com for details on how to plan your installation for use of this powerful feature.

Wiring Options

1 ZIPLink Feed Through Modules and Cables¹

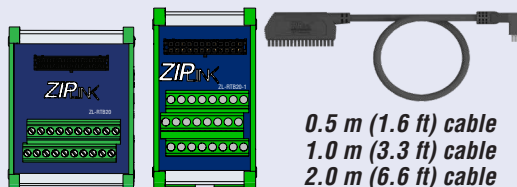

ZIPINK
AUTOMATIONDIRECT

ZL-RTB20
ZL-RTB20-1

ZL-P2-CBL18
ZL-P2-CBL18-1
ZL-P2-CBL18-2

2 Terminal Block with pigtail cable




ZL-P2-CBL18-1P
ZL-P2-CBL18-2P

3 Screw Terminal Block only




P2-RTB
(Quantity 1)

4 Spring Clamp Terminal Block only



P2-RTB-1
(Quantity 1)

5 Accessories²

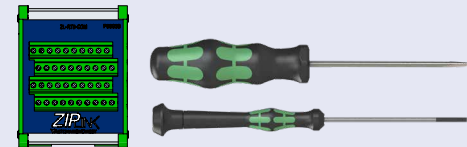

ZL-RTB-COM


TW-SD-SL-1

TW-SD-MSL-1

1. Cable + **ZIPLink** Module = Complete System

2. ZL-RTB-COM provides a common connection point for power or ground

Module Configuration

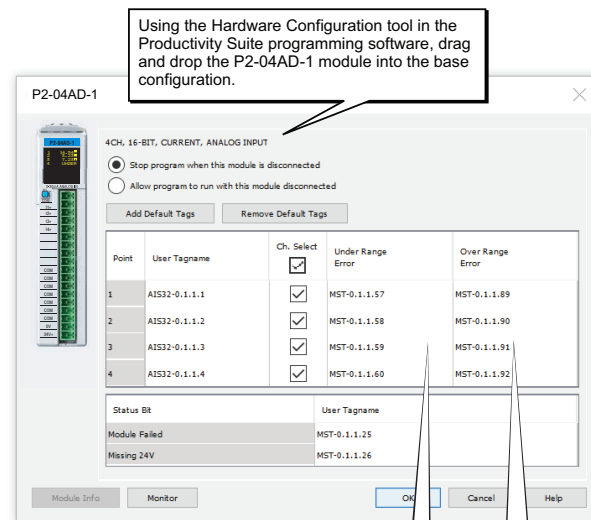


The "Under Range Error" bit for each channel activates for a signal around 0mA ± offset error.

The "Over Range Error" bit for each channel activates for a signal around 19.999 mA ± gain error.

Linear Scaling


The Scale (Linear) function can be used to:

- Convert analog field input signals from the range which is native to the analog input module to an application specific range.
- Make other linear conversions in ranges appropriate to the application.

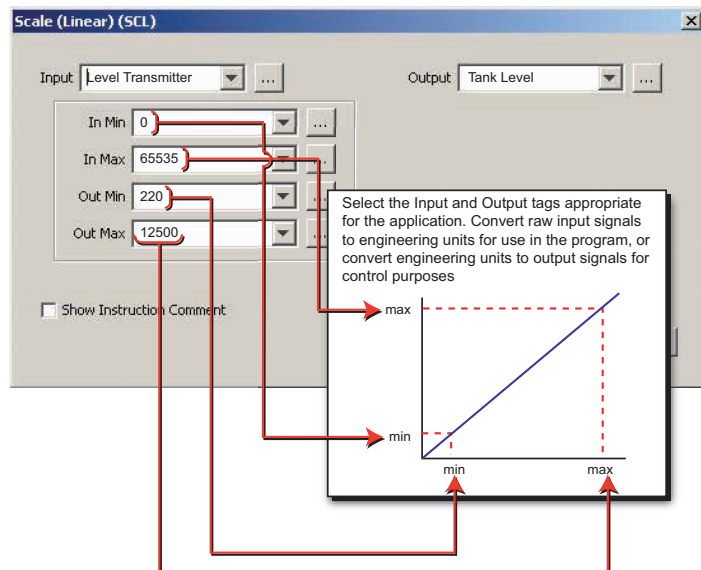


Non-Linear Scaling

The Scale (Non-Linear) function can be used for Non-Linear applications.

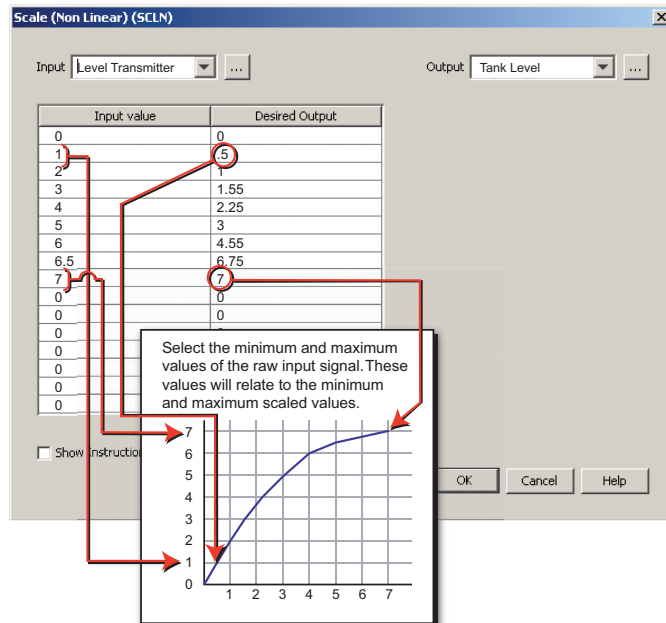

OLED Panel Display

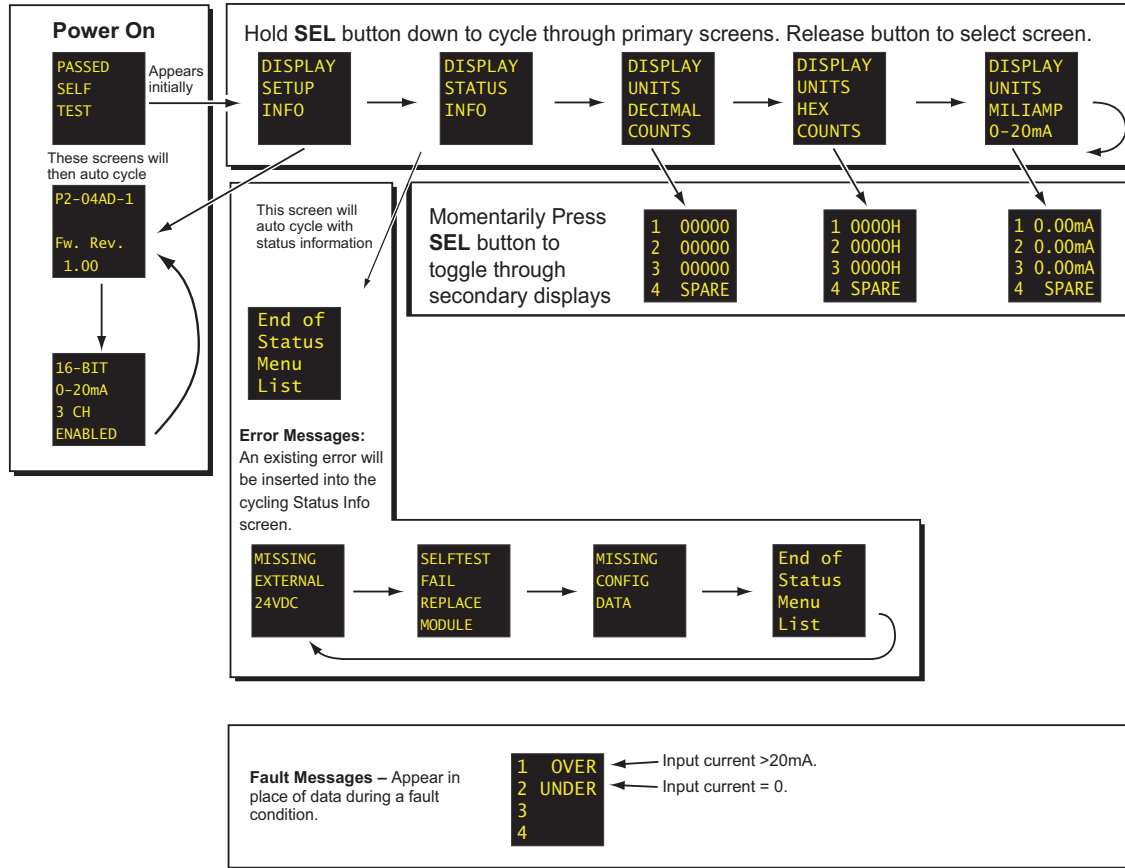

Diagnostic/Status

Under Range Error	1 bit per channel
Over Range Error	1 bit per channel
Module Failed	1 bit per module
Missing 24V	1 bit per module

Document Name	Edition/Revision	Date
P2-04AD-1-DS	1st Edition, Rev. A1	6/17/2025

Copyright 2019, AutomationDirect.com Incorporated/All Rights Reserved Worldwide