



XTH Series Head Mounted Universal Temperature Transmitters - Programmable




XTH Series - Programmable


Installation

- Transmitter comes with installation screw kit for both North American and European installations
- Ambient Temperature: -40 to 185°F (-40 to 85°C)
- Installation area: Field housing; connection head Form B according to DIN 43729
- Installation angle: No limit


Note: Max. torque 3/4 pound-feet (1 Nm)

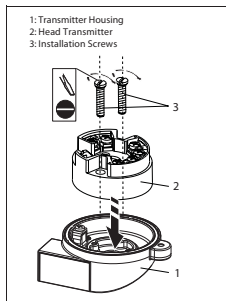

North American installation

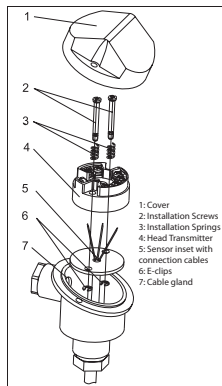


European installation

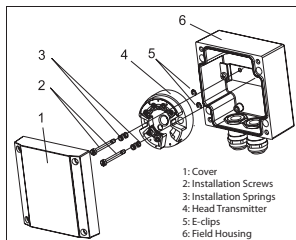


Remote Installation of head transmitter into field housing

Dimensions

inches [mm]

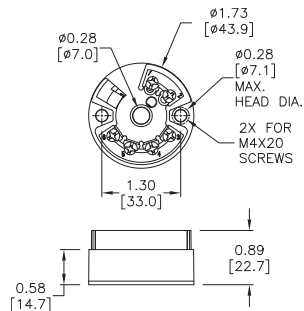


Wiring

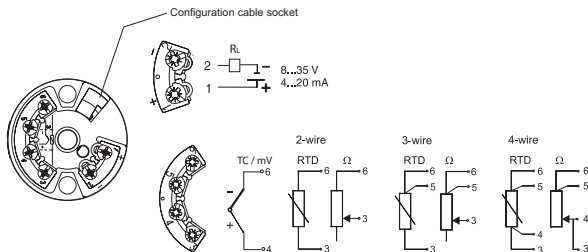

Safety instructions:

- To comply with UL61010-1 unit must be supplied by class 2 power supply.
- Disconnect power before making connections

Load Impedance

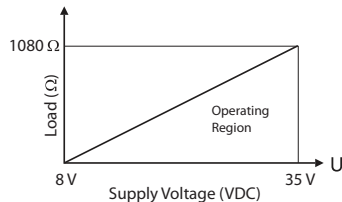

$$RL_{max} = (V_{powersupply} - 8V) / 0.025A \text{ (current output)}$$

e.g. $(24V - 8V) / 0.025A = 640 \Omega$

Shielding

Please take note when installing the head transmitter remotely from the sensor in a field housing: The shield on the 4-20 mA signal output must have the same potential as the shield at the sensor connections. When using grounded thermocouples, shielding of the output 4 to 20 mA cable is recommended. In plants with strong electromagnetic fields, shielding of all cables with a low ohm connection to the transmitter housing is recommended.

Due to the danger of lightning strikes it is recommended that shielded cable be used in installations outside of buildings.

Programming

Transmitter set-up is done using the XT-SOFT programming software, available as a free download at www.automationdirect.com, and XT-USB configuration cable (purchased separately).

Note:

Transmitter must be powered during programming. When the XT-USB configuration cable is connected the unit is not operational. For this reason, disconnect the XT-USB configuration cable from the transmitter during operation.

The following tables show the structure of the XT-SOFT programming software configuration parameters:

Standard Configuration Parameters
Sensor type (TC or RTD)
Connection mode (2-, 3-, or 4-wire connection/RTD only)
Units (°C / °F)
Measurement range start (depends on sensor type)
Measurement range end (depends on sensor type)

Expanded Configuration Parameters
Cold junction (internal/external - TC only)
Cable resistance (ohms - 2-wire RTD / Resistance only)
Fault condition (≤ 3.6 mA, ≥ 21 mA)
Output (4-20 mA, 20-4 mA)
Filter (0 sec - 8 sec)
Offset (°F/°C)