



# SE3 Series

## Industrial Unmanaged Ethernet Switches

User Manual

#SE3-USER-M



## ⚡ WARNING ⚡

Thank you for purchasing automation equipment from Automationdirect.com<sup>®</sup>, doing business as AutomationDirect. We want your new automation equipment to operate safely. Anyone who installs or uses this equipment should read this publication (and any other relevant publications) before installing or operating the equipment.

To minimize the risk of potential safety problems, you should follow all applicable local and national codes that regulate the installation and operation of your equipment. These codes vary from area to area and usually change with time. It is your responsibility to determine which codes should be followed, and to verify that the equipment, installation, and operation is in compliance with the latest revision of these codes.

At a minimum, you should follow all applicable sections of the National Fire Code, National Electrical Code, and the codes of the National Electrical Manufacturer's Association (NEMA). There may be local regulatory or government offices that can also help determine which codes and standards are necessary for safe installation and operation.

Equipment damage or serious injury to personnel can result from the failure to follow all applicable codes and standards. We do not guarantee the products described in this publication are suitable for your particular application, nor do we assume any responsibility for your product design, installation, or operation.

Our products are not fault-tolerant and are not designed, manufactured or intended for use or resale as on-line control equipment in hazardous environments requiring fail-safe performance, such as in the operation of nuclear facilities, aircraft navigation or communication systems, air traffic control, direct life support machines, or weapons systems, in which the failure of the product could lead directly to death, personal injury, or severe physical or environmental damage ("High Risk Activities"). AutomationDirect specifically disclaims any expressed or implied warranty of fitness for High Risk Activities.

For additional warranty and safety information, see the Terms and Conditions on our website. If you have any questions concerning the installation or operation of this equipment, or if you need additional information, please call us at **770-844-4200**.

This publication is based on information that was available at the time it was published. At AutomationDirect we constantly strive to improve our products and services, so we reserve the right to make changes to the products and/or publications at any time without notice and without any obligation. This publication may also discuss features that may not be available in certain revisions of the product.

## TRADEMARKS

This publication may contain references to products produced and/or offered by other companies. The product and company names may be trademarked and are the sole property of their respective owners. AutomationDirect disclaims any proprietary interest in the marks and names of others.

**COPYRIGHT 2023 AUTOMATIONDIRECT.COM<sup>®</sup> INCORPORATED  
ALL RIGHTS RESERVED**

No part of this manual shall be copied, reproduced, or transmitted in any way without the prior, written consent of Automationdirect.com<sup>®</sup> Incorporated. AutomationDirect retains the exclusive rights to all information included in this document.

## ⚡ ADVERTENCIA ⚡

Gracias por comprar equipo de automatización de Automationdirect.com<sup>®</sup>. Deseamos que su nuevo equipo de automatización opere de manera segura. Cualquier persona que instale o use este equipo debe leer esta publicación (y cualquier otra publicación pertinente) antes de instalar u operar el equipo.

Para reducir al mínimo el riesgo debido a problemas de seguridad, debe seguir todos los códigos de seguridad locales o nacionales aplicables que regulan la instalación y operación de su equipo. Estos códigos varían de área en área y usualmente cambian con el tiempo. Es su responsabilidad determinar cuales códigos deben ser seguidos y verificar que el equipo, instalación y operación estén en cumplimiento con la revisión más reciente de estos códigos.

Como mínimo, debe seguir las secciones aplicables del Código Nacional de Incendio, Código Nacional Eléctrico, y los códigos de (NEMA) la Asociación Nacional de Fabricantes Eléctricos de USA. Puede haber oficinas de normas locales o del gobierno que pueden ayudar a determinar cuales códigos y normas son necesarios para una instalación y operación segura.

Si no se siguen todos los códigos y normas aplicables, puede resultar en daños al equipo o lesiones serias a personas. No garantizamos los productos descritos en esta publicación para ser adecuados para su aplicación en particular, ni asumimos ninguna responsabilidad por el diseño de su producto, la instalación u operación.

Nuestros productos no son tolerantes a fallas y no han sido diseñados, fabricados o intencionados para uso o reventa como equipo de control en línea en ambientes peligrosos que requieren una ejecución sin fallas, tales como operación en instalaciones nucleares, sistemas de navegación aérea, o de comunicación, control de tráfico aéreo, máquinas de soporte de vida o sistemas de armamentos en las cuales la falla del producto puede resultar directamente en muerte, heridas personales, o daños físicos o ambientales severos (“Actividades de Alto Riesgo”). Automationdirect.com específicamente rechaza cualquier garantía ya sea expresada o implicada para actividades de alto riesgo.

Para información adicional acerca de garantía e información de seguridad, vea la sección de Términos y Condiciones. Si tiene alguna pregunta sobre instalación u operación de este equipo, o si necesita información adicional, por favor llámenos al número **770-844-4200** en Estados Unidos.

Esta publicación está basada en la información disponible al momento de la publicación. En Automationdirect.com nos esforzamos constantemente para mejorar nuestros productos y servicios, así que nos reservamos el derecho de hacer cambios al producto y/o a las publicaciones en cualquier momento sin notificación y sin ninguna obligación. Esta publicación también puede discutir características que no estén disponibles en ciertas revisiones del producto.

## MARCAS REGISTRADAS

Esta publicación puede contener referencias a productos producidos y/u ofrecidos por otras compañías. Los nombres de las compañías y productos pueden tener marcas registradas y son propiedad única de sus respectivos dueños. Automationdirect.com, renuncia cualquier interés propietario en las marcas y nombres de otros.

**PROPIEDAD LITERARIA 2023, AUTOMATIONDIRECT.COM<sup>®</sup> INCORPORATED**

**TODOS LOS DERECHOS RESERVADOS**

No se permite copiar, reproducir, o transmitir de ninguna forma ninguna parte de este manual sin previo consentimiento por escrito de Automationdirect.com<sup>®</sup> Incorporated. Automationdirect.com retiene los derechos exclusivos a toda la información incluida en este documento. Los usuarios de este equipo pueden copiar este documento solamente para instalar, configurar y mantener el equipo correspondiente. También las instituciones de enseñanza pueden usar este manual para propósitos educativos.

## ⚡ AVERTISSEMENT ⚡

Nous vous remercions d'avoir acheté l'équipement d'automatisation de AutomationDirect.com<sup>®</sup>, en faisant des affaires comme AutomationDirect. Nous tenons à ce que votre nouvel équipement d'automatisation fonctionne en toute sécurité. Toute personne qui installe ou utilise cet équipement doit lire la présente publication (et toutes les autres publications pertinentes) avant de l'installer ou de l'utiliser.

Afin de réduire au minimum le risque d'éventuels problèmes de sécurité, vous devez respecter tous les codes locaux et nationaux applicables régissant l'installation et le fonctionnement de votre équipement. Ces codes diffèrent d'une région à l'autre et, habituellement, évoluent au fil du temps. Il vous incombe de déterminer les codes à respecter et de vous assurer que l'équipement, l'installation et le fonctionnement sont conformes aux exigences de la version la plus récente de ces codes.

Vous devez, à tout le moins, respecter toutes les sections applicables du Code national de prévention des incendies, du Code national de l'électricité et des codes de la National Electrical Manufacturer's Association (NEMA). Des organismes de réglementation ou des services gouvernementaux locaux peuvent également vous aider à déterminer les codes ainsi que les normes à respecter pour assurer une installation et un fonctionnement sûrs.

L'omission de respecter la totalité des codes et des normes applicables peut entraîner des dommages à l'équipement ou causer de graves blessures au personnel. Nous ne garantissons pas que les produits décrits dans cette publication conviennent à votre application particulière et nous n'assumons aucune responsabilité à l'égard de la conception, de l'installation ou du fonctionnement de votre produit.

Nos produits ne sont pas insensibles aux défaillances et ne sont ni conçus ni fabriqués pour l'utilisation ou la revente en tant qu'équipement de commande en ligne dans des environnements dangereux nécessitant une sécurité absolue, par exemple, l'exploitation d'installations nucléaires, les systèmes de navigation aérienne ou de communication, le contrôle de la circulation aérienne, les équipements de survie ou les systèmes d'armes, pour lesquels la défaillance du produit peut provoquer la mort, des blessures corporelles ou de graves dommages matériels ou environnementaux («activités à risque élevé»). La société AutomationDirect nie toute garantie expresse ou implicite d'aptitude à l'emploi en ce qui a trait aux activités à risque élevé.

Pour des renseignements additionnels touchant la garantie et la sécurité, veuillez consulter la section Modalités et conditions de notre documentation. Si vous avez des questions au sujet de l'installation ou du fonctionnement de cet équipement, ou encore si vous avez besoin de renseignements supplémentaires, n'hésitez pas à nous téléphoner au **770-844-4200**.

Cette publication s'appuie sur l'information qui était disponible au moment de la publication. À la société AutomationDirect, nous nous efforçons constamment d'améliorer nos produits et services. C'est pourquoi nous nous réservons le droit d'apporter des modifications aux produits ou aux publications en tout temps, sans préavis ni quelque obligation que ce soit. La présente publication peut aussi porter sur des caractéristiques susceptibles de ne pas être offertes dans certaines versions révisées du produit.

## MARQUES DE COMMERCE

La présente publication peut contenir des références à des produits fabriqués ou offerts par d'autres entreprises. Les désignations des produits et des entreprises peuvent être des marques de commerce et appartiennent exclusivement à leurs propriétaires respectifs. AutomationDirect nie tout intérêt dans les autres marques et désignations.

**COPYRIGHT 2023 AUTOMATIONDIRECT.COM<sup>®</sup> INCORPORATED**

**TOUS DROITS RÉSERVÉS**

Nulle partie de ce manuel ne doit être copiée, reproduite ou transmise de quelque façon que ce soit sans le consentement préalable écrit de la société AutomationDirect.com<sup>®</sup> Incorporated. AutomationDirect conserve les droits exclusifs à l'égard de tous les renseignements contenus dans le présent document.

# Stride SE3 Series Industrial Unmanaged Ethernet Switches User Manual

---



Please include the Manual Number and the Manual Issue, both shown below, when communicating with Technical Support regarding this publication.

**Manual Number:** SE3-USER-M  
**Issue:** 1st Edition  
**Issue Date:** 12/2023

Publication History		
<i>Issue</i>	<i>Date</i>	<i>Description of Changes</i>
1st Edition	12/2023	Original release

# Contents

<b>Introduction</b> .....	<b>1</b>
The Purpose of This User’s Manual .....	1
Technical Support .....	1
<b>Conventions Used</b> .....	<b>1</b>
<b>General Information</b> .....	<b>2</b>
Overview.....	2
Operation.....	2
Security Considerations .....	2
Class I Division 2 Hazardous Location Installation and Operation.....	2
Safety Precautions .....	3
Warning Labels.....	3
FCC Statement.....	3
CE Mark Warning .....	3
<b>Product Overview</b> .....	<b>4</b>
SE3 Unmanaged Switches .....	4
SE3 Unmanaged Power over Ethernet Switches.....	5
SFP Fiber Transceivers.....	5
<b>Hardware Features</b> .....	<b>6</b>
LED Indicators.....	6
Redundant Power Inputs.....	11
Power Fault Alarm.....	11
DIP Switches (Model SE3-SW5UG-1P-T Only).....	11
<b>Mounting</b> .....	<b>12</b>
DIN Rail Mounting .....	12
Wall Mounting.....	13
<b>Power and Alarm Wiring</b> .....	<b>14</b>
Power Wiring.....	14
Alarm Wiring .....	15
Grounding.....	15
<b>Communications Wiring</b> .....	<b>16</b>
RJ-45 Ethernet Connections .....	16
M12 Ethernet Connections.....	17
Ethernet Fiber Wiring Guidelines .....	17

SC and ST Fiber Connections .....	17
SFP Fiber Connections .....	18
Verifying Connectivity .....	18
<b>Technical Specifications .....</b>	<b>19</b>
<b>Dimensional Drawings .....</b>	<b>22</b>
<b>Troubleshooting .....</b>	<b>35</b>
Power .....	35
Copper Ethernet.....	35
Fiber Ethernet .....	35

# Introduction

## The Purpose of This User’s Manual

Thank you for purchasing our Stride® SE3 series Industrial Ethernet Switches. This manual describes AutomationDirect.com’s Stride industrial Ethernet switches, their specifications, included components, and provides you with important information for installation, connectivity and setup.

## Technical Support

We strive to make our manuals the best in the industry. We rely on your feedback to let us know if we are reaching our goal. If you cannot find the solution to your particular application, or, if for any reason you need technical assistance, please call us at:

**(800) 633-0405**

**(770) 844-4200**

Our technical support group will work with you to answer your questions. They are available Monday through Friday from 9:00 a.m. to 6:00 p.m. Eastern Time. We also encourage you to visit our web site where you can find technical and non-technical information about our products and our company.

<https://www.AutomationDirect.com>

If you have a comment, question or suggestion about any of our products, services, or manuals, please let us know.

## Conventions Used



When you see the “notepad” icon in the left-hand margin, the paragraph to its immediate right will be a special note. The word **NOTE** in boldface will mark the beginning of the text.



*WHEN YOU SEE THE “EXCLAMATION MARK” ICON IN THE LEFT-HAND MARGIN, THE PARAGRAPH TO ITS IMMEDIATE RIGHT WILL BE A WARNING OR A CAUTION. THIS INFORMATION COULD PREVENT INJURY, LOSS OF PROPERTY, OR EVEN DEATH (IN EXTREME CASES). THE WORDS **WARNING** OR **CAUTION** IN BOLDFACE WILL MARK THE BEGINNING OF THE TEXT.*



# General Information

## Overview

This user manual will help you install and maintain the **Stride** industrial Ethernet switches. Installation of these devices is very easy and they will begin to operate as soon as they are powered up.

## Operation

Unlike an Ethernet hub that broadcasts all messages out all ports, these industrial Ethernet switches will intelligently route Ethernet messages only out the appropriate port. The major benefits of this are increased bandwidth and speed, reduction or elimination of message collisions, and deterministic performance when tied with real-time systems.

These industrial Ethernet switches can support 10BaseT (10 Mbps), 100BaseT (100 Mbps) or 1000BaseT (Gigabit Ethernet) on their RJ45 ports. Each of these ports will independently auto-sense the speed and duplex, mdi/mdix-crossover and polarity allowing you to use patch or crossover cables.

Some models include fiber optic ports, or slots that accept SFP fiber optic transceivers.

## Security Considerations

When implementing any method of remote access to your equipment, you need to consider the security exposure in order to minimize the risks to your processes and your equipment. Security should always be carefully evaluated for each installation. Refer to “Appendix F: Security Considerations for Control Systems Networks” for more information.

## Class I Division 2 Hazardous Location Installation and Operation

These are open-type devices. Units rated for hazardous locations are meant to be installed in an enclosure which is only accessible with the use of a tool and suitable for the environment when installed in Class 1, Division 2 Hazardous Locations.



**WARNING:** THIS EQUIPMENT IS SUITABLE FOR USE IN CLASS I, DIVISION 2, GROUPS A, B, C, AND D OR NON-HAZARDOUS LOCATIONS ONLY.



**WARNING:** EXPLOSION HAZARD — DO NOT DISCONNECT EQUIPMENT UNLESS POWER HAS BEEN REMOVED OR THE AREA IS KNOWN TO BE NON-HAZARDOUS.



**WARNING:** EXPLOSION HAZARD — SUBSTITUTION OF ANY COMPONENTS MAY IMPAIR SUITABILITY FOR CLASS I, DIVISION 2.

Hazardous location rating applies only to the following models:

- [SE3-SW10UG-2P-T](#)
- [SE3-SW5U-1C1-T](#)
- [SE3-SW5U-1T1-T](#)
- [SE3-SW5UG-1P-T](#)
- [SE3-SW5UG-T](#)
- [SE3-SW6U-2C1-T](#)
- [SE3-SW6U-2T1-T](#)
- [SE3-SW7U-2P-T](#)
- [SE3-SWP1A5U-T](#)
- [SE3-SWP2A5U-T](#)
- [SE3-SWP2A5UG-T](#)
- [SE3-SWP2A7U-2P-T](#)

## Safety Precautions



**CAUTION:** IF THE DC VOLTAGE IS SUPPLIED BY AN EXTERNAL CIRCUIT, PLEASE USE A PROTECTION DEVICE ON THE POWER SUPPLY INPUT. SUPPLY POWER FROM A UL LISTED INDUSTRIAL USE POWER SOURCE.

## Warning Labels

The caution label and hot surface warning label mean that you should check the certain information on user manual when working with the device.



Caution Label



Hot Surface Warning Label

## FCC Statement

This equipment has been tested and found to comply with the limits for a Class-A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy. It may cause harmful interference to radio communications if the equipment is not installed and used in accordance with the instructions. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



**NOTE:** Modifications to this equipment will void the user's authority to operate the equipment.

## CE Mark Warning

This is a Class-A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

## Product Overview

The SE3 series industrial unmanaged switches are rated IP30, with one model rated IP67, and can be DIN rail mounted or wall mounted. The series offers:

- 10/100Tx Fast Ethernet ports
- Up to twelve 10/100/1000Tx Gigabit Ethernet ports
- Power-over-Ethernet options in Fast Ethernet and Gigabit Ethernet (IEEE 802.3at compliant, 30W/port)
- 100Mbps SC and ST fiber ports with multi-mode support
- Up to four 100/1000Mbps SFP slots, suitable for high bandwidth and long-distance communication
- An IP67 rated model with 10/100Tx Fast Ethernet M12 ports
- Auto-detection of MDI or MDI-X on all copper ports (RJ45 or M12)
- High EFT and ESD protection
- Power redundancy with a dual power input design with reverse polarity protection
- Built-in relay warning function on most models to alert users of power failures
- Standard operating temperature of -10 ~ 65°C, and extended operating temperature of -40 ~ 75°C, to meet the needs of industrial automation applications and harsh environments.

## SE3 Unmanaged Switches



Stride SE3 Unmanaged Models							
Part Number	RJ45 10/100	RJ45 GbE	M12 10/100	Fiber	Input Power (Max.)	IP Rating	Operating Temperature
SE3-SW5U	5	–		–	1.2 W	IP30	-10 to +65°C [14 to 149°F]
SE3-SW8U	8	–		–	2.2 W		
SE3-SW5U-T	5	–		–	1.2 W		
SE3-SW8U-T	8	–		–	2.2 W		
SE3-SW5UG-T	–	5		–	6.6 W		
SE3-SW8UG-T	–	8		–	9.2 W		
SE3-SW5U-1C1-T	4	–		1 SC	5W		-40 to +75°C [-40 to 167°F]
SE3-SW5U-1T1-T	4	–		1 ST	5W		
SE3-SW6U-2C1-T	4	–		2 SC	6W		
SE3-SW6U-2T1-T	4	–		2 ST	6W		
SE3-SW7U-2P-T	5	–		2 SFP*	8W		
SE3-SW5UG-1P-T	–	4		1 SFP*	5.6 W		
SE3-SW10UG-2P-T	–	8		2 SFP*	12W		
SE3-SW16UG-4P-T	–	12		4 SFP*	15.4 W		
SE3-SW5U-N67-T	–	–	5	–	0.5 W	IP67	

\* Optional SFP modules sold separately.

## SE3 Unmanaged Power over Ethernet Switches



Stride SE3 Unmanaged PoE Models							
Part Number	RJ45 10/100 PoE+	RJ45 GbE PoE+	RJ45 10/100	RJ45 GbE	Fiber	System Power (Maximum)**	Operating Temperature
SE3-SWP1A5U-T	4	–	1	–	–	4W	-40 to +75°C [-40 to 167°F]
SE3-SWP2A5U-T	4	–	1	–	–	5.5 W	
SE3-SWP2A5UG-T	–	4	–	1	–	6.3 W	
SE3-SWP2A7U-2P-T	4	–	1	–	2 SFP*	9W	

\* Optional SFP modules sold separately.

\*\* Does not include power supplied to PoE devices

## SFP Fiber Transceivers

**Stride** SFP transceivers, also called mini-GBIC, are compact, hot-swappable transceivers with LC fiber connectors.


Models with SFP (small form-factor pluggable) fiber ports accept optional Stride SFP transceivers to add fiber connectivity at Fast Ethernet or Gigabit Ethernet speed.




SFP Fiber Transceivers				
Part Number	Mode	Data Rate	Light Source	Maximum Transmission Distance
SFP-4K-FMF	Multi-mode	Fast Ethernet (155MB)	1310 nm, FP	4km
SFP-30K-FSF	Single-mode			30km
SFP-500-GMF	Multi-mode	Gigabit (1.25 GB)	850 nm, VCSEL	550m
SFP-2K-GMF			1310 nm, FP	2km
SFP-10K-GSF	Single-mode		1310 nm, FP	10km
SFP-30K-GSF			1310 nm, DFB	30km

# Hardware Features


## LED Indicators

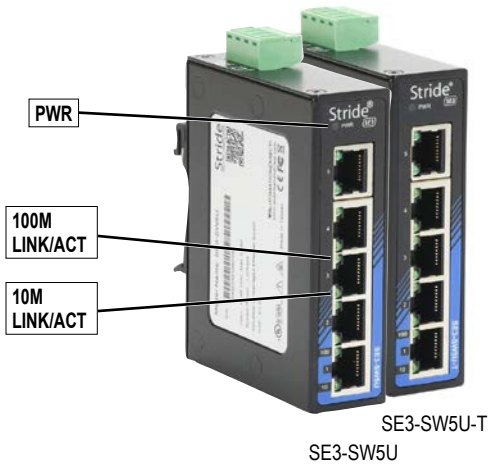

SE3-SW5U(-T) LED Indicators			
LED	Color	Description	
PWR	Green	ON	Power input 1 or 2 is active
		OFF	Power input 1 or 2 is inactive
100M (LAN Port)	Green	ON	Connected to network, 100Mbps
		Flashing	Network is active
		OFF	Not connected to network
10M (LAN Port)	Green	ON	Connected to network, 10Mbps
		Flashing	Network is active
		OFF	Not connected to network

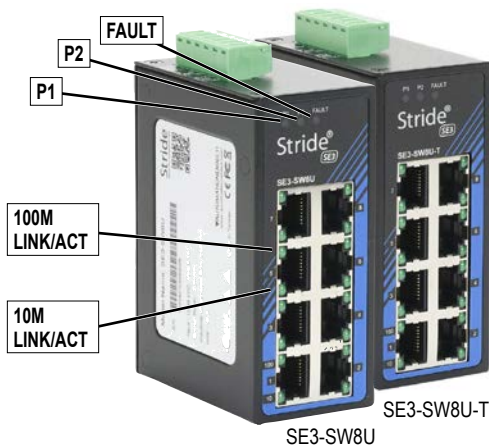


SE3-SW8U(-T) LED Indicators			
LED	Color	Description	
P1	Green	ON	Power input 1 is active
		OFF	Power input 1 is inactive
P2	Green	ON	Power input 2 is active
		OFF	Power input 2 is inactive
FAULT	Red	ON	Power input 1 or 2 is inactive
		OFF	Power input 1 and 2 are both functional, or no power inputs
100M (LAN Port)	Green	ON	Connected to network, 100Mbps
		Flashing	Network is active
		OFF	Not connected to network
10M (LAN Port)	Green	ON	Connected to network, 10Mbps
		Flashing	Network is active
		OFF	Not connected to network

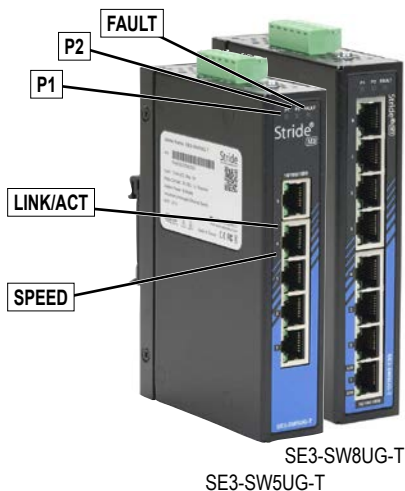


SE3-SW5UG-T, SE3-SW8UG-T LED Indicators			
LED	Color	Description	
P1	Green	ON	Power input 1 is active
		OFF	Power input 1 is inactive
P2	Green	ON	Power input 2 is active
		OFF	Power input 2 is inactive
FAULT	Red	ON	Power input 1 or 2 is inactive
		OFF	Power input 1 and 2 are both functional, or no power inputs
LAN Port LINK/ACT	Green	ON	Connected to network
		Flashing	Network is active
		OFF	Not connected to network
LAN Port SPEED	Green	ON	Connected to network, 1000Mbps
		OFF	Not connected to network, or connected at speed of 10/100 Mbps



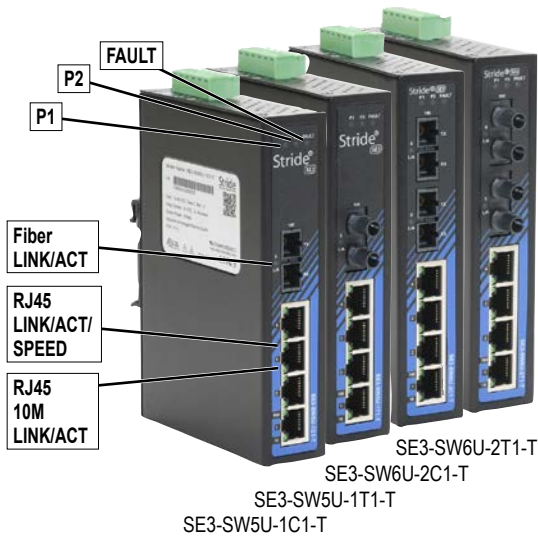


**SE3-SW5U-1C1-T, SE3-SW5U-1T1-T, SE3-SW6U-2C1-T, SE3-SW6U-2T1-T LED Indicators**

LED	Color	Description	
P1	Green	ON	Power input 1 is active
		OFF	Power input 1 is inactive
P2	Green	ON	Power input 2 is active
		OFF	Power input 2 is inactive
FAULT	Red	ON	Power input 1 or 2 is inactive
		OFF	Power input 1 and 2 are both functional, or no power inputs
Fiber Port LINK/ACT	Green	ON	Connected to network
		Flashing	Network is active
		OFF	Not connected to network
LAN Port 100M LINK/ACT	Green	ON	Connected to network, 100Mbps
		Flashing	Network is active
		OFF	Not connected to network
LAN Port 10M LINK/ACT	Green	ON	Connected to network, 10Mbps
		Flashing	Network is active
		OFF	Not connected to network

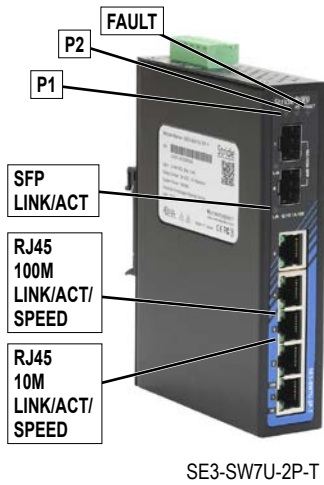


**SE3-SW7U-2P-T LED Indicators**

LED	Color	Description	
P1	Green	ON	Power input 1 is active
		OFF	Power input 1 is inactive
P2	Green	ON	Power input 2 is active
		OFF	Power input 2 is inactive
FAULT	Red	ON	Power input 1 or 2 is inactive
		OFF	Power input 1 and 2 are both functional, or no power inputs
SFP Port LINK/ACT	Green	ON	Connected to network
		Flashing	Network is active
		OFF	Not connected to network
LAN Port 100M LINK/ACT	Green	ON	Connected to network, 100Mbps
		Flashing	Network is active
		OFF	Not connected to network
LAN Port 10M LINK/ACT	Green	ON	Connected to network, 10Mbps
		Flashing	Network is active
		OFF	Not connected to network

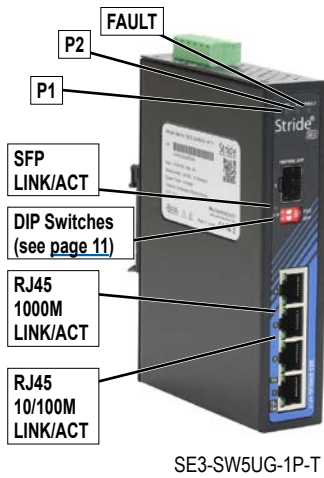


SE3-SW5UG-1P-T

SE3-SW5UG-1P-T LED Indicators			
LED	Color	Description	
P1	Green	ON	Power input 1 is active
		OFF	Power input 1 is inactive
P2	Green	ON	Power input 2 is active
		OFF	Power input 2 is inactive
FAULT	Red	ON	Power input 1 or 2 is inactive
		OFF	Power input 1 and 2 are both functional, or no power inputs
SFP Port LINK/ACT	Green	ON	Connected to network
		Flashing	Network is active
		OFF	Not connected to network
LAN Port 1000M LINK/ACT	Green	ON	Connected to network, 1000Mbps
		Flashing	Network is active
		OFF	Not connected to network
LAN Port 10/100M LINK/ACT	Green	ON	Connected to network, 10/100Mbps
		Flashing	Network is active
		OFF	Not connected to network

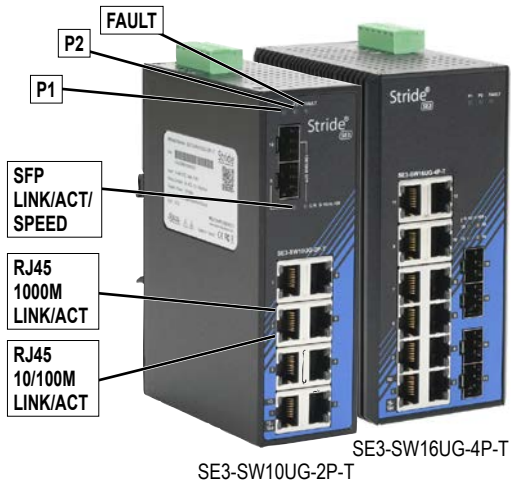


SE3-SW16UG-4P-T  
SE3-SW10UG-2P-T

SE3-SW10UG-2P-T, SE3-SW16UG-4P-T LED Indicators			
LED	Color	Description	
P1	Green	ON	Power input 1 is active
		OFF	Power input 1 is inactive
P2	Green	ON	Power input 2 is active
		OFF	Power input 2 is inactive
FAULT	Red	ON	Power input 1 or 2 is inactive
		OFF	Power input 1 and 2 are both functional, or no power inputs
SFP Port LINK/ACT/SPEED	Green	ON	Connected to network, 1000Mbps
		Flashing	Network is active
		OFF	Not connected to network
	Amber	ON	Connected to network, 100Mbps
		Flashing	Network is active
		OFF	Not connected to network
LAN Port 1000M LINK/ACT	Green	ON	Connected to network, 1000Mbps
		Flashing	Network is active
		OFF	Not connected to network
LAN Port 10/100M LINK/ACT	Green	ON	Connected to network, 10/100Mbps
		Flashing	Network is active
		OFF	Not connected to network

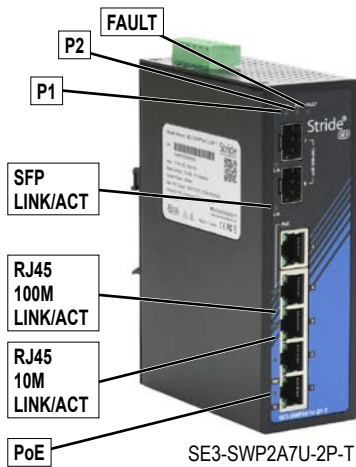


SE3-SWP2A7U-2P-T LED Indicators			
LED	Color	Description	
P1	Green	ON	Power input 1 is active
		OFF	Power input 1 is inactive
P2	Green	ON	Power input 2 is active
		OFF	Power input 2 is inactive
FAULT	Red	ON	Power input 1 or 2 is inactive
		OFF	Power input 1 and 2 are both functional, or no power inputs
SFP Port LINK/ACT	Green	ON	Connected to network
		Flashing	Network is active
		OFF	Not connected to network
LAN Port 100M LINK/ACT	Green	ON	Connected to network, 100Mbps
		Flashing	Network is active
		OFF	Not connected to network
LAN Port 10M LINK/ACT	Green	ON	Connected to network, 10Mbps
		Flashing	Network is active
		OFF	Not connected to network
PoE	Green	ON	The port is supplying power to the powered device
		OFF	No powered device attached or failure to supply power

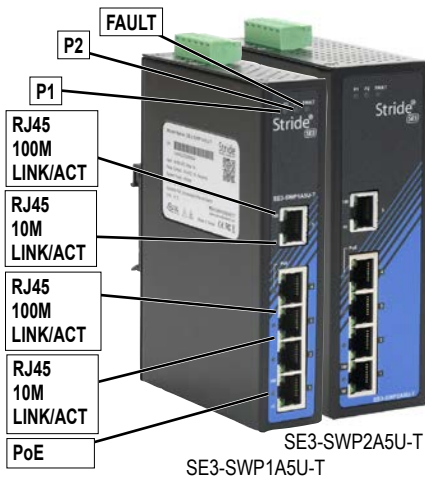


SE3-SWP1A5U-T, SE3-SWP2A5U-T LED Indicators			
LED	Color	Description	
P1	Green	ON	Power input 1 is active
		OFF	Power input 1 is inactive
P2	Green	ON	Power input 2 is active
		OFF	Power input 2 is inactive
FAULT	Red	ON	Power input 1 or 2 is inactive
		OFF	Power input 1 and 2 are both functional, or no power inputs
LAN Port 100M LINK/ACT	Green	ON	Connected to network, 100Mbps
		Flashing	Network is active
		OFF	Not connected to network
LAN Port 10M LINK/ACT	Green	ON	Connected to network, 10Mbps
		Flashing	Network is active
		OFF	Not connected to network
PoE (Port 1-4)	Green	ON	The port is supplying power to the powered device
		OFF	No powered device attached or failure to supply power



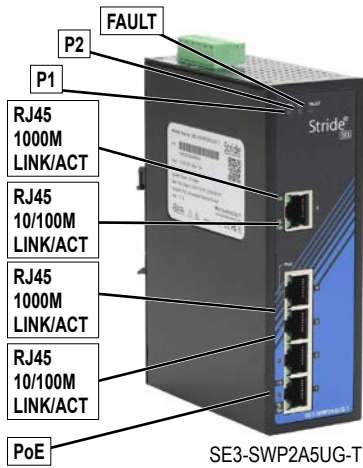

SE3-SWP2A5UG-T LED Indicators			
LED	Color	Description	
P1	Green	ON	Power input 1 is active
		OFF	Power input 1 is inactive
P2	Green	ON	Power input 2 is active
		OFF	Power input 2 is inactive
FAULT	Red	ON	Power input 1 or 2 is inactive
		OFF	Power input 1 and 2 are both functional, or no power inputs
LAN Port 1000M LINK/ACT	Green	ON	Connected to network, 1000Mbps
		Flashing	Network is active
		OFF	Not connected to network
LAN Port 10/100M LINK/ACT	Green	ON	Connected to network, 10/100Mbps
		Flashing	Network is active
		OFF	Not connected to network
PoE (Port 1-4)	Green	ON	The port is supplying power to the powered device
		OFF	No powered device attached or failure to supply power

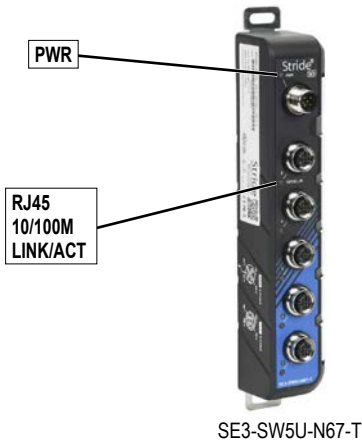

SE3-SW5U-N67-T LED Indicators			
LED	Color	Description	
PWR	Green	ON	Power input 1 or 2 is active
		OFF	Power input 1 and 2 are both inactive
Ethernet Port (1 to 5) Link/Act		ON	Connected to network, 10/100Mbps
		Flashing	Network is active
		OFF	Not connected to network

## Redundant Power Inputs

All SE3-series industrial Ethernet switches have dual redundant power inputs. Connecting two independent power sources reduces the risk of down time resulting from power supply failure.

For information on wiring power to the industrial Ethernet switches, please see "Power Wiring" on page 14.

## Power Fault Alarm

Most of the SE3-series industrial Ethernet switches offer a power fault alarm contact to signal loss of power. The alarm is a normally open contact that is held closed by the presence of power on both power inputs. On loss of one or both power sources, the alarm contact will open. For proper operation of the alarm contact when using a single power input, jumper the two power inputs together. For information on wiring the power fault alarm contact, please see "Alarm Wiring" on page 15.

## DIP Switches (Model SE3-SW5UG-1P-T Only)

Model SE3-SW5UG-1P-T has two DIP switches, located on the front of the unit.

SE3-SW5UG-1P-T DIP Switch Settings			
DIP Switch	Description	ON	OFF
1	Enables or disables Energy Efficient Ethernet.	Enable	Disable
2	SFP module port speed	100Mbps	Module Native Speed

**NOTE:** A change in the dip switch settings will not take effect until the switch is power cycled. So, if a setting is changed while the device is powered, the old setting will remain active until power is removed and reapplied.

### SFP module port speed:

Model SE3-SW5UG-1P-T can optionally force a compatible Gigabit SFP module to operate at 100Mbps. The DIP switch should normally be in the OFF position for both 1Gbps and 100Mbps SFP modules, to allow them to operate at their native speed. Set the switch to the ON position to force a 1Gbps module to operate at 100Mbps. This may be useful, for instance, to connect to legacy 100Mbps equipment without requiring purchase of an additional SFP module. This feature may not be compatible with all SFP modules, but does work with the Gigabit SFP modules available at [www.automationdirect.com](http://www.automationdirect.com).

### Energy-Efficient Ethernet (EEE):

Energy-Efficient Ethernet (EEE) is a set of enhancements defined by the IEEE 802.3az standard. Its primary objective is to curtail power usage during periods of reduced data activity or idleness. By dynamically adapting power consumption according to actual data traffic demands, EEE reduces power consumption by up to 30%.

# Mounting


The SE3 series switches can be DIN rail mounted or panel wall mounted. Each switch is shipped with all necessary brackets for either mounting option.

## DIN Rail Mounting

The SE3 switches can be mounted on a standard 35 x 7.5 mm height DIN rail (Standard: CENELEC EN50022) installed either vertically or horizontally.


### Installing DIN rail bracket:

Most SE3 switches are shipped with DIN rail brackets preinstalled. For the IP67 model, attach the DIN rail bracket to the switch using the supplied hardware, as shown in the figure to the right.

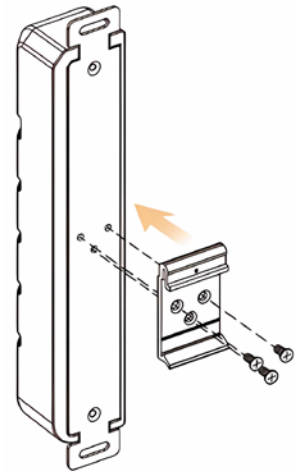


### DIN rail mounting steps:

1. Hook top back of unit over the DIN rail.
2. Push bottom back onto the DIN rail until it snaps into place.

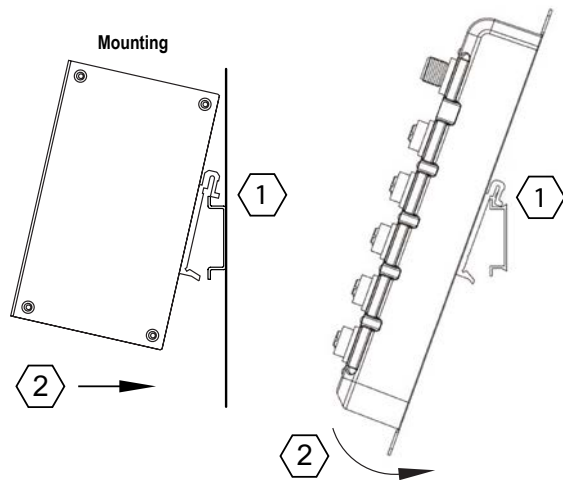

### DIN rail removal steps:

- A. Push the unit down to free the bottom of the DIN rail.
- B. Rotate the bottom of the unit away from the DIN rail.
- C. Unhook top of unit from DIN rail.

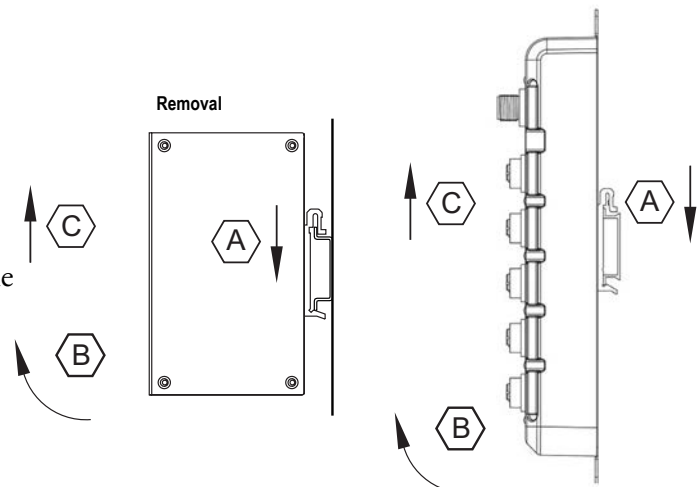


## Wall Mounting

Follow the steps below to mount the switch using the wall mounting bracket. Bracket details and hole patterns differ between models.

### Removing the DIN rail bracket

All SE3-series switches other than the IP67 model are shipped with DIN rail mounting brackets preinstalled. This bracket must be removed to mount the switch directly onto a panel wall.


There are several styles of DIN rail bracket in use across the SE3 product line. In all cases, remove the DIN rail mounting bracket by loosening several easily accessible screws.

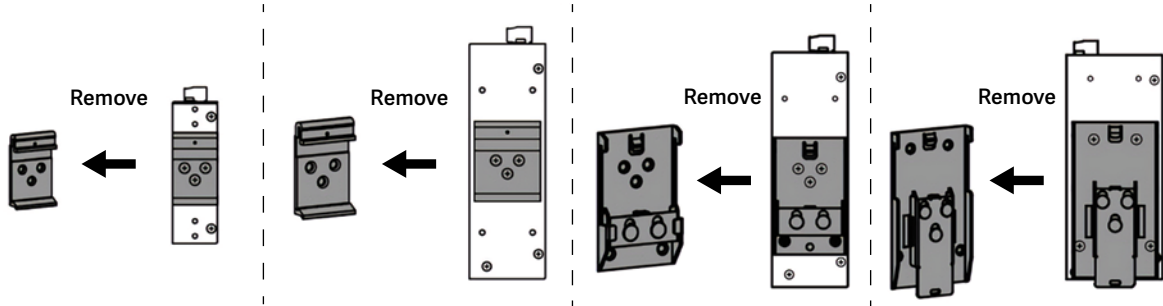

### Attaching the wall mounting bracket

Attach the wall mounting brackets on the top and bottom of the switch using the supplied hardware. Specific mounting hole locations vary between models.

This step is unnecessary for Model # SE3-SW5U-N67-T, whose wall mounting brackets are an integral part of the housing.

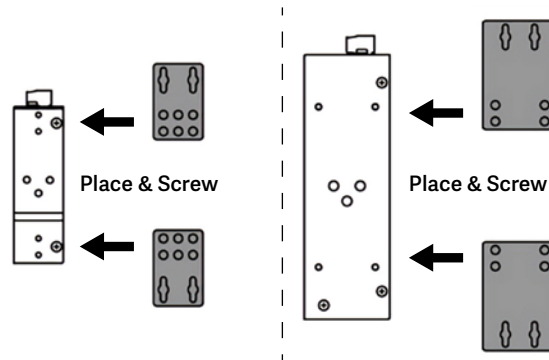

### Mounting the switch to panel wall

Place screws in the panel wall based on the positions of the slotted screw holes on the mounting brackets and attach the switch to the wall.

# Power and Alarm Wiring

## Power Wiring



**WARNING:** BEFORE PERFORMING ANY WIRING TO THESE SWITCHES MAKE SURE...


- THE AREA IS CURRENTLY NONHAZARDOUS (ESPECIALLY WHEN WORKING IN CLASS 1, DIV 2 OR ZONE 2 HAZARDOUS LOCATIONS).
- POWER IS OFF TO THE SWITCH.
- THE SCREW TERMINAL BLOCK IS UNPLUGGED. THIS IS ESPECIALLY IMPORTANT ON THE METAL HOUSED UNITS. CONNECTING OR DISCONNECTING WIRES TO THE SCREW BLOCK WHEN IT'S IN PLACE AND POWER IS TURNED ON CAN ALLOW THE SCREWDRIVER TO SHORT THE POWER TO THE CASE.

### Terminal Block Power Inputs

The switch can be powered from the same source that is used to power your other devices. To maintain the UL listing, this must be a Class 2 power supply. Power needs to be applied between the V1+ terminal and the V1- terminal as shown below. The chassis screw terminal should be tied to panel or chassis ground. To reduce down time resulting from power loss, the switch can be powered redundantly with a second power supply as shown below. The switch is equipped with reverse power protection, but care should be taken to connect the positive and negative terminals correctly. For the non-PoE models, a recommended DC power supply is AutomationDirect.com part number PSL-24-030.

Power Details	
<b>Power Input</b>	Redundant input terminals, removable terminal block
<b>Input Voltage</b>	Refer to Technical Specifications tables on pages 19–21
<b>Reverse Power Protection</b>	Yes
<b>Wire Size and Torque</b>	20–18 AWG, copper conductors only, 125°C; Wire strip length 7mm; Torque: 7 lb·in [0.79 N·m]
<b>Power Consumption</b>	Refer to Models tables on pages 4–5.
<b>Relay Contact</b>	24VDC, 1A resistive, open on fault (not present on SE3-SW5U, SE3-SW5U-T)

### Redundant DC Power

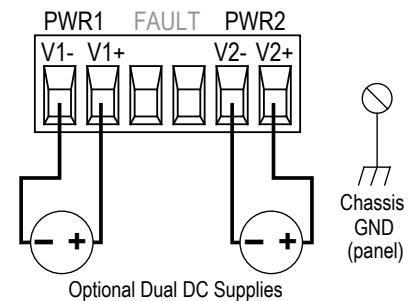


**NOTE:** If only one power supply is used, jumper V1+ to V2+ and V1- to V2- to eliminate power fault alarm.

## M12 Power Inputs

The switch can be powered from the same source that is used to power your other devices. A DC voltage in the range of 12–48 VDC needs to be applied through an M12 connector as shown in the chart below. We recommend grounding the switch to the panel or chassis ground using an M3 or M4 ground screw and grounding wire, attached to either the top or bottom wall mounting hole. To reduce down time resulting from power loss, the switch can be powered redundantly with a second power supply as shown in the chart below. A recommended DC power supply is AutomationDirect.com part number PSL-24-030.

M12 Power Details	
<b>Power Connection</b>	Dual DC power inputs through M12 5-pin A-coded male connector
<b>Input Voltage</b>	Class 2 power supply: 12–48 VDC redundant power inputs
<b>Reverse Power Protection</b>	Yes
<b>Wire Size</b>	24–18 AWG
<b>System Power Consumption</b>	0.5 W
<b>Relay Contact</b>	No

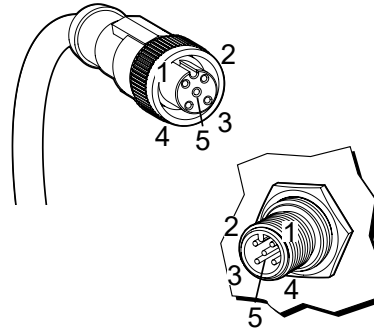


Power Port Pin Definitions	
Pin	Description
1	Power Input 1 +
2	Power Input 2 +
3	Power Input 2 -
4	Power Input 1 -
5	Ground

## Alarm Wiring

All SE3 series switches, with the exception of Models [SE3-SW5U](#), [SE3-SW5U-T](#) and [SE3-SW5U-N67-T](#), have a Power Fault alarm contact. Terminals for the alarm are located between the power inputs on the removable terminal block, as shown below. The alarm is a normally open contact that is held closed by the presence of power on both power inputs. On loss of one or both power sources, the alarm contact will open.

Power Fault Alarm Details	
<b>Relay Contact</b>	24VDC, 1A resistive, open on fault (not present on SE3-SW5U, SE3-SW5U-T, SE3-SW5U-N67-T)

### Power Fault Alarm Wiring

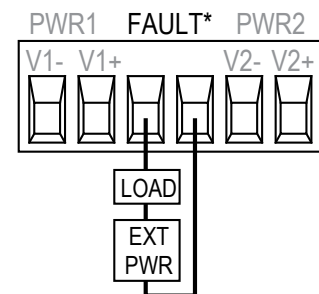

\*Fault Contact opens when in a faulted state (Not present on some models)

**NOTE:** If only one power supply is used, jumper V1+ to V2+ and V1- to V2- to eliminate power fault alarm.

## Grounding

Grounding and wire routing help limit the effects of noise due to electromagnetic interference (EMI). Run a ground connection from the ground screw on the switch (⌋) to the grounding surface prior to connecting devices.

On Model SE3-SW5U-N67-T, which does not have a designated ground screw, we recommend grounding the switch to the panel or chassis ground using an M3 or M4 ground screw and grounding wire, attached to either the top or bottom wall mounting hole.

# Communications Wiring

The industrial Ethernet switches provide connections to standard Ethernet devices such as PLCs, Ethernet I/O, industrial computers and much more. RJ45 or M12 (for IP67 locations) Ethernet ports or fiber/SFP option ports are available depending on model.

Please see [www.automationdirect.com](http://www.automationdirect.com) for a wide range of cabling options.

## RJ-45 Ethernet Connections

Use data-quality (not voice-quality) twisted pair cable rated category 5e (or better) with standard RJ45 or M12 (D-coded, male, 5-pin) connectors. Straight-through or crossover Ethernet cable can be used for all devices to which the switch is connected because all the ports are capable of auto-MDI/MDIX crossover detection. The maximum cable length for 10/100/1000BaseT is 100m [328ft].


The RJ45 Ethernet port connector bodies on these products are metallic and connected to the Chassis GND terminal. Therefore, shielded cables may be used to provide further protection. To prevent ground loops, the cable shield should be tied to the metal connector body at one end of the cable only. Electrical isolation is also provided on the Ethernet ports for increased reliability.

The RJ-45 ports are auto-sensing for 10Base-T, 100Base-TX or 1000Base-T devices connections. See the figures as below for straight-through and crossover cabling schematics.

10/100Base-T(X) RJ-45 Pin Assignments			
Crossover Cable		Straight-through Cable	
Pin Number / Signal	Pin Number / Signal	Pin Number / Signal	Pin Number / Signal
1 / RX+	3 / TX+	1 / RX+	1 / TX+
2 / RX-	6 / TX-	2 / RX-	2 / TX-
3 / TX+	1 / RX+	3 / TX+	3 / RX+
6 / TX-	2 / RX-	6 / TX-	6 / RX-

1000Base-T RJ-45 Pin Assignments			
Crossover Cable		Straight-through Cable	
Pin Number / Signal	Pin Number / Signal	Pin Number / Signal	Pin Number / Signal
1 / TP0+	3 / TP1+	1 / TP0+	1 / TP1+
2 / TP0-	6 / TP1-	2 / TP0-	2 / TP1-
3 / TP1+	1 / TP0+	3 / TP1+	3 / TP0+
4 / TP2+	7 / TP3+	4 / TP2+	4 / TP3+
5 / TP2-	8 / TP3-	5 / TP2-	5 / TP3-
6 / TP1-	2 / TP0-	6 / TP1-	6 / TP0-
7 / TP3+	4 / TP2+	7 / TP3+	7 / TP2+
8 / TP3-	5 / TP2-	8 / TP3-	8 / TP2-

Note: "+" and "-" signs represent the polarity of the wires that make up each wire pair.

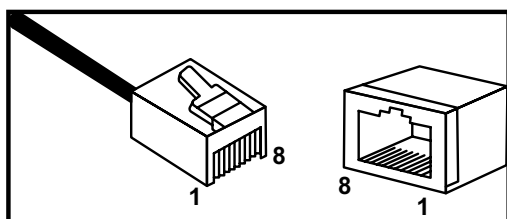


PoE Switch Ethernet Port Pin Definitions			
Pin		Pin	
1	V -	5	TRD2 -
2	V +	6	V -
3	V -	7	TRD3 +
4	TRD2 + (transmit / receive data)	8	TRD3 -



## M12 Ethernet Connections

Use data-quality (not voice-quality) twisted pair cable rated category 5e (or better) with standard M12 (D-coded, male, 4-pin) connectors. Straight-through or crossover Ethernet cable can be used for all devices to which the switch is connected because all the ports are capable of auto-MDI/MDIX crossover detection. The maximum cable length for 10/100/1000BaseT is 100m [328ft].

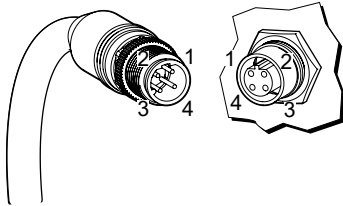

Communication Port Pin Definitions	
Pin	MDI Signal
1	Transmit Data + (TD+)
2	Receive Data + (RD+)
3	Transmit Data - (TD-)
4	Receive Data - (RD-)




**NOTE:** The supplied M12 caps need to be used on open (disconnected) ports. Replacement caps (Part # ZP-JBH-CAP) are available from AutomationDirect.com.

## Ethernet Fiber Wiring Guidelines

Some switches include fiber ports, either SC or ST connector, or an SFP option. Refer to the switch specifications for details on the available connection types.

For each fiber port there is a transmit (TX) and receive (RX) signal. When making your fiber optic connections, make sure that the transmit (TX) port of the switch connects to the receive (RX) port of the other device, and the receive (RX) port of the switch connects to the transmit (TX) port of the other device. Use standard fiber optic wiring techniques (not covered by this manual) to make your connections.

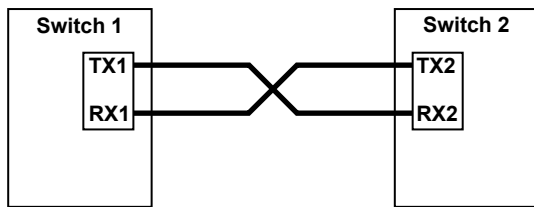

It is important to consider the output power and the receiver sensitivity for each end of each fiber connection, especially when the distances that each fiber transceiver in each switch are specified to support differ or when the transceivers (switches) are separated at a distance different than that which the transceivers are specified to support.

## SC and ST Fiber Connections

The SC and ST type fiber ports work in multi-mode at 1310nm wavelength, and are compatible with 50/125 or 62.5/125  $\mu\text{m}$  fiber. When connecting the fiber port to another device, please follow the guidelines in the previous subsection.



**CAUTION:** THIS IS A CLASS 1 LASER/LED PRODUCT. DON'T STARE INTO THE LASER/LED BEAM.




## SFP Fiber Connections

The small form-factor pluggable (SFP) is a compact optical transceiver used in optical communications for both telecommunication and data communication applications.




**CAUTION:** PLEASE EMPLOY AN OPTIONAL OPTICAL TRANSCEIVER (SFP/FIXED FIBER) THAT COMPLIES WITH IEC 60825-1 AND IS CLASSIFIED AS A CLASS 1 LASER PRODUCT.


To connect the transceiver and LC cable, insert the SFP transceiver module into the SFP slot as shown below. Notice that the triangle mark is at the bottom of the SFP slot. Then insert the fiber cable connector into the transceiver.

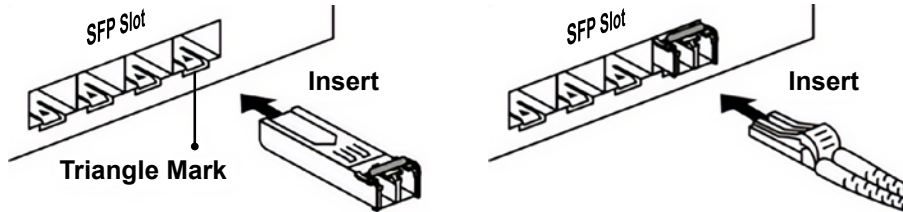

To remove an LC fiber cable connector from the transceiver, please press the retaining tab on the connector and pull the connector from the module as shown below.

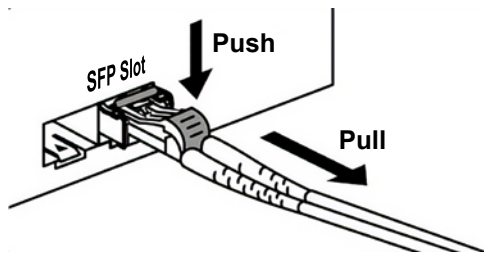

To remove an SFP module from the switch, push down the metal clasp and pull the transceiver out by the plastic part as shown below.

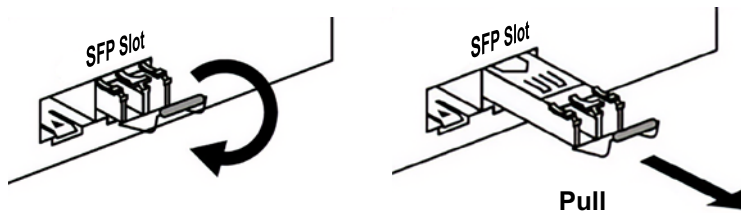

## Verifying Connectivity

After all Ethernet and/or fiber connections are made, check the LEDs corresponding to the ports that each of the devices are connected to. Ensure that for each port that is in use, the LED is on or blinking. If a port LED is off, go back and check for connectivity problems between that port and the network device connected to that port (see prior section on LEDs).

# Technical Specifications

		General Specifications																			
		SE3-SW5U	SE3-SW5U-T	SE3-SW8U	SE3-SW8U-T	SE3-SW5UG-T	SE3-SW8UG-T	SE3-SW5U-1C1-T	SE3-SW5U-1T1-T	SE3-SW6U-2C1-T	SE3-SW6U-2T1-T	SE3-SW7U-2P-T	SE3-SW5UG-1P-T	SE3-SW10UG-2P-T	SE3-SW16UG-4P-T	SE3-SWP1A5U-T	SE3-SWP2A5U-T	SE3-SWP2A5UG-T	SE3-SWP2A7U-2P-T	SE3-SW5U-N67-T	
<b>Processing Type</b>		Store and forward																			
<b>Devices Supported</b>		All IEEE 802.3 compliant devices are supported																			
<b>MAC Addresses</b>	1K	●	●	●	●																●
	2K							●	●	●	●					●	●				
	8K					●	●						●	●	●	●			●	●	
<b>Memory Buffer</b>	448Kbits	●	●	●	●			●	●	●	●					●	●				●
	1Mbit					●							●						●		
	4Mbits						●					●		●	●					●	
<b>Packet Forwarding Rate</b>		14.88 Kpps for Ethernet ports 148.8 Kpps for Fast Ethernet ports 14,888 Kpps for Gigabit Ethernet ports																			
<b>Jumbo Frame Support</b>	9.6 Kbytes						●					●		●	●					●	
	10Kbytes					●							●						●		
<b>Operating Temperature Range</b>																					
	-10 to +65°C [14 to 149°F]	●		●																	
	-40 to +75°C [-40 to 167°F]		●		●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
<b>Storage Temperature Range</b>		-40 to +85 °C [-40 to +185 °F]																			
<b>Humidity (Non-Condensing)</b>		5 to 95% RH																			
<b>Environmental Air</b>		No corrosive gases permitted																			
<b>Vibration, Shock &amp; Freefall</b>		IEC60068-2-6, -27, -32																			
<b>EMI Emissions</b>		FCC Part 15 Subpart B Class A, CE EN55032/EN61000-6-4 Class A																			
<b>EMS</b>		CE EN55035/EN61000-6-2 Class A: IEC61000-4-2 (ESD), IEC61000-4-3 (RS), IEC61000-4-4 (EFT), IEC61000-4-5 (Surge), IEC61000-4-6 (CS), IEC61000-4-8 (Magnetic Field)																			
<b>RoHS</b>		RoHS (Pb free) compliant																			
<b>Packaging and Protection</b>	Metal case, IP30	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	
	Plastic case, IP67																				●
<b>Hazardous Locations (Class I, Div.2)</b>	ANSI/ISA 12.12.01					●		●	●	●	●	●	●	●		●	●	●	●		
<b>Agency Approvals</b>	FCC, CE	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
	UL 61010-1, 61010-2-201	●	●	●	●	●	●					●	●	●	●				●	●	●
	UL 508							●	●	●	●					●	●				

Power Details, Non-PoE Models																
		SE3-SW5U	SE3-SW5U-T	SE3-SW8U	SE3-SW8U-T	SE3-SW5UG-T	SE3-SW8UG-T	SE3-SW5U-1C1-T	SE3-SW5U-1T1-T	SE3-SW6U-2C1-T	SE3-SW6U-2T1-T	SE3-SW7U-2P-T	SE3-SW5UG-1P-T	SE3-SW10UG-2P-T	SE3-SW16UG-4P-T	SE3-SW5U-N67-T
Power Inputs (Redundant)	Removable Terminal Block	●	●	●	●	●	●	●	●	●	●	●	●	●	●	
	M12 5-pin A-coded Male Connector															●
Input Voltage (Class 2 Power Supply)		12-48 VDC														
Reverse Power Protection		Yes														
System Power Consumption (W)		1.2	1.2	2.2	2.2	6.6	9.2	5	5	6	6	8	5.6	12	15.4	0.5
Relay Contact		NA	NA	24VDC, 1A resistive, open on fault											NA	

Power Details, Power over Ethernet Models					
		SE3-SWP1A5U-T	SE3-SWP2A5U-T	SE3-SWP2A5UG-T	SE3-SWP2A7U-2P-T
Power Inputs (Redundant)		Removable Terminal Block			
Input Voltage (Class 2 Power Supply)	48-55 VDC	●			
	12-36 VDC		●	●	
	12-55 VDC				●
Reverse Power Protection		Yes			
System Power Consumption (W)		4	5.5	6.3	9
Relay Contact		24VDC, 1A resistive, open on fault			
Max PoE Power Output		30W per PoE port			
Max PoE Power Budget		120W	90-120W/ 12-36VDC	120W	60W/12VDC, 120W/36-55VDC
PoE Pinout		V+, V+, V-, V-, for pin 1, 2, 3, 6 (Endspan, MDI Alternative A)			
PD (Powered Device) Detection		Yes - the switch port will detect the presence of a PoE enabled device before sending power. If a non-PoE device is detected, power will not be sourced on that port but Ethernet communications will be permitted.			
PoE Overload Protection		Yes			
PoE Reverse Protection		Yes			
PoE Redundancy Protection		Yes			

RJ45 Ports	
<b>Ethernet Compliance</b>	IEEE 802.3i, 802.3u, 802.3x for 10/100 Ethernet IEEE 802.3ab for Gigabit Ethernet IEEE 802.3af or 802.3at for PoE
<b>Auto-Crossover</b>	Yes, allows you to use straight-through or crossover wired cables
<b>Auto-Sensing Operation</b>	Yes, full and half duplex
<b>Auto-Negotiating Speed</b>	Yes
<b>Flow Control</b>	IEEE 802.3x flow control, back pressure flow control
<b>Cable Requirements</b>	10BaseT: 2-pair UTP/STP Cat. 3, 4, 5 cable EIA/TIA-568 100-ohm (100m) 100BaseTX: 2-pair UTP/STP Cat. 5 cable EIA/TIA-568 100-ohm (100m) 1000BaseTX: UTP/STP Cat.5/5E cable; EIA/TIA-568 100-ohm (100m)
<b>Max. Cable Distance</b>	100m [328ft]

M12 Ethernet Ports	
<b>10/100BaseT Ports</b>	M12, female, D-coded, 4-pin
<b>Ethernet Compliance</b>	IEEE 802.3i, 802.3u, 802.3x for 10/100 Ethernet
<b>Auto-Crossover</b>	Yes, allows you to use straight-through or crossover wired cables
<b>Auto-Sensing Operation</b>	Yes, full and half duplex
<b>Auto-Negotiating Speed</b>	Yes
<b>Flow Control</b>	IEEE 802.3x flow control, back pressure flow control
<b>Cable Requirements</b>	Twisted pair (Cat5e or better, shielded recommended)
<b>Max. Cable Distance</b>	100m [328ft]

Note: M12 caps need to be used on open (disconnected) ports.  
Replacement caps (Part # ZP-JBH-CAP) are available from AutomationDirect.com

SC/ST Fiber Port: (100BaseFX multimode)	
<b>Optimal Fiber Cable</b>	50/125 or 62.5/125 $\mu$ m
<b>Center Wavelength</b>	1310nm
<b>Multimode</b>	Transmitter power into 50/125 cable (dBm): -20 min, -14 max Transmitter power into 62.5/125 cable (dBm): -23.5 min, -14 max Receiver sensitivity (dBm): -32
<b>Nominal Max. Distance</b>	2km [1.24 mi]
<b>Eye Safety (laser)</b>	IEC 60825-1, Class 1; FDA 21 CFR 1040.10 and 1040.11


SFP Ports	
<b>Ethernet Compliance</b>	IEEE 802.3, 802.3u, 802.3x for 10/100 Ethernet IEEE 802.3ab, 802.3z for Gigabit Ethernet

SFP (pluggable) ports accept 100/1000 Mbps Mini-GBIC (SFP) transceivers.  
See SFP module datasheet for optional fiber transceiver specifications

# Dimensional Drawings





mm [in]

**SE3-SW5U / SE3-SW5U-T**

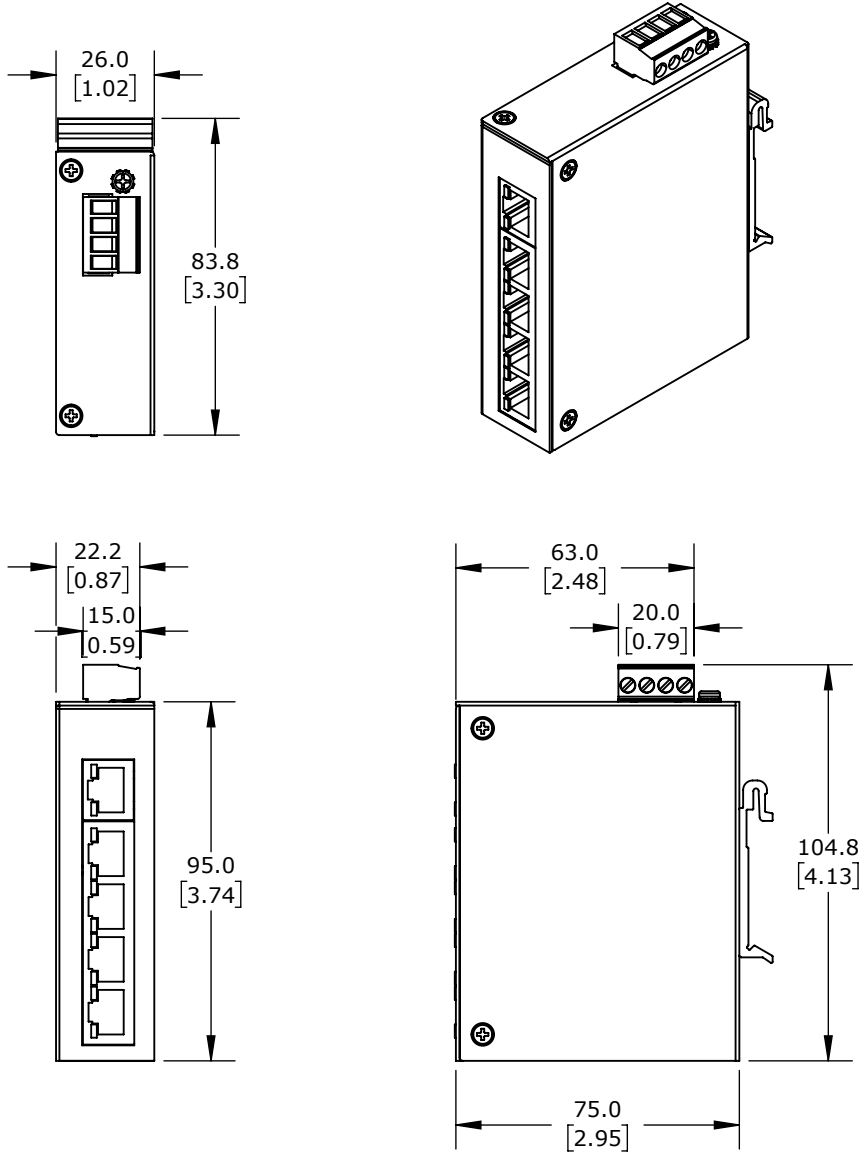





mm [in]

**SE3-SW8U / SE3-SW8U-T**

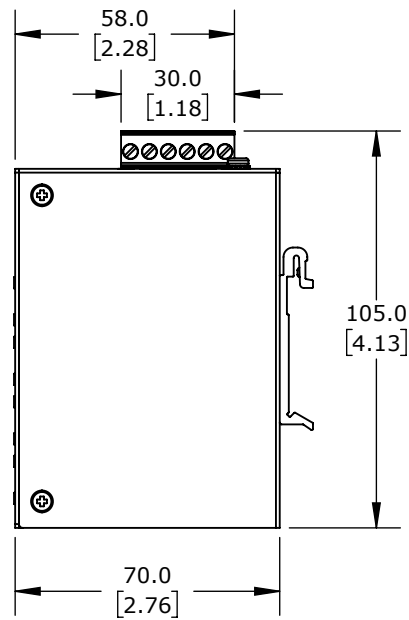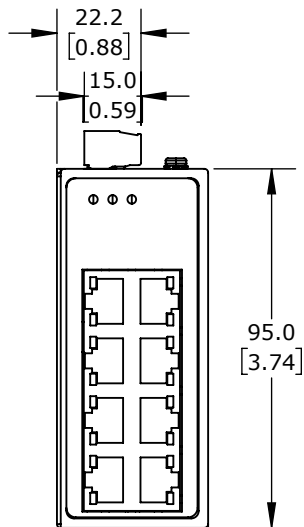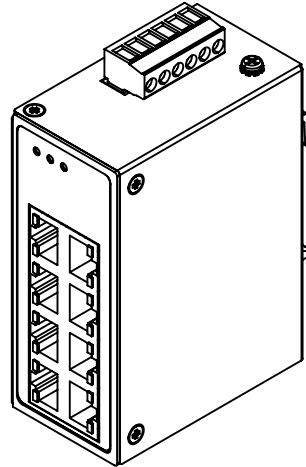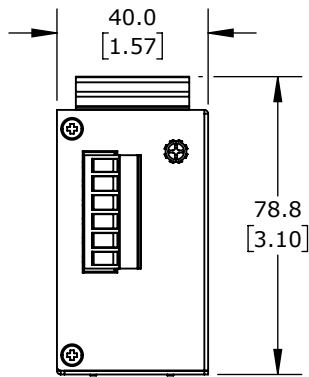


mm [in]

**SE3-SW5UG-T**

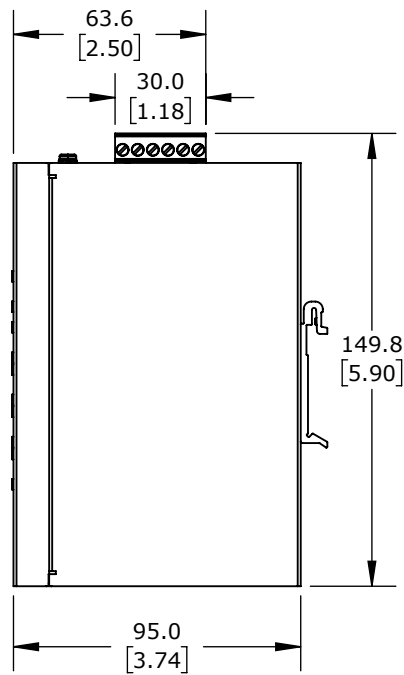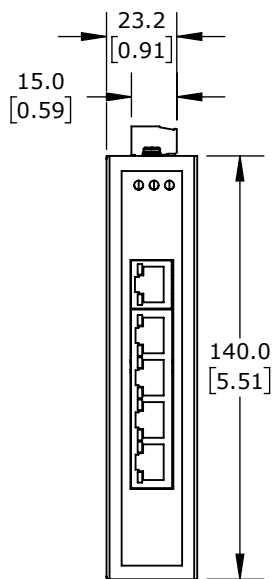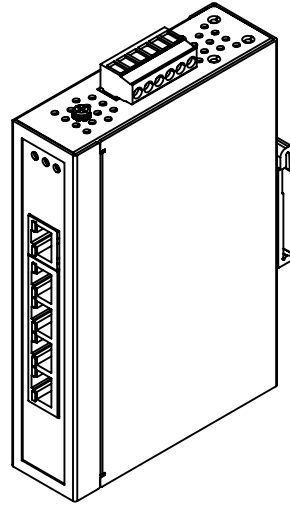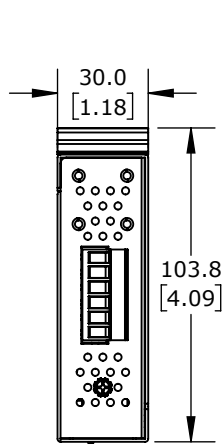

mm [in]


**SE3-SW5U-1C1-T / SE3-SW5U-1T1-T**

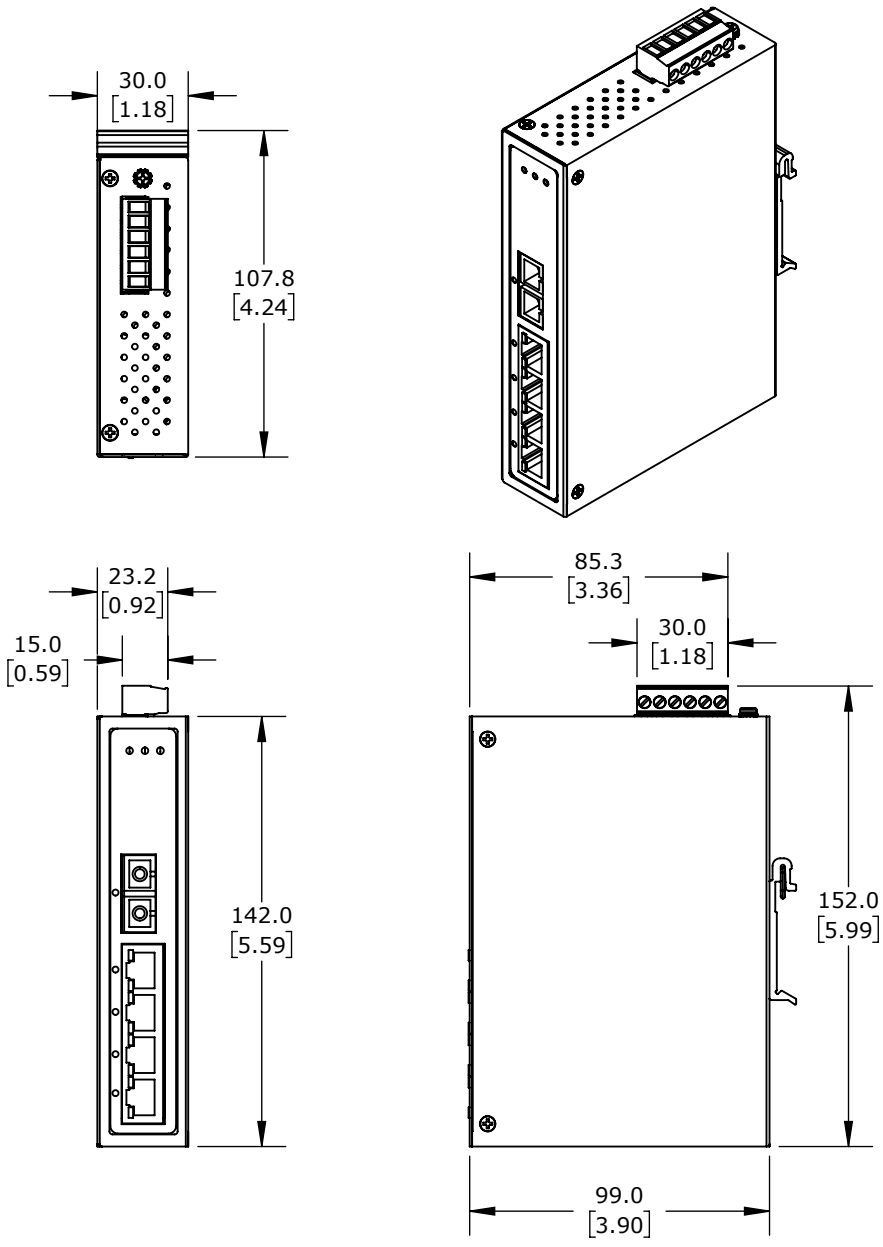




mm [in]

**SE3-SW6U-2C1-T / SE3-SW6U-2T1-T**

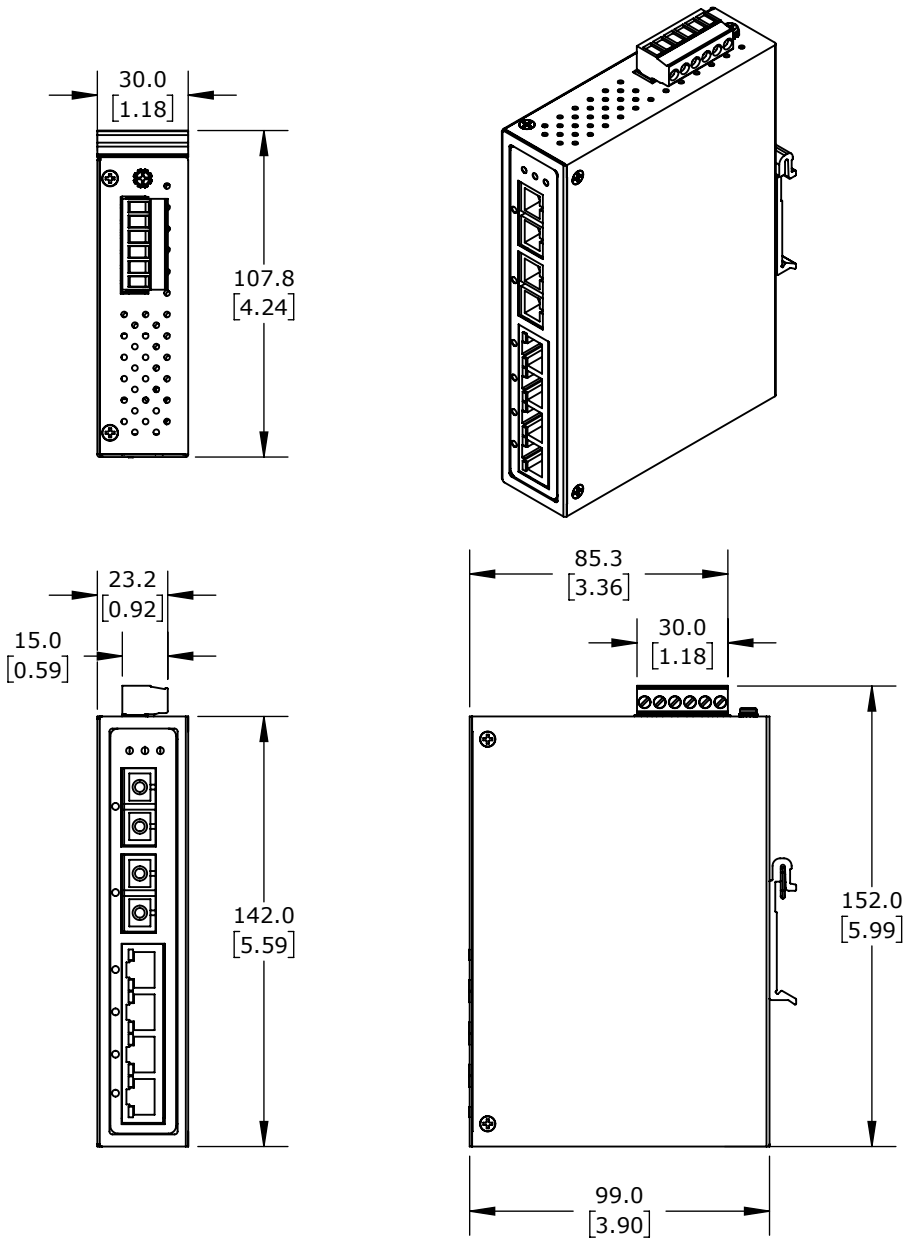





mm [in]

**SE3-SW7U-2P-T**

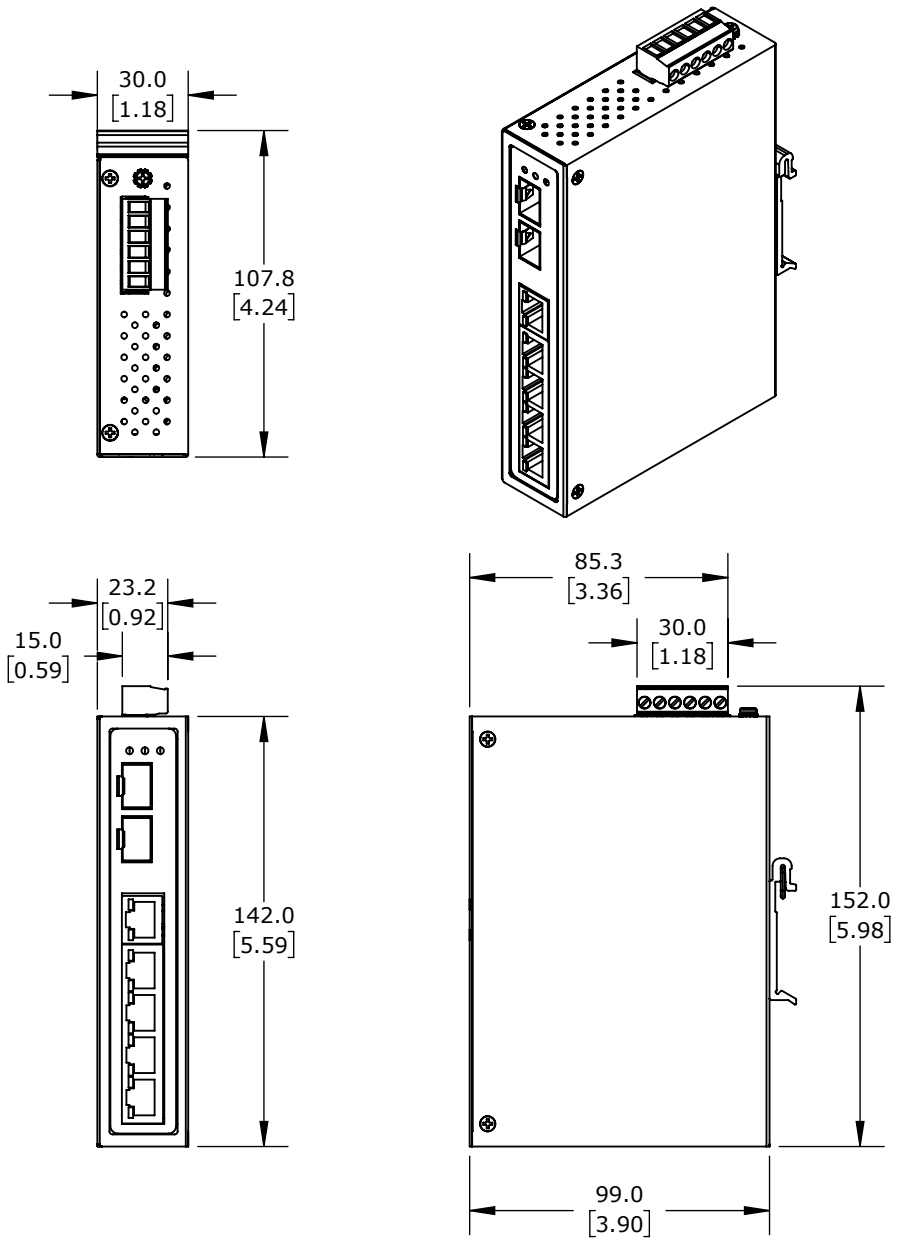





mm [in]

**SE3-SW5UG-1P-T**

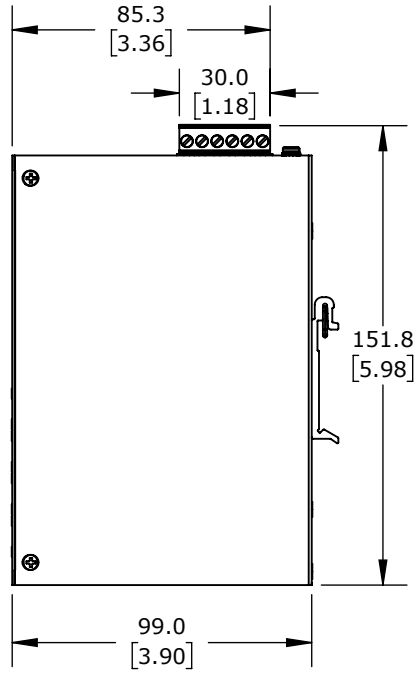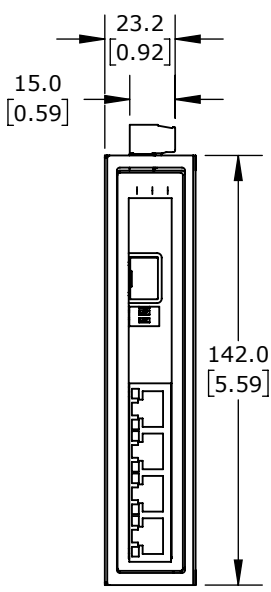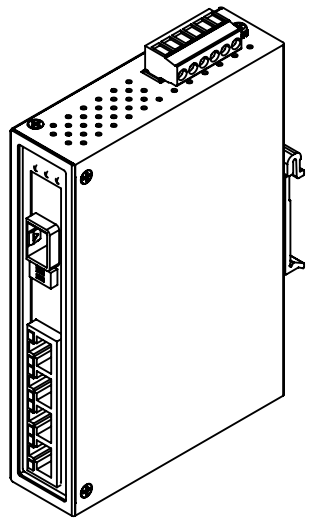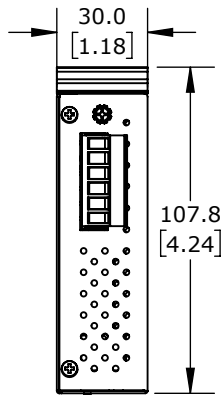





mm [in]

**SE3-SW10UG-2P-T**

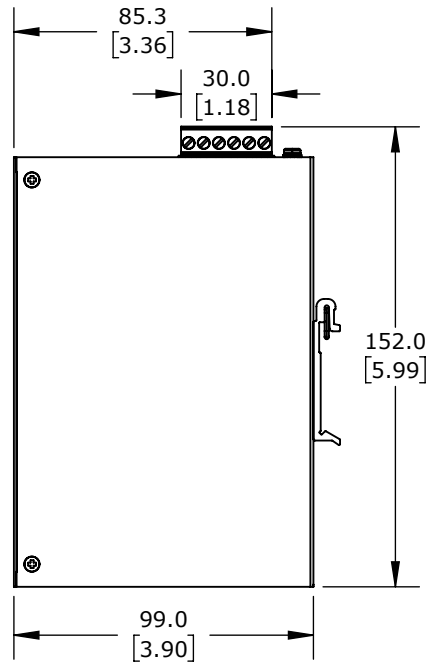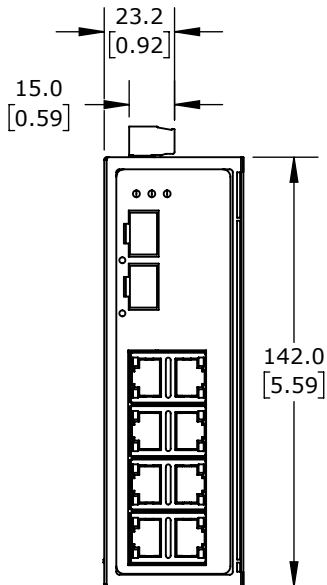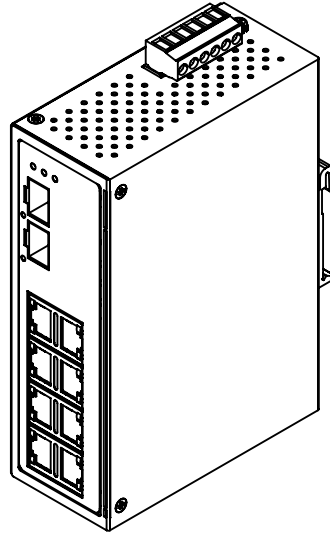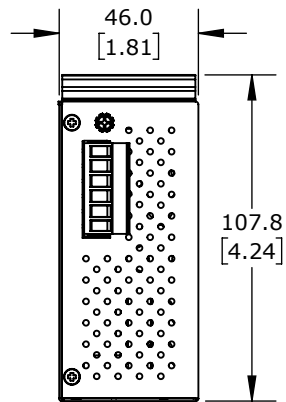


mm [in]

**SE3-SW16UG-4P-T**

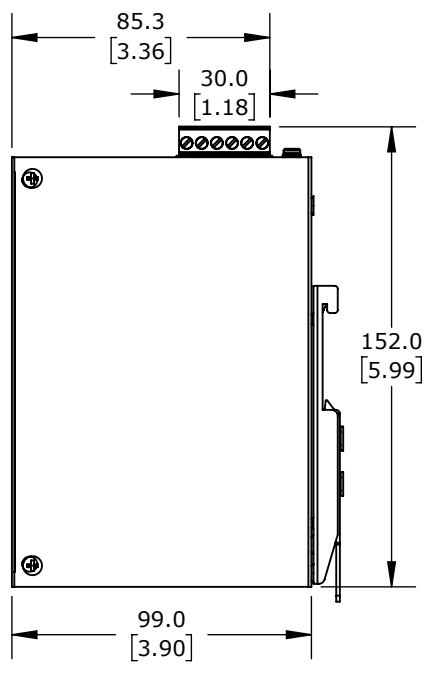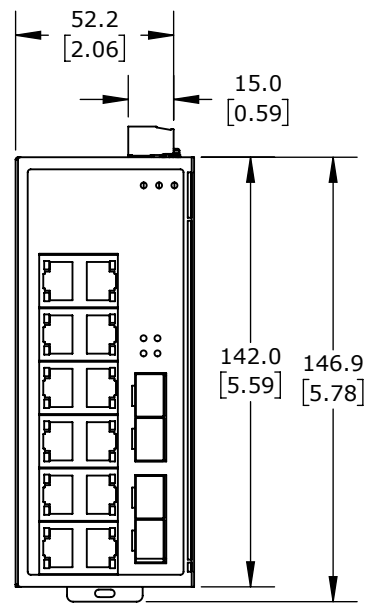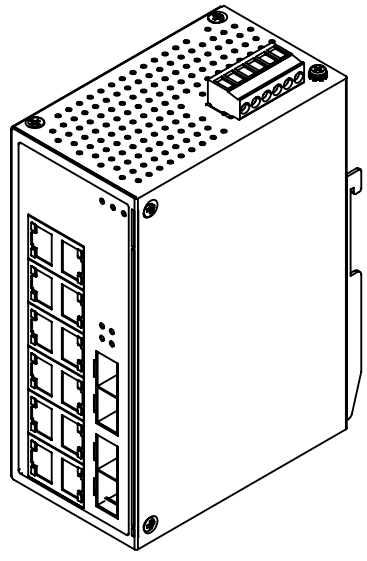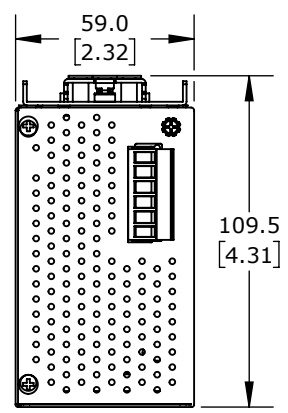


mm [in]

**SE3-SWP1A5U-T**

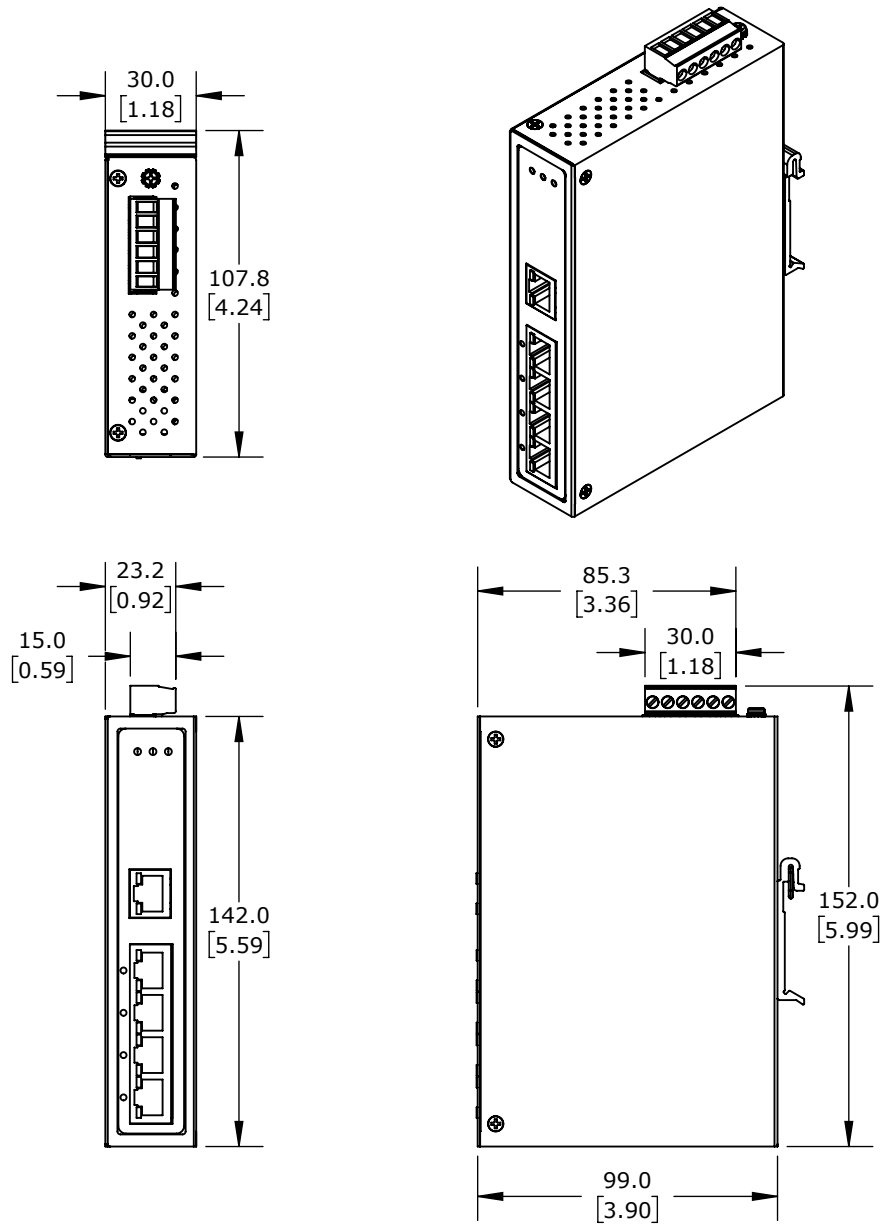





mm [in]

**SE3-SWP2A5U-T / SE3-SWP2A5UG-T**

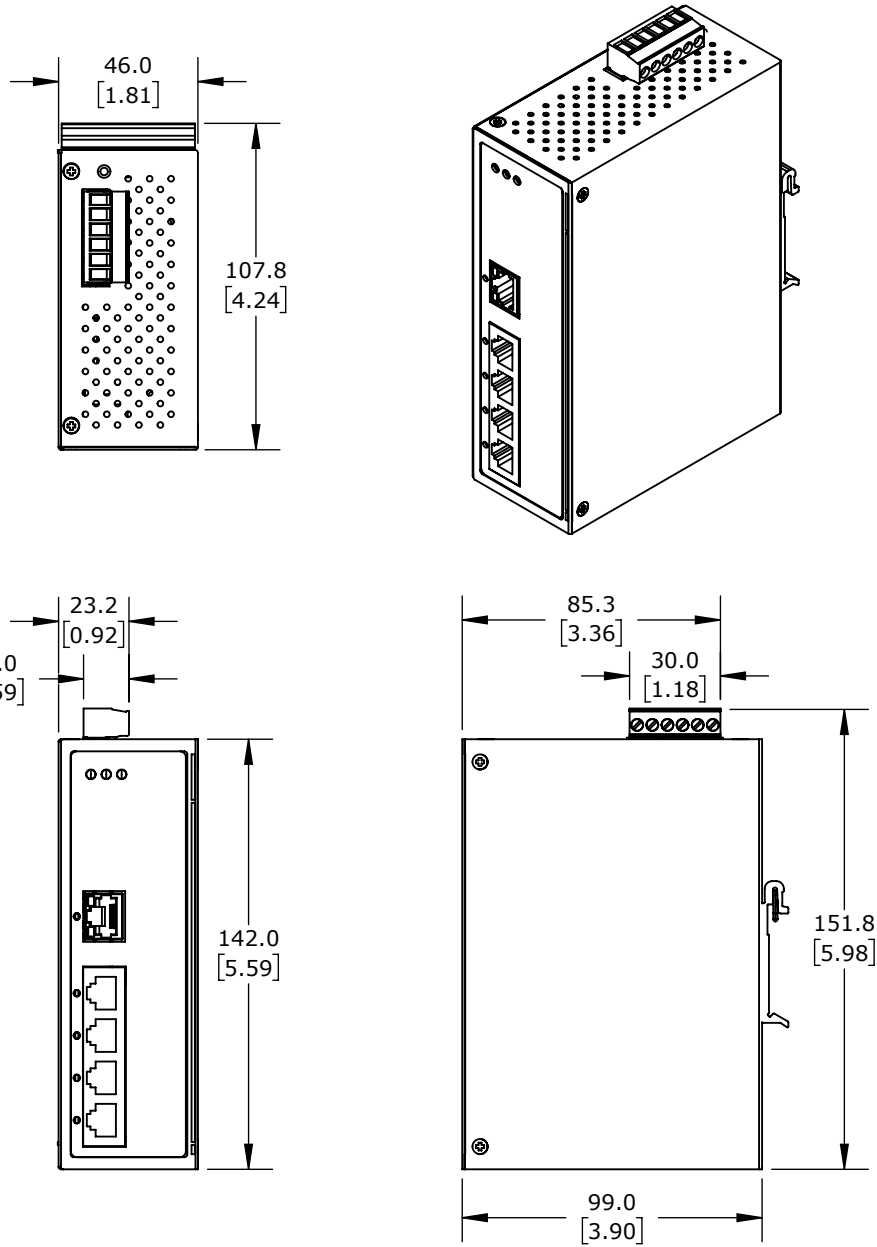

mm [in]





**SE3-SWP2A7U-2P-T**

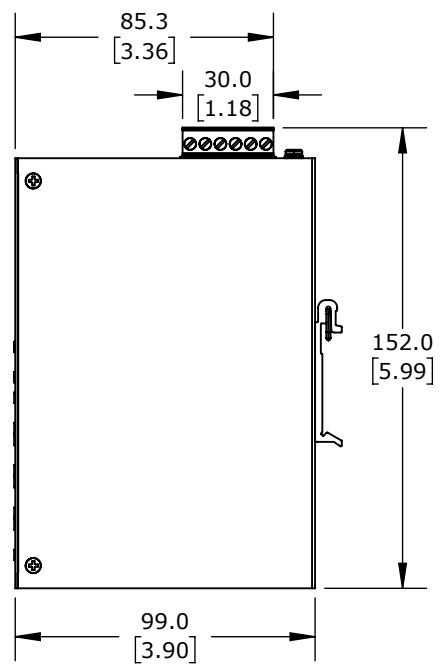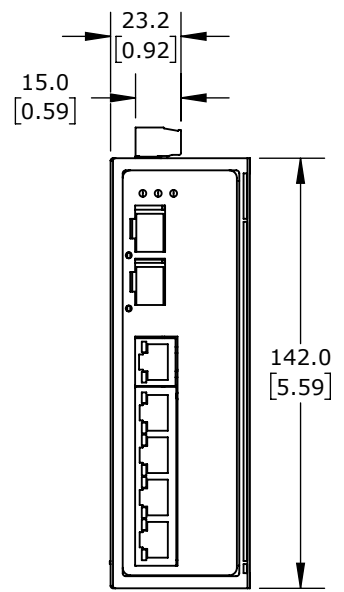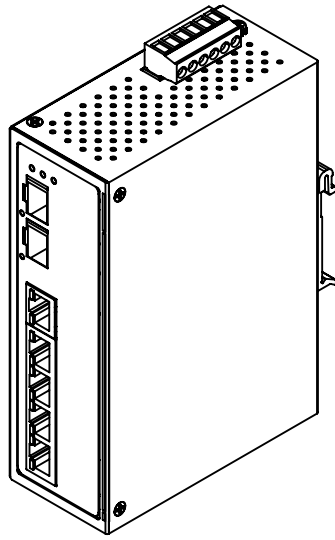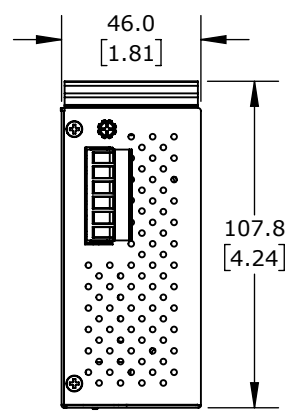



mm [in]

**SE3-SW5U-N67-T**

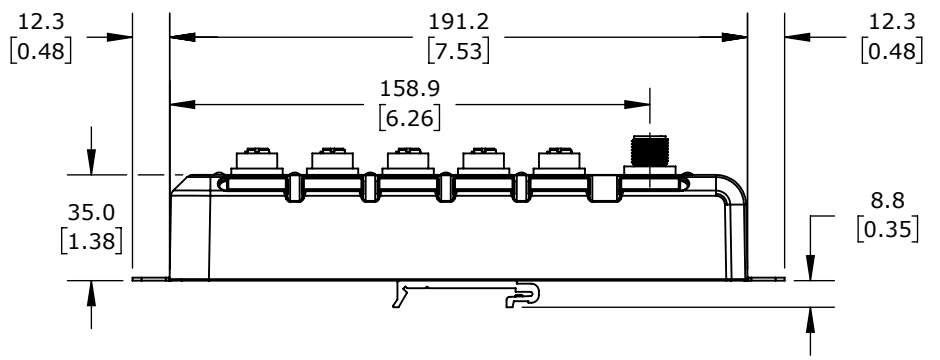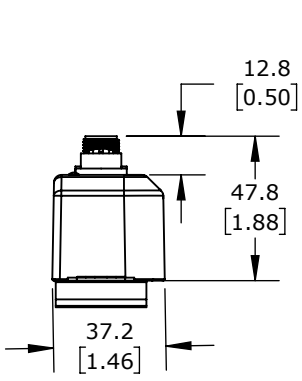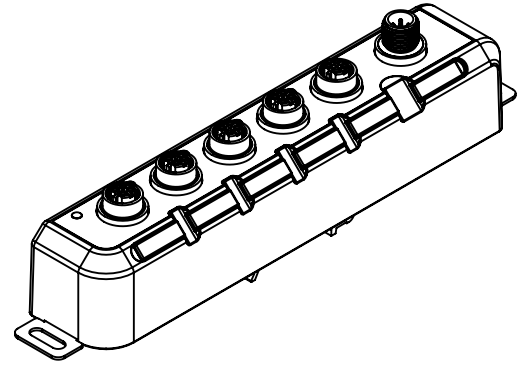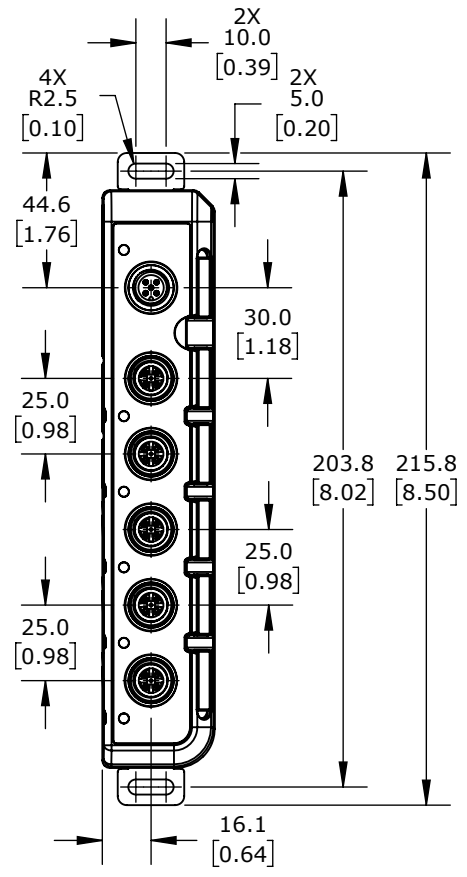

# Troubleshooting

## Power

- If the power indicator LED does not turn on when power is applied, check for loose power connections.
- Verify you have an appropriate power supply. Never use a power supply with a non-compliant DC output voltage.
- If the Fault LED is on and you have only one power supply connected, make sure to jumper the two power connection as described in the Installation section. If you have two power supplies connected, check the output voltage of each and check for loose power connections.

## Copper Ethernet

- Select the proper UTP or STP cable in order to construct the network. Use an unshielded twisted-pair (UTP) or shielded twisted-pair (STP) cable for RJ-45 connections: 100Ω Category 5e or better for 10M/100/1000Mbps. Also be sure that the length of any twisted-pair connection does not exceed 100 meters (328 feet).
- If the industrial switch LED indicators are normal and the connected cables are correct but the packets still cannot transmit, please check the system's Ethernet devices' configuration or status.

## Fiber Ethernet

- If you are using an SE3-SW5UG-1P-T switch, make sure the SFP Speed DIP switch setting matches the speed of the network to which your switch is connected (i.e., 100Mbps or 1Gbps). If DIP switch setting is changed the switch must be power cycled for it to take affect.
- Make sure that the speeds of both ends of a link match: a 100Mbps SFP on one switch must connect to a 100Mbps connection on the other switch or end device. Fiber ports do not negotiate speed.
- Ensure that the cable type you are using matches the transceiver type. That is, multi-mode cable requires multi-mode transceivers, and single-mode cable requires single-mode transceivers.
- Make sure that all of your connectors are clean. Even a little bit of dust, dirt or grease on a connector face can significantly degrade a fiber signal. This includes the main fiber optic link as well as any patch cables that you may be using. When cleaning, it is important to use lint free swabs or wipes, preferably of a clean room quality. These can be used dry or wet (with 99% isopropyl alcohol solutions). It is not necessary to scrub the end face, rather to just gently wipe it clean and then double-check the link. If additional cleaning is required simply repeat this process



**CAUTION:** MAKE CERTAIN THAT YOU ARE NOT CLEANING AN ACTIVE FIBER, AS THE LASER CAN CAUSE PERMANENT DAMAGE TO YOUR EYES SHOULD YOU LOOK INTO THE END FACE.

- Make sure that all connectors are plugged completely into their proper ports. If end faces are not lined up correctly with transceivers and/or mated fiber ends, the system may fail due to excess attenuation.
- Make sure that the transmit cable at the near end is the receive cable at the far end. There needs to be a crossover for a fiber link to work correctly. Be sure to factor in all patch cords that may be used.



**NOTE:** The physical connectors on the ends of a fiber cable do NOT need to match: a link may use an LC connector on one end and an SC connector on the other

- Evaluate the transmitter output power, fiber loss and receiver sensitivity of your fiber network link, and add an optical attenuator if necessary.

**Please contact AutomationDirect for technical support service if the problem persists.**

Stride™

 AUTOMATIONDIRECT.com

770-844-4200