

Do-more T1H Series PLC Overview

Do-more T1H Series PLC

The T1H Series PLC takes the modular and space-saving package of our Terminator I/O line and converts it into a stand-alone control system. Using Do-more Designer as a foundation, the T1H Series PLC system provides a powerful, flexible instruction set, inside a user friendly programming environment.



Do-more T1H PLC System with T1H-DM1E CPU Module

CPU modules

The Do-more T1H Series PLC offers two CPU modules, T1H-DM1 and T1H-DM1E, both of which must be programmed using the Do-more Designer programming software version 1.2 or later.



Base units

The Do-more T1H Series PLC supports all of the base units available for the Terminator I/O line.



Do-more T1H Series PLC Overview

Discrete I/O modules

The Do-more T1H Series PLC supports all of the discrete I/O modules available in the Terminator I/O product line.




Analog I/O modules

The Do-more T1H Series PLC supports all of the analog I/O modules available in the Terminator I/O product line.



Specialty module

The Do-more T1H Series PLC supports the T1H-CTRIO High-Speed Counter I/O module that is available in the Terminator I/O product line.

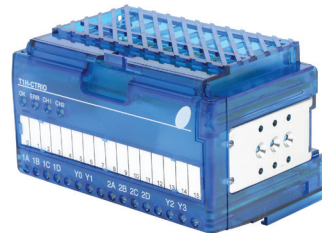

T1H-CTRIO

Programming Software

The Do-more T1H Series PLC can only be programmed by Do-more Designer version 1.2 or later.



Do-more T1H Series PLC Overview

Module Compatibility

The following table shows which Terminator I/O product line components are supported by the [T1H-DM1](#) and [T1H-DM1E](#) Do-more CPUs.

Module Compatibility Table					
Module	Part Number	Status	Module	Part Number	Status
Base Units	T1K-08B	✓	Analog I/O Modules	T1K-08B	✓
	T1K-08B-1	✓		T1K-08B-1	✓
	T1K-16B	✓		T1K-16B	✓
	T1K-16B-1	✓		T1K-16B-1	✓
Discrete I/O Modules	T1K-08ND3	✓		T1K-08ND3	✓
	T1K-16ND3	✓		T1K-16ND3	✓
	T1K-08NA-1	✓		T1K-08NA-1	✓
	T1K-16NA-1	✓		T1K-16NA-1	✓
	T1K-08TD1	✓		T1K-08TD1	✓
	T1K-16TD1	✓		T1K-16TD1	✓
	T1K-08TD2-1	✓		T1K-08TD2-1	✓
	T1K-16TD2-1	✓		T1K-16TD2-1	✓
	T1H-08TDS	✓		T1H-08TDS	✓
	T1K-08TA	✓	Specialty Module	T1K-08TA	✓
	T1K-16TA	✓			
	T1K-08TAS	✓			
	T1K-08TR	✓			
	T1K-16TR	✓			
	T1K-08TRS	✓			

✓ = Supported

Do-more T1H Series PLC Overview

Communications

The Do-more T1H Series PLC supports many communication protocols. The following table shows which CPU module communications port supports each protocol.

Protocols	CPU Modules		
	<i>T1H-DM1 / T1H-DM1E</i>		<i>T1H-DM1E</i>
	<i>USB Port</i>	<i>RS-232 Serial Port</i>	<i>Ethernet Port</i>
Do-more Designer Programming	Yes	Yes	Yes
Modbus/RTU Client (Master)		Yes	
Modbus/RTU Server (Slave)		Yes	
Modbus/TCP Client (Master)			Yes
Modbus/TCP Server (Slave)			Yes
DirectLOGIC RX/WX Client (Master)			Yes
DirectLOGIC RX/WX Server (Slave)			Yes
K-Sequence Server (Slave)		Yes	
DirectNET Server (Slave)			
HEI Ethernet I/O Master			Yes
SMTP (EMail) Client w/Authentication			Yes
Simple Network Time Protocol (SNTP) Client			Yes
Do-more/PEERLINK			Yes
Do-more Time Synchronization Protocol (Client, Server, Alternate Client)			Yes
Do-more Logger/UDP			Yes
Serial ad-hoc ASCII/Binary Programatic Control		Yes	
UDP ad-hoc Programmatic Control			Yes
TCP Client Programmatic Control			Yes
TCP Server Programmatic Control			Yes

Blank = Not Supported

Do-more T1H Series PLC Overview

Do-more T1H Series PLC Hardware User Manual (T1H-DM-M)

Do-more T1H Series PLC Hardware User Manual is available as a free download from Automationdirect.com. A hard copy is also available for purchase.



Do-more Designer (Part No. [DM-PGMSW-USB](#))

Do-more Designer is the full-featured programming software for the Do-more PLC series. Do-more Designer is a free download from Automationdirect.com. A USB version is also available for purchase for \$10c9:.



Start Page

When the software is started, the Start Page is displayed. This page contains a Launchpad with Projects, Applications and Links windows. It also contains shortcuts to important help file topics, and you can start the Do-more Simulator from this page.

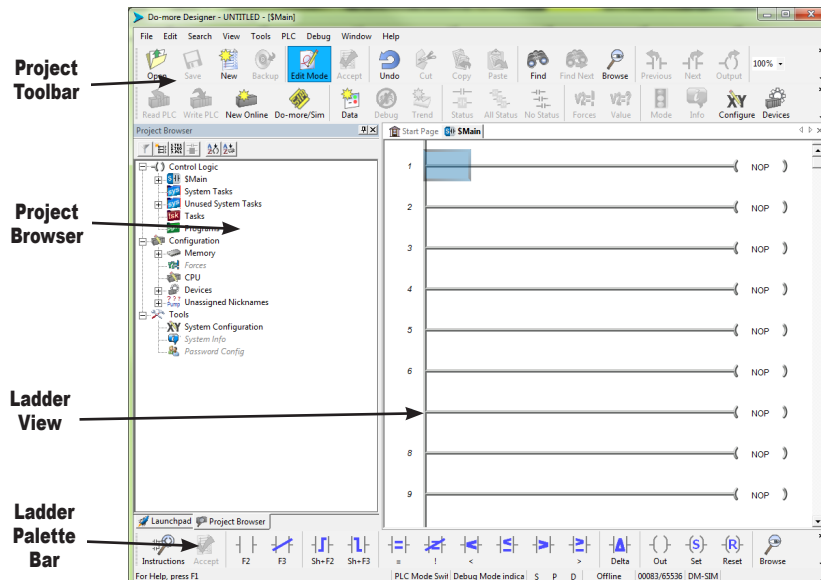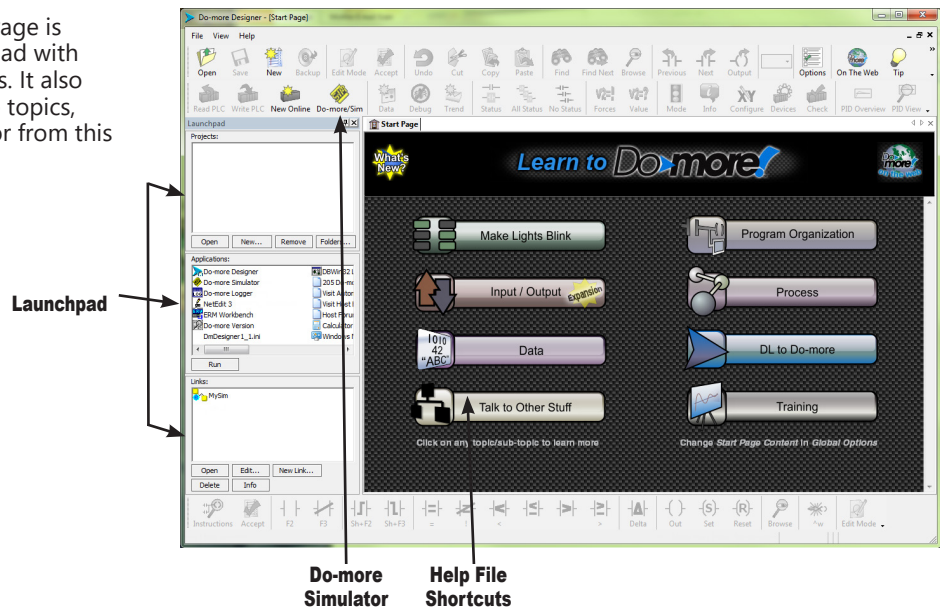

Main Programming Window

The Main Programming Window is displayed when a new project is started or an existing project is opened. It is divided into Menus, Toolbars, and Windows that work together to make project development simple.

Do-more T1H Series PLC Overview

Do-more Designer Features

Do-more Designer has the following main features:

- Supports the Do-more PLC instruction set
- Project Browser (Window to organize the user project)
- Data View (Interface to monitor and edit PLC data in a list)
- Trend View (Interface to monitor PLC data with trend graphs)
- PID View (Interface to monitor and tune the individual PID control loop)
- PID Overview (Interface to monitor multiple PID control loops)
- Debug View (Interface to debug the ladder programs)

When Do-more Designer is installed on your PC, the following tools are also installed:

- Do-more Simulator (Offline simulator of ladder program execution and PID control)
- Do-more Logger (Software tool to log PLC data)
- ERM Workbench (Configuration tool for the ERM modules)
- NetEdit 3 (Configuration tool for the ECOM/EBC Ethernet modules)

PC Requirements

The Do-more Designer Windows-based programming software works with Windows® XP (Home or Professional, 32-bit), Vista (Home, Basic, Premium, 32 or 64-bit), Windows 7 (Home, Professional, Ultimate, 32 or 64-bit) or Windows 8 (Home, Professional, Enterprise 32 or 64-bit; Windows 8 RT edition is NOT supported).

Please check the following requirements when choosing your PC configuration:

- Minimum PC to PLC Connectivity, at least one of the following:
 - USB Port: connects to the CPU with USB-A connector (USB-A to USB-B cable)
 - RS-232 Serial Port: connects to the CPU with RJ-12 connector (RJ-12 to DB9 or RJ-12 to USB-B serial converter cable)
 - Ethernet Port: connects to the CPU ([T1H-DM1E](#)) with RJ-45 10Base-T or 100Base-T (Cat5 Patch Cable)
- Hard Disk: 100MB free disk space
- Video Display: 1024x768, 256 colors resolution (1280x720, true color recommended)
- Windows XP, 32-bit:
 - 800MHz, single core CPU (2GHz, multi-core or hyperthreaded recommended)
 - 512MB RAM (2GB recommended)
- Vista or Windows 7 or Windows 8, 32 or 64-bit:
 - 1GHz, single core CPU (2GHz, multi-core recommended)
 - 1GB RAM (3GB recommended)

Programming Cables

The Do-more T1H Series CPU module [T1H-DM1](#) has two communication ports (USB and RS-232 Serial) and the [T1H-DM1E](#) has three communication ports (USB, RS-232 Serial and Ethernet). You can use any of those ports for programming and monitoring. Cables for these ports are listed below and can be purchased at Automationdirect.com.

USB Cables (USB 2.0, Type A-B connectors):

- [USB-CBL-AB3](#) (3 ft.)
- [USB-CBL-AB6](#) (6 ft.)
- [USB-CBL-AB10](#) (10 ft.)
- [USB-CBL-AB15](#) (15 ft.)

RS232 Serial Cable

- [D2-DSCBL](#) (12 ft. 9-pin D-sub to RJ12 connector)


Ethernet Cables (Cat5e)

- Automationdirect.com sells many Ethernet patch cables in various colors and lengths. Please check the Cables section in this catalog for further details.

Do-more T1H Series PLC Overview

Do-more PLC Instruction Set


This Instruction Set was developed specifically for the new Do-more PLC series; the 'Instruction Palette' displays all available instructions.

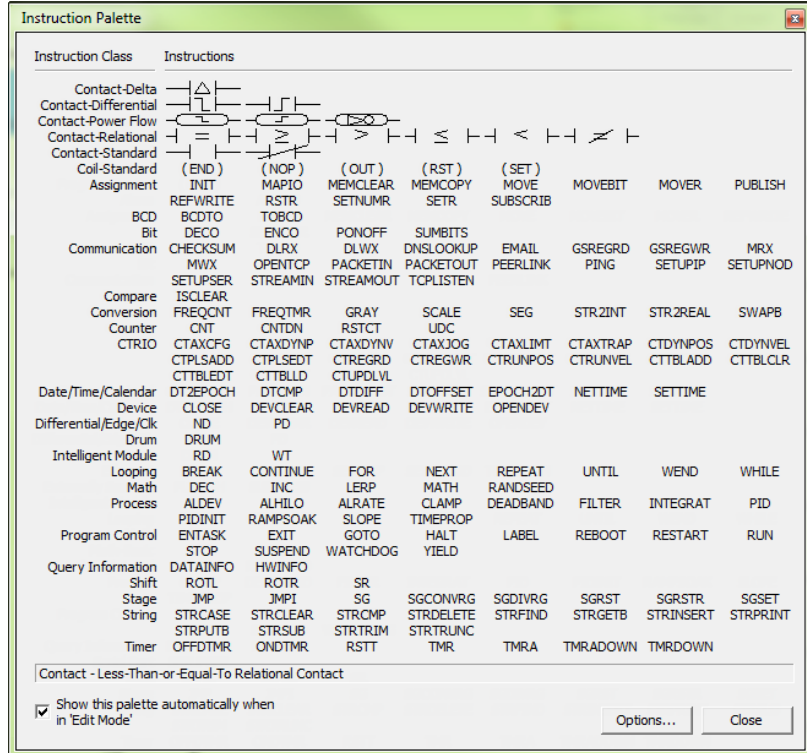

You may see some similarities to the DirectLOGIC PLC instruction set. However, the instruction set for the Do-more PLC is more advanced and intuitive. A good example is the MATH instruction. Now, just one MATH instruction covers all math operations and also allows you to mix different data types in one expression.

There are over 60 operators and functions available with the MATH instruction.

Note: To learn more about the MATH instruction, please refer to the Do-more Designer help topic 'MATH – Calculate Expression'.

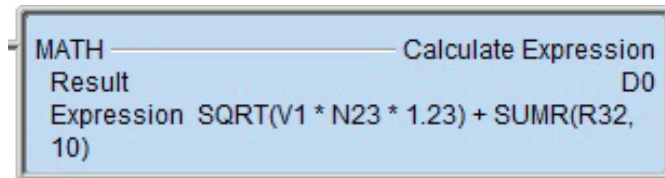

Operators

+, -, *, /, %, **, <, <=, ==, !=, >=, >, &&, ||, &, |, ^, <<, >>, >>>, ~, !

Functions

ABS, ACOS, ASIN, ATAN, AVGR, COS, COUNTIFEQ, COUNTIFNE, COUNTIFGE, COUNTIFGT, COUNTIFLE, COUNTIFLT, DEG, E, FRAC, IF, LN, LOG, MAXR, MAX, MINR, MIN, NOW, PI, RAD, RANDINT, RANDREAL, REF, ROUND, SIN, SQRT, STDEV, STDEVPR, SUMIFEQ, SUMIFNE, SUMIFGE, SUMIFGT, SUMIFLE, SUMIFLT, SUMR, TAN, TICKms, TICKus, TOINT, TOREAL, TRUNC

Do-more T1H Series PLC Overview

Data Types

The Do-more PLC supports the following seven primary data types:

- Bit (0 or 1)
- Unsigned Byte (0 to 255)
- Signed Byte (-128 to 127)
- Unsigned Word (0 to 65,535)
- Signed Word (-32,768 to 32,767)
- Signed DWord (-2,147,483,648 to 2,147,483,647)
- Real (-3.4028235E+038 to 3.4028235E+038)

Data Structures

The Do-more PLC supports data structures as additional data types. Structures use the familiar PC programming organization of "dot notation". All available elements of a structure are shown in this format. The following data structures are currently available:

- Timer Structure
- Counter Structure
- String Structure
- PID Structure
- Date/Time Structure
- Task Structure
- Rampsoak Structure
- Program Structure
- DeviceRef Structure
- Drum Structure
- Stream Structure
- SIM_Process Structure
- Server Structure
- Peerlink Structure
- I/O_Master Structure
- Eth_IO_Master Structure
- GS Drive Structure
- Packet Structure

The data structure is a set of data. For instance, a Timer structure (Timer Struct) has the following set of data:

- Acc (Accumulated Time, Signed DWord)
- Done (Bit)
- Zero (Bit)
- Timing (Bit)
- Reset (Bit)

When you use a timer instruction (TMR), a Timer structure is assigned to the instruction. If you select 'T0', you can access the above data with dot notation. For instance, to access the accumulated time (Acc), enter 'T0.Acc'. To access the Done bit, enter 'T0.Done'.

Memory Addressing

With the Do-more PLC, each memory address type has its own specific data type. Here are some examples:

- V (Unsigned Word)
- N (Signed Word)
- D (Signed DWord)
- R (Real)


If you see address 'V123' in the ladder program, the memory address always stores an Unsigned Word value. With this memory addressing method, it becomes easier to read and write the ladder programs.

Although most of the memory addressing is decimal, the memory addresses DLX, DLY, DLC and DLV use octal. These four memory address types can be used to exchange data with DirectLOGIC PLCs, which use octal memory addressing.

Do-more T1H Series PLC Overview

Array Addressing

The Do-more PLC supports one-dimensional array addressing with all memory addresses. A V-memory address must be used as the index for an array. With the Do-more PLC, the following ladder program is valid.

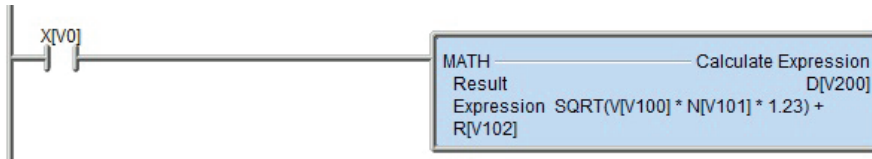

Note: In this example, V0, V100, V101, V102 and V200 are indices.

Code-block, Program and Task


One Do-more project can consist of more than one ladder program. Each ladder program is called a 'Code-block'. The Do-more PLC supports two types of code-blocks, Program and Task:

Program

Programs are code-blocks that run based on an event using the RUN instruction. They can be self-terminating or never terminate. Stage programming is only supported inside Program code-blocks.

Task

Tasks are code-blocks that are enabled and disabled using the ENTASK instruction. The ENTASK instruction allows you to specify an interval to execute the task's logic with a millisecond resolution or to execute a single time on a leading edge input.

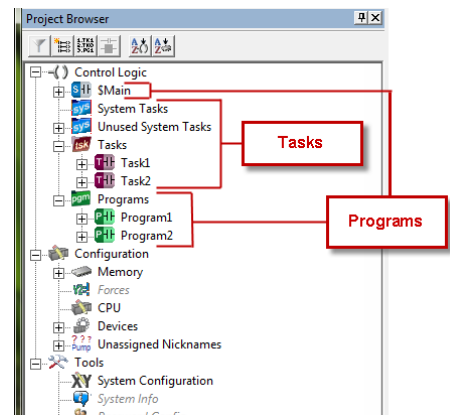

Stages


The Do-more PLC supports Stages. You can use Stages only in the Program code-blocks. (They are not available in the Task code-blocks.) The Do-more PLC supports the following instructions for Stage Programming¹:

- SG (Stage)
- JMP (Jump To Stage)²
- JMPI (Index Jump)
- SGSET (Enable Stage)
- SGRST (Disable Stage)
- SGRSTR (Disable Range of Stages)
- SGCONVRG (Converge Multiple Stages to SG)
- SGDIVRG (Jump to Multiple Stages)



¹ There is no ISG (Initial Stage) instruction for the Do-more PLC; the first stage in the Program code-block becomes the initial stage automatically.

² Many asynchronous instructions can directly initiate a Jump to Stage.

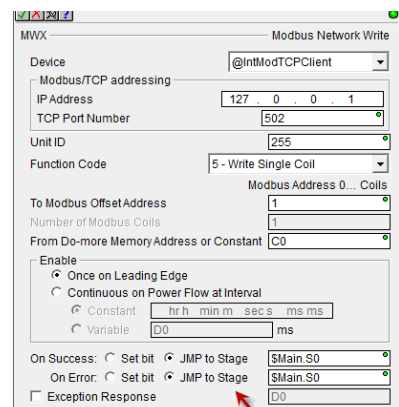

Do-more T1H Series PLC System Specifications

General Specifications

General Specifications	
Ambient Operating Temperature	32°F to 131°F (0°C to 55°C)
Storage Temperature	-4°F to 158°F (-20°C to 70°C)
Ambient Humidity	5% to 95% (Non-condensing)
Atmosphere	No corrosive gases. The level of environmental pollution = 2 (UL 840)
Vibration Resistance	MIL STD 810C, Method 514.2
Shock Resistance	MIL STD 810C, Method 516.2
Voltage Withstand (Dielectric)	1500VAC, 1 minute
Insulation Resistance	500VDC, 10Mq
Noise Immunity	NEMA ICS3-304 Impulse noise 1μs, 1000V FCC class A RFI (144 MHz, 430MHz 10W, 10cm)
Agency Approvals	UL E185989, CE, FCC class A, NEC Class 1 Division 2

Do-more T1H Series PLC System Specifications

Module Placement and I/O Usage Tables

There are no I/O module placement restrictions with the Do-more T1H Series PLC family. In general, any mix of up to 16 analog and discrete I/O module types can be used in any local or Ethernet I/O base. Specialty modules can also be used in any local or Ethernet I/O base. Reference the Module Placement Restrictions table to the right for the Do-more T1H Series PLC.

Analog I/O in the Ethernet I/O bases

When using an analog module in an Ethernet I/O base, the analog update time to the CPU will be asynchronous to the scan time. Critical analog I/O should be located in the local base.

I/O point usage

The table to the right indicates the number of I/O points consumed by each module. These X (discrete input), Y (discrete output), WX (analog input) and WY (analog output) addresses are automatically assigned by Do-more Designer.


Module Placement Restrictions		
Module/Unit	Local CPU Base	Ethernet I/O Base
CPUs	CPU slot only	
Discrete I/O	3	3
Analog I/O	3	3
Base Controller <u>T1H-EBC100</u>		CPU slot only
Specialty Module <u>T1H-CTRIO</u>	3	3

I/O Module Point Usage							
DC INPUT		RELAY OUTPUT		SPECIALTY MODULES			
<u>T1K-08ND3</u>	8 X	<u>T1K-08TR</u> <u>T1K-16TR</u> <u>T1K-08TRS</u>	8 Y	<u>T1H-CTRIO</u>	None		
<u>T1K-16ND3</u>	16 X		16 Y				
<u>AC INPUT</u>			8 Y				
<u>T1K-08NA-1</u>	8 X		<u>ANALOG</u>				
<u>T1K-16NA-1</u>	16 X						
<u>DC OUTPUT</u>							
<u>T1K-08TD1</u>	8 Y						
<u>T1K-16TD1</u>	16 Y	<u>T1F-08AD-1</u>	8 X, 8 WX			<u>T1H-CTRIO</u>	None
<u>T1K-08TD2-1</u>	8 Y	<u>T1F-08AD-2</u>	8 X, 8 WX				
<u>T1K-16TD2-1</u>	16 Y	<u>T1F-16AD-1</u>	16 X, 16 WX				
<u>T1H-08TDS</u>	8 Y	<u>T1F-16AD-2</u>	16 X, 16 WX				
<u>AC OUTPUT</u>		<u>T1F-16RTD</u>	16 X, 16 WX				
<u>T1K-08TA</u> <u>T1K-16TA</u> <u>T1K-08TAS</u>	8 Y	<u>T1F-16TMSI</u>	16 X, 16 WX				
	16 Y	<u>T1F-14THM</u>	8 Y, 8 WY				
	8 Y	<u>T1F-08DA-1</u>	8 Y, 8 WY				
		<u>T1F-08DA-2</u>	8 Y, 16 WY				
		<u>T1F-16DA-1</u>	8 Y, 16 WY				
		<u>T1F-16DA-2</u>	8 X, 8 WX/8 Y,				
		<u>T1F-8AD4DA-1</u>	4 WY				
		<u>T1F-8AD4DA-2</u>	8 X, 8 WX/8 Y,				
			4 WY				


Do-more T1H Series PLC System Specifications

Power supplies

The T1H Series PLC offers two power supply options: AC or DC. More than one power supply can be installed in a T1H series PLC system with each power supply positioned to the left of the modules they supply power to.

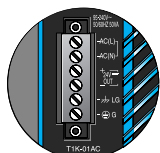

T1K-01AC
\$00e41:

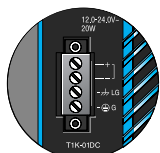

T1K-01DC
\$00e42:

Power supply specifications

Power Supply Specifications	T1K-01AC	T1K-01DC
Input Voltage Range	110/220 VAC	12/24 VDC
Input Frequency	50/60 Hz	N/A
Maximum Power	50VA	30W
Max. Inrush Current	20A	10A
Insulation Resistance	> 10M Ω @ 500VDC	
Voltage Withstand	1 min. @ 1500 VAC between primary, secondary and field ground	
5VDC PWR	Voltage	5.25 VDC
	Current Rating	2000mA max (see the table below)
	Ripple	5% max.
24VDC PWR	Voltage	24VDC
	Current Rating	500mA max. (see the table below)
	Ripple	10% max.
Fuse	1 (primary), not replaceable	
Replacement Terminal Block (Phoenix Contact)	MVSTBW 2.5/4-ST-5.08 BK	MVSTBW 2.5/6-ST-5.08 BK

T1K-01AC Current Output

5VDC PWR	2000mA	1500mA
24VDC PWR	300mA	500mA
Note: 500mA @ 24VDC can be achieved by lowering the 5 VDC from 2000mA to 1500mA.		

Power requirements

Module	5VDC	24VDC	Module	5VDC	24VDC	Module	5VDC	24VDC
CPU Modules			DC Output Modules			Analog Input Modules		
T1H-DM1	250	0	T1H-08TDS	200	0	T1F-08AD-1	75	50*
T1H-DM1E	275	0	T1K-08TD1	100	200*	T1F-08AD-2	75	50*
Interface Module			T1K-16TD1	200	400*	T1F-16AD-1	75	50*
T1H-EBC100	300	0	T1K-08TD2-1	100	0	T1F-16AD-2	75	50*
DC Input Modules			T1K-16TD2-1	200	0	T1F-16RTD	150	0
T1K-08ND3	35	0	AC Output Modules			T1F-16TMST	150	0
T1K-16ND3	70	0	T1K-08TA	250	0	T1F-14THM	60	70*
AC Input Modules			T1K-16TA	450	0	Analog Output Modules		
T1K-08NA-1	35	0	T1K-08TAS	300	0	T1F-08DA-1	75	150*
T1K-16NA-1	70	0	Relay Output Modules			T1F-08DA-2	75	150*
			T1K-08TR	350	0	T1F-16DA-1	75	150*
			T1K-16TR	700	0	T1F-16DA-2	75	150*
			T1K-08TRS	400	0	Combination Analog Modules		
			Specialty Module			T1F-8AD4DA-1	75	60*
			T1H-CTRIO	400	0	T1F-8AD4DA-2	75	70*
			* Use either internal or external source for 24VDC			* Use either internal or external source for 24VDC		

Calculating the power budget


To calculate the power budget, read the available power (current rating) from the Power Supply Specifications table and subtract the power consumed by each module to the right of the power supply. Do not include modules to the right of an additional power supply.

Adding additional power supplies

Each power supply furnishes power only to the modules to its right. Inserting a second power supply closes the power loop for the power supply to the left, while also powering the modules to its right. Perform a power budget calculation for each power supply in the system.

Power Budget Example

Module	5VDC	24VDC
T1K-01AC	+2000mA	+300mA
T1H-DM1E	-275mA	-0mA
T1K-16ND3	-70mA	-0mA
T1K-16TD2-1	-200mA	-0mA
T1F-08AD-1	-75mA	-50mA
Remaining	+1380mA	+250mA

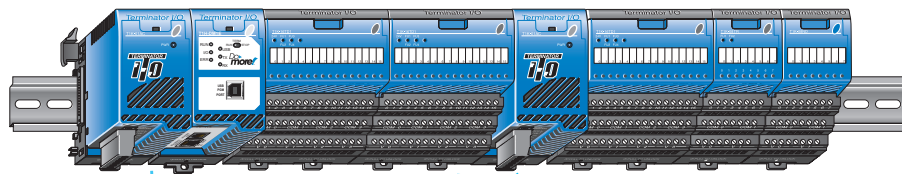

This power supply powers the CPU module and the next two I/O modules

This power supply powers these three I/O modules

CPU Modules

Specifications



T1H-DM1
\$00b?_:




T1H-DM1E
\$00b?#:

Feature	T1H-DM1	T1H-DM1E
Total Memory (bytes)	262,144 bytes	
Ladder Memory (instruction words)	65,536 instruction words	
V-Memory (words)	Configurable up to 65536 (4096 default)	
Non-volatile V Memory (words)	Configurable up to 65536 (4096 default)	
D-memory (DWORDs)	Configurable up to 65536 (4096 default)	
Non-volatile D Memory (DWORDs)	Configurable up to 65536 (4096 default)	
R-memory (REAL DWORDs)	Configurable up to 65536 (4096 default)	
Non-volatile R Memory (REAL DWORDs)	Configurable up to 65536 (4096 default)	
Boolean execution	50us	
Stage Programming	Yes	
Number of Stages	128 per Program code-block; number of code-blocks configurable to memory limit	
Handheld Programmer	No	
Programming Software for Windows	FREE Do-more Designer version 1.2 or newer	
Built-In communications ports	USB, RS-232	USB, RS-232, Ethernet (10/100 base-T)
Program Memory	Flash ROM	
Total I/O points available	X, Y, each configurable up to 65536 (2048 default); WX, WY (analog in/out) each configurable up to 65536 (256 default)	
Max Number of Local I/O Modules	16	
Local I/O points available	256	
Ethernet I/O Discrete points	131,072	
Ethernet I/O Analog I/O Channels	32,768	
Max Number of Ethernet slaves per PLC	16	
I/O points on Ethernet I/O	32,768	
Discrete I/O Module Point Density	8/16	
Number of instructions available	>160	>170
Control relays	Configurable up to 65536 (2048 default)	
Special relays (system defined)	1024	
Special registers (system defined)	512	
Timers	Configurable up to 65536 (256 default)	
Counters	Configurable up to 65536 (256 default)	
System Date/Time structures	8	
User Date/Time structures	Configurable up to 65536 (32 default)	
ASCII String/Byte buffer structures	Configurable up to memory limit (192 default)	
Modbus Client memory	Yes, configurable up to memory limit, default 1024 input bits, 1024 coil bits, 2048 input registers, 2048 holding registers	
DL Classic Client memory	Up to memory limit, default 512 X, 512 Y, 512 C, 2048 V	
Immediate I/O	No	
Interrupt input (hardware / timed)	No	
Subroutines	Program and Task code-blocks, up to memory limit	
Drum Timers	Yes, up to memory limit	
Table Instructions	Yes	
Loops	FOR/NEXT, WHILE/WEND, REPEAT/UNTIL loops	
Math	>60 operators and functions: Integer, Floating Point, Trigonometric, Statistical, Logical, Bitwise, Timing	
ASCII	Yes, IN/OUT, Serial, Ethernet TCP and UDP; 11 output script commands	
PID Loop Control, Built In	Yes, configurable to memory limit (over 2,000)	
Time of Day Clock/Calendar	Yes	
Run Time Edits	Yes	
Supports True Force	Yes	
Internal Diagnostics	Yes	
Password security	Multi-user, credentialed, session-based security	
System error log	Yes	
User error log	Yes	
Battery backup	Yes (Battery included)	



CPU Modules

T1H-DM1

T1H-DM1E

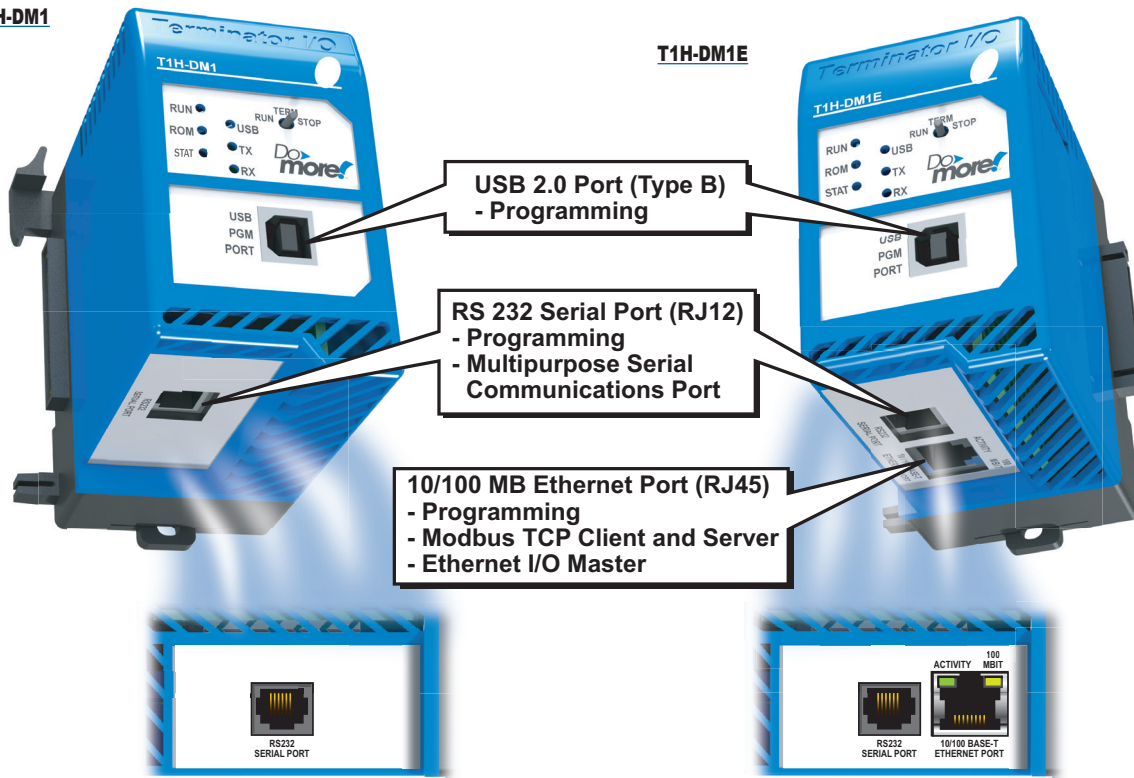

LED Status Indicators

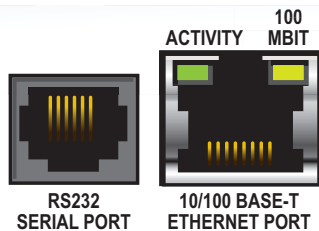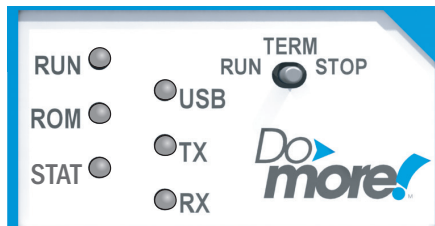

LED Indicators		
Indicator	Status	Description
RUN	Green	CPU is in RUN Mode
	Yellow	Forces are Active
ROM	Yellow	CPU is updating Non-volatile Memory
STAT	Red	CPU Fatal Error
	Yellow	Low Battery
	Green	Status OK (good)
USB	Green	USB Receive Activity
	Yellow	USB Transmit Activity
TX	Green	RS-232 Transmit Activity
RX	Green	RS-232 Receive Activity
ACTIVITY	Green	Ethernet Port Activity
100 MBIT	Yellow	Ethernet Port communicating at 100 MBIT Rate

PLC Mode Switch



Mode Switch Functions	
Mode Switch Position	CPU Action
RUN (Run Program)	CPU is forced into RUN Mode if no errors are encountered.
TERM (Terminal)	RUN, PROGRAM and DEBUG modes are available. In this switch position, the mode of operation can be changed through the Programming Software.
STOP (Stop Program)	CPU is forced into STOP Mode.


CPU Modules

Communication Ports

USB Port

Used exclusively for programming and monitoring via a PC running Do-more Designer.

USB Port Specifications	
Description	Standard USB 2.0 Slave input for programming and online monitoring, with built-in surge protection. Not compatible with older full speed USB devices.
Cables (ADC part #)	USB Type A to USB Type B: USB-CBL-AB3 (3ft) USB-CBL-AB6 (6ft) USB-CBL-AB10 (10ft) USB-CBL-AB15 (15ft)

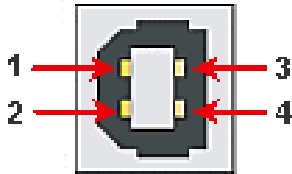


Pin	Description	
1	5V	Bus Voltage Sense
2	D-	Data -
3	D+	Data +
4	0V	Ground

RS-232 Port

RJ-12 style connector used for:

- Connection to a PC running Do-more Designer
- Modbus RTU Master connections
- Modbus RTU Slave connections
- ASCII Incoming and Outgoing communications
- Custom Protocol Incoming and Outgoing communications

RS-232 Port Specifications	
Description	Non-isolated, full duplex RS-232 DTE port used for programming, online monitoring or can connect the CPU as a Modbus RTU or ASCII master or slave to a peripheral device. Includes ESD and built-in surge protection.
Baud Rates	1200, 2400, 4800, 9600, 19200, 38400, 57600, and 115200
+5V Cable Power Source	220mA maximum at 5V, $\pm 5\%$. Reverse polarity and overload protected.
Maximum Output Load (TXD/RTS)	3kV, 1000pf
Minimum Output Voltage Swing	$\pm 5V$
Output Short Circuit Protection	$\pm 15mA$
Cable Options (ADC part #)	D2-DSCBL USB-RS232-1 with D2-DSCBL FA-CABKIT FA-ISOCAN for converting RS-232 to isolated RS-422/485 EA-MG-PGM-CBL

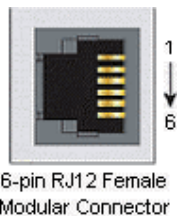

Pin	Description	
1	0V	Power (-) connection (GND)
2	5V	Power (+) connection (220mA max.)
3	RXD	Receive Data (RS-232)
4	TXD	Transmit Data (RS-232)
5	RTS	Request to Send (RS-232)
6	CTS	Clear to Send (RS-232)


For a list of protocols supported by each port, please refer to the Communications topic of the Do-more T1H Series PLC Overview in this section.

CPU Modules

Ethernet Port

RJ-45 style connector used for:

- Connection to a PC running Do-more Designer
- Modbus TCP Client connections (Modbus requests sent from the CPU)
- Modbus TCP Server connections (Modbus requests received by the CPU)
- Ethernet I/O Master

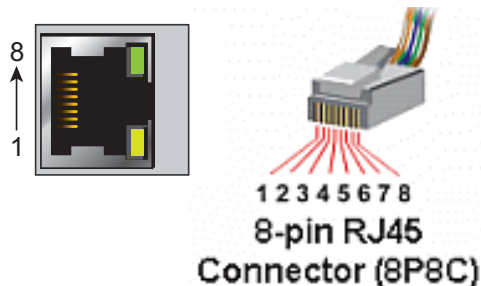


For a list of protocols supported by each port, please refer to the Communications topic of the Do-more T1H Series PLC Overview in this section.

Ethernet Port Specifications


Description	Standard transformer isolated Ethernet port with built-in surge protection for programming, online monitoring, Modbus/TCP client/server connections (fixed IP or DHCP) and Ethernet I/O capabilities.
Transfer Rate	10/100 Mbps
Cables	Use a Patch (Point to Point) cable when a switch or hub is used. Use a Crossover cable when a switch or hub is not used.

Patch (Point to Point) Cable

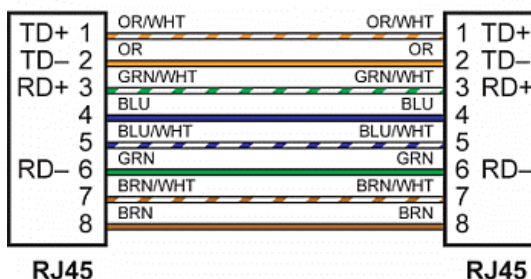

Crossover Cable

10/BASE-T/100BASE-TX

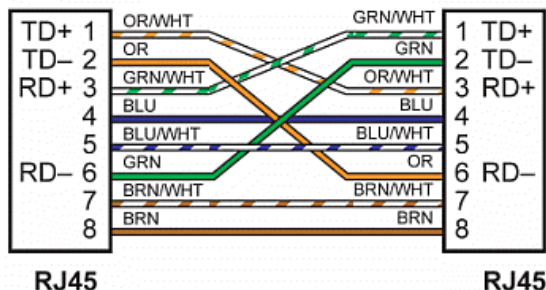

Battery Specifications

A battery is included with the Do-more CPU and is used to retain the Time and Date along with any Tagname values that are set up as retentive. It is recommended that the battery be replaced once every five years or when one year of cumulative OFF time has been exceeded.

At least two hours is allowed to change out a battery without loss of data.


T1H-DM1 and T1H-DM1E
Battery Replacement
Part # D0-MC-BAT

Battery		
D0-MC-BAT	Coin type, 3.0 V Lithium battery, number CR2032	\$,6t8:

DIP Switch Specifications

The T1H Series Do-more CPU also comes equipped with a set of eight DIP switches (0-7) that can be used to affect the boot sequence of the controller.

The default position for all of the DIP switches is OFF.

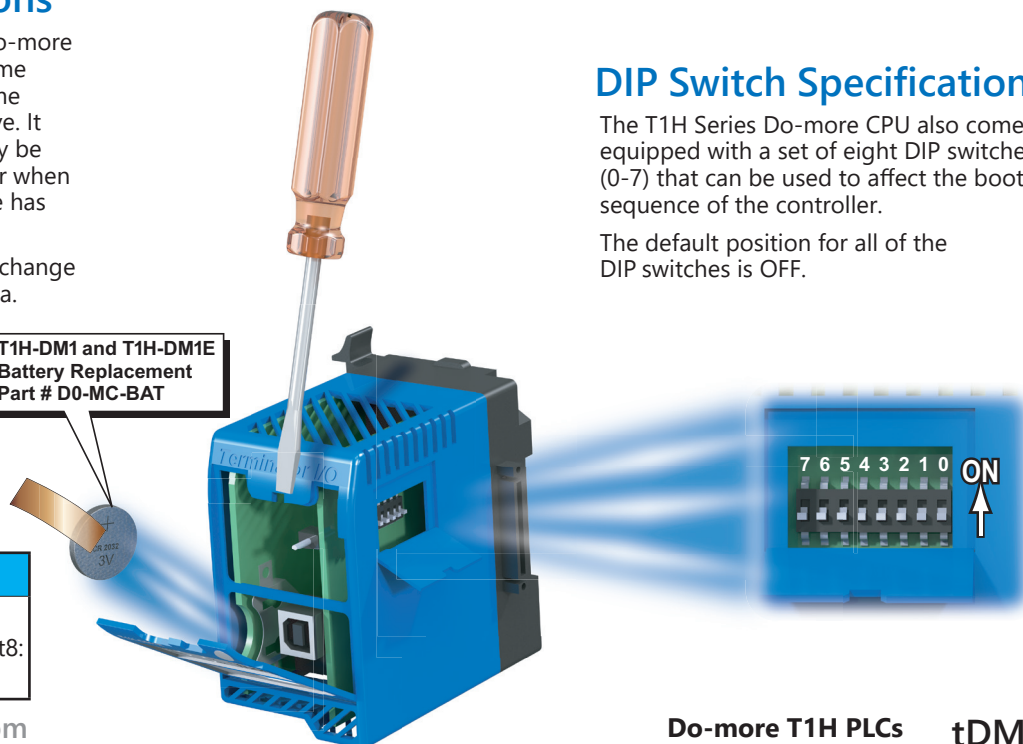

CPU Modules


Ethernet I/O

The T1H-DM1E CPU's built-in Ethernet port can be configured as an Ethernet I/O master. The Ethernet I/O feature allows expansion beyond the local base to slave I/O using the onboard high-speed Ethernet link. The onboard Ethernet port can support up to 16 slave devices. The slave I/O modules supported are:

- [H2-EBC100](#)
- [T1H-EBC100](#) (Terminator I/O)
- [GS-EDRV100](#) (GS Drives)


The Ethernet I/O network uses Category 5 UTP cables for cable runs up to 100 meters (328ft) with extended distances achieved through Ethernet switches.

It is highly recommended that a dedicated network be used with the Ethernet I/O feature. Ethernet I/O networks and ECOM/office networks should be isolated from one another to prevent network delays.

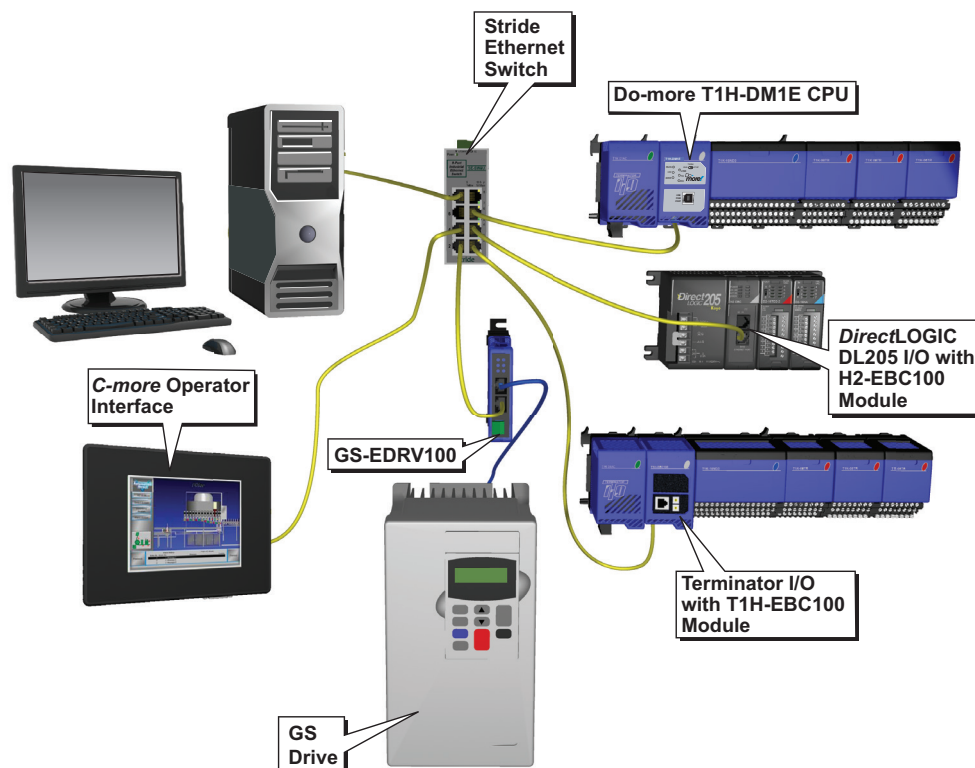

Discrete I/O Modules


The Do-more T1H Series PLC supports all discrete I/O modules available for the Terminator I/O product line.

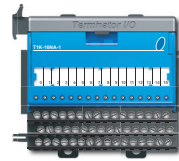**T1K-08ND3****T1K-16ND3****T1K-08NA-1****T1K-16NA-1**

Discrete Input Modules*

Part Number	Number of Inputs	Description	Price
<u>T1K-08ND3</u>	8	Sinking /Sourcing DC Input	\$00bzq:
<u>T1K-16ND3</u>	16	Sinking /Sourcing DC Input	\$,00bzt:
<u>T1K-08NA-1</u>	8	AC input	\$00bzp:
<u>T1K-16NA-1</u>	16	AC input	\$00bzs:






*Terminal Bases sold separately

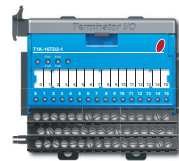**T1K-08TD1****T1K-16TD1****T1K-08TD2-1****T1K-16TD2-1**





Discrete Output Modules*

Part Number	Number of Outputs	Description	Price
<u>T1K-08TD1</u>	8	Sinking DC Output	\$00bzy:
<u>T1K-16TD1</u>	16	Sinking DC Output	\$00bz#:
<u>T1K-08TD2-1</u>	8	Sourcing DC Output	\$00bzz:
<u>T1K-16TD2-1</u>	16	Sourcing DC Output	\$,00bz!:
<u>T1H-08TDS</u>	8	Isolated Sinking / Sourcing DC Output	\$00bzu:
<u>T1K-08TA</u>	8	AC Output	\$00bzy:
<u>T1K-16TA</u>	16	AC Output	\$00bz_:
<u>T1K-08TAS</u>	8	Isolated AC Output	\$00bzx:
<u>T1K-08TR</u>	8	Relay Output	\$,00bz]:
<u>T1K-16TR</u>	16	Relay Output	\$00bz?:
<u>T1K-08TRS</u>	8	Isolated Relay Output	\$,00bz[:

*Terminal Bases sold separately

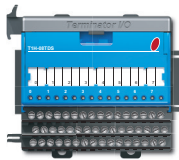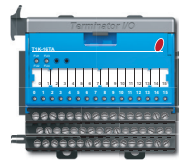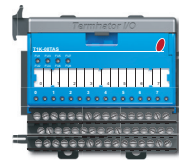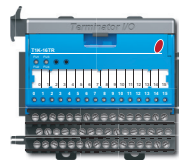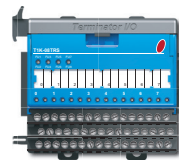**T1H-08TDS****T1K-08TA****T1K-16TA****T1K-08TAS****T1K-08TR****T1K-16TR****T1K-08TRS**

Discrete I/O modules above are shown installed in the Terminal Base. Terminal Bases are sold separately and are listed in the table below.

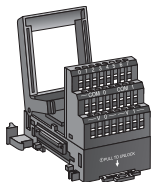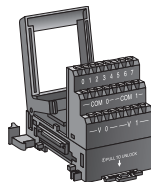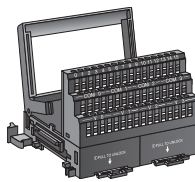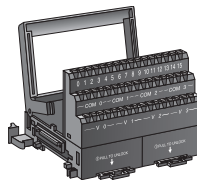**T1K-08B****T1K-08B-1****T1K-16B****T1K-16B-1**

Terminal Bases

Part Number	Number of Terminals	Description	Price
<u>T1K-08B</u>	8	Screw Type	\$00e6s:
<u>T1K-08B-1</u>	8	Spring Clamp	\$00e8n:
<u>T1K-16B</u>	16	Screw Type	\$00e8o:
<u>T1K-16B-1</u>	16	Spring Clamp	\$00e8p:

For more detailed specifications and wiring diagrams, please refer to the Terminator I/O (Field I/O) section in this catalog.

Discrete I/O Modules

The following table may be helpful for you to select the right modules for your application.








Discrete Input Modules			
Input Type	Specification	Number of Input Points per Module	
		8	16
DC (Sinking/Sourcing)	10.8–26.4 VDC	T1K-08ND3	T1K-16ND3
AC	80–132 VAC	T1K-08NA-1	T1K-16NA-1

Discrete Output Modules			
Output Type	Specification	Number of Output Points per Module	
		8	16
DC (Sinking)	1A @ 5–30 VDC	T1K-08TD1	T1K-16TD1
DC (Sourcing)	1A @ 10.8–26.4 VDC	T1K-08TD2-1	T1K-16TD2-1
DC (Sink/Source)	2A @ 5–36 VDC	T1H-08TDS	
AC	1A @ 15–264 VAC	T1K-08TA	T1K-16TA
	2A @ 15–264 VAC	T1K-08TAS	
Relay	2A @ 5–30 VDC / 5–264 VAC	T1K-08TR	T1K-16TR
	7A @ 5–30 VDC / 5–264 VAC	T1K-08TRS	

For more detailed specifications and wiring diagrams, please refer to the Terminator I/O (Field I/O) section in this catalog.

Analog I/O Modules

The Do-more T1H Series PLC supports all analog I/O modules available for the Terminator I/O product line.

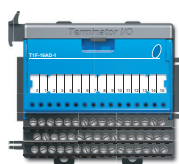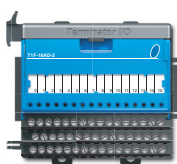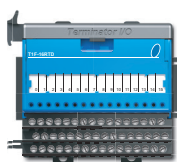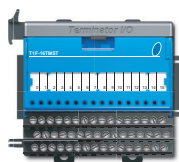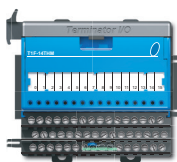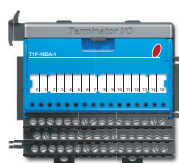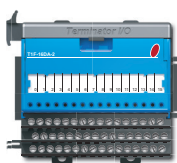**T1F-08AD-1****T1F-08AD-2****T1F-16AD-1****T1F-16AD-2****T1F-16RTD****T1F-16TMST****T1F-14THM****T1F-08DA-1****T1F-08DA-2****T1F-16DA-1****T1F-16DA-2****T1F-8AD4DA-1****T1F-8AD4DA-2**

Analog Input Modules*

Part Number	Number of Channels	Description	Price
<u>T1F-08AD-1</u>	8	Analog Current Input	\$;00bxf:
<u>T1F-08AD-2</u>	8	Analog Voltage Input	\$00bxg:
<u>T1F-16AD-1</u>	16	Analog Current Input	\$00bzh:
<u>T1F-16AD-2</u>	16	Analog Voltage Input	\$-00bzi:
<u>T1F-16RTD</u>	16	RTD	\$-00bzl:
<u>T1F-16TMST</u>	16	Thermistor	\$011px:
<u>T1F-14THM</u>	14	Thermocouple	\$;-000bxj:

*Terminal Bases sold separately

Analog Output Modules*

Part Number	Number of Channels	Description	Price
<u>T1F-08DA-1</u>	8	Analog Current Output	\$00bxh:
<u>T1F-08DA-2</u>	8	Analog Voltage Output	\$-00bxi:
<u>T1F-16DA-1</u>	16	Analog Current Output	\$;-000bzj:
<u>T1F-16DA-2</u>	16	Analog Voltage Output	\$;000bzk:





*Terminal Bases sold separately

Analog Input/Output Modules*

Part Number	Number of Channels	Description	Price
<u>T1F-8AD4DA-1</u>	8/4	Analog Current Input/Output	\$00bzn:
<u>T1F-8AD4DA-2</u>	8/4	Analog Voltage Input/Output	\$00bzo:

*Terminal Bases sold separately

Analog I/O modules above are shown installed in the Terminal Base. Terminal Bases are sold separately and are listed in the table below.

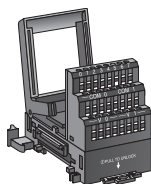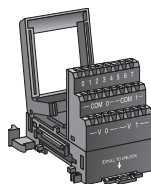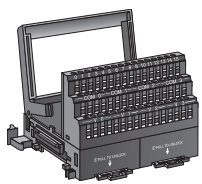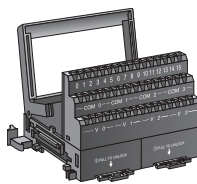**T1K-08B****T1K-08B-1****T1K-16B****T1K-16B-1**

Terminal Bases

Part Number	Number of Terminals	Description	Price
<u>T1K-08B</u>	8	Screw Type	\$00e6s:
<u>T1K-08B-1</u>	8	Spring Clamp	\$00e8n:
<u>T1K-16B</u>	16	Screw Type	\$00e8o:
<u>T1K-16B-1</u>	16	Spring Clamp	\$00e8p:

For more detailed specifications and wiring diagrams, please refer to the Terminator I/O (Field I/O) section in this catalog.

Analog I/O Modules

The following table may be helpful for you to select the right modules for your application.

Analog Input Modules				
Input Type	Specification	Number of Input Points per Module		
		8	14	16
Current	-20 to 20 mA, 0–20 mA, 4–20 mA	T1F-08AD-1 T1F-8AD4DA-1		T1F-16AD-1
Voltage	0–5 V, 0–10V, $\pm 5V$, $\pm 10V$	T1F-08AD-2 T1F-8AD4DA-2		T1F-16AD-2
RTD	Pt100, Pt1000, iPt100, CU-10V, CU-25V, 120V Nickel			T1F-16RTD
Thermistor	10K-AN (Type 3), 10K-CP (Type 2) 5K, 3K, 2252, 1.8K			T1F-16TMST
Thermocouple	Type J, E, K, R, S, T, B, N, C		T1F-14THM	

Analog Output Modules				
Output Type	Specification	Number of Output Points per Module		
		4	8	16
Current	0–20 mA, 4–20 mA		T1F-08DA-1	T1F-16DA-1
	4–20 mA	T1F-8AD4DA-1		
Voltage	0–5V, 0–10V, $\pm 5V$, $\pm 10V$	T1F-8AD4DA-2	T1F-08DA-2	T1F-16DA-2

For more detailed specifications and wiring diagrams, please refer to the Terminator I/O (Field I/O) section in this catalog.

Specialty Modules

T1H-CTRIO \$00bxs:



T1H-CTRIO

Overview

The T1H-CTRIO Counter I/O module is designed to accept high-speed pulse input signals for counting or timing applications. This module provides high-speed pulse output signals for servo/stepper motor control, monitoring and alarming as well as other discrete control functions.

The CTRIO module offers greater flexibility for applications which call for precise counting or timing based on input events or for high speed control output applications. It can also be used for applications that call for a combination of both high-speed input and high-speed output control functions.

The CTRIO module has its own microprocessor and operates asynchronously with respect to the CPU. Therefore, the response time of the on-board outputs is based on the module's scan time, not the CPU's scan time.

Note: T1H CPU modules can support the H2-CTRIO and H2-CTRIO2 modules in the Ethernet I/O bases.

General Specifications	
Specifications	T1H-CTRIO
Discrete I/O Points Used	None (I/O map directly in T1H-DM1/E data structure)
Base Power Required*	400mA Max
Isolation	2500V I/O to Logic, 1000V among Input Channels and All Outputs

*Terminal Base sold separately

Input Specifications	
Specifications	T1H-CTRIO
Inputs	8 pts sink/source
Maximum Input Frequency	100kHz
Minimum Pulse Width	5µs
Input Voltage Range	9–30 VDC
Maximum Voltage	30VDC
Input Voltage Protection	Zener Clamped at 33VDC
Rated Input Current	8mA typical 12mA maximum
Minimum ON Voltage	9.0 VDC
Maximum OFF Voltage	2.0 VDC
Minimum ON Current	5.0 mA
Maximum OFF Current	2.0 mA
OFF to ON Response	Less than 3µs
ON to OFF Response	Less than 3µs


Output Specifications	
Specifications	T1H-CTRIO
Outputs	4 pts (sink/source), independently isolated
Pulse Outputs	2 channels, 20Hz to 25kHz Pulse/Direction or CW/CCW
Minimum Pulse Width	5µs
Output Voltage Range	5–36 VDC
Maximum Output Voltage	36VDC
Maximum Load Current	1.0 A
Maximum Leakage Current	100µA
Inrush Current	5.0 A for 20ms
ON State V Drop	0.3 VDC or less
Overcurrent Protection	15A max.
OFF to ON Response	less than 3µs
ON to OFF Response	less than 3µs
Maximum Output Frequency	
Velocity Mode	25 kHz
Run to Limit Mode	
Run to Position Mode	
Trapezoid	
S-Curve	
Symmetrical S-Curve	
Dynamic Positioning	
Home Search	
Free Form	N/A
Dynamic Velocity	
Dynamic Positioning Plus	
Trapezoid Plus	
Trapezoid with Limits	

Software Configuration

All scaling and configuration is done from within the Edit CTRIO/CTRIO2 Configuration window of Do-more Designer. This eliminates the need for PLC ladder programming or other interface device programming to configure the module.

For more detailed specifications and wiring diagrams, please refer to the Terminator I/O (Field I/O) section in this catalog.

Edit CTRIO/CTRIO2 Configuration Window

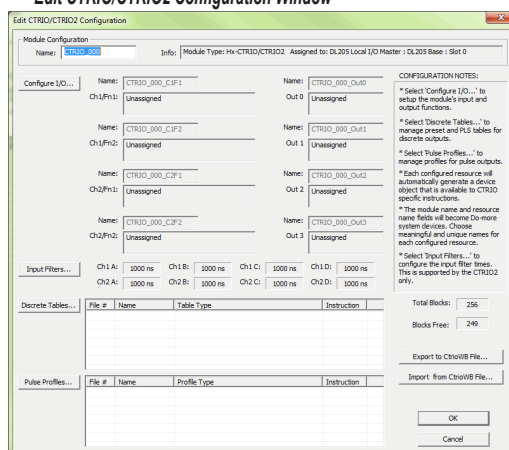

Inputs Supported:

- Counter
- Quad Counter
- Pulse Catc
- Edge Timer
- Dual Edge Timer

Outputs Supported:

- Pulse train - used for servo/stepper motor control. Configurable for
- CW/CCW or step and direction
- Discrete outputs - assigned to Counter/Timer input functions
- Raw output - outputs controlled directly from the CPU interface program

Dimensions and Installation


It is important to understand the installation requirements for your T1H Series PLC system. This will ensure that the PLC system works within their environmental and electrical limits.

Plan for safety

This document should never be used as a replacement for the technical data sheet that comes with the products or the Do-more T1H Series PLC Hardware User Manual (available online at www.automationdirect.com.) The technical data sheet contains information that must be followed. The system installation should comply with all appropriate electrical codes and standards.


Unit dimensions and mounting orientation

Use the following diagrams to make sure the T1H Series PLC system can be installed in your application. The PLC system should be mounted horizontally. To ensure proper airflow for cooling purposes, units should not be mounted upside-down. It is important to check the PLC system dimensions against the conditions required for your application. For example, it is recommended to leave 2" depth for ease of access and cable clearance. However, your distance may be greater or less. Also, check the installation guidelines for the recommended cabinet clearances.

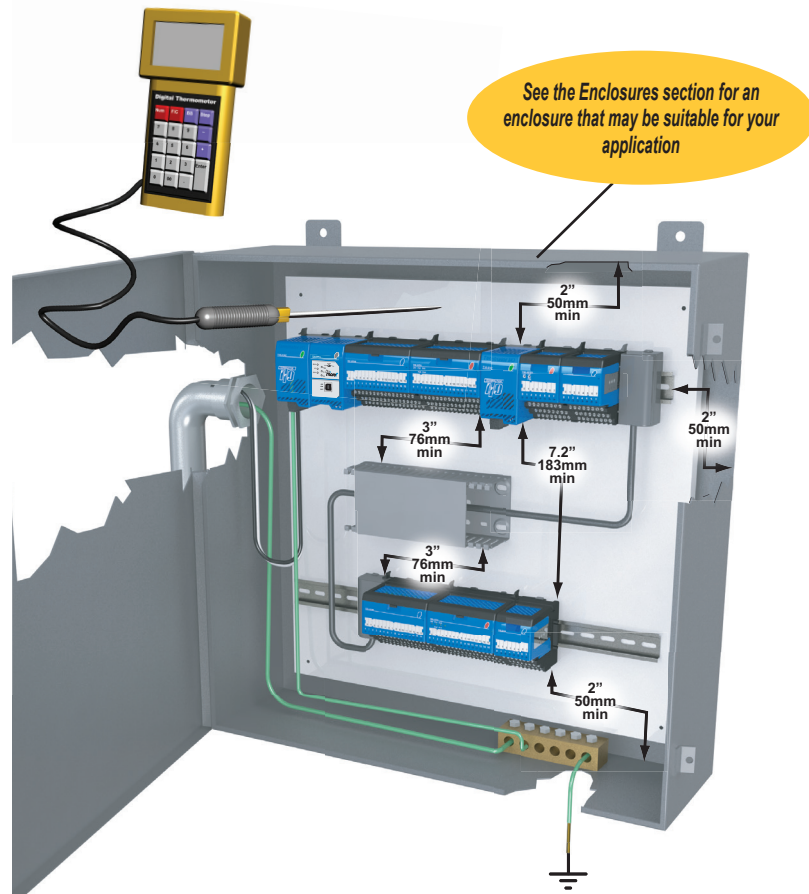

Terminator Environmental Specifications

Ambient Operating Temperature	32°F to 131°F (0°C to 55°C)
Storage Temperature	-4°F to 158°F (-20°C to 70°C)
Ambient Humidity	5% to 95% (Non-condensing)
Atmosphere	No corrosive gases. The level of environmental pollution = 2 (UL 840)
Vibration Resistance	MIL STD 810C, Method 514.2
Shock Resistance	MIL STD 810C, Method 516.2
Voltage Withstand (Dielectric)	1500VAC, 1 minute
Insulation Resistance	500VDC, 10Mq
Noise Immunity	NEMA ICS3-304 Impulse noise 1μs, 1000V FCC class A RFI (144MHz, 430MHz 10W, 10cm)
Agency Approvals	UL E185989, CE, FCC class A, NEC Class 1 Division 2

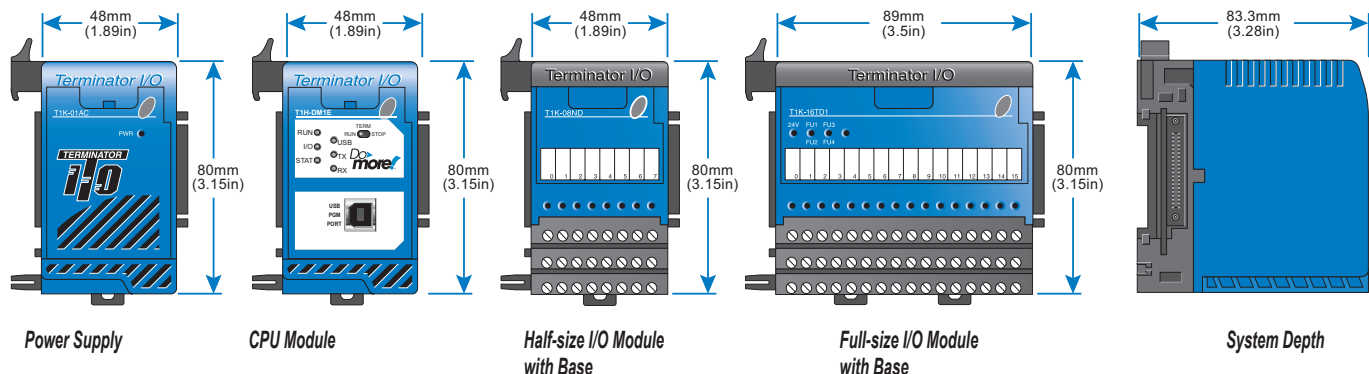


I/O Module Installation

I/O module installation



I/O modules feature separate terminal bases for easy installation.

To install I/O modules:


1. Slide the module into its terminal base (until it clicks into position)
2. Hook upper DIN rail tabs over the top of DIN rail, and press the assembly firmly onto the DIN rail.
3. Slide the module along the DIN rail until it engages with the adjacent module.

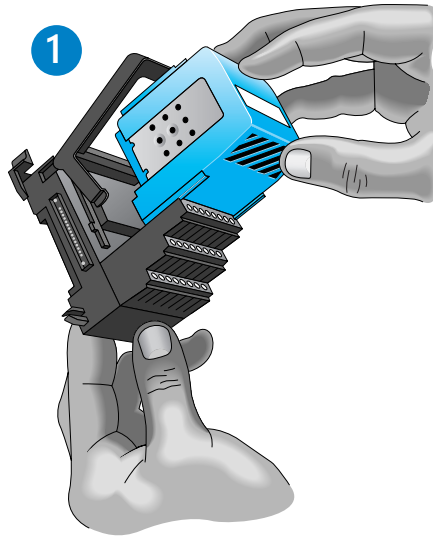

**DN-ASB1
angled mounting
bracket**

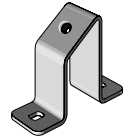


Great for mounting
in upper locations

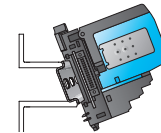


Great for mounting
in lower locations

Optional angled support bracket raises and tilts the mounting rail for easier access and wiring. Use with 35mm DIN rail. See the Connection Systems in this catalog for details.

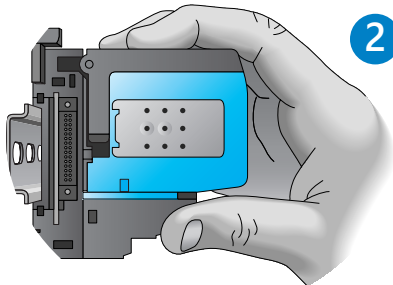

3

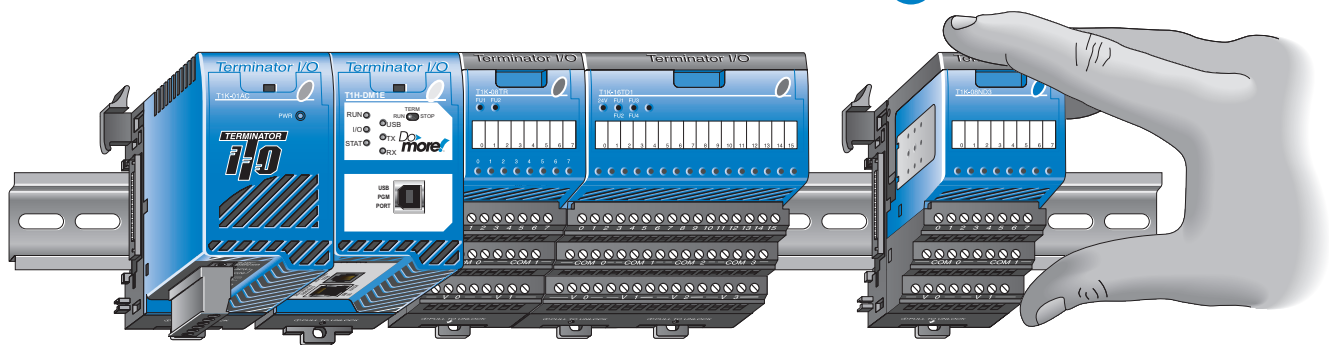


Removing I/O modules is a snap

Grip the locking handle, as shown, and pull up gently to eject the I/O module from its base. The module will slide out for easy replacement. This procedure does not apply to network interface modules or power supplies, which have integral bases.



WARNING: THE T1H SERIES PLC DOES NOT SUPPORT THE HOT-SWAP FEATURE.

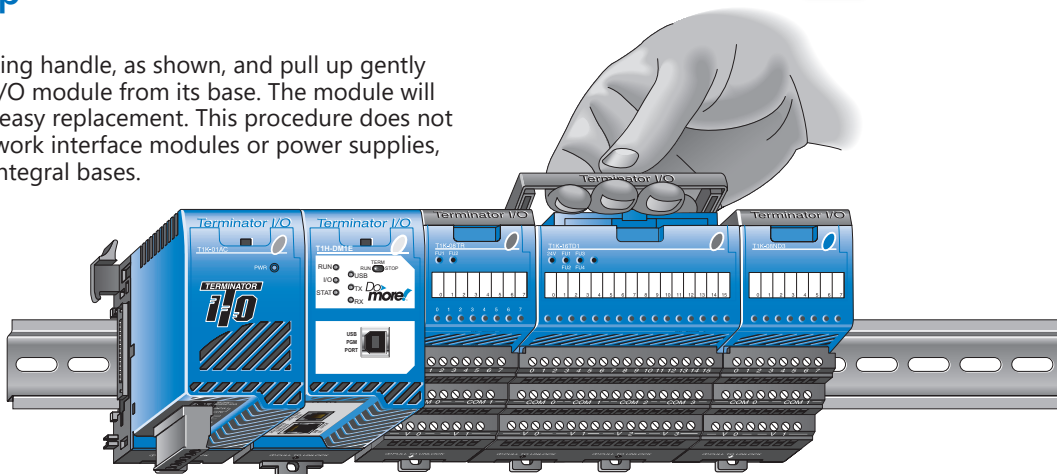

Field Device Wiring and Power Options

Terminal base specifications

Terminator I/O terminal bases are available in screw clamp and spring clamp versions for both half-size and full-size modules. Hot stamp silkscreen labeling is used for numbering I/O points, commons, and all power terminals.

Terminal Base Specifications

Terminal Type	Screw type	Spring clamp
Recommended Torque	1.77–3.54 lb·in (0.2–0.4 N·m)	N/A
Wire Gauge	Solid:	Solid:
	25–12 AWG Stranded: 26–12 AWG	25–14 AWG Stranded: 26–14 AWG


Field device wiring options

Power your DC input devices from the integrated 24VDC power supply bus. T1K-08ND3 and T1K-16ND3 DC input modules include jumpers for selecting the internal 24VDC power supply available for 2- and 3-wire field devices. Clearly labeled triple stack terminals make it easy to wire 2- and 3-wire devices ensuring clean wiring with only one wire per termination.

External user supplied 24VDC power, or auxiliary 24VDC terminals from T1K-01AC, can be easily applied directly to one end of the terminal rows and jumpered across each base in the system.


This is a convenient solution for powering analog I/O and discrete DC output devices whose modules do not have direct access to the internal bussed 24VDC. If current consumption increases, simply add additional T1K-01AC power supplies into the system.

T1K-08B \$00e6s:

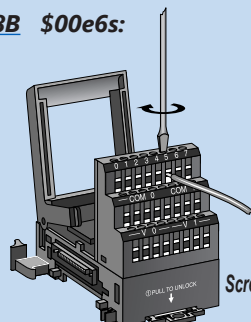


Screw clamp, half-size

T1K-08B-1 \$00e8n:

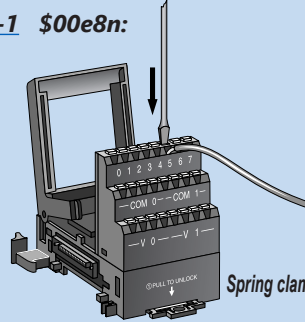


Spring clamp, half-size

T1K-16B \$00e8o:

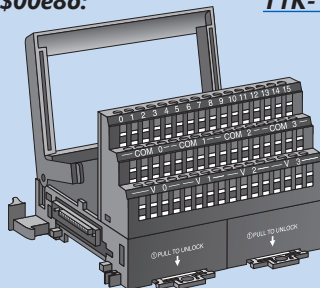


Screw clamp, full-size


T1K-16B-1 \$00e8p:

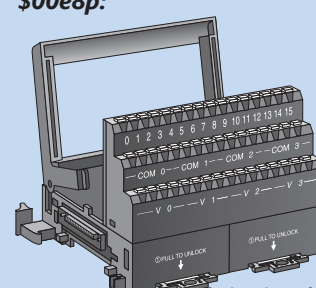

Spring clamp, full-size

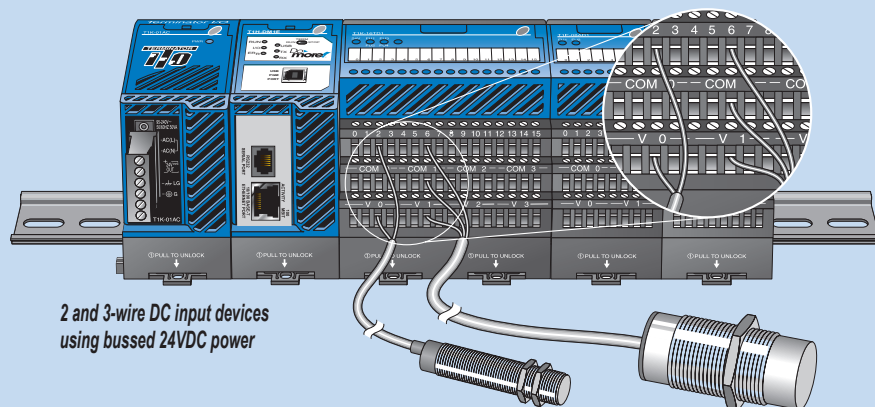

*2 and 3-wire DC input devices
using bussed 24VDC power*

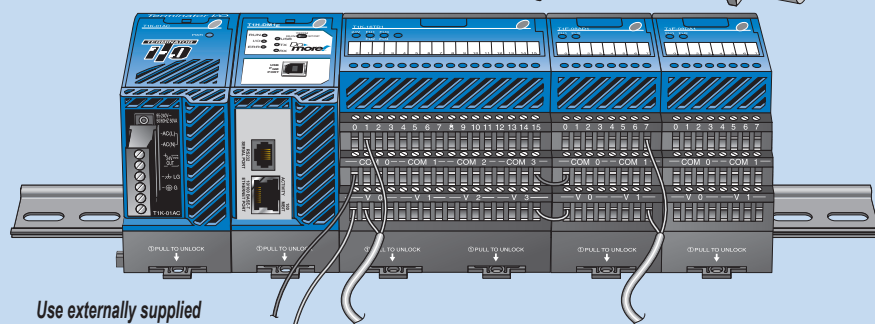

*Use externally supplied
24VDC power or 24VDC aux-
iliary power from T1K-01AC*



WARNING: THE T1H SERIES PLC DOES NOT SUPPORT THE HOT-SWAP FEATURE.