DURAPULSE GS20(X) AC Drives – Introduction





DURAPULSE GS20(X) AC Drives													
Motor Poting	HP	1/4	1/2	1	2	3	5	7.5	10	15	20	25	30
Motor Rating	kW	0.2	0.4	0.75	1.5	2.2	3.7	5.5	7.5	11	15	18.5	22
120V Single-phase		✓	✓	✓									
230V Single-phase		✓	*	*	*	*							
230V Three-phase		✓	*	*	*	*	*	*	✓	✓	✓		
460V Three-phase			*	*	*	*	*	*	*	√	✓	✓	✓
575V Three phase	575V Three phase												
✓ = GS20 model	✓ = GS20 model available ★ = GS20 and GS20X models available												

Overview

The DuraPulse GS20(X) new generation high performance vector control drives provide many standard and advanced functions—all in a compact unit that has been reduced 40% in size. A NEMA 4X version provides service in the harshest of environments.

The drives include many of the same standard features as our GS family of drives including dynamic braking, PID, removable keypad, and RS-485 Modbus communication.

The GS20(X) drive expands the *DURAPULSE* family by adding single-phase input capability (ALL 230VAC drives can be supplied single-phase), a built-in PLC, and optional EtherNet/IP and ModbusTCP communication card. The drive supports up to four (4) independent IM motor parameter sets or supports control of a single AC PM motor.

DURAPULSE GS20(X) AC drives offer several different speed control modes: standard V/Hz with pulse input feedback, sensorless vector (SVC) for Induction Motors (IM) and Permanent Motors (PM), and ultra precise Field Oriented Vector control (FOC) for maximum open loop speed regulation control.

DURAPULSE GS20(X) offers two analog inputs, one analog output, one frequency output, seven digital inputs (including one pulse train input up to 33kHz), two digital outputs, one SPDT relay output, and two STO inputs. All of the analog and digital I/O can be configured for a wide variety of input or output functions. One option card slot is available for either the backup control power option card or Ethernet/IP and Modbus TCP communication option card.

Features

- Broad offering from 1/4 to 30 hp
- NEMA 4X available up to 10hp
- Single-phase 120VAC up to 1hp
- Single-phase/three-Phase 230VAC up to 20HP
- Three-phase 460VAC and 575VAC
- Single-phase UL Ratings 230VAC input for 1 to 20 hp models (see selection tables for derated output)
- Dual rating design CT/VT Ratings (Light & Heavy Duty)
- "Zero Stack" side-by-side zero gap installation
- · Compact Design
- Spring clamp terminal blocks
- Speed control potentiometer built in
- Flexible carrier frequency to 15khz and output frequency to 600Hz
- STO Safe Torque Off (TUV Certified)
- Built-in PLC to support up to 2K steps
- Built-in USB port for fast & easy programming
- Free downloadable software for drive configuration and PLC programming
- Field-upgradable firmware (drive & communication option card)
- Optional LCD text-based advanced keypad (IP66/NEMA 1) can be remotely mounted
- Local/Remote control mode selection or digital/comm input with Hand/Off/Auto control
- Display custom values on keypad
- Momentary power loss restarts
- 100kA Short Circuit Current Rating
- DC Bus Connection Terminals (except 120VAC models)
- Conduit Box(s) for NEMA 1
- Analog I/O configurable 2 Inputs and 1 Output
- Multi-Motor Control (4 total)
- Built-in Dynamic Braking optional resistors
- PID Controller including sleep and wake
- Password protection
- RTD and/or PTC input motor protection
- GS2 mode duplicates exact parameter configuration of GS2
- Modularized design eases maintenance and expansion, including quick replacement of cooling fan
- · High speed communication interfaces

with MODBUS RTU built in, with optional EtherNet/IP and ModbusTCP Communication Card

- Circuit boards have conformal coating for improved environmental tolerance
- Excellent heat-sink design; able to operate at 50°C ambient temperature
- Fire Mode Run fire mode during emergencies to have uninterrupted smoke removal and system pressure
- Two-year warranty
- CE, TUV, UL, cUL

Accessories

- · AC line reactors
- dV/dT output filters
- EMI filters
- · RF filter
- Braking resistors
- Fuses
- Conduit boxes
- Mounting Kits
- Replacement cooling fans
- · Replacement keypad
- Extension cable for remote keypad placement
- Optional advanced LCD keypad (and remote-mount bezel kit)
- $\bullet \ \, \text{EtherNet/IP and ModbusTCP comm card} \\$
- Four and eight-port RS-485 multi-drop termination boards
- GSoft2 drive configuration software
- GSLogic PLC programming software
- Type A to B USB cable
- Detailed descriptions and specifications for GS accessories are available in the "GS/ DURApulse Accessories" section.

Typical Applications

- Conveyors
- Compressors
- · Material handling
- Extruding
- Grinding
- Shop tools
- Fans
- Pumps
- HVAC
- Mixing

DURAPULSE GS20(X) AC Drives – Selection

Selecting the Proper Drive Rating

Selecting the Proper Drive Rating

Determine Motor Voltage and Full-Load Amperage (FLA)

Motor voltage and FLA are located on the nameplate of the motor.

NOTE: FLA of motors that have been rewound may be higher than stated.

Determine Motor Overload Requirements

Many applications experience temporary overload conditions due to starting requirements or impact loading. Most AC drives are designed to operate at 150% overload for 60 seconds. If the application requires an overload greater than 150% or longer than 60 seconds, the AC drive must be oversized.

NOTE: Applications that require replacement of existing motor starters with AC drives may require up to 600% overload.

Determine Application Type: Constant Torque or Variable Torque

This torque requirement has a direct effect on which drive to select. Variable Torque applications are generally easier to start; typically fans and pumps. Most other applications outside fans and pumps fall into the Constant Torque category (machine control, conveyors, etc.). If you are unsure of the application, assume Constant Torque. The specification, derating, and selection tables are generally segregated by Constant Torque and Variable Torque.


Installation Altitude

AC drives rely on air flow for cooling. As the altitude increases, the air becomes less dense, and this drop in air density decreases the cooling properties of the air. Therefore, the AC drive must be oversized to compensate for the decrease in cooling. GS20(X) drives are designed to operate at 100% capacity at altitudes up to 1000 meters.

NOTE: For use above 1000m, the AC drive must be derated as described below.

Derate Output Current Based on Altitude Above 1000 Meters

- If the AC drive is installed at an altitude of 0–1000m, follow normal operation restrictions.
- If installed at an altitude of 1000–2000m, decrease 1% of the rated current or lower 0.5°C of temperature for every 100m increase in altitude.
- · Maximum altitude for Corner Grounded is 2000m. If installation at an altitude higher than 2000m is required, please contact AutomationDirect.

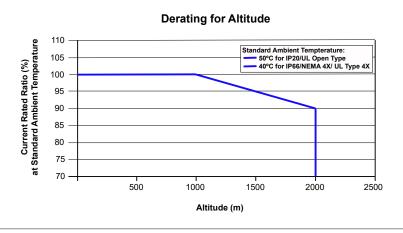

DURAPULSE GS20(X) AC Drives – Selection

Selecting the Proper Drive Rating, continued

Determine Maximum Enclosure Internal Temperature


AC drives generate a significant amount of heat and can cause the internal temperature of an enclosure to exceed the rating of the GS20(X) drive, even when the ambient temperature is less than 104°F (40°C). Enclosure ventilation and/or cooling may be required to reduce maximum internal temperature to 104°F (40°C) or less. Ambient temperature measurements/calculations should be made for the maximum expected temperature.


NOTE: For use above 104°F (40°C), the AC drive must be derated as described below.

Derate Output Current Based on Temperature Above 104°F (40°C) or 122°F (50°C)

	Drive Derating by Temperature and Protection Level						
Protection Level	Derating						
UL Open Type / IP20*	When the GS20(X) drive is operating at rated current, the ambient temperature has to be between -10°C and +50°C. When ambient temperature exceeds 50°C, decrease the rated current by 2.5% for every 1°C temperature increase. Maximum allowable temperature is 60°C.						
UL Type 4X / NEMA 4X / IP66*	When the GS20(X) drive is operating at rated current, the ambient temperature has to be between -10°C and +40°C. When ambient temperature exceeds 40°C, decrease the rated current by 2.5% for every 1°C temperature increase. Maximum allowable temperature is 50°C.						

^{*} For more information about environmental ratings, refer to "Environmental Conditions for GS20 AC Drives" on page tGSX-30 and "Environmental Conditions for GS20X AC Drives" on page tGSX-30.

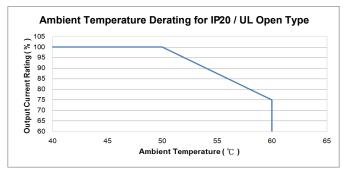

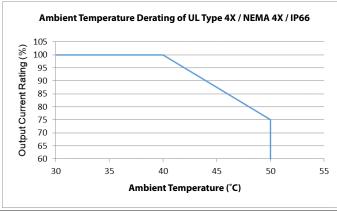

DURAPULSE GS20(X) AC Drives – Selection

Selecting the Proper Drive Rating, continued

Derate Output Current Based on Carrier Frequency (if necessary)

Carrier Frequency Effects

AC Drives rectify the incoming 50 or 60Hz line power resulting in DC power at 0Hz. The resulting DC power is then pulse-width modulated and supplied to the motor by the drive's power electronics. IGBTs invert the DC power, simulating a sine wave at the desired frequency (that's what allows variable speed in AC induction motors). The speed at which the IGBTs are turned ON and OFF is called Carrier Frequency. In GS20(X) drives, the Carrier Frequency can range from 2kHz to 15kHz. Though Carrier Frequency can be adjusted, there are trade-offs between high Carrier Frequencies and low Carrier Frequencies.

Benefits of Higher Carrier Frequencies:

- · Better efficiency (lower harmonic losses) in the motor
- · Lower audible noise

Benefits of Lower Carrier Frequencies:

- · Better efficiency in the drive
- Lower EMI (electrical noise)
- · Reduced reflective wave peak voltage

As a general rule, the Carrier Frequency should be set as low as possible without creating unacceptable audible noise in the motor. Smaller systems can have higher Carrier Frequencies, but larger drives (>20 or 30hp) should not have Carrier Frequencies set higher than 6kHz. Heavy duty applications typically run around 2–4 kHz.

Derating Tables

The tables below show the derating curves for both GS20 and GS20X drives running in two different modes under variable torque and constant torque conditions.

Line 1: Ta = 50°C / Load = 100%

Line 2: Ta = 50°C / Load = 75% or Ta = 40°C / Load = 100%


Line 3: Ta = 50°C / Load = 50% or Ta = 35°C / Load = 100%


Set PWM mode via P11.41.

SVPWM = Space Vector Pulse Width Modulation mode


DPWM = Two Phase Pulse Width Modulation mode


Variable Torque Carrier Frequency Derating

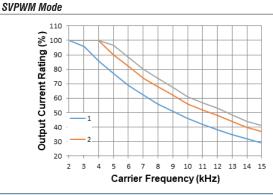

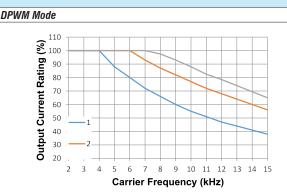

Constant Torque Carrier Frequency Derating

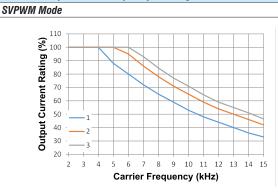

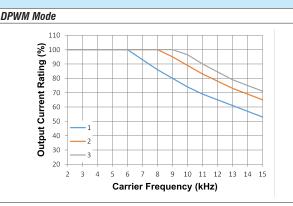

DURAPULSE GS20X AC Drives – Selection SpecificationsGS20X Drive Model Selection Tables

		GS20	OX <u>23</u> (<u> </u>	cifications – Fran	ne Sizes A, B			
Mod	el Nai	те		GS21X-20P5	GS21X-21P0	GS21X-22P0	GS21X-23P0		
Price	Price			\$-04cie:	\$;-04cif:	\$-04cig:	\$-04cih:		
Fran	ne Siz	re		A	A	A	В		
Drav	ving			PDF	PDF	PDF	PDF		
	May	Motor Output	hp	1/2	1	2	3		
	IVIAX	motor output	kW	0.4	0.75	1.5	2.2		
ing		Rated Output Capacity	kVA	1.1	1.7	2.9	4.2		
Output Rating	CT	Rated Output Current	Α	2.8	4.8	7.5	11		
tput		Carrier Frequency ³	kHz	2–15 (default 4)					
mo		Rated Output Capacity	kVA	1.2	1.9	3.2	4.8		
	VT	Rated Output Current	Α	3.2	5	8.5	12.5		
		Carrier Frequency ³	kHz	2–15 (default 4)					
2	CT	Rated Input Current	Α	7.3	10.8	16.5	24.2		
ting	VT	Rated Input Current	A	8.3	11.3	18.5	27.5		
Input Rating ²	Rate	ed Voltage/Frequency			One-phase 200-240 VAC	(-15% to +10%), 50/60 Hz			
ındı	0pei	rating Voltage Range (VAC)			170-	-264			
"	Freq	uency Tolerance (Hz)			47-	-63			
IE2 E	fficie	ency - Relative Power Loss		3.4%	2.9%	2.6%	2.4%		
Weig	jht (k	g [lb])		2.25 [4.96]	2.6 [5.73]	3.1 [6.83]	3.5 [7.72]		
Cool	ing M	lethod		Convective Fan					
IP Ra	ating				IP66 / N	EMA 4X	<u> </u>		

^{1 -} For Use With Three-Phase Motors Only.

²⁻ If 3-phase power source is non-symmetrical, refer to "Circuit Connections - RFI Jumper" in the GS20(X) AC Drives User Manual, Chapter 2.

Please refer to "GS20(X) DURApulse Accessories – Fusing" (pg.tGSX-76) for input fusing information.

^{3 -} The carrier frequency is a factory default. Decrease the current value if you need to increase the carrier frequency. Refer to "Derate Output Current Based on Carrier Frequency".

DURAPULSE GS20X AC Drives – Selection SpecificationsGS20X Drive Model Selection Tables, continued

		GS20X	230	<u>/</u> 1 3-Phase	Specification	ons – Framo	e Sizes A, B	, C		
Mode	el Na	те		GS23X-20P5	GS23X-21P0	GS23X-22P0	GS23X-23P0	GS23X-25P0	GS23X-27P5	
Price	;			\$04cii:	\$04cij:	\$-04cik:	\$04cil:	\$-04cin:	\$-04cio:	
Fram	ie Siz	e		А	Α	Α	В	В	С	
Draw	/ing			PDF	PDF	PDF	PDF	PDF	PDF	
	Мах	Motor Output	hp	0.5 [0.25]	1 [0.5]	2 [1]	3 [1.5]	5 [2.5]	7.5 [3.5]	
	(3-р	hase [1-phase]) ⁴	kW	0.4 [0.2]	0.75 [0.375]	1.5 [0.75]	2.2 [1.1]	3.7 [1.85]	5.5 [2.75]	
ing		Rated Output Capacity 3-phase [1-phase])	kVA	1.1 [0.55]	1.8 [0.9]	2.9 [1.5]	4.2 [2.1]	6.5 [3.25]	9.5 [4.75]	
Output Rating	СТ	Rated Output Current 3-phase [1-phase])	A	2.8 [1.4]	4.8 [2.4]	7.5 [3.75]	11 [5.5]	17 [8.5]	25 [12.5]	
Outp		Carrier Frequency ³	kHz	2–15 (default 4)						
		Rated Output Capacity	kVA	1.2	1.9	3.	4.8	7.4	10.3	
	VT	Rated Output Current	Α	3.2	3.2 5 8 12.5 19.5 27					
		Carrier Frequency ³	kHz	2–15 (default 4)						
2	CT	Rated Input Current	A	3.4	5.8	9	13.2	20.4	30	
ting	VT	Rated Input Current	A	3.8	6	9.6	15	23.4	32.4	
Input Rating ²	Rate	ed Voltage/Frequency		3-phase or 1-phase 200–240 VAC (-15% to +10%), 50/60 Hz						
ndu	0pe	rating Voltage Range (VAC)		170–264						
1	Freq	uency Tolerance (Hz)				47-	-63			
IE2 E	fficie	ncy - Relative Power Loss		3.4%	2.9%	2.5%	2.5%	2.2%	2.3%	
Weig	iht (k	g [lb])		2.3 [5.07]	2.45 [5.40]	2.75 [6.06]	3.4 [7.50]	3.5 [7.72]	4.25 [9.37]	
Cooli	ing M	lethod			Convective			Fan		
IP Ra	ating					IP66 / N	EMA 4X			

^{1 -} For Use With Three-Phase Motors Only.

²⁻ If 3-phase power source is non-symmetrical, refer to "Circuit Connections - RFI Jumper" in the GS20(X) AC Drives User Manual, Chapter 2. Please refer to "GS20(X) DURApulse Accessories – Fusing" (pg.tGSX-76) for input fusing information.

^{3 -} The carrier frequency is a factory default. Decrease the current value if you need to increase the carrier frequency. Refer to "Derate Output Current Based on Carrier Frequency".

^{4 -} Three phase models can be powered with 1-phase or 3-phase input power. If using 1-phase input power, GS21 models up to 3HP provide higher output power than equivalent GS23 models with 1-phase.

DURAPULSE GS20(X) AC Drives – Selection Specifications

GS20X Drive Model Selection Tables, continued

		GS20X	460	<u>/</u> 1 3-Phas	e Specific	ations – F	rame Size	es A, B, C			
Mode	el Nai			GS23X-40P5	GS23X-41P0	GS23X-42P0	GS23X-43P0	GS23X-45P0	GS23X-47P5	GS23X-4010	
Price				\$-04cip:	\$-04ciq:	\$-04cis:	\$;-04cit:	\$-04ciu:	\$-04civ:	\$-04cix:	
Fram	ne Siz	e		А	А	А	А	В	С	С	
Draw	ving			PDF	PDF	PDF	PDF	PDF	PDF	PDF	
	May	Motor Output	hp	1/2	1	2	3	5	7 1/2	10	
	IVIAX	тогог ошриг	kW	0.4	0.75	1.5	2.2	3.7	5.5	7.5	
ing		Rated Output Capacity	kVA	1.1	2.1	3.2	4.2	6.9	9.9	13	
Output Rating	CT	Rated Output Current	Α	1.5	2.7	4.2	5.5	9	13	17	
put		Carrier Frequency ³	kHz	2–15 (default 4)							
Out		Rated Output Capacity	kVA	1.4	2.3	3.5	5	8	12	15.6	
	VT	Rated Output Current	Α	1.8	3	5.6	6.5	10.5	15.7	20.5	
		Carrier Frequency ³	kHz	2–15 (default 4)							
2	CT	Rated Input Current	Α	2.1	3.7	5.8	6.2	9.9	14.3	18.7	
ting	VT	Rated Input Current	Α	2.5	4.2	6.4	7.2	11.6	17.3	22.6	
Input Rating ²	Rate	d Voltage/Frequency		Three-phase 380–480 VAC (-15% to +10%), 50/60 Hz							
ındı	0per	rating Voltage Range (VAC)		323–528							
"	Freq	uency Tolerance (Hz)					47–63				
IE2 E	fficie	ncy - Relative Power Loss	4.0%	2.6%	2.3%	2.3%	2.0%	2.0%	1.9%		
Weig	iht (kg	g [lb])		2.35 [5.18]	2.6 [5.73]	2.8 [6.17]	3.6 [7.94]	3.45 [7.61]	4.25 [9.37]	4.25 [9.37]	
Cool	ing M	ethod			Conv	ective			Fan		
IP Ra	ating						IP66 / NEMA 4X				

^{1 -} For Use With Three-Phase Motors Only.

²⁻ If 3-phase power source is non-symmetrical, refer to "Circuit Connections – RFI Jumper" in the GS20(X) AC Drives User Manual, Chapter 2. Please refer to "GS20(X) DURApulse Accessories – Fusing" (pg.tGSX-76) for input fusing information.

^{3 -} The carrier frequency is a factory default. Decrease the current value if you need to increase the carrier frequency. Refer to "Derate Output Current Based on Carrier Frequency".

DURAPULSE GS20(X) AC Drives – General Specifications

GS20(X) Drive Model Selection Tables, continued

	GS20()	X) General	Specifications (Applicable to	All Models)			
	Control Method		V/F, Sensorless Vector (SVC), Field Oriented Co Generator intput (VFPG), Torque (TQC Sensorle	ntrol (FOC) Sensorless, Volt/Frequency with Pulse ss)			
	Applicable Motor		3-phase AC Induction Motor, 3-phase Permanent	Magnet AC motor			
	Starting Torque ¹		150% / 3Hz 100% / (motor rated frequency/20) 200% / 0.5 Hz	(V/F, SVC control for IM, CT, rated) (SVC control for PM, CT, rated) (FOC control for IM, CT, rated)			
	Torque Accuracy		± 15% TQC Sensorless				
	Torque Limits	120/230/460V	VT: 160% of output current, max CT: 180% of output current, max				
		575V	200% of output current, max				
	Speed Control Ra	nnge ¹	1: 50 (V/F, SVC control for IM, CT, rated) 1: 20 (SVC control for PM, CT, rated) 1: 100 (FOC control for IM, CT, rated)				
	Max. Output Freq	uency	0.00–599.00 Hz				
	Overload Capacit	y	VT: rated output current of 120% 60 sec, 150% 3 sec. CT: rated output current of 150% 60 sec, 200% 3 sec.				
Control Characteristics	Frequency Setting Signal		0-10 V / -10-10 V 4-20 mA / 0-10 V 1 channel pulse input (33kHz), 1 channel pulse o	utput (33kHz)			
	Digital Inputs		Seven (7) - 24VDC NPN or PNP, includes 1 puls	e train frequency input 33kHz			
	Digital Outputs		Three (3) - (2)-48VDC, (1) Relay-250VAC/30VDC				
	Analog Inputs		Two (2) - (1) voltage, (1) selectable Voltage or Cu	urrent			
	Analog Outputs		One (1) - selectable voltage or current				
	Frequency Output	t	One (1) - 30VDC, 33kHz				
	Safe Torque Off		STO1 and STO2 inputs- 24VDC				
	Main Functions		Deceleration Energy Back (DEB) function, Wobb Master and Auxiliary frequency source selectable tracking, Over-torque detection, 16-step speed (i	e, Restart after momentary power loss, Speed ncluding the master speed), Accel./decel. time n control, JOG frequency, Frequency upper/lower			
	Application Macro	o	Built-in application parameter groups (selected b groups.	y industry) and user-defined application parameter			
Protection	Motor Protection		Over-current, over-voltage, over-heating, phase I	oss.			
Characteristics			Stall prevention during acceleration, deceleration	, and running (independent settings).			
Accessor:	Communication C	Card	GS20A-CM-ENETIP (EtherNet/IP and Modbus T	CP)			
Accessory	External DC Powe	er Supply	GS20A-BPS (24V power backup supply card)				
Agency Approvals			UL, CE ² , TUV (SIL 2), RoHS, REACH				
1: Control accuracy ma	y vary depending on t	the environment, appli	cation conditions, or different motors. For more inform	ation, contact AutomationDirect.			

^{2:} See CE declaration here: https://support.automationdirect.com/docs/GS20A-GS20AX-CE.pdf

DURAPULSE GS20(X) AC Drives – Environmental Specifications

GS20(X) Environmental Specifications


	Environmental Conditions for GS20 AC Drives							
Condition	Operation Storage Transportatio							
Installation Location	IEC 60364-1/ IEC 60664-1 Pollution degree 2, Indoor use only.	n/a	n/a					
Ambient Temperature	IP20/UL Open Type: -20–50°C (-20–60°C w/derating)	-40-85°C	-20-70°C					
Ambient Temperature	Non-condensing, non-	freezing						
Relative Humidity	90%, no water condensation	95%, no water	r condensation					
Air Pressure	86-106 kPa	70–10)6 kPA					
Pollution Level	IEC 60721-3, concentrate	prohibited						
Pollution Level	Class 3C2; Class 3S2	Class 2C2; Class 2S2	Class 1C2; Class 1S2					
Environmental Air	No corrosive/inflammable ga	ases permitted						
Altitude	<1000 m (For altitudes > 1000 n	n, derate to use it.)						
Package Drop	n/a	ISTA procedure 1A (according	ng to weight) IEC 60068-2-31					
1.0 mm, peak to peak value range from 2–13.2 Hz; 0.7–2.0 G range from 13.2–55 Hz; 2.5 G peak, 5 Hz–2 kHz 2.0 G range from 55–512 Hz. 0.015" maximum displacement Compliance with IEC 60068-2-6								
15G, 11ms Compliance with IEC/EN60068-2-27 30G								
DO NOT expose the GS20 AC Driv	e to harsh environments such as dust, direct sunlight, corrosive/flammable gase	s humidity liquid or vibrations.	The salts in the air must be					

DO NOT expose the GS20 AC Drive to harsh environments such as dust, direct sunlight, corrosive/flammable gases, humidity, liquid, or vibrations. The salts in the air must be less than 0.01 mg/cm² every year.

	Environmental Conditions for GS20X	AC Drives				
Condition	Operation	Storage	Transportation			
Installation Location	PCB design is compliant with IEC 60364-1 / IEC 60664-1 Pollution Degree 2. The outer case meets IP66 standard for indoor use. If the drive is for outdoor application, avoid direct sunlight.					
Ambient Temperature	IP66 / NEMA 4X / UL Type 4X: -20–40°C (-20–50°C w/derating)	-40-85°C	-20-70°C			
Allibiciil Telliperalure	Non-condensing, non-f	reezing				
Relative Humidity	0-100%, no water condensation	95%, no water condensation				
Air Pressure	86–106 kPa	70–106 kPA				
Pollution Level	IEC 60721-3, concentrate prohibited					
rollution Level	Class 3C2; Class 3S2	Class 2C2; Class 2S2	Class 1C2; Class 1S2			
Altitude	<1000m (For altitudes > 1000m,	derate to use it.)				
Package Drop	n/a	ISTA procedure 1A (according	ng to weight) IEC 60068-2-31			
Vibration 1.0 mm, peak to peak value range from 2–13.2 Hz; 0.7–2.0 G range from 2.5 G peak, 5 Hz–2 kHz 13.2–55 Hz; 2.0 G range from 55–512 Hz; complies with IEC 60068-2-6.						
Impact 15G, 11ms 30G Compliance with IEC/EN60068-2-27 30G						
DO NOT expose the GS20X AC D	rive to harsh environments such as direct contact with chemical substance and so	lvent, and exposure to direct sur	ılight.			

DURAPULSE GS20(X) AC Drives Specifications– Air Flow and Power (Heat) Dissipation

Minimum Clearances and Air Flow for GS20X Series Drives

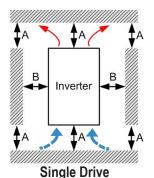

Installation

GS20X Minimum Mounting Clearances*							
Operation Temperature							
Installation Method	(mm)	(mm)	Max (w/out derating)	Max (Derating)			
Single drive installation 50 30 40 50							
* The minimum mounting cleara	* The minimum mounting clearances stated in this table apply to GS20X drives frames A to C. Failure to follow the						

^{*} The minimum mounting clearances stated in this table apply to GS20X drives frames A to C. Failure to follow the minimum mounting clearances may cause a heat dissipation problem.

	GS20X Airflow and Power Dissipation								
Model	Frame		nte for Cooling	Power Dissipation (Watts)					
Number	Size	Flow Rate (cfm)	Flow Rate (m³/hr)	Loss External (Heat sink)	Internal	Total			
<u>GS21X-20P5</u>				16.3	14.5	30.8			
<u>GS21X-21P0</u>				29.1	20.1	49.2			
<u>GS23X-20P5</u>				16.5	12.6	29.1			
<u>GS23X-21P0</u>				29.1	20.1	49.2			
<u>GS23X-40P5</u>	_	A 0.0	0.0	17.6	11.1	28.7			
<u>GS23X-41P0</u>] ^			30.5	17.8	48.3			
<u>GS21X-22P0</u>				46.5	31	77.5			
<u>GS23X-22P0</u>				50.1	24.2	74.3			
<u>GS23X-42P0</u>					45.9	21.7	67.6		
<u>GS23X-43P0</u>				60.6	22.8	83.4			
<u>GS21X-23P0</u>				70.0	35.0	105.0			
<u>GS23X-23P0</u>	В	27.3	46.4	76.0	30.7	106.7			
<u>GS23X-25P0</u>		21.3	40.4	108.2	40.1	148.3			
<u>GS23X-45P0</u>				93.1	42.0	135.1			
<u>GS23X-27P5</u>				192.8	53.3	246.1			
<u>GS23X-47P5</u>	С	33.5	56.6	132.8	39.5	172.3			
<u>GS23X-4010</u>				164.7	53.3	246.1			
D. Eller J. Gr		Bufuet							

- Published flow rates are the result of active cooling using fans, factory installed in the drive.
- Unpublished flow rates () are the result of passive cooling in drives without factory installed fans.
- The required airflow shown in the chart is for installing a single GS20X drive in a confined space.
- When calculating power dissipation (Watt Loss), use the <u>Total</u> value. Heat dissipation shown in the chart is for installing a single GS20X drive in a confined space.
- Heat dissipation for each model is calculated by rated voltage, current and default carrier frequency.

DURAPULSE GS20(X) AC Drives Specifications– Terminals

Control Circuit Terminal Names and Definitions

		Control Circuit Terminals
Terminal Symbol	Terminal Function	Description
+24V	Digital control signal common (Source)	+24V ± 10% 100mA
FWD (DI1) REV (DI2) DI3 - DI7	Digital input 1–7 ① Sink Mode with Internal power (+24 Voc) FWD (DI1) PEV (DI2) Internal circuit See pg.tGSX-35 for sinking/sourcing wiring examples.	Source Mode: ON: activation current 3.3 mA ≥ 11VDC OFF: cut-off voltage ≤ 5VDC Sink Mode: ON: activation current 3.3 mA ≤ 13VDC OFF: cut-off voltage ≥ 19VDC DI7: Single pulse input, maximum input frequency=33kHz. Digital inputs can be configured by the user for many different functions. Refer to P02.01–02.07 to program the digital inputs FWD (DI1), REV (DI2), DI3–DI7. When P02.00=0, FWD (DI1) and REV (DI2) can be programmed. • When P02.00≠0, the functions of FWD (DI1) and REV (DI2) act according to P02.00 setting. • When P02.07=0, DI7 is pulse input terminal. • DI7 uses pulse input can be used as frequency command source or connect it to the encoder for motor closed-loop control. • DI7 motor closed-loop control only supports VFPG control mode.
DO DCM	Digital frequency signal output Max 30 Vpc 30 mA DO R DCM Digital control /	DO uses pulse voltage as an output monitoring signal; Duty-cycle: 50% Min. load impedance RL: $1k\Omega$ / $100pF$ Max. current endurance: 30 mA Max. voltage: $30VDC \pm 1\%$ (when $30VDC$ / $30mA$ / RL= $100pF$) Max. output frequency: $33kHz$ Current-limiting resistor R: $\geq 1K\Omega$ Output load impedance RL Capacitive load $\leq 100pF$ Resistive load $\leq 1k\Omega$, resistance determines the output voltage value.
D01	Frequency signal common (Sink) Digital Output 1 (photo coupler)	DO-DCM voltage = external voltage * (RL/ (RL+R)) The AC motor drive outputs various monitoring signals, such as drive in operation, frequency reached, and overload indication through a transistor (open collector). Outputs can be wired as sinking or sourcing. See User manual Appendix D for wiring examples.
D02	Digital Output 2 (photo coupler)	Max 48 Vpc 50 mA DO1 R DO1
DOC	Digital Output Common (photo coupler)	DO2 R
R10	Relay Output 1 (N.O.)	Resistive Load
R1C	Relay Output 1 (N.C.)	• 3.0 A (NO), 3.0 A (NC) @250VAC
R1	Relay Output 1 Common	• 5.0 A (NO), 3.0 A (NC) @30VDC Inductive Load (COS 0.4) • 1.2 A (NO), 1.2 A (NC) @250VAC • 2.0 A (NO), 1.2 A (NC) @30VDC To output different kinds of monitoring signals such as motor drive in operation, frequency reached, and overload indication.
+10V	Potentiometer power supply	Power supply for analog frequency setting: +10.5 ± 0.5 VDC / 20mA

DURAPULSE GS20(X) AC Drives Specifications– Terminals

Control Circuit Terminal Names and Definitions

	Control	Circuit Terminals (continued)
Terminal Symbol	Terminal Function	Description
AI1	Analog voltage frequency command +10V AII -10V~+10V) ACM Internal circuit ACM Internal circuit	Impedance: 20kΩ Range: 0–10 V / -10–10 V = 0–Maximum Operation Frequency (P01.00) Mode switching by setting P03.00, P03.28 Al1 resolution=10 bits
AI2	Analog current frequency command Al2 Al2 circuit ACM Internal circuit	Impedance: Current mode=250 Ω , Voltage mode=20k Ω Range: 0–20 mA / 4–20 mA / 0–10 V = 0–Maximum Operation Frequency (P01.00) Mode switching by setting P03.01, P03.29 Switch: The Al2 default is 0–20 mA / 4–20 mA (current mode) Al2 resolution = 12 bits
A01	Multi-function analog voltage output AO1 ACM B C B C ACM ACM ACM ACM B C ACM ACM	Switch: The AO1 default is 0–10 V (voltage mode). To switch to the current mode, two steps are required: 1. A dip switch must be configured (follow the instructions on the inner side of the front cover. 2. Change P03.31 to 1 or 2 (see Chapter 4 of the GS20(X) User Manual). Voltage mode Range: 0–10 V (P03.31=0) corresponds to the maximum operating range of the control target Max. output current: 2mA Max. Load: 5kΩ Current mode Range: 0–20 mA (P03.31=1) / 4–20 mA (P03.31=2) corresponds to the maximum operating range of the control target, maximum load 500Ω AO1 resolution=10 bits
ACM	Analog Signal Common	Analog signal common terminal
+24V (red)	STO 24V power terminal	
ST01, ST02 (red)	STO cut-off mode Input voltage level: 11VDC < STO1-SCM and Power removal safety function per EN 954-1 Note: Refer to Chapter 17 SAFE TORQUE	tage: 30VDC ±10 % FO2-SCM < 5VDC overates until the AC motor drive stops outputting current) STO2-SCM < 30VDC and IEC / EN 61508
SCM (red)	STO Common - Signal Terminal	
SG+	Modbus RS-485	4B 18 4B 18 B 18 B 18 B 18 B 18 B 18 B 1
SG- SGND	Note: Refer to GS20(X) User Manual Chapt details.	er 4 Descriptions of Parameter Settings, Parameter Group 09: Communication Parameters for
RJ45	PIN 1, 2, 6: Reserved PIN 3, 7: SGND PIN 4: SG- PIN 5: SG+ PIN 8: +10V supply GS4-KPD (provides (optional) power supply)	The RJ45 port provides a serial communications connection. Max Baud Rate = 115.2 kbps

DURAPULSE GS20(X) AC Drives – Basic Wiring Diagram

Main Circuit Wiring Diagram: GS20(X) All Models

Note: Users MUST connect wiring according to the circuit diagram shown below. (Refer to GS20(X) User Manual for additional specific wiring information.)


Note: DC reactors (chokes) are specified but not stocked by AutomationDirect. Note: DC- and DC+/+1 terminals are not available on 120V series drives.

DC choke (optional) 🕆 Brake resistor (optional) Jumper Input 1-phase/3-phase power Input No Fuse Breaker or Fuse DC-DC+/+1 +2/B1 В2 contactor Motor R(L1) R(L1) U(T1) S(L2) V(T2) S(L2) 3~ T (L3) T(L3)W(T3)


Control Circuit Wiring Diagram: Digital Inputs - Internal Power

Note: Users MUST connect wiring according to the circuit diagram shown below. (Refer to GS20(X) User Manual for additional specific wiring information.)

1 Sink Mode with internal power (+24 V_{DC})

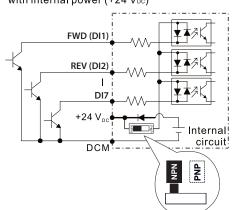


② Source Mode with internal power (+24 V_{DC})

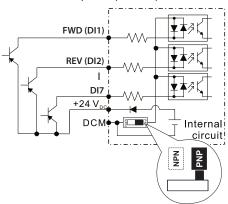


Control Circuit Wiring Diagram: Digital Inputs - External Power

Note: Users MUST connect wiring according to the circuit diagram shown below. (Refer to GS20(X) User Manual for additional specific wiring information.)

3 Sink Mode with external power

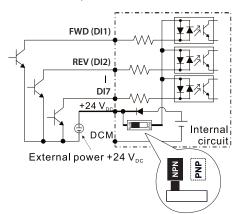


4 Source Mode with external power

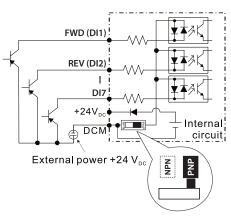

DURAPULSE GS20(X) AC Drives – Basic Wiring Diagram

System Wiring Diagram:

Note: Users MUST connect wiring according to the circuit diagram shown below. (Refer to user GS20(X) User Manual for additional specific wiring information.)

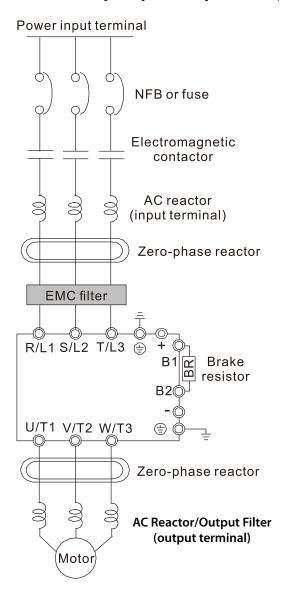


Syste	em Wiring Components
Component	Function
Power input terminal	Supply power according to the rated power specifications indicated in the manual
NFB or fuse	There may be a large inrush current during power on. Select a suitable NFB or Fuse.
Electromagnetic contactor	Switching the power ON/OFF on the primary side of the electromagnetic contactor can turn the drive ON/OFF, but frequent switching can cause drive failure. Do not switch ON/OFF more than once an hour. Do not use the electromagnetic contactor as the power switch for the drive; doing so shortens the life of the drive.
AC reactor (input terminal)	When the main power supply capacity is greater than 500kVA, or when it switches into the phase capacitor, the instantaneous peak voltage and current generated may destroy the internal circuit of the drive. It is recommended that you install an input side AC reactor in the drive. This also improves the power factor and reduces power harmonics. The wiring distance should be within 10 m.
Zero phase reactor	Used to reduce radiated interference, especially in environments with audio devices, and reduce input and output side interference. The effective range is AM band to 10MHz.
EMC filter	Can be used to reduce electromagnetic interference.
Brake module and Brake resistor (BR)	Used to shorten the deceleration time of the motor.
AC Reactor/Output Filter (output terminal)	The motor cable length affects the size of the reflected wave on the motor end. For motor distances greater than 100feet, the VTF series dV/dT filter is recommended.

DURAPULSE GS20(X) AC Drives – Basic Wiring Diagram

Control Wiring Diagram: Full I/O

Note: Users MUST connect wiring according to the circuit diagram shown below. (Refer to user manual GS20-UMW for additional specific wiring information.)

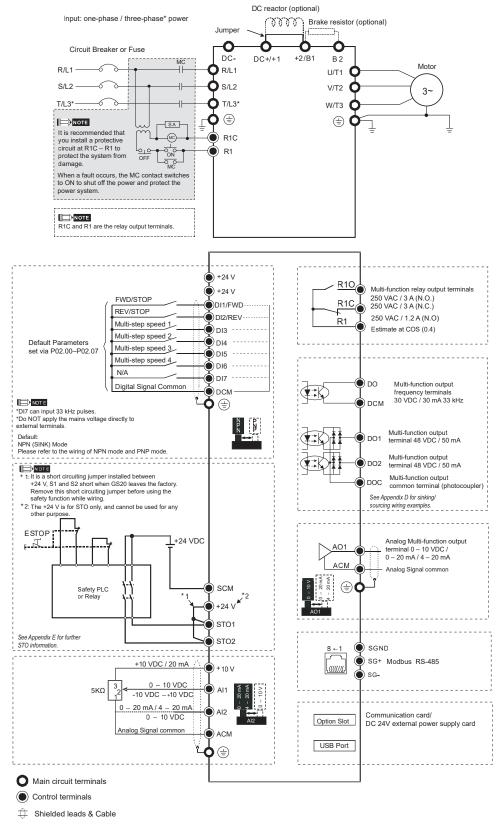

DURAPULSE GS20(X) AC Drives – Optional Accessories

Accessories Available for GS20(X) AC Drives

The table below lists types of accessories available for your GS20 or GS20X series drive. To see if your specific model can use a particular accessory, please click the reference link to go to the accessory page.


GS20()	X) AC Drives	Available S	oftware and Accessories
Accessory	GS20 Series Drives	GS20X Series Drives	Reference
GSoft 2 Drive Software	✓	✓	"GSoft2 Drive Configuration Software" on page tGSX-103
GSLogic PLC Software	✓	√	"GSLOGIC Drive Configuration Software" on page tGSX-104
Backup Power Supply	✓	✓	"GS20A-BPS" on page tGSX-59
Braking Resistors	✓	√	"GS10/GS20 Braking Resistors" on page tGSX-64
Capacitive Filter	✓	✓	"Capacitive Filter" on page tGSX-79
Communication Module	✓	✓	"GS20A-CM-ENETIP" on page tGSX-59
Conduit Boxes	✓		"GS20 Conduit Boxes" on page tGSX-67
DIN Rail Mounting (A–C frame only)	✓		"DIN Rail Mounting" on page tGSX-85
Disconnect Switch	✓ "GS20(X) Disconnect Switch" on page tGSX-78		"GS20(X) Disconnect Switch" on page tGSX-78
Earthing Plates		✓	"GS20X Earthing Plate" on page tGSX-78
EMC Filter	✓	√	"GS10/GS20 High Performance EMI Input Filters" on page tGSX-73
EMC Shield Plates	✓		"EMC Shield Plate" on page tGSX-79
EMI Filters	✓	✓	"GS10/GS20 High Performance EMI Input Filters" on page tGSX-73
Fuses/Circuit Breakers	✓	✓	"GS20X Fuses/Circuit Breakers" on page tGSX-76
Keypad Extension Cables	✓		"GS20 Keypad Extension Cables" on page tGSX-80
Line/Load Reactor/Voltage Time Filter	✓	√	"GS20(X) Line Reactors/Voltage Time Filters" on page tGSX-83
Mounting Adapter Plate (A–C frame only)	✓		"Mounting Adapter Plate" on page tGSX-86
Optional Advanced Keypad	✓	✓	"Advanced Keypad" on page tGSX-105
Replacement Fan Kit	✓	✓	"Cooling Fans for GSxx Series Drives (Spare/Replacement)" on page tGSX-87
Replacement Keypad	✓		"GS20(X) Replacement Keypad" on page tGSX-80
RF Filter	✓	✓	"RF Filter" on page tGSX-88

GS20(X) Optional Accessories – Expansion Cards

GS20(X) Optional Modules

The GS20A-BPS is a backup power supply option card that can be used to maintain functionality to your GS20 or GS20X drive when external power is unavailable. The GS20A-CM-ENETIP is a communication module that can be used to enable Modbus TCP and EtherNet/IP communication. Note that only one option module can be installed at a time. Please see the GS20(X) User Manual for additional information and installation instructions.

	GS20(X) DURAPUL	SE Drives I/O and Communication Cards		
Part Number	Price	Description	Features/Specifications	Placement*	GS Drive
<u>GS20A-BPS</u>	\$;04c6t:	DURAPULSE GS20(X) series Backup Power Supply Module	Provides external power supply and supports 24VDC input. Supports parameter read/write and drive status monitoring. When providing backup power, the following functions work normally: • Parameter reading and writing • Keypad display • Keys on the keyboard panel (except the RUN key) • Analog input with +10V terminal supply power • Multi-function inputs with +24V terminal or external power supply • Relay output • Pulse sequence frequency command • Testing RS485 communications	Slot 1	GS20(X) – all
<u>GS20A-CM-</u> <u>ENETIP</u>	\$;4c6f:	DURAPULSE GS20(X) series communication module, EtherNet/ IP and Modbus TCP	Features: Supports Modbus TCP and EtherNet/IP protocol 32/32 words read/write parameters correspondence User-defined corresponding parameters MDI/MDI-X auto-detect IP filter simple firewall function Specifications: RJ45 with Auto MDI/MDIX interface	Slot 1	GS20(X) – all
GS20A-CM-EIP2	\$5_zd:	DURApulse GS20 series communication module, EtherNet/ IP and Modbus TCP, 2 ports, (2) Ethernet (RJ45) port(s).	1 port (ENETIP) or 2 ports (EIP2) IEEE 802.3, IEEE 802.3u transmission method with Cat 5e shielding 100MHz cable at 10/100 Mbps Auto-detect transmission speed Network protocol: ICMP, IP, TCP, UDP, DHCP, HTTP, SMTP, Modbus over TCP/IP, EtherNet/IP, BOOTP Requires 15VDC provided by AC drive 500VDC insulation voltage 0.8 W power consumption 25g (ENETIP) or 30g (EIP2) weight	Slot 1	GS20(X) – all

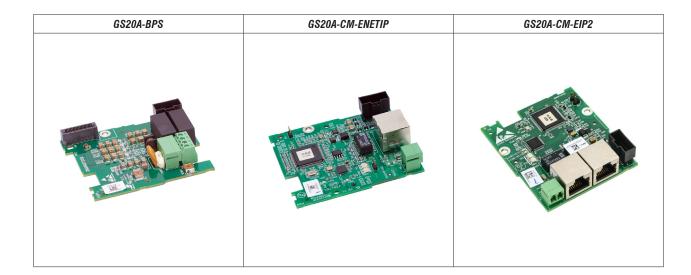

GS20(X) Series Optional Accessories - Braking

GS20(X) Braking Resistors

Use the table below to find the appropriate braking resistor model for your GS20(X) series AC drive. For more information and installation instructions, please see the GS20 User Manual. All listed resistors are available for purchase at www.automationdirect.com.

			·	GS20(X) AC	Drive Braking Com	nnn	ent Se	lection			
e)				city - Max Torque	Drive braking con			Torque @ 10%	Duty Cycle*		
Itag	<u> </u>	Motor	Бите Биже бара	ony - max rorque	Open Type B			Torque @ 10 %	NEMA1 Resistors	with Th	ermal Switch
No	Drive Model	Power	Min Resistor	Max Total Brake			Brake	Total Busine			
Drive Voltage	Model	(hp)	Value (Ω)	Current (A)	Part #	Qty.	Torque	Total Brake Current (A)	Part #	Qty.	Total Brake Current (A)
a	0004 4000	4/4	400.0		00 BB 00000		(kg•m)	` '	DD 414 0 4014000		, ,
1201	GS21-10P2	1/4	190.0	2	<u>GS-BR-080W750</u>	1	0.1	0.5	BR-N1-240W200	1	2.0
12	GS21-10P5 GS21-11P0	1/2	95.0 63.3	6	GS-BR-080W200	1	0.3	1.9	BR-N1-240W150	1	2.6
	GS21-20P2	1/4	190.0	2	GS-BR-080W750	1	0.3	0.5	BR-N1-240W200	1	2.0
	GS21-20P5	1/2	95.0	4		1	0.1			1	
	GS21-21P0	1	63.3	6	<u>GS-BR-080W200</u>	1	0.5	1.9	BR-N1-240W150	1	2.6
	GS21-22P0	2	47.5	8	GS-BR-200W091	1	1	4.2	BB 44 0004/50	1	7.0
	GS21-23P0	3	38.0	10	GS-BR-300W070	1	1.5	5.4	<u>BR-N1-280W50</u>	1	7.8
	GS23-20P2	1/4	190.0	2	<u>GS-BR-080W750</u>	1	0.1	0.5	BR-N1-240W200	1	2.0
	<u>GS23-20P5</u>	1/2	95.0	4	GS-BR-080W200	1	0.3	1.9	BR-N1-240W150	1	2.6
2301/	GS23-21P0	1	63.3	6		1	0.5		BIT 181 240W100	1	2.0
	GS23-22P0	2	47.5	8	GS-BR-200W091	1	1	4.2	BR-N1-280W50	1	7.8
	GS23-23P0	3	38.0	10	<u>GS-BR-300W070</u> <u>GS-BR-400W040</u>	1	1.5	5.4	BR-N1-800W25	1	45.6
	GS23-25P0 GS23-27P5	5 7 1/2	19.0 16.5	20	<u>uo-dn-400W040</u>	1	2.5 3.7	9.5	BR-N1-800W25	1	15.6 21.7
	GS23-2010	10	14.6	26	<u>GS-BR-1K0W020</u>	1	5.1	19	BR-N1-1K1W15P0	1	26.0
	GS23-2015	15	12.6	29	GS-BR-1K5W013	1	7.4	29	BR-N1-1K5W14P0	1	27.9
	GS23-2020	20	8.3	46	GS-BR-1K0W4P3 (x2 series)	2	10.2	44	BR-N1-2K2W08P6	1	45.3
	GS23-40P5	1/2	380.0	2		1	0.3	1	BR-N1-250W400	1	2.0
	GS23-41P0	1	190.0	4	<u>GS-BR-080W750</u>	1	0.5	1	BR-N1-240W200	1	3.9
	GS23-42P0	2	126.7	6	<u>GS-BR-200W360</u>	1	1	2.1	BR-N1-240W150	1	5.2
	<u>GS23-43P0</u>	3	108.6	7	<u>GS-BR-300W250</u>	1	1.5	3	BR-N1-500W200	1	3.9
>	<u>GS23-45P0</u>	5	84.4	9	<u>GS-BR-400W150</u>	1	2.5	5.1	BR-N1-500W130	1	6.0
460V	GS23-47P5	7 1/2	50.7	15	GS-BR-1K0W075	1	3.7	10.2	BR-N1-720W85	1	9.2
	GS23-4010 GS23-4015	10 15	40.0 33.0	19	GS-BR-1K5W043	1	5.1 7.4	17.6	BR-N1-1K2W50 BR-N1-1K5W40	1	15.6 19.5
	GS23-4010 GS23-4020	20	26.2	29	GS-BR-1KOW016(x2 series)	2	10.2	17.0	BR-N1-1K7W30	1	26.0
	GS23-4025	25	26.2	29	GS-BR-1KOW016 (x2 series)	2	12.2	24	BR-N1-2K3W26	1	30.0
	GS23-4030	30	23.0	33	GS-BR-1K5W013 (x2 series)	2	14.9	29	BR-N1-2K8W25	1	31.2
	GS23-51P0	1	280.0	4	GS-BR-080W750	1	0.5	1.2	BR-N1-250W400	1	2.8
	GS23-52P0	2	186.7	6	GS-BR-200W360	1	1	2.6	BR-N1-240W200	1	5.6
5751/	GS23-53P0	3	160.0	7	<u>GS-BR-300W400</u>	1	1.5	2.3	BR-N1-500W200	1	5.0
57	GS23-55P0	5	93.3	12	<u>GS-BR-500W100</u>	1	2.5	9.2	BR-N1-500W130	1	8.6
	<u>GS23-57P5</u>	7 1/2	80.0	14	<u>GS-BR-750W140</u>	1	3.7	6.6	BR-N1-720W85	1	13.2
	GS23-5010	10	70.0	16	<u>GS-BR-1K0W075</u>	1	5.1	12.3	<u>BR-N1-1K2W75</u>	1	14.9
	GS21X-20P5	1/2	95.0	4	GS-BR-080W200	1	0.3	1.9	BR-N1-240W150	1	2.6
	GS21X-21P0 GS21X-22P0	2	63.3 47.5	8	GS-BR-200W091	1	0.5	4.2		1	
>	GS21X-23P0	3	38.0	10	GS-BR-300W070	1	1.5	5.4	BR-N1-280W50	1	7.8
23(GS23X-20P5	1/2	190.0	2	<u>uo bii occirore</u>	1	0.1	0.5	BR-N1-240W200	1	2.0
GS20X - 230V	GS23X-21P0	1	95.0	4	<u>GS-BR-080W200</u>	1	0.3			1	
322	GS23X-22P0	2	63.3	6	GS-BR-200W091	1	0.5	1.9	BR-N1-240W150	1	2.6
ا ت	GS23X-23P0	3	47.5	8	GS-BR-300W070	1	1	4.2	BB #4 000000	1	7.0
	GS23X-25P0	5	38.0	10	GS-BR-400W040	1	1.5	5.4	<u>BR-N1-280W50</u>	1	7.8
	GS23X-27P5	7 1/2	19.0	20	GS-BR-1K0W020	1	2.5	9.5	BR-N1-800W25	1	15.6
	GS23X-40P5	1/2	380.0	2	GS-BR-080W750	1	0.3	1	BR-N1-800W18P0	1	21.7
6	GS23X-41P0	1	190.0	4	<u>uo-pn-uouW/3U</u>	1	0.5		BR-N1-240W200	1	3.9
46	GS23X-42P0	2	126.7	6	GS-BR-200W360	1	1	2.1	BR-N1-240W150	1	5.2
GS20X - 460V	<u>GS23X-43P0</u>	3	108.6	7	<u>GS-BR-300W250</u>	1	1.5	3	BR-N1-500W200	1	3.9
3.82	GS23X-45P0	5	84.4	9	<u>GS-BR-400W150</u>	1	2.5	5.1	BR-N1-500W130	1	6.0
9	GS23X-47P5	7 1/2	50.7	15	GS-BR-1K0W075	1	3.7	10.2	BR-N1-720W85	1	9.2
* 400/ 5	GS23X-4010	10	40.0	19		1	5.1		<u>BR-N1-1K2W50</u>	1	15.6
10% L	uty Gycle with h	ııaxIIIIUM) (ON (braking) time for 1	v seconds.					AC Deiter		

GS20(X) Optional Accessories – EMC Filter & Zero Phase Reactor

GS20(X) Standard Footprint EMC Filter and Zero Phase Reactor

If electromagnetic noise is harmful to your manufacturing environment, we recommend that you select an EMC filter as shown below. For some motor drive models, you need to work with zero phase reactors to be compliant with EMC regulations. Refer to the table and figure below for the recommended model, setting method, and maximum motor cable length of the EMC filter and zero phase reactor. The footprint filter allows mounting of the drive on top of the recommended filter, saving panel space and wiring. For more information and installation instructions, please see the GS20(X) User Manual.

							Condu	cted E	mission		Radiate missio	
Frame	Drive Model	Input Current (A)	Footprint Filter Model #	Price	Recommended Zero Phase Reactor	le	motor c	m	C2-motor cable length-	C2-len	motor o	cable 00m
									stall a Zero Ph			_
	0004 4000	0.0	ENERGA ANADA A	Φ4-C0		1	2	3	n/a	1	2	3
	GS21-10P2	6.8	EMF11AM21A	\$4c62:			,	,	N/A		,	Η,
	GS21-20P2	3.8	EMF11AM21A	\$4c62:			√	√	N/A		√	√
	<u>GS21-20P5</u>	6.7	EMF11AM21A	\$4c62:			√	√	N/A		√	\
	GS23-20P2	2.2	EMF10AM23A	\$4c61:			√	√	N/A		√	\
Α	GS23-20P5				√	√	N/A		√	√		
	GS23-21P0	6	EMF10AM23A	\$4c61:			√	√	N/A		√	√
	GS23-40P5	2.5	EMF6A0M43A	\$4c68:			-	√	N/A		-	\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \
	GS23-41P0	4.2	EMF6A0M43A	\$4c68:			-	√	N/A		-	√
	GS23-51P0	2.4	EMF6A0M63B	\$04c69:					N/A*			+
	GS21-10P5	10.1 8.3	EMF11AM21A	\$4c62:			√	√	N/A N/A		√	
	GS21X-20P5		EMF11AM21A	· ·				_			_	\
	GS21X-21P0	11.3	EMF11AM21A	\$4c62:			√	√	N/A		√	\
	GS21X-22P0	18.5	EMF27AM21B	\$04c66:			,	√	N/A		,	√
	GS23X-20P5	3.8	EMF10AM23A	\$4c61:			√	√	N/A		√	√
GS20XA	<u>GS23X-21P0</u>	6	EMF10AM23A	\$4c61:			√	√	N/A		√	√
	GS23X-22P0	9.6	EMF10AM23A	\$4c61:			✓	√	N/A		✓	√
	<u>GS23X-40P5</u>	2.5	EMF6A0M43A	\$4c68:				√	N/A			√
	<u>GS23X-41P0</u>	4.2	EMF6A0M43A	\$4c68:				√	N/A			√
	GS23X-42P0	6.4	EMF6A0M43A	\$4c68:				√	N/A			√
	<u>GS23X-43P0</u>	7.2	EMF12AM43B	\$04c63:	RF008X00A				N/A			⊢,
	<u>GS21-21P0</u>	10.5	EMF11AM21A	\$4c62:			√	√	N/A		√	√
В	<u>GS23-22P0</u>	9.6	EMF10AM23A	\$4c61:			√	✓	N/A		✓	√
	<u>GS23-52P0</u>	4.2	EMF6A0M63B	\$04c69:				,	N/A*			Η.
	GS23-42P0	6.4	EMF6A0M43A	\$4c68:				√	N/A			√
	<u>GS21X-23P0</u>	27.5	EMF27AM21B	\$04c66:				√	N/A			√
GS20X B	<u>GS23X-23P0</u>	15	EMF24AM23B	\$04c65:			√	√	N/A		√	√
	<u>GS23X-25P0</u>	23.4	EMF24AM23B	\$04c65:			√	√	N/A		√	√
	<u>GS23X-45P0</u>	11.6	EMF12AM43B	\$04c63:			√	✓	N/A		✓	√
	<u>GS21-11P0</u>	20.6	EMF27AM21B	\$04c66:					N/A			₽.
	<u>GS21-22P0</u>	17.9	EMF27AM21B	\$04c66:				√	N/A			√
	<u>GS21-23P0</u>	26.3	EMF27AM21B	\$04c66:				√	N/A		_	√
	<u>GS23-23P0</u>	15	EMF24AM23B	\$04c65:			√	√	N/A		√	√
С	<u>GS23-25P0</u>	23.4	EMF24AM23B	\$04c65:			✓	✓	N/A		√	√
	<u>GS23-43P0</u>	7.2	EMF12AM43B	\$04c63:					N/A			1
	<u>GS23-53P0</u>	5.8	EMF16AM63B	\$04c6a:			_		N/A*		-	-
	<u>GS23-55P0</u>	9.3	EMF16AM63B	\$04c6a:	-		_	_	N/A			-
	<u>GS23-45P0</u>	11.6	EMF12AM43B	\$04c63:			√	✓	N/A		√	✓
	<u>GS23X-27P5</u>	32.4	EMF33AM23B	\$04c67:		√	√		N/A	√	√	_
SS20X C	<u>GS23X-47P5</u>	17.3	EMF23AM43B	\$04c64:		√	√	√	N/A	√	√	√
222011 0	GS23X-4010	22.6	EMF23AM43B	\$04c64:		✓	✓	✓	N/A	✓	✓	✓


GS20(X) Optional Accessories – EMC Filter & Zero Phase Reactor

GS20(X) Standard Footprint EMC Filter and Zero Phase Reactor, continued

GS20(X) EMC Filter and Zero Phase Reactor (continued)											
						Condu	cted E	mission	Radiated Emission		
Drive Model	Input Current (A)	Footprint Filter Model #	Price	Recommended Zero Phase Reactor				C2-motor cable length-	_		
						Position to Ins		istall a Zero Ph	ase R	eactor	
					1	2	3	n/a	1	2	3
GS23-27P5	32.4	EMF33AM23B	\$04c67:		✓	✓		N/A	✓	✓	
GS23-47P5	17.3	EMF23AM43B	\$04c64:		✓	✓	✓	N/A	✓	✓	✓
GS23-57P5	13.4	EMF16AM63B	\$04c6a:					N/A			
GS23-5010	17.5	EMF16AM63B	\$04c6a:					N/A			
GS23-4010	22.6	EMF23AM43B	\$04c64:		√	√	√	N/A	✓	√	√
GS23-2010	43.2	n/a	-	BE000Y004		√	√	N/A		√	√
GS23-2015	61.2	n/a	-	RF008X00A		√	√	N/A		√	√
GS23-4015	30.8	n/a	-					N/A			
GS23-4020	39.6	n/a	-			√	✓	N/A		✓	√
GS23-2020	82.8	n/a	-	1		√	√	N/A		√	√
GS23-4025	45.7	n/a	-	1		√	√	N/A		√	√
GS23-4030	53.9	n/a	-			√	√	N/A		√	√
	Drive Model 8523-27P5 8523-47P5 8523-57P5 8523-5010 8523-2010 8523-2015 8523-4015 8523-4020 8523-2020 8523-4025 8523-4030	Drive Model Current (A) 32.4 3523-27P5 32.4 3523-47P5 17.3 3523-57P5 13.4 3523-5010 17.5 3523-4010 22.6 3523-2010 43.2 3523-2015 61.2 3523-4015 30.8 3523-4020 39.6 3523-2020 82.8 3523-4025 45.7 3523-4030 53.9	Input Current (A) Footprint Filter Model #	Drive Model	Drive Model	Drive Model	Drive Model	Drive Model	Drive Model	Drive Model	Drive Model


Note: It is not necessary to add a zero phase reactor for passing the C2 conducted emission test.

EMF Series Filter Dimensions

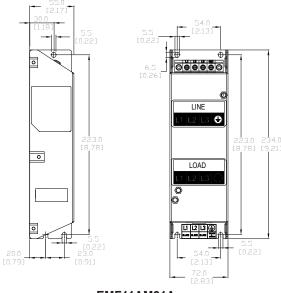

EMF11AM21A EMF10AM23A EMF6A0M43A

(Units = mm [in])

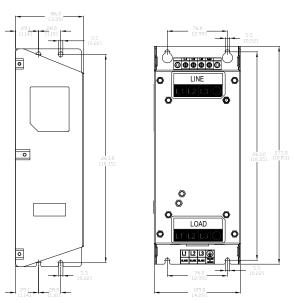

EMF27AM21B; EMF24AM23B EMF33AM23B; EMF12AM43B EMF23AM43B; EMF6A0M63B; EMF16AM63B

^{*} The maximum motor cable length of the conducted emission C2 class for GS23-51P0, GS23-52P0, and GS23-53P0 is 75 meters. All others are 100 meters.

^{**} See diagram below for installation positions.

GS10/GS20 Series Optional Accessories – EMI Input Filters

GS10/GS20 High Performance EMI Input Filters

High performance EMI filters may improve drive performance for certain applications. Use the table below to select the correct filter for your drive. For additional information and installation instructions, please see your GSx series User Manual.

			EMI Filters Selection					
	odel	Description	EMI Filter*					
GS10 Drives	GS20(X) Drives	-	Roxburgh Filters Chassis 1ph	Roxburgh Filters C2 Rated				
GS11N-10P2	GS21-10P2	120V 1ph 0.25 hp	<u>RES90F10</u>	<u>MIF10</u>				
GS11N-10P5	GS21-10P5	120V 1ph 0.5 hp	<u>RES90F16</u>	<u>MIF16</u>				
<u>GS11N-11P0</u>	<u>GS21-11P0</u>	120V 1ph 1.0 hp	<u>RES90S30</u>	<u>MIF23</u>				
GS11N-20P2	GS21-20P2	230V 1ph 0.25 hp	<u>RES90F06</u>	<u>MIF06</u>				
GS11N-20P5	<u>GS21-20P5</u>	230V 1ph 0.5 hp	<u>RES90F10</u>	<u>MIF10</u>				
GS11N-21P0	GS21-21P0	230V 1ph 1.0 hp	<u>RES90F16</u>	<u>MIF16</u>				
<u>GS11N-22P0</u>	<u>GS21-22P0</u>	230V 1ph 2.0 hp	<u>RES90S20</u>	<u>MIF23</u>				
<u>GS11N-23P0</u>	<u>GS21-23P0</u>	230V 1ph 3.0 hp	<u>RES90S30</u>	<u>MIF330B</u>				
GS13N-20P2	GS23-20P2	230V 3ph 0.25 hp	-	<u>KMF306A</u>				
<u> 3S13N-20P5</u>	GS23-20P5	230V 3ph 0.5 hp	-	<u>KMF306A</u>				
GS13N-21P0	GS23-21P0	230V 3ph 1.0 hp	-	<u>KMF306A</u>				
GS13N-22P0	GS23-22P0	230V 3ph 2.0 hp	-	<u>KMF318A</u>				
GS13N-23P0	GS23-23P0	230V 3ph 3.0 hp	-	<u>KMF318A</u>				
GS13N-25P0	GS23-25P0	230V 3ph 5.0 hp	-	KMF325A				
GS13N-27P5	GS23-27P5	230V 3ph 7.5 hp	-	KMF336A				
	GS23-2010	230V 3ph 10hp	-	KMF350A				
ı/a	GS23-2015	230V 3ph 15hp	-	KMF370A				
	GS23-2020	230V 3ph 20hp	-	KMF3100A				
GS13N-40P5	GS23-40P5	460V 3ph 0.5 hp	-	KMF306A				
GS13N-41P0	GS23-41P0	460V 3ph 1.0 hp	-	KMF306A				
GS13N-42P0	GS23-42P0	460V 3ph 2.0 hp	_	KMF306A				
GS13N-43P0	GS23-43P0	460V 3ph 3.0 hp	-	KMF310A				
GS13N-45P0	GS23-45P0	460V 3ph 5.0 hp	-	KMF318A				
GS13N-47P5	GS23-47P5	460V 3ph 7.5 hp	-	KMF318A				
GS13N-4010	GS23-4010	460V 3ph 10hp	-	KMF325A				
<u> </u>	GS23-4015	460V 3ph 15hp	-	KMF336A				
	GS23-4020	460V 3ph 15hp	-	KMF350A				
	GS23-4025	460V 3ph 25hp		<u>KMF350A</u>				
	GS23-4030	460V 3ph 30hp	-	KMF370A				
	GS23-51P0	575V 3ph 1.0 hp		<u>KMF306V</u>				
	GS23-52P0	575V 3ph 2.0 hp	-	KMF306V				
		· · · · ·						
	<u>GS23-53P0</u>	575V 3ph 3.0 hp	-	<u>KMF306V</u>				
	<u>GS23-55P0</u>	575V 3ph 5.0 hp	-	KMF310V				
	<u>GS23-57P5</u>	575V 3ph 7.5 hp	-	KMF318V				
	<u>GS23-5010</u>	575V 3ph 10hp	-	<u>KMF318V</u>				
	<u>GS21X-20P5</u>	230V 1ph 0.5 hp	<u>RES90F10</u>	<u>MIF10</u>				
	<u>GS21X-21P0</u>	230V 1ph 1.0 hp	<u>RES90F16</u>	<u>MIF16</u>				
,	<u>GS21X-22P0</u>	230V 1ph 2.0 hp	<u>RES90S20</u>	<u>MIF23</u>				
ı/a	<u>GS21X-23P0</u>	230V 1ph 3.0 hp	<u>RES90S30</u>	<u>MIF330B</u>				
	GS23X-20P5	230V 3ph 0.5 hp	-	<u>KMF306A</u>				
	<u>GS23X-21P0</u>	230V 3ph 1.0 hp	-	<u>KMF306A</u>				
	GS23X-22P0	230V 3ph 2.0 hp	-	<u>KMF310A</u>				
	GS23X-23P0	230V 3ph 3.0 hp	-	<u>KMF318A</u>				
	<u>GS23X-25P0</u>	230V 3ph 5.0 hp	-	<u>KMF325A</u>				
	<u>GS23X-27P5</u>	230V 3ph 7.5 hp	-	<u>KMF336A</u>				
	<u>GS23X-40P5</u>	460V 3ph 0.5 hp	-	<u>KMF306A</u>				
	GS23X-41P0	460V 3ph 1.0 hp	-	<u>KMF306A</u>				
	GS23X-42P0	460V 3ph 2.0 hp	-	<u>KMF306A</u>				
	GS23X-43P0	460V 3ph 3.0 hp	-	<u>KMF310A</u>				
	GS23X-45P0	460V 3ph 5.0 hp	-	<u>KMF318A</u>				
	GS23X-47P5	460V 3ph 7.5 hp	-	<u>KMF318A</u>				
	GS23X-4010	460V 3ph 10hp	_	KMF325A				

GS20(X) Optional Accessories – Fuses/Circuit Breakers

GS20X Fuses/Circuit Breakers

Protection devices are essential to prevent damage to your GS20(X) drive and application equipment. Please use the fuse specification chart below to select fuses that are applicable to your GS20(X) drive. Only use UL-certified fuses which comply with your local regulations.

		Fu	ise S	pecification C	hart GS2		ULSE Drives		
				put Power		Input Fuse			Circuit Breaker
Drive Model	HP	Ø	Volts	GS20(X) Input Amps	Fuse Amps	Fast Acting Class T	Edison Class J*	Size	Molded Case CB
GS21-10P2	1/4	1	120	6.8	10	TJN10	JHL10	20	G3P-020
GS21-10P5	1/2	1	120	10.1	10	TJN10	JHL10	25	G3P-025
GS21-11P0	1	1	120	20.6	25	TJN25	JHL25	50	G3P-050
GS21-20P2	1/4	1	230	5.8	10	TJN10	JHL10	15	G3P-015
GS21-20P5	1/2	1	230	8.3	15	TJN15	JHL15	20	G3P-020
GS21-21P0	1	1	230	11.3	20	TJN20	JHL20	30	G3P-030
GS21-22P0	2	1	230	18.5	35	TJN35	JHL35	45	G3P-040
GS21-23P0	3	1	230	27.5	50	TJN50	JHL50	70	G3P-070
GS23-20P2	1/4	3	230	2.2	10	TJN10	JHL10	15	G3P-015
GS23-20P5	1/2	3	230	3.8	15	TJN15	JHL15	15	G3P-015
GS23-21P0	1	3	230	6	20	<u>TJN20</u>	JHL20	15	G3P-015
GS23-22P0	2	3	230	9.6	35	TJN35	JHL35	25	G3P-025
GS23-23P0	3	3	230	15	50	TJN50	JHL50	40	G3P-040
GS23-25P0	5	3	230	23.4	80	TJN80	JHL80	60	G3P-060
GS23-27P5	7 1/2	3	230	32.4	60	TJN60	JHL60	63	G3P-060
GS23-2010	10	3	230	43.2	80	TJN80	JHL80	90	G3P-090
GS23-2015	15	3	230	61.2	110	TJN110	JHL110	125	F3P-125
GS23-2019 GS23-2020	20	3	230	82.8	150	TJN150	JHL150	160	BW250JAGU-3P160S
		-							
<u>GS23-40P5</u>	1/2	3	460	2	10	TJS10	JHL10	15	G3P-015
GS23-41P0	1	-	460	3.3	15	TJS15	JHL15	15	G3P-015
GS23-42P0	2	3	460	5.1	20	TJS20	JHL20	15	G3P-015
<u>GS23-43P0</u>	3	3	460	7.2	25	TJS25	JHL25	20	G3P-020
GS23-45P0	5	3	460	11.6	45	TJS45	JHL45	30	<u>G3P-030</u>
<u>GS23-47P5</u>	7 1/2	3	460	17.3	35	TJS35	JHL35	32	<u>G3P-030</u>
<u>GS23-4010</u>	10	3	460	22.6	45	TJS45	JHL45	45	<u>G3P-040</u>
GS23-4015	15	3	460	30.8	60	TJS60	JHL60	60	<u>G3P-060</u>
GS23-4020	20	3	460	39.6	80	TJS80	JHL80	80	G3P-080
GS23-4025	25	3	460	45.7	90	TJS90	JHL90	90	G3P-090
GS23-4030	30	3	460	53.9	110	<u>TJS110</u>	JHL110	100	G3P-100
<u>GS23-51P0</u>	1	3	575	2.4	6	TJS6	JHL6	6	n/a
GS23-52P0	2	3	575	4.2	10	<u>TJS10</u>	JHL10	10	n/a
GS23-53P0	3	3	575	5.8	10	<u>TJS10</u>	JHL10	15	BW125JAGU-3P015S
<u>GS23-55P0</u>	5	3	575	9.3	20	TJS20	JHL20	30	BW125JAGU-3P030S
<u>GS23-57P5</u>	7 1/2	3	575	13.4	25	<u>TJS25</u>	<u>JHL25</u>	30	BW125JAGU-3P030S
<u>GS23-5010</u>	10	3	575	17.5	30	<u>TJS30</u>	JHL30	30	BW125JAGU-3P030S
GS21X-20P5	1/2	1	230	8.3	15	<u>TJN15</u>	JHL15	16	G3P-015
GS21X-21P0	1	1	230	11.3	20	<u>TJN20</u>	JHL20	25	G3P-025
GS21X-22P0	2	1	230	18.5	35	TJN35	JHL35	45	G3P-040
GS21X-23P0	3	1	230	27.5	50	TJN50	JHL50	63	G3P-060
GS23X-20P5	1/2	3	230	3.8	15	TJN15	JHL15	10	FAZ-C10-3-NA
GS23X-21P0	1	3	230	6	20	TJN20	JHL20	15	G3P-015
GS23X-22P0	2	3	230	9.6	35	TJN35	JHL35	25	G3P-025
GS23X-23P0	3	3	230	15	50	TJN50	JHL50	40	G3P-040
GS23X-25P0	5	3	230	23.4	80	TJN80	JHL80	60	G3P-060
GS23X-27P5	7 1/2	3	230	32.4	60	TJN60	JHL60	63	G3P-060
GS23X-40P5	1/2	3	460	2.5	10	TJS10	JHL10	6	FAZ-C5-3-NA
GS23X-41P0	1	3	460	4.2	15	TJS15	JHL15	10	FAZ-C10-3-NA
GS23X-42P0	2	3	460	6.4	20	TJS20	JHL20	16	G3P-015
GS23X-43P0	3	3	460	7.2	25	TJS25	JHL25	16	G3P-015
GS23X-45P0	5	3	460	11.6	35	TJS35	JHL35	30	G3P-030
GS23X-47P5	7 1/2	3	460	17.3	35	TJS35	JHL35	30	G3P-030
404UN 7/1U	1 1/2		700	17.0	00	10000	JI ILJJ	00	001 -000

^{*} High-speed Class J.


Note: JHL fuses can be used with GS and DURAPULSE drives in non-UL applications. Fuse the drive according to NEC guidelines (NEC Article 430). For UL applications, GS, and DURAPULSE drives require Class T fuses (refer to the drive's user manual for details).

GS20(X) Series Optional Accessories – General

GS20(X) Disconnect Switch

The GS20XA-DSx series disconnect switch provides a local on/off disconnect switch that is easily mounted to the GS20(X) drive. This accessory provides an easy, quick, single hasp lockout point to isolate power to the drive. For more information and installation instructions, see the GS20(X) User Manual.


(GS20X Disconnect Switch Selection								
Frame	Part Number	Deina	Dimensions (mm [in])						
Fraille	rait Nullibei	Price	Α	В	С	D			
А	GS20XA-DSA	\$04c6c:	154.5 [6.08]	145.0 [5.71]	145.2 [5.72]	2x Ø 25.0 [Ø 0.98]			
В	GS20XA-DSB	\$04c6d:	164.5	165.0	152.5	2x Ø 32.4			
С	GS20XA-DSC	\$04c6e:	[6.48]	[6.50]	[6.01]	[Ø 1.28]			

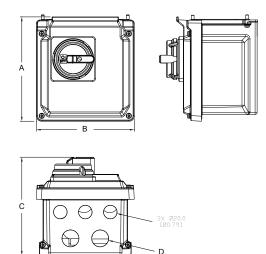

GS20X Earthing Plate

Earthing plates are available for use with shielded cable and your GS20X drive. For GS20 drives, please use EMC shield plates. Each earthing plate is compatible with all GS20X drives of that frame size. For more information and installation instructions, see the GS20(X) User Manual.

	Earthing Plate Selection							
Drive Series	Frame	Earthing Plate Model	Price					
GS20X	Α	GS20XA-EPA	\$4cou:					
GS20X	В	GS20XA-EPB	\$4cov:					
GS20X	С	GS20XA-EPC	\$4cox:					

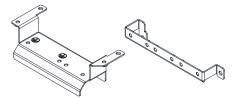

Example Earthing Plate - GS20XA-EPA


DuraPulse Optional Accessories – General

EMC Shield Plate

EMC Shield Plates are available for use with shielded cable and your GS10/GS20/GS30 drive. For GS20X drives, please use Earthing Plates. Each shield plate is compatible with all GS10, GS20, and GS30 drives of that frame size. For more information and installation instructions, see your GSxx series User Manual.

EN	EMC Shield Plate Selection							
Drive Series	Frame	EMC Shield Plate Model	Price					
GS10/20/30	Α	GS20A-ESP-A	\$4c6h:					
GS10/20/30	В	GS20A-ESP-B	\$-4c6i:					
GS10/20/30	С	GS20A-ESP-C	\$-4c6j:					
GS10/20/30	D	GS20A-ESP-D	\$4c6k:					
GS20/30	Е	GS20A-ESP-E	\$-4c6l:					
GS20/30	F	GS20A-ESP-F	\$4c6n:					
GS30	G	GS30A-ESP-G	\$5_yz:					
GS30	Н	GS30A-ESP-H	\$;5_y]:					
GS30	I	GS30A-ESP-I	\$;5_y[:					

EMC Shield Plate Dimensions							
Model	Dimensions						
Model	а	b					
GS20A-ESP-A	69.3 [2.73]	80.0 [3.15]					
GS20A-ESP-B	67.7 [2.67]	79.7 [3.14]					
GS20A-ESP-C	78.0 [3.07]	91.0 [3.58]					
GS20A-ESP-D	103.4 [4.07]	97.0 [3.82]					
GS20A-ESP-E	124.3 [4.89]	77.4 [3.05]					
GS20A-ESP-F	168.0 [6.61]	80.0 [3.15]					
GS30A-ESP-G	243.5 [9.59]	154.9 [6.10]					
GS30A-ESP-H	262.0 [10.31]	201.9 [7.95]					
GS30A-ESP-I	304.0 [11.97]	260.7 [10.26]					

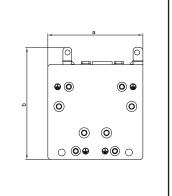


Capacitive Filter

The GS20A-CAPF capacitive filter supports basic filtering and noise interference reduction for all GS10, GS20(X), and G30 models, 460V and below. For more information and installation instructions, please see your GSxx series User Manual

The GS20A-CAPF cannot be used with 575V models.

	Capacitive Filter							
Drive Series	Model	Price	Applicable Voltage	Temperature Range	Capacitance			
GS10/ GS20(X)/ GS30	GS20A-CAPF	\$4c6b:	110–480 VAC	-40-85°C	Cx: 1uF ± 20% Cy: 0.1uF ± 20%			

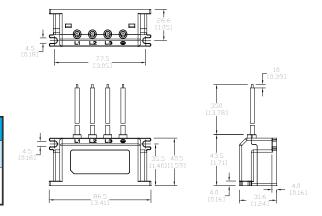


GS20(X) Optional Accessories - Keypad


GS20(X) Replacement Keypad

The GS20A-KPD can be used to replace the keypad that comes with each GS20 drive. The replacement keypad can be plugged directly into the drive (no screws needed) or mounted remotely using M3 screws and a keypad extension cable.


GS20-KPD Replacement Keypad					
Price	Part	Screw	Torque		
\$4c6g:	GS20A-KPD	М3	8–9 kg·cm (6.947.81 lb-in.) [0.78–0.88 N·m]		



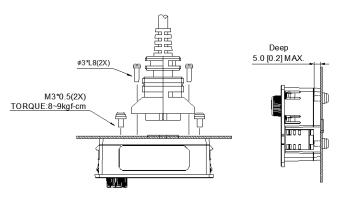

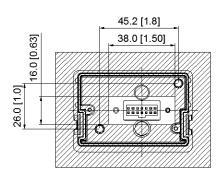

Direct Mounting on Plate

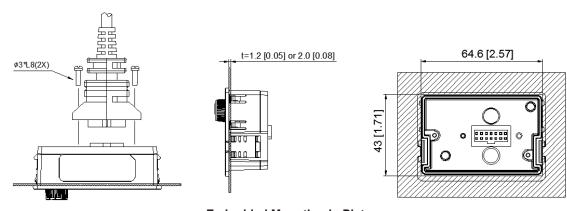

Embedded Mounting in Plate

GS20 Keypad Extension Cables

The default GS20 keypad is removable and can be remote installed if desired. Use one of the cables below to connect the remotely installed keypad back to the GS20 drive.

GS20 Keypad Compatible Extension Cables				
Price	Cable	Length (m [ft])		
\$04yo:	GS-CBL2-1L	1 [3.28]		
\$04yp:	GS-CBL2-3L	3 [9.84]		
\$04yq:	GS-CBL2-5L	5 [16.4]		

GS20(X) Optional Accessories – Line Reactors/VTF Filters

GS20(X) Line Reactors/Voltage Time Filters

Installing an AC Line Reactor on the input side of an AC motor drive can increase line impedance, improve the power factor, reduce input current, increase system capacity, and reduce interference generated from the motor drive.

Installing a load reactor or voltage time filter on the drive's output side can increase the high-frequency impedance to reduce the dV/dT and terminal voltage to protect the motor. Use output filters if the motor cable length exceeds 100ft.

		<u> </u>		•	DC Reactor Se	elections
	CT Input Amps (rms)	Saturation Amps (rms)	Motor HP		Load Reactor (LR2)*	AC Output Filter (VTF)*
GS21-10P2	1.6	3.2	1/4	LR2-10P2-1PH-A	LR2-20P2	VTF-46-DE
GS21-10P5	2.5	5	1/2	LR2-10P5-1PH-A	LR2-20P5	VTF-246-CFG**
GS21-11P0	5	9.6	1	LR2-11P5-1PH	LR2-21P0	VTF-24-FH**
GS21-20P2	1.6	3.2	1/4	LR2-20P5-1PH	LR2-20P2	VTF-46-DE
GS21-20P5	2.8	5.6	1/2	LR2-20P5-1PH	LR2-20P5	VTF-246-CFG**
GS21-21P0	4.8	9.6	1	LR2-23P0	LR2-21P0	VTF-24-FH**
GS21-22P0	7.5	15	2	LR2-22P0-1PH	LR2-22P0	VTF-246-HKL**
GS21-23P0	11	22	3	LR-27P5	LR-25P0	VTF-24-JL
GS23-20P2	1.6	3.2	1/4	LR2-20P2	LR2-20P2	VTF-46-DE
GS23-20P5	2.8	5.6	1/2	LR2-20P5	LR2-20P5	VTF-246-DGH
GS23-21P0	4.8	9.6	1	LR2-20P7	LR2-20P7	<u>VTF-24-FH</u> **
GS23-22P0	7.5	15	2	LR2-22P0	LR2-22P0	VTF-246-HKL**
GS23-23P0	11	22	3	LR-25P0	LR-25P0	VTF-24-JL
GS23-25P0	17	34	5	LR-27P5	LR-25P0	<u>VTF-46-LM</u> **
GS23-27P5	25	50	7 1/2	LR-2010	LR-2010	VTF-46-NP**
GS23-2010	33	66	10	LR-2015	LR-2010	VTF-246-LPQ**
GS23-2015	46	92	15	LR-2020	LR-2020	VTF-246-NRS**
GS23-2020	65	130	20	LR-2025	LR-2025	VTF-246-PSU**
GS23-40P5	1.5	3	1/2	LR2-40P5	LR2-40P5	VTF-46-DE
GS23-41P0	2.7	5.4	1	LR2-41P0	LR2-41P0	VTF-246-CFG**
GS23-42P0	4.2	8.4	2	LR2-43P0	LR2-42P0	<u>VTF-24-FH</u> **
GS23-43P0	5.5	11	3	LR2-45P0	LR2-43P0	<u>VTF-24-FH</u> **
GS23-45P0	9	18	5	LR2-47P5	LR2-45P0	VTF-246-HKL**
<u>GS23-47P5</u>	13	26	7 1/2	<u>LR2-4010</u>	<u>LR2-47P5</u>	VTF-24-JL
<u>GS23-4010</u>	17	34	10	<u>LR-4015</u>	LR2-4010	VTF-24-JL
GS23-4015	25	50	15	<u>LR-4015</u>	<u>LR-4015</u>	VTF-246-LPQ**
GS23-4020	32	64	20	<u>LR-4020</u>	<u>LR-4020</u>	VTF-246-LPQ**
GS23-4025	38	76	25	<u>LR-4025</u>	<u>LR-4025</u>	VTF-246-MQR**
GS23-4030	45	90	30	<u>LR-4030</u>	<u>LR-4030</u>	<u>VTF-246-NRS</u> **
<u>GS23-51P0</u>	1.7	3.4	1	<u>LR2-51P0</u>	<u>LR2-51P0</u>	VTF-46-DE
GS23-52P0	3	6	2	LR2-52P0	LR2-52P0	VTF-246-CFG**
<u>GS23-53P0</u>	4.2	8.4	3	<u>LR2-53P0</u>	LR2-53P0	VTF-246-DGH
<u>GS23-55P0</u>	6.6	13.2	5	<u>LR2-55P0</u>	LR2-55P0	<u>VTF-246-GJJ</u> **
GS23-57P5	9.9	19.8	7 1/2	LR2-5010	LR2-57P5	<u>VTF-246-HKL</u> **
<u>GS23-5010</u>	12.2	24.4	10	<u>LR2-4010</u>	<u>LR2-5010</u>	<u>VTF-246-HKL</u> **
<u>GS21X-20P5</u>	2.8	5.6	1/2	<u>LR2-20P5-1PH</u>	<u>LR2-20P2</u>	VTF-246-DGH
<u>GS21X-21P0</u>	4.8	9.6	1	LR2-21P0-1PH-A	LR2-20P7	VTF-24-FH**
<u>GS21X-22P0</u>	7.5	15.0	2	LR2-22P0-1PH	LR2-22P0	VTF-246-HKL**
<u>GS21X-23P0</u>	11.0	22.0	3	<u>LR-27P5</u>	<u>LR-25P0</u>	VTF-24-JL
GS23X-20P5	2.8	5.6	1/2	LR2-20P2	LR2-20P2	VTF-246-DGH
GS23X-21P0	4.8	9.6	1	LR2-21P5	LR2-21P0	VTF-24-FH**
GS23X-22P0	7.5	15.0	2	LR2-22P0	LR2-22P0	VTF-246-GJJ**
GS23X-23P0	11.0	22.0	3	LR-25P0	<u>LR-25P0</u>	VTF-24-JL
GS23X-25P0	17.0	34.0	5	LR-27P5	<u>LR-27P5</u>	VTF-4-M
GS23X-27P5	25.0	50.0	7 1/2	LR-2010	LR-2010	<u>VTF-246-KMN</u> **
GS23X-40P5	1.5	3.0	1/2	LR2-40P5	LR2-40P5	<u>VTF-46-DE</u>
<u>GS23X-41P0</u>	2.7	5.4	1	LR2-41P5	LR2-41P0	VTF-246-CFG**
GS23X-42P0	4.2	8.4	2	LR2-43P0	LR2-42P0	VTF-24-FH**
GS23X-43P0	5.5	11.0	3	LR2-44P0	LR2-43P0	VTF-24-FH**
GS23X-45P0	9.0	18.0	5	LR2-47P5	LR2-45P0	VTF-246-HKL**
GS23X-47P5	13.0	26.0	7 1/2	LR2-4010	<u>LR2-47P5</u>	VTF-24-JL
GS23X-4010	17.0	34.0	10	LR-4015	LR2-4010	VTF-46-LM**

^{*} Reactor sizing is based on rated HP NEMA motor load, not drive output amp load. Size the reactor based on the motor nameplate current. All specs for the LR2 and VTF can be found at www.automationdirect.com


^{**} NEMA1 versions also available on noted models. Add -N1 to the end of the part number for NEMA1.

DuraPulse Optional Accessories – **Replacement Cooling Fans**

Cooling Fans for GSxx Series Drives (Spare/Replacement)

NOTE: The fans described below are included with the applicable GS10, GS20(X), and GS30 AC Drive, and are also available for purchase separately as spare/replacement components.

	G	S10, GS20	(X), GS30 ·	– Fan	Selection Table		
Drive Model		Fan Mode	/ *	Description	Size	Ma Ma ma	
GS10 Series	GS20(X) Series	GS30 Series	Part #	Price	Description	3/26	Voltage
GS13N-22P0 GS13N-42P0	GS23-22P0 GS23-42P0 GS23-52P0	GS31-21P0 GS33-22P0 GS33-42P0	GS20A-FAN-B	\$4c6#:	GS20 series main cooling fan, replacement.	40x40x15 mm	
-	GS21X-23P0 GS23X-23P0 GS23X-25P0 GS23X-45P0	-	GS20XA-FAN-B	\$4c71:	GS20X series main cooling fan, replacement	60x60x25 mm	
GS11N-11P0 GS11N-23P0 GS13N-23P0 GS13N-25P0 GS13N-43P0 GS13N-45P0	GS21-11P0 GS21-22P0 GS21-23P0 GS23-23P0 GS23-25P0 GS23-43P0 GS23-45P0 GS23-53P0 GS23-55P0	GS31-22P0 GS31-23P0 GS33-23P0 GS33-25P0 GS33-43P0 GS33-45P0	GS20A-FAN-C	\$;4c6!:	GS20 series main cooling fan, replacement.	50x50x20 mm	12VDC
-	GS23X-27P5 GS23X-47P5 GS23X-4010	-	GS20XA-FAN-C	\$4c72:	GS20X series main cooling fan, replacement	60x60x25 mm	
GS13N-27P5 GS13N-47P5 GS13N-4010	GS23-27P5 GS23-47P5 GS23-4010 GS23-57P5 GS23-5010	GS33-27P5 GS33-47P5 GS33-4010	GS20A-FAN-D	\$4c6?:	GS20 series main cooling fan, replacement.	60x60x25 mm	
-	GS23-2010 GS23-2015 GS23-4015 GS23-4020	GS33-2010 GS33-2015 GS33-4020	GS20A-FAN-E	\$;4c6,:	GS20 series main cooling fan, replacement.	92x92x28 mm	
-	GS23-2020 GS23-4025 GS23-4030	GS33-2020 GS33-4025 GS33-4030	GS20A-FAN-F	\$4c70:	GS20 series main cooling fan, replacement.	92x92x38 mm	
-	-	GS33-2025 GS33-2030 GS33-4040	GS30A-FAN-G	\$;5_[h:	GS30 series main cooling fan, replacement	204x87x50 mm	24VDC
	_	GS33-4050 GS33-4060	GS30A-FAN-H	\$;-5_[i:	GS30 series main cooling fan, replacement	206x95x50 mm	
-	-	GS33-2040 GS33-2050 GS33-4075 GS33-4100	GS30A-FAN-I	\$;-05_[j:	GS30 series main cooling fan, replacement	260x121x50 mm	

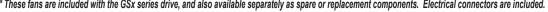



Example GS20A replacement Fan

DuraPulse Optional Accessories – RF Filter

RF Filter

Zero phase reactors, (aka RF noise filters) help reduce radiated noise from the inverter wiring. The wiring must go through the opening to reduce the RF component of the electrical noise. Loop the wires three times (four turns) to attain the full RF filtering effect. For larger wire sizes, place multiple zero-phase reactors (up to four) side by side for a greater filtering effect. These are effective for noise reduction on both the input and output sides of the inverter. Attenuation quality is good in a wide range from 500kHz to 10MHz.




Wiring Method

Wind each wire four times around the core, as shown in diagram A to the right. The reactor must be put at inverter side as closely as possible.

If you are unable to wire as above due to wire size or another aspect of your application, put all wires through four cores in series without winding, as in diagram B to the right.

RF Filter Selection						
Drive Series	Filter Model	Drawing	Price			
GS10 / GS20(X) / GS30	RF008X00A	<u>PDF</u>	\$-54lq:			
GS30	RF004X00A	<u>PDF</u>	\$;5_y!:			
GS30 (Frame H-I)	RF002X00A	PDF	\$05_y?:			

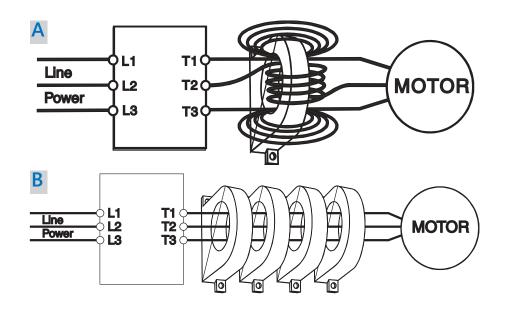

DuraPulse Accessories – Software GSoft2 Drive Configuration Software

GSoft2 Drive Configuration Software

Available for FREE Download

DURAPULSE Drives GSOFT2 Drive Configuration Software						
Part Number	Price*	Description	For GS Drive			
GSOFT2	\$1nvq:	GSOFT2 Windows configuration software, USB or free download. For use with DURApulse GS4, GS10, GS20, GS20X and GS30 series AC drives. Requires PC serial port or USB-485M serial adapter.	GS4 – all GS10 – all GS20(X) – all GS30 – all			
<u>USB-485M</u>	\$02_o:	PC adapter, USB A to RS-485 (RJ45/RJ12).	GS4/GS10			
USB-CBL-AB3	\$04kd:	Programming cable, USB A to USB B, 3ft cable length.	GS4 – all (for Drive FW only) GS20(X) – all GS30 – all			
* GSOFT2 can be downloaded for free or purchased on USB from AutomationDirect.com (search for GSOFT2).						

GSOFT2 Drive Configuration Software

GSoft2 is the configuration software for the Automation *Dura*Pulse family of drives. It is designed to allow you to connect a personal computer to the drive, and perform a variety of functions.

GSoft2 includes an integral help file with software instructions. GSoft2 can be downloaded for free or purchased on USB from AutomationDirect.com (search for GSoft2).

Functions

- Create new drive configurations
- · Upload/download drive configurations
- Edit drive configurations
- Archive/store multiple drive configurations on your PC
- Trend drive operation parameters (not available with GS10)
- Tune the drive PID loop
- View real time key operating parameters
- · Real-time trending
- Start/Stop drive and switch directions, provided drive is set up for remote operation
- View drive faults

Computer System Requirements

GSoft2 will run on Windows PCs that meet the following requirements:

- Windows OS: <u>8</u>: 32 & 64 bit, <u>8.1</u>: 32 & 64 bit,
 <u>10</u>: 64 bit, 11
- Edge or Chrome (for HTML help support)
- 32 Mb of available memory
- 10 Mb hard drive space
- Available USB port
- USB to RS485 adapter needed for GS4 and GS10 models



GS4/GS20(X)/GS30 Accessories – Software GSLogic PLC Programming Software

Optional Accessory Software Applicable Only to AC Drive Series:

- GS4
- GS20(X)
- GS30

GSLOGIC Drive Configuration Software

Available for FREE Download

GS4/GS20(X)/GS30 DURAPULSE Drives GSLogic PLC Programming Software					
Part Number	Price*	Description	For GS Drive		
<u>GSLOGIC</u>	\$1nvs:	GSLOGIC Windows logic software, USB or free download. For use with DURApulse GS4, GS20, GS20X and GS30 series AC drives. Requires PC serial port or USB-485M serial adapter.	GS4 - all GS20(X) – all GS30 – all		
<u>USB-485M</u>	\$02_o:	PC adapter, USB A to RS-485 (RJ45/RJ12).	GS4 – all		
USB-CBL-AB3	\$04kd:	Programming cable, USB A to USB B, 3ft cable length.	GS20(X) – all GS30 – all		
* GSLOGIC can be downloaded for free or purchased on USB from AutomationDirect.com (search for GSLOGIC).					

GSLOGIC can be downloaded for <u>tree</u> or purchased on USB from AutomationDirect.com (search for GS

PLC Summary

The GS4, GS20(X), and GS30 drives include a built-in PLC. Programmed in ladder logic, the PLC provides a comprehensive set of instructions and 2,000 (GS20(X)), 5,000 (GS30), or 10,000 (GS4) steps of programming capacity. GSLogic PLC software includes a Help File which contains the detailed information needed to use the PLC.

The PLC functionality is included with every GS4, GS20(X), and GS30 drive, and can be accessed over communications by external PLCs (via serial Modbus), or by the drive itself (using built-in PLC instructions). The PLC is perfectly suited for applications where digital and analog I/O requirements are small. For applications with complex PLC programming or large I/O requirements, please consider Click, Productivity, or Do-More/BRX. All of these PLCs can be easily integrated with the GS drive family or PLC. The GS4-KPD keypad is capable of storing multiple PLC programs.

There are two methods for communicating from the PLC to the drive. The first method is to use the WPR and RPR instructions available in the PLC's library. These two instructions can read from or write to any AC drive parameter in the same physical drive. The second method is to use Modbus RTU. The PLC is a Serial Modbus slave only. A Modbus RTU master can communicate with the PLC via serial only; optional communication cards cannot address the PLC. If communication cards (EtherNet/IP or Modbus TCP) are the desired method of communication, the drive includes PLC Buffers parameters that can be used. Simply write the needed information from the PLC into the drive's PLC buffer parameters using the WPR instruction. The Modbus TCP or EtherNet/IP cards can then read the VFD parameters.

GSLogic Introduction

GSLogic is the drive PLC programming software for the AutomationDirect GS4, GS20(X), and GS30 family of drives. It is designed to enable you to perform a variety of drive PLC programming functions. Windows editing functions like cut, copy, paste, multiple windows, etc., are supported. GSLogic also provides for register editing, settings, file reading, saving, online monitoring settings, and other convenience functions, such as:

- Upload/download drive PLC program files to the onboard PLC
- Create new drive PLC programs
- Edit drive PLC programs
- Archive/store multiple drive PLC programs on your PC or the GS4-KPD drive keypad
- Control drive PID loops (FPID instructions)
- · View in real time all drive PLC registers
- Print drive PLC program files

GSLogic includes an integral help file that includes software instructions, how to use GSLogic, and how to use the GS drive PLC.

GSLogic System Requirements

GSLogic is a Windows-based programming software environment. Please check the following requirements when choosing your PC configuration:

- Windows OS: 8: 32 & 64 bit, 8.1: 32 & 64 bit, 10: 64 bit, 11
- 300MB free hard-disk space
- USB Port required for project transfer to drive
- USB-485M serial adapter required for GS4 models



DuraPulse Optional Accessories – Advanced LCD Keypad

Advanced Keypad

NOTE: The keypad described below is included with the GS4 AC Drive, and is also available for purchase separately as a spare/replacement component for GS4, or an optional upgrade for GS10/GS20(X)/GS30.

Keypad Panel-Mounting Kit

NOTE: The keypad panel-mounting kit described below is an optional accessory that is NOT included with the GS10/GS20(X)/GS30 AC drive.

	GSx S	eries DURAPULSE Drives Keypad and Keypad Panel-Mounting Kit	
Part Number	Price	Description	For GS Drive
<u>GS4-KPD</u> *	\$;;010[[:	Spare or replacement keypad for GS4 AC drives; optional advanced keypad for GS20(X) drives; includes RJ45 connector; great for maintenance or back-up programs.	GS4 – all GS10 – all GS20(X) – all GS30 – all
<u>GS4-BZL</u> **	\$10_4:	Keypad Panel-Mounting Kit for remote surface mounting or embedded mounting of the AC drive removable keypad; hardware included. Use a standard Cat5e RJ45 patch cable (not included) to connect a remotemounted keypad to the drive. Max cable length for remote-mounted keypad = 5m.	GS4 – all GS10 – all GS20(X) – all GS30 – all

^{*} A keypad is included with each GS4 AC Drive; additional keypads are available for spare/replacement components.

^{**} The keypad mounting kit is an optional accessory that is NOT included with the GS4 AC drive; for mounting the keypad remotely from the drive. Note: Keypad firmware can only be upgraded when connected to a GS4 drive.

