# Schmersal Configurable Safety Relays





### **SRB-E Electronic Safety Relays**

The SRB-E modules are a series of multi-functional, configurable electronic safety relays. Each module can be adjusted to one of multiple preset configurations, which include selecting the type of reset, activating or deactivating cross-wire monitoring, and selecting the monitored contact configuration – all via the rotary dial on the front of the unit.

The SRB-E series provides a higher level of diagnostic capabilities with LEDs for both controller status as well as error fault codes, assisting with troubleshooting safety circuits.

Once the configurations have been set, the lid may be closed and sealed to prevent tampering with the settings.

#### **Features**

- · Modules with safe PNP outputs
- · Modules with safe relay outputs
- Modules with monitoring of two-hand controls
- Modules with monitored input expansion up to Cat 4 PLe
- Fast cycle times (60 switching cycles/ min)
- Modules with high 5.5A PNP switching capacity
- Snap-in blank equipment labels
- Removable terminal blocks for easy wiring

	Sc	hmers	al S	RB-	E El	ectr	onic	Saf	ety	Rela	ays	Sele	ctio	n Ch	art						
			Emergency stop monitoring	Safety guard monitoring	Pull wire emergency stop	Magnetic safety sensors	Light curtains	Input expander module for up to 4 sensors	Two hand control panels	Input signals: 1 channel	Input signals: 2 channel	Input signals: antivalent	Cross-wire detection	Start button/ autostart	Start button with edge detection	Safe Stop 0 dry contact	Safe Stop 0 semiconductor	Safe Stop 1 dry contact	Safe Stop 1 semiconductor	Not safe dry contact	Not safe semiconductor
Part Number Price Drawing		✓ ALLOWABLE																			
		Drawing	Applications				Input Signals Start Conditions			Output Contacts											
SRB-E-201LC	\$06c91:	PDF	✓	✓	✓	✓	✓			✓	✓	✓	✓		✓		2				1
<u>SRB-E-201ST</u>	\$06c92:	PDF	✓	✓	✓	✓	✓		✓	✓	✓	✓	✓		✓		2				1
SRB-E-201ST-CC	\$06c93:	<u>PDF</u>	✓	✓	✓	✓	✓		✓	✓	✓	✓	✓		✓		2				1
<u>SRB-E-301ST</u>	\$06c94:	PDF	✓	✓	✓	✓	✓			✓	✓	✓	✓	✓	✓	3				1	
SRB-E-301ST-CC	\$06c95:	<u>PDF</u>	✓	✓	✓	✓	✓			✓	✓	✓	✓	✓	✓	3				1	
<u>SRB-E-402EM</u>	\$06c96:	<u>PDF</u>	✓	✓	✓	✓	✓			✓	✓	✓	✓	✓	✓	4				2	
<u>SRB-E-232ST</u>	\$06c97:	PDF	✓	✓	✓	✓	✓			✓	✓	✓	✓		✓		2	3		1	1
SRB-E-232ST-CC	\$06c98:	<u>PDF</u>	✓	✓	✓	✓	✓			✓	✓	✓	✓		✓		2	3		1	1
<u>SRB-E-322ST</u>	\$06c99:	<u>PDF</u>	✓	✓	✓	✓	✓			✓	✓	✓	✓		✓	3			2	1	1
SRB-E-322ST-CC	\$06c9a:	<u>PDF</u>	✓	✓	✓	✓	✓			✓	✓	✓	✓		✓	3			2	1	1
<u>SRB-E-204ST</u>	\$06c9b:	<u>PDF</u>	✓	✓	✓	✓	✓	✓		✓	✓	✓	✓		✓		2				4
SRB-E-204ST-CC	\$06c9c:	PDF	✓	✓	✓	✓	✓	✓		✓	✓	✓	✓		✓		2				4
<u>SRB-E-204PE</u>	\$;06c9f:	PDF	✓	✓	✓	✓	✓	✓		✓	✓	✓	✓	✓			2				4
			C	ombii	natio	n Mod	lule fo	or Tw	o Pro	tectiv	e De	vices									
SRB-E-402ST	\$06c9d:	PDF	✓	✓	✓	✓	✓		✓	✓	✓	✓	✓		✓	2	2			1	1
SRB-E-402ST-CC	\$06c9e:	PDF	✓	✓	✓	✓	✓		✓	✓	✓	✓	✓		✓	2	2			1	1

#### Notes:

Stop Category 0 (Stop 0) means immediate loss of power. This is often referred to as an uncontrolled stop.

Stop Category 1 (Stop 1) means there is a delay before the loss of power. The control system should bring the machine to a stop prior to the loss of power. This is often referred to as a controlled stop with removal of power.

## Schmersal SRB-E-204 Configurable Safety Relays





Features
• Pluggable scre

- Pluggable screw terminals or cage clamps
- 2 safety outputs
- 4 signal outputs
- Cascadable to add additional inputs to a safety system

Safety Data Values per EN ISO 13849-1, EN 62061, IEC 61508						
Performance Level Up to e						
DC Average	High					
SIL CL	Up to 3					
HFT (Hardware Failure Tolerance)						
PFH(D)	≤ 2.66x10 <sup>-9</sup> /h					

Schmersal SRB-E-204 Selection Chart											
Part Number	Price	Туре	Voltage	Connection	Configurations	Safety Input	Safety Output	Monitoring Outputs	Drawing		
SRB-E-204ST	\$06c9b:	Cofob role .	24 VDC	Pluggable screw terminals	14	4 pair digital	2 OSSD	4 status	PDF		
SRB-E-204ST-CC	\$06c9c:	Safety relay	24 VDC	Push-in cage clamp	14				<u>PDF</u>		
<u>SRB-E-204PE</u>	\$;06c9f:	Safety input extension	24 VDC	Pluggable screw terminals	15				<u>PDF</u>		


Schmersal SRB-E-204 Specifications							
Input/Output Specifications							
Operating Temperature	-25°C [-13°F] to 60°C [140°F]						
Storage Temperature	-40°C [-40°F] to 85°C [185°F]						
Altitude	2000m [6562ft] max						
Vibration Resistance	Tested to EN 60068-2-6						
Degree of Protection	IP40						
Housing	Glass-fiber reinforced thermoplastic, ventilated						
Weight	150g [5.29 oz]						
Agency Approvals and Standards	CE, UL (listed number E57648)						
Terminal Designation per EN 50005	EN 60947-1						
Wire Fixing	Plug-in terminals						
Cable Section Min/Max	0.25 mm <sup>2</sup> [24 AWG] - 2.5 mm <sup>2</sup> [14 AWG]						
Switching Frequency, Max	1 Hz						
	Input/Output Specifications						
Operating Voltage Range	19.2 to 28.8 VDC						
Maximum Consumption	3W (plus load of semiconductor outputs)						
Overvoltage Protection	Category III						
Control Voltage on S11 etc.	24VDC						
Control Current Over S12 etc.	8mA						
Mechanical Life	10 <sup>7</sup> operations						
Contact Type	Ag-Ni, self-cleaning, positive drive						
Operating Delay (Pull-In Delay)	<150ms						
Release Delay (Drop-Out Delay)	<10ms						
Switching Capacity	Safety outputs Q: 24VDC, max 2A Y1 through Y4: 24VDC / 100mA						


## Schmersal SRB-E-204 Configurable Safety Relays



Teri	Terminal Descriptions						
Pin	Function						
A1	Operating voltage +24VDC						
A2	Operating voltage 0VDC						
X2	Input of start circuit / cascading						
<b>X</b> 3	Input feedback circult / cascading						
S11/S21 S31/S41 S51/S61	Test pulse outputs						
S12 S22	Input channel 1 Input channel 2						
S32 S42	Input channel 1 Input channel 2						
S52 S62	Input channel 1 Input channel 2						
S72 S82	Input channel 1 Input channel 2						
Y1	Signalling output, sensor 1						
Y2	Signalling output, sensor 2						
<b>Y</b> 3	Signalling output, sensor 3						
Y4	Signalling output, sensor 4						
Q1/Q2	Safety outputs						

LED Indication Descriptions						
LED	Function					
RUN	<b>UN</b> Operating voltage OK – RUN mode					
ERR	<b>ERR</b> Error code					
In 1/2 High level at S12 / S22						
In 3/4	High level at S32 / S42					
In 5/6	High level at S52 / S62					
In 7/8	High level at S72 / S82					
Out	Outputs activated					
NOTE: For	NOTE: For flash codes, refer to product manual					

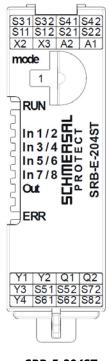

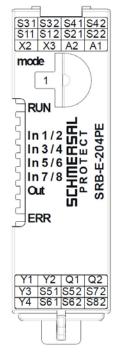


SRB-E-204ST

SRB-E-204PE

# Schmersal SRB-E-204ST Configurable Safety Relays



### **Application Example for SRB-E-204ST**

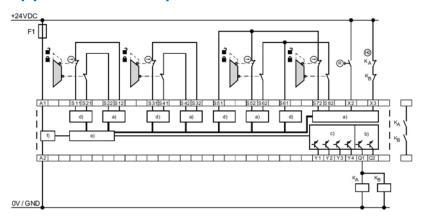

#### Key

- a) Safety inputs
- b) Safety outputs
- c) Signalling outputs
- d) Clock outputs
- e) Processing
- f) Power
- g) Safety modules

Safe signal processing, e.g. by PROTECT SRB-E-series with start and reset functions as well as feedback circuit monitoring

	Configuration Selection									
Rotary Knob Position	Reset Button	Cross-Wire Monitoring Active	Input Number	Input / Sensor Configuration	Monitoring of Sensor Channels For Synchronization	Function Signalling Outputs Y1 - Y4				
С			Configura	ation Mode						
1	Trailing Edge	Yes	1-4	NC / NC	Yes					
2	Trailing Edge	Yes	1-4	NC / NC	No					
3	Trailing Edge	No	1-4	NC / NC	Yes					
4	Trailing Edge	No	1-4	NC / NC	No					
5	Trailing Edge	Yes	1-4	NC / NO	Yes					
6	Autostart	Yes	1-4	NC / NO	No					
7	Autostart	Yes	1-4	NC / NC	Yes					
8	Autostart	Yes	1-4	NC / NC	No					
9	Autostart	No	1-4	NC / NC	Yes					
10	Autostart	No	1-4	NC / NC	No					
	Trailing Edge	Yes	1	NC / NC	No					
44		Yes	2			NO Sensor = 0 Output = 0 Sensor = 1 Output = 1				
11		No	3							
		No	4							
	Autostart	Yes	1	NC / NC						
40		Yes	2		No					
12		No	3							
		No 4								
	Trailing Edge	Yes	1		No					
40		Yes	2	No (No						
13		Yes	3	NC / NC						
		No	4	1						
		Yes	1							
	Autostart	Yes	2	1						
14		Yes	3	NC / NC	No					
		No	4	1						

## **Safety Products**



Warning: Safety products sold by AutomationDirect are Safety components only. The purchaser/installer is solely responsible for the application of these components and ensuring all necessary steps have been taken to assure each application and use meets all performance and applicable safety requirements and/or local, national and/or international safety codes as required by the application. AutomationDirect cannot certify that our products, used solely or in conjunction with other AutomationDirect or other vendors' products, will assure safety for any application. Any person using or applying any products sold by AutomationDirect is responsible for learning the safety requirements for their individual application and applying them, and therefore assumes all risks, and accepts full and complete responsibility, for the selection and suitability of the product for their respective application.

AutomationDirect does not provide design or consulting services, and cannot advise whether any specific application or use of our products would ensure compliance with the safety requirements for any application.