

Schmersal

Configurable Safety Relays



SRB-E Electronic Safety Relays

The SRB-E modules are a series of multi-functional, configurable electronic safety relays. Each module can be adjusted to one of multiple preset configurations, which include selecting the type of reset, activating or deactivating cross-wire monitoring, and selecting the monitored contact configuration – all via the rotary dial on the front of the unit.

The SRB-E series provides a higher level of diagnostic capabilities with LEDs for both controller status as well as error fault codes, assisting with troubleshooting safety circuits.

Once the configurations have been set, the lid may be closed and sealed to prevent tampering with the settings.

Features

- Modules with safe PNP outputs
- Modules with safe relay outputs
- Modules with monitoring of two-hand controls
- Modules with monitored input expansion up to Cat 4 PLE
- Fast cycle times (60 switching cycles/min)
- Modules with high 5.5A PNP switching capacity
- Snap-in blank equipment labels
- Removable terminal blocks for easy wiring

Schmersal SRB-E Electronic Safety Relays Selection Chart

| | | | Emergency stop monitoring | Safety guard monitoring | Pull wire emergency stop | Magnetic safety sensors | Light curtains | Input expander module for up to 4 sensors | Two hand control panels | Input signals: 1 channel | Input signals: 2 channel | Input signals: antivalent | Cross-wire detection | Start button/ autostart | Start button with edge detection | Safe Stop 0 dry contact | Safe Stop 0 semiconductor | Safe Stop 1 dry contact | Safe Stop 1 semiconductor | Not safe dry contact | Not safe semiconductor |
|---|-----------|---------------------|---------------------------|-------------------------|--------------------------|-------------------------|----------------|---|-------------------------|--------------------------|--------------------------|---------------------------|----------------------|-------------------------|----------------------------------|-------------------------|---------------------------|-------------------------|---------------------------|----------------------|------------------------|
| Part Number | Price | Drawing | ✓ ALLOWABLE | | | | | | | | | | | | | | | | | | |
| | | | Applications | | | | | | | Input Signals | | | | Start Conditions | | Output Contacts | | | | | |
| SRB-E-201LC | \$06c91: | PDF | ✓ | ✓ | ✓ | ✓ | ✓ | | | ✓ | ✓ | ✓ | ✓ | | ✓ | | 2 | | | | 1 |
| SRB-E-201ST | \$06c92: | PDF | ✓ | ✓ | ✓ | ✓ | ✓ | | ✓ | ✓ | ✓ | ✓ | ✓ | | ✓ | | 2 | | | | 1 |
| SRB-E-201ST-CC | \$06c93: | PDF | ✓ | ✓ | ✓ | ✓ | ✓ | | ✓ | ✓ | ✓ | ✓ | ✓ | | ✓ | | 2 | | | | 1 |
| SRB-E-301ST | \$06c94: | PDF | ✓ | ✓ | ✓ | ✓ | ✓ | | | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 3 | | | | 1 | |
| SRB-E-301ST-CC | \$06c95: | PDF | ✓ | ✓ | ✓ | ✓ | ✓ | | | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 3 | | | | 1 | |
| SRB-E-402EM | \$06c96: | PDF | ✓ | ✓ | ✓ | ✓ | ✓ | | | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | 4 | | | | 2 | |
| SRB-E-232ST | \$06c97: | PDF | ✓ | ✓ | ✓ | ✓ | ✓ | | | ✓ | ✓ | ✓ | ✓ | | ✓ | | 2 | 3 | | 1 | 1 |
| SRB-E-232ST-CC | \$06c98: | PDF | ✓ | ✓ | ✓ | ✓ | ✓ | | | ✓ | ✓ | ✓ | ✓ | | ✓ | | 2 | 3 | | 1 | 1 |
| SRB-E-322ST | \$06c99: | PDF | ✓ | ✓ | ✓ | ✓ | ✓ | | | ✓ | ✓ | ✓ | ✓ | | ✓ | 3 | | | 2 | 1 | 1 |
| SRB-E-322ST-CC | \$06c9a: | PDF | ✓ | ✓ | ✓ | ✓ | ✓ | | | ✓ | ✓ | ✓ | ✓ | | ✓ | 3 | | | 2 | 1 | 1 |
| SRB-E-204ST | \$06c9b: | PDF | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | | ✓ | ✓ | ✓ | ✓ | | ✓ | | 2 | | | | 4 |
| SRB-E-204ST-CC | \$06c9c: | PDF | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | | ✓ | ✓ | ✓ | ✓ | | ✓ | | 2 | | | | 4 |
| SRB-E-204PE | \$,06c9f: | PDF | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | | ✓ | ✓ | ✓ | ✓ | ✓ | | | 2 | | | | 4 |
| Combination Module for Two Protective Devices | | | | | | | | | | | | | | | | | | | | | |
| SRB-E-402ST | \$06c9d: | PDF | ✓ | ✓ | ✓ | ✓ | ✓ | | ✓ | ✓ | ✓ | ✓ | ✓ | | ✓ | 2 | 2 | | | 1 | 1 |
| SRB-E-402ST-CC | \$06c9e: | PDF | ✓ | ✓ | ✓ | ✓ | ✓ | | ✓ | ✓ | ✓ | ✓ | ✓ | | ✓ | 2 | 2 | | | 1 | 1 |

Notes:

Stop Category 0 (Stop 0) means immediate loss of power. This is often referred to as an uncontrolled stop.

Stop Category 1 (Stop 1) means there is a delay before the loss of power. The control system should bring the machine to a stop prior to the loss of power. This is often referred to as a controlled stop with removal of power.

Schmersal

SRB-E-402EM

Expansion Module

**SRB-E-402EM**

Features

- Extension module for contact duplication
- 4 safety contacts with SAFE STOP 0
- 2 signal outputs

Safety Data

Values per EN ISO 13849-1,
EN 62061, IEC 61508

| | |
|---|---------------------------|
| Performance Level | Up to e |
| DC Average | High |
| SIL CL | Up to 3 |
| HFT (Hardware Failure Tolerance) | 1 |
| PFH(D) | $\leq 2 \times 10^{-8}/h$ |

Schmersal SRB-E-402EM Selection Chart

| Part Number | Price | Type | Voltage | Connection | Safety Input | Safety Output | Monitoring Outputs | Drawing |
|---------------------------|----------|------------------------|------------|---------------------------|--------------|---------------|--------------------|---------------------|
| <u>SRB-E-402EM</u> | \$06c96: | Safety relay extension | 24 VAC/VDC | Pluggable screw terminals | | 4 NO | 2 NC | PDF |

Schmersal SRB-E-402EM Specifications

| Input/Output Specifications | |
|--|---|
| Operating Temperature | -25°C [-13°F] to 60°C [140°F] |
| Storage Temperature | -40°C [-40°F] to 85°C [185°F] |
| Altitude | 2000m [6562ft] max |
| Vibration Resistance | Tested to EN 60068-2-6 |
| Degree of Protection | IP40 |
| Housing | Glass-fiber reinforced thermoplastic, ventilated |
| Weight | 215g [7.58 oz] |
| Agency Approvals and Standards | CE, UL (listed number E57648) |
| Terminal Designation per EN 50005 | EN 60947-1 |
| Wire Fixing | Plug-in screw clamps |
| Cable Section Min/Max | 0.25 mm ² [24 AWG] - 2.5 mm ² [14 AWG] |
| Switching Frequency, Max | NA |
| Input/Output Specifications | |
| Operating Voltage Range | 20.4 to 28.8 VDC |
| Maximum Consumption | 1.3 W |
| Overvoltage Protection | Category III |
| Mechanical Life | 10 ⁷ operations |
| Contact Type | Ag-Ni, self-cleaning, positive drive |
| Operating Delay (Pull-In Delay) | Max 35ms |
| Release Delay (Drop-Out Delay) | Max 35ms |
| Switching Capacity | NC safety contacts: Max 24V / 6A NO aux contacts: 24VDC / 2A |

Schmersal

SRB-E-402EM


Expansion Module



| Terminal Descriptions | | |
|-----------------------|-------|--|
| Operating Voltage | A1 | 24 VAC / VDC |
| | A2 | 0 VAC / VDC |
| Outputs | 13-14 | 1. Safety contact |
| | 23-24 | 2. Safety contact |
| | 33-34 | 3. Safety contact |
| | 43-44 | 4. Safety contact |
| | 51-52 | 1. Signalling contact (NC) |
| | 61-62 | 2. Signalling contact (NC) |
| Feedback Circuit | X1-X2 | NC contacts (used for monitoring of upstream relay) |

NOTE: Signalling contacts must not be used in safety circuits.

Block Diagram for SRB-E-402EM

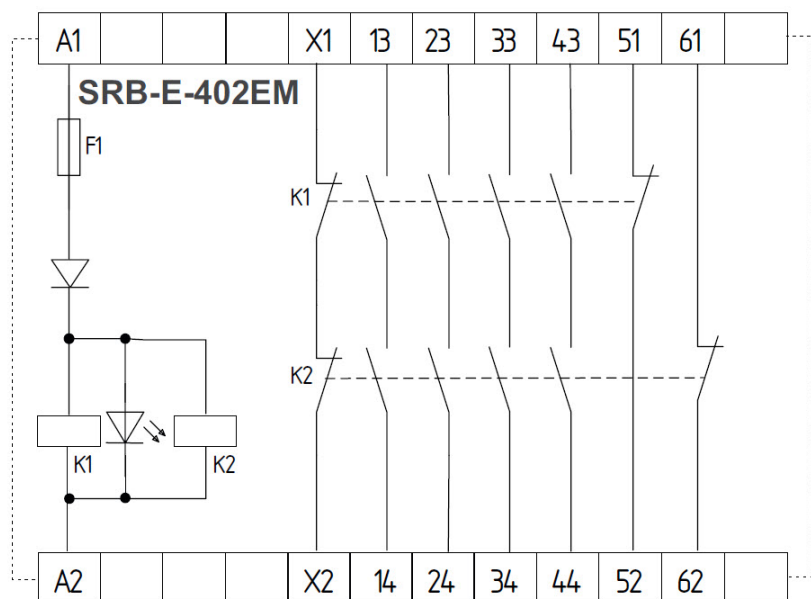

SRB-E-402EM

Safety Products



Warning: Safety products sold by AutomationDirect are Safety components only. The purchaser/installer is solely responsible for the application of these components and ensuring all necessary steps have been taken to assure each application and use meets all performance and applicable safety requirements and/or local, national and/or international safety codes as required by the application. AutomationDirect cannot certify that our products, used solely or in conjunction with other AutomationDirect or other vendors' products, will assure safety for any application. Any person using or applying any products sold by AutomationDirect is responsible for learning the safety requirements for their individual application and applying them, and therefore assumes all risks, and accepts full and complete responsibility, for the selection and suitability of the product for their respective application.

AutomationDirect does not provide design or consulting services, and cannot advise whether any specific application or use of our products would ensure compliance with the safety requirements for any application.