


Input Specifications	
<b>Inputs per Module</b>	4
<b>Module Signal Input Range</b>	±5VDC, ±10VDC, 0–5 VDC, 0–10 VDC, 0–20 mA
<b>Signal Resolution</b>	16-bit
<b>Resolution Value of LSB (least significant bit)</b>	±5V = 152µV, ±10V = 305µV, 0–5 V = 76µV, 0–10 V = 152µV, 0–20 mA = 0.305µA per count (1LSB = 1 count)
<b>Data Range</b>	0–65535 counts unipolar –32768 to +32767 counts bipolar
<b>Input Type</b>	Single-ended (1 common)
<b>Maximum Continuous Overload</b>	±31mA, current input ±100V, voltage input
<b>Input Impedance</b>	1.1 MΩ ±10% voltage input 250Ω ±0.1% 1/4W current input
<b>Filter Characteristics</b>	Low Pass 1st order, –3dB @ 48Hz
<b>Sample Duration Time</b>	3.5 ms per channel (does not include ladder scan time)
<b>All Channel Update Rate</b>	15ms
<b>Open Circuit Detection Time</b>	Zero reading within 1s (current input only)
<b>Conversion Method</b>	Successive approximation
<b>Accuracy vs. Temperature</b>	±10PPM / °C maximum
<b>Maximum Inaccuracy</b>	0.1% of range voltage, 0.2% of range current (including temperature drift)
<b>Linearity Error (end to end)</b>	±0.01% of range max., ±10V & ±5V ±0.015% of range max., 0–5 V, 0–10 V & 0–20 mA Monotonic with no missing codes
<b>Input Stability &amp; Repeatability</b>	±0.035% of range (after 10 min. warm-up)
<b>Full Scale Calibration Error</b>	±0.2% of range maximum (Including Offset)
<b>Offset Calibration Error</b>	±0.065% of range maximum
<b>Max Crosstalk</b>	–96dB, of range maximum
<b>Protection Circuit</b>	External Edison S500–32–R, 0.032 A fuse (On current inputs only)
<b>External Power Supply Required</b>	24VDC (–20% / + 25%), 35mA

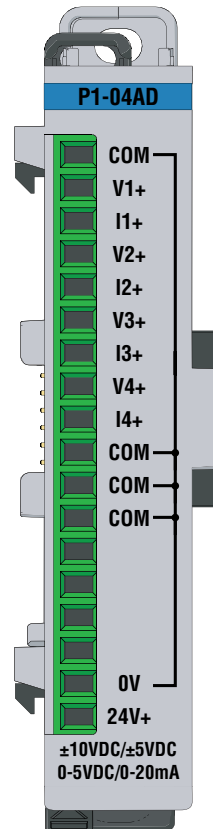

## P1-04AD Analog Input

The P1-04AD Voltage/Current Analog Input Module provides four channels for receiving ±5VDC, ±10VDC, 0–5 VDC, 0–10 VDC and 0–20 mA signals for use with the Productivity1000 system.

Input Specifications .....	1
General Specifications .....	2
Terminal Block Specifications .....	2
Wiring Diagram and Schematic .....	3
Module Installation Procedure .....	4
QR Code .....	4
Wiring Options .....	5
Module Configuration .....	5
Linear Scaling .....	6
Non-Linear Scaling .....	6
Diagnostic/Status .....	8
Warning .....	8

Terminal Block sold separately, (see wiring options on page 5).


General Specifications	
<b>Operating Temperature</b>	0° to 60°C (32° to 140°F)
<b>Storage Temperature</b>	-20° to 70°C (-4° to 158°F)
<b>Humidity</b>	5 to 95% (non-condensing)
<b>Altitude</b>	2,000 meters max
<b>Pollution Degree</b>	2
<b>Environmental Air</b>	No corrosive gases permitted
<b>Vibration</b>	IEC60068-2-6 (Test Fc)
<b>Shock</b>	IEC60068-2-27 (Test Ea)
<b>Field to Logic Side Isolation</b>	1800VAC applied for 1 second
<b>Insulation Resistance</b>	> 10MΩ @ 500VDC
<b>Heat Dissipation</b>	1400mW
<b>Overvoltage Category</b>	II
<b>Enclosure Type</b>	Open Equipment
<b>Field Wiring</b>	Removable terminal block (sold separately). Use ZIPLink Wiring System optional See "Wiring Options" on page 5.
<b>Terminal Type (sold separately)</b>	18-position Removable Terminal Block
<b>Weight</b>	71g (2.5 oz)
<b>Agency Approvals</b>	UL 61010-1 and UL 61010-2-201 File E139594, Canada & USA CE (EN 61131-2 EMC, EN 61010-1 and EN 61010-2-201 Safety)*

\*See CE Declaration of Conformance for details.

Terminal Block Specifications		
<b>Part Number</b>	<b>P2-RTB</b>	<b>P2-RTB-1</b>
<b>Positions</b>	18 Screw Terminals	18 Spring Clamp Terminals
<b>Wire Range</b>	30–16 AWG (0.051–1.31 mm <sup>2</sup> )	28–16 AWG (0.081–1.31 mm <sup>2</sup> )
	Solid / Stranded Conductor	Solid / Stranded Conductor
	3/64 in (1.2 mm) Insulation Max. 1/4 in (6–7 mm) Strip Length	3/64 in (1.2 mm) Insulation Max. 19/64 in (7–8 mm) Strip Length
<b>Conductors</b>	"USE COPPER CONDUCTORS, 75°C" or equivalent.	
<b>Screw Driver</b>	0.1 in (2.5 mm) Maximum*	
<b>Screw Size</b>	M2	N/A
<b>Screw Torque</b>	2.5 lb-in (0.28 N-m)	N/A

\*Recommended Screw Driver TW-SD-MSL-1




# P1-04AD Schematic

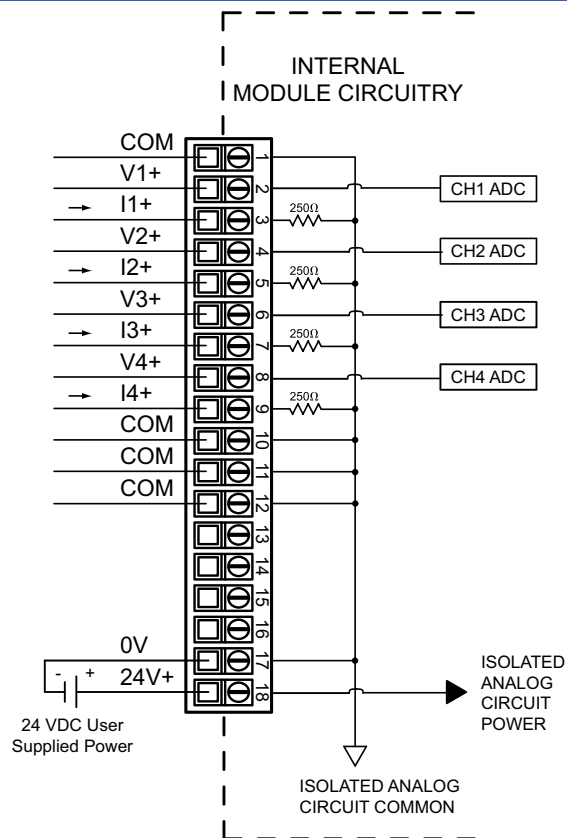



# P1-04AD Wiring Diagram

## Current Sinking Input Circuits

An Edison S500-32-R 0.032A fast-acting fuse is recommended for all current loops.

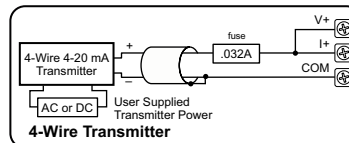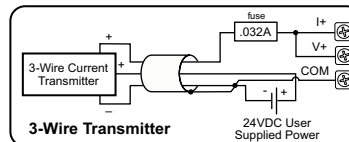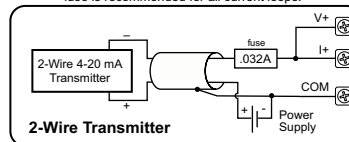

## Voltage Input Circuits

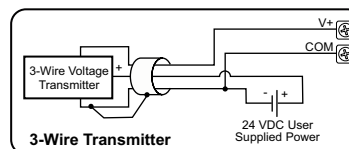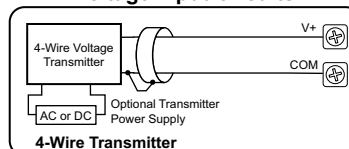

## Notes:


1. Shield connected to signal source common.
2. If current is chosen, I-MUST be jumpered to V+. For example, when using 4-20mA source for Input 3, I3+ must be connected to V3+.

# Module Installation

# QR Code


**WARNING:** Do not add or remove modules with field power applied.

**Step One:** With latch in "locked" position, align connectors on the side of each module and stack by pressing together. Click indicates lock is engaged.


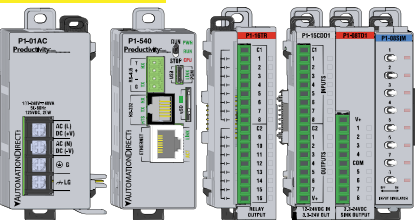


**Step Two:** Attach field wiring using the removable terminal block or ZIPLink wiring system.

Ensure all latches are secure after modules are connected.

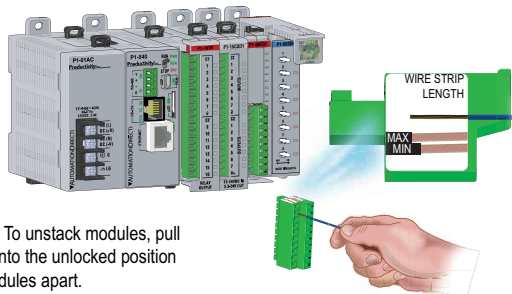

**Step Three:** To unstack modules, pull locking latch up into the unlocked position and then pull modules apart.

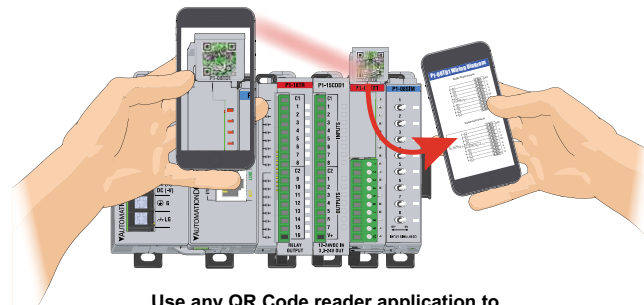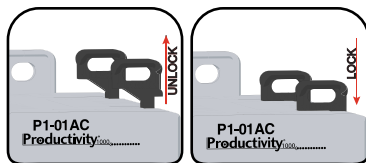


Use any QR Code reader application to display the module's product insert.

# Module Configuration

## Wiring Options

### 1 ZIPLink Feed Through Modules and Cables<sup>1</sup>

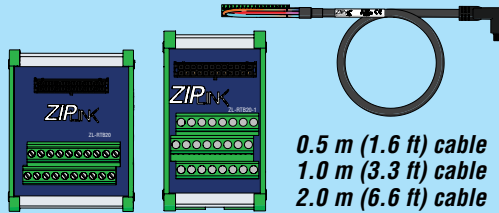


**ZIPLINK**  
AUTOMATIONDIRECT

ZL-RTB20  
ZL-RTB20-1

ZL-P1-CBL18  
ZL-P1-CBL18-1  
ZL-P1-CBL18-2

### 2 Terminal Block with pigtail cable




ZL-P1-CBL18-1P  
ZL-P1-CBL18-2P

### 3 Screw Terminal Block only



P2-RTB  
(Quantity 1)

### 4 Spring Clamp Terminal Block only



P2-RTB-1  
(Quantity 1)

### 5 Accessories<sup>2</sup>



ZL-RTB-COM


TW-SD-SL-1

TW-SD-MSL-1

1. Cable + ZIPLink Module = Complete System

2. ZL-RTB-COM provides a common connection point for power or ground

Using the Hardware Configuration tool in the Productivity Suite programming software, drag and drop the P1-04AD module into the base configuration.

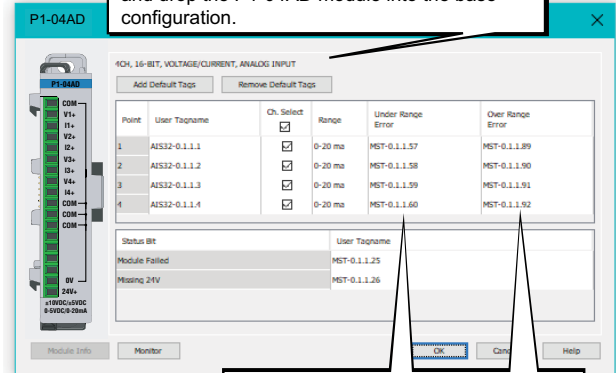


The "Under Range Error" bit for each channel activates for a signal around 0mA ± offset error.

The "Over Range Error" bit for each channel activates for a signal around 19.999 mA ± gain error.

# Linear Scaling


The Scale (Linear) function can be used to:

- Convert an application specific range to range which is native to the analog output module.
- Make other linear conversions in ranges appropriate to the application.

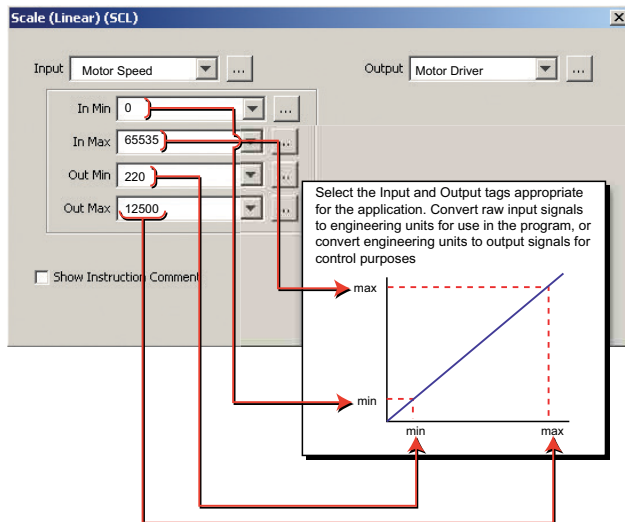

# Non-Linear Scaling

The Scale (Non-Linear) function can be used for Non-Linear applications.

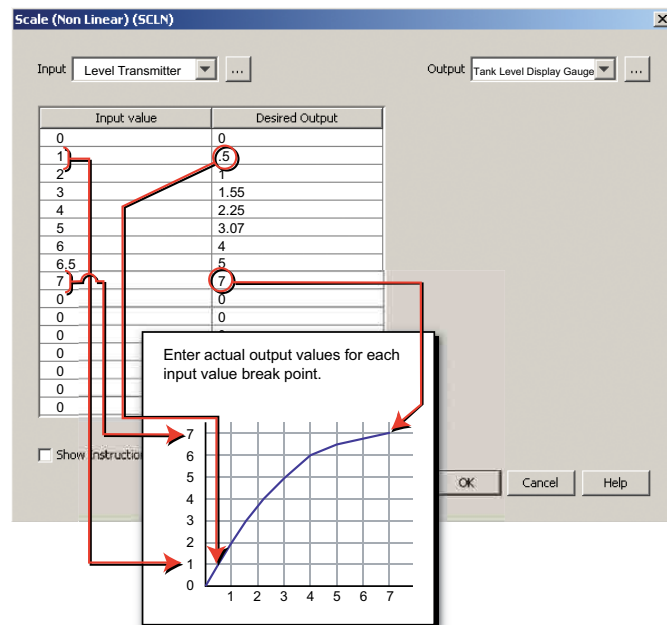



**WARNING:** To minimize the risk of potential safety problems, you should follow all applicable local and national codes that regulate the installation and operation of your equipment. These codes vary from area to area and it is your responsibility to determine which codes should be followed, and to verify that the equipment, installation, and operation are in compliance with the latest revision of these codes.

***Equipment damage or serious injury to personnel can result from the failure to follow all applicable codes and standards. We do not guarantee the products described in this publication are suitable for your particular application, nor do we assume any responsibility for your product design, installation, or operation.***

If you have any questions concerning the installation or operation of this equipment, or if you need additional information, please call Technical Support at 770-844-4200.

This publication is based on information that was available at the time it was printed. At AutomationDirect.com® we constantly strive to improve our products and services, so we reserve the right to make changes to the products and/or publications at any time without notice and without any obligation. This publication may also discuss features that may not be available in certain revisions of the product.

## Diagnostic/Status

<b><i>Under Range Error</i></b>	1 bit per channel
<b><i>Over Range Error</i></b>	1 bit per channel
<b><i>Module Failed</i></b>	1 bit per module
<b><i>Missing 24V</i></b>	1 bit per module

Document Name	Edition/Revision	Date
P1-04AD-DS	2nd Edition, Rev A2	6/11/2025

Copyright 2022, AutomationDirect.com Incorporated/All Rights Reserved Worldwide